

Color Controller E-810

GETTING STARTED

For use with the following color copiers:

Ricoh Aficio Color 6513

Gestetner CS213d

RexRotary CS813d

nashuatec CS513d

infotec 7513

Savin SDC413



Copyright © 2001 Electronics For Imaging, Inc. All rights reserved.

This publication is protected by copyright, and all rights are reserved. No part of it may be reproduced or transmitted in any form or by any means for any purpose without express prior written consent from Electronics For Imaging, Inc., except as expressly permitted herein. Information in this document is subject to change without notice and does not represent a commitment on the part of Electronics For Imaging, Inc.

The software described in this publication is furnished under license and may only be used or copied in accordance with the terms of such license.

This product may be covered by one or more of the following U.S. Patents: 4,500,919; 4,837,722; 5,212,546; 5,343,311; 5,424,754; 5,467,446; 5,506,946; 5,517,334; 5,537,516; 5,543,940; 5,553,200; 5,615,314; 5,619,624; 5,625,712; 5,666,436; 5,760,913; 5,818,645; 5,835,788; 5,866,856; 5,867,179; 5,959,867; 5,970,174; 5,982,937; 5,995,724; 6,002,795; 6,025,922; 6,041,200; 6,046,420; 6,065,041; 6,067,080; 6,112,665; 6,116,707; 6,118,205; 6,122,407; 6,134,018; 6,141,120; 6,151,014; 6,166,821; 6,184,873; 6,185,335; 6,201,614; 6,215,562; 6,219,659; 6,222,641; 6,225,974; 6,226,419; 6,238,105; 6,239,895; D406,117; D416,550; D417,864; D419,185; D426,206; D430,206; RE36,947

Trademarks

Fiery, the Fiery logo, Fiery Driven, ColorWise, EFICOLOR, and RIP-While-Print are registered trademarks of Electronics For Imaging, Inc. in the U.S. Patent and Trademark Office and certain other foreign jurisdictions.

EFI, the Electronics For Imaging logo, eBeam, the Fiery Driven logo, Fiery LX, Fiery Si, Fiery X2, Fiery X2e, Fiery X3e, Fiery X4, Fiery XJ, Fiery XJe, Fiery XJ-W, Fiery Z4, Fiery ZX, Fiery X4, Fiery Z5, Fiery Z18, Fiery Z16, AutoCal, ColorCal, Command WorkStation, Continuous Print, DocBuilder, DocBuilder Pro, EFI Densitometer, Fiery Downloader, Fiery Driver, Fiery Link, Fiery Prints, Fiery Print Calibrator, Fiery Scan, Fiery ScanBuilder, Fiery Spark, Fiery Spooler, FreeForm, Harmony, Memory Multiplier, NetWise, PowerWise, RIPChips, ScanBuilder, Splash, the Splash logo, STARR Compression, Velocity, Velocity Balance, Velocity Build, Velocity Estimate, Velocity Scan, VisualCal, WebTools, WebSpooler, WebInstaller, and WebStatus are trademarks of Electronics For Imaging, Inc.

All other terms and product names may be trademarks or registered trademarks of their respective owners, and are hereby acknowledged.

Legal Notices

APPLE COMPUTER, INC. ("APPLE") MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE. APPLE DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE APPLE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE APPLE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL APPLE, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE APPLE SOFTWARE EVEN IF APPLE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. Apple's liability to you for actual damages from any cause whatsoever, and regardless of the form of the action (whether in contract, tort [including negligence], product liability or otherwise), will be limited to \$50.

Part Number: 45022701

FCC Information

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Class B Declaration of Conformity

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Industry Canada Class B Notice

This Class B digital apparatus complies with Canadian ICES-003.

Avis de Conformation Classe B de l'Industrie Canada

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

RFI Compliance Notice

This equipment has been tested concerning compliance with the relevant RFI protection requirements both individually and on system level (to simulate normal operation conditions). However, it is possible that these RFI Requirements are not met under certain unfavorable conditions in other installations. It is the user who is responsible for compliance of his particular installation.

Dieses Gerät wurde sowohl einzeln als auch in einer Anlage, die einen normalen Anwendungsfall nachbildet, auf die Einhaltung der Funkentstörbestimmungen geprüft. Es ist jedoch möglich, dass die Funkentstörbestimmungen unter ungünstigen Umständen bei anderen Gerätekombinationen nicht eingehalten werden. Für die Einhaltung der Funkentstörbestimmungen einer gesamten Anlage, in der dieses Gerät betrieben wird, ist der Betreiber verantwortlich.

Compliance with applicable regulations depends on the use of shielded cables. It is the user who is responsible for procuring the appropriate cables.

Die Einhaltung zutreffender Bestimmungen hängt davon ab, dass geschirmte Ausführungen benutzt werden. Für die Beschaffung richtiger Ausführungen ist der Betreiber verantwortlich.

Software License Agreement

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS SOFTWARE. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE. INSTALLING OR USING THE SOFTWARE INDICATES THAT YOU AGREE TO AND ACCEPT THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS AGREEMENT YOU MAY RETURN THE UNUSED SOFTWARE FOR A FULL REFUND TO THE PLACE OF PURCHASE.

License

Electronics For Imaging, Inc. ("EFI") grants you a non-exclusive license to use the software ("Software") and accompanying documentation ("Documentation") included with the Product. The Software is licensed, not sold. You may use the Software solely for your own customary business or personal purposes. You may not rent, lease, sublicense or lend the Software. You may, however, permanently transfer all of your rights under this Agreement to another person or legal entity provided that: (1) you transfer to the person or entity all of the Software and Documentation (including all copies, updates, upgrades, prior versions, component parts, the media and printed materials, and this Agreement); (2) you retain no copies of the Software and Documentation, including copies stored on a computer; and (3) the recipient agrees to the terms and conditions of this Agreement.

You may not make or have made, or permit to be made, any copies of the Software or portions thereof, except as necessary for backup or archive purposes in support of your use of the Software as permitted hereunder. However, under no circumstances may you make or have made, any copies of any Software included on the ROM, the hard disk drive or any other component of the controller board or hardware. You may not copy the Documentation. You may not attempt to alter, disassemble, decompile, decrypt or reverse engineer the Software.

Proprietary Rights

You acknowledge that the Software is proprietary to EFI and its suppliers and that title and other intellectual property rights therein remain with EFI and its suppliers. Except as stated above, this Agreement does not grant you any right to patents, copyrights, trade secrets, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software. You may not adopt or use any trademark or trade name which is likely to be similar to or confusing with that of EFI or any of its suppliers or take any other action which impairs or reduces the trademark rights of EFI or its suppliers.

Confidentiality

You agree to hold the Software in confidence, disclosing the Software only to authorized users having a need to use the Software as permitted by this Agreement and to take all reasonable precautions to prevent disclosure to other parties.

Remedies And Termination

Unauthorized use, copying or disclosure of the Software, or any breach of this Agreement will result in automatic termination of this license and will make available to EFI other legal remedies. In the event of termination, you must destroy all copies of the Software and all of its component parts. All provisions of this Agreement relating to disclaimers of warranties, limitation of liability, remedies, or damages, and EFI's proprietary rights shall survive termination.

Limited Warranty And Disclaimer

EFI warrants to the original purchaser ("Customer") for thirty (30) days from the date of original purchase from EFI or its authorized retailer that the Software will perform in substantial conformance to the Documentation. EFI warrants the media containing the Software against failure during the above warranty period. EFI makes no warranty or representation that the Software will meet your specific requirements, that the operation of the Software will be uninterrupted or error free, or that all defects in the Software will be corrected.

EXCEPT FOR THE ABOVE EXPRESS LIMITED WARRANTY, EFI MAKES AND YOU RECEIVE NO WARRANTIES OR CONDITIONS ON THE SOFTWARE, EXPRESS, IMPLIED, STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND EFI SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limitation Of Liability

IN NO EVENT WILL EFI OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST PROFITS, COST OF COVER OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING FROM THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE OR FAILURE OF THE SOFTWARE, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF EFI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. YOU ACKNOWLEDGE THAT THE PRICE OF THE PRODUCT REFLECTS THIS ALLOCATION OF RISK. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. EFI DOES NOT EXCLUDE LIABILITY IN RESPECT OF PERSONAL INJURY, DEATH, WILLFUL MISCONDUCT OR GROSS NEGLIGENCE, EXCEPT TO THE MAXIMUM EXTENT THAT IT CAN BE EXCLUDED OR LIMITED BY LAW.

Export Controls

You agree that you will not export or re-export the Software in any form in violation of any applicable laws or regulations of the United States or the country in which you obtained them.

U.S. Government Restricted Rights

Software provided with this Product is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.

General

The laws of the State of California govern this Agreement. You agree that this Agreement shall not be subject to the United Nations Convention on Contracts for the International Sale of Goods (1980). This Agreement is the entire agreement held between us and supersedes any other communications or advertising with respect to the Software. If any provision of this Agreement is held invalid, the remainder of this Agreement shall continue in full force and effect.

If you have any questions, please see EFI's web site at www.efi.com.

Contents

Introduction

Media pack	xi
About the documentation	xi
Specifications	xii
User software	xiii
System requirements	xv
Windows	xv
Mac OS	xvi
UNIX (TCP/IP)	xvii
IPX (Novell)	xvii
NDPS (Novell)	xviii
Command WorkStation	xviii
DocBuilder Pro	xix

Installing User Software on a Windows Computer

Setting up PostScript printing with Windows 9X/Me	1
Installing the PostScript printer driver for Windows 9X/Me	2
Configuring installed options	5
Updating print options settings automatically	5
Completing the Windows 9X/Me printer connection	7
Setting up SMB printing with Windows 9X/Me	10
Setting up IPP printing with Windows 9X/Me	13
Setting up PostScript printing with Windows NT 4.0 or Windows 2000	15
Updating print options settings automatically	22
Completing the Windows NT 4.0 or Windows 2000 printer connection	24
Setting up SMB printing on Windows NT 4.0 or Windows 2000	31
Setting up IPP printing with Windows 2000	33

Installing Fiery utilities	35
Adobe Acrobat	36
Using the software for the first time	36
Configuring a connection for Fiery Link	36
Configuring the connection for Fiery utilities	45
Copying color files from the User Software CD	48
Copying the printer description files for Windows	49
Installing the ICM profiles on a Windows computer	50
Loading the monitor settings file	50

Installing User Software on a Mac OS Computer

Setting up the E-810 as a PostScript printer	53
Setting up the E-810 in the Chooser	54
Installing E-810 software and fonts	56
Configuring a connection for ColorWise Pro Tools	58
Configuring a connection for Fiery Spooler	61
Configuring a connection for Fiery Link	65
Configuring a connection for Fiery Downloader	76
Fonts	77
Copying color files from the User Software CD	78
Loading ICC profiles	78
Loading the monitor settings file	79
Loading the ICC copier profile	81

Downloading Installers with Fiery WebTools

Setting up Fiery WebTools	83
Using the Installer WebTool	84

Troubleshooting

On a Windows computer	87
Setting up printing on Windows NT or Windows 2000 Workstations	87
Reinstalling the Adobe PostScript Printer Driver on Windows 9X/Me	87
Problems with the Fiery utilities on Windows 9X/Me, Windows NT 4.0, or Windows 2000	88
On a Mac OS computer	88
Setting up the E-810 in the Chooser	88

Index

Introduction

This manual describes how to install user software for the Color Controller E-810™ and set up printing from Microsoft Windows and Apple Mac OS computers. For information about setting up network servers and clients to use the Color Controller E-810, see the *Configuration Guide*. For general information on using the color copier, your computer, your application software, or your network, see the manuals that accompany those products.

NOTE: The term “E-810” is used in this manual to refer to the Color Controller E-810. The term “Aero” is used in illustrations in this manual to refer to the E-810.

Media pack

Your E-810 includes a customer media pack containing:

- User Software CD
- System Software CD(s) (for service use only)
- Documentation (*Configuration Guide*, *Getting Started*, *Printing Guide*, *Job Management Guide*, *Color Guide*, and *Release Notes*)

About the documentation

This manual is part of the set of E-810 documentation, which includes the following manuals for users and system administrators:

- The *Configuration Guide* explains basic configuration and administration of the E-810 for the supported platforms and network environments. It also includes guidelines for setting up UNIX, Windows NT 4.0, and Novell NetWare servers to provide Adobe PostScript printing services to clients.

- *Getting Started* guides you through the process of installing the software required for printing to the E-810. Specifically, it describes the installation of the PostScript printer drivers, printer description files, and other software provided on the User Software CD. It also explains how to connect each user to the network.
- The *Printing Guide* describes the printing features of the E-810 for users who send jobs via remote workstations on the network.
- The *Color Guide* provides information on managing the color output of your E-810. It addresses concepts and issues associated with printing to the E-810 and outlines key workflow scenarios. This manual explains how to take advantage of the ColorWise® color management system and features in ColorWise Pro Tools™. In addition, the *Color Guide* offers information on printing from popular Windows and Mac OS applications.
- The *Job Management Guide* explains the functions of the Fiery® utilities, including the Fiery Command WorkStation™, and how you can use the utilities to manage jobs. This book is intended for an operator or administrator, or a user with the necessary access privileges, who needs to monitor and manage job flow, perform color calibration, and troubleshoot problems that may arise.
- *Release Notes* provide last-minute product information and workarounds for some of the problems you may encounter.

Specifications

- Single Pentium III, 866MHz CPU processor
- 512 MB RAM
- 40 GB Hard disk drive
- An internal CD-ROM drive
- An internal 250 MB removable cartridge Iomega Zip drive
- Supports AppleTalk, TCP/IP, and IPX/SPX protocols simultaneously
- Supports Port 9100
- Supports thinnet unshielded twisted pair (Fast Ethernet 100BaseTX or Ethernet 10BaseT)
- Supports Adobe PostScript 3

- Includes 136 fonts (126 Adobe Type 1 PostScript and 10 TrueType)

In addition, two Adobe Multiple Master fonts are included and are used for font substitution in PDF files.

- Built-in ColorWise color management and NetWise™ networking management
- Fiery WebTools™
- Fiery utilities, including Fiery Downloader™, Fiery Link™, and Fiery Spooler™ (Mac OS only), and ColorWise Pro Tools
- Command WorkStation™ (Windows only) software
- Supports Token Ring networking (available as an option)
- Supports the Fiery Advanced Controller Interface kit option, which includes an AGP Video Board monitor, a keyboard, and a mouse

NOTE: Fiery utilities can be installed on the E-810 from the User Software CD if the Fiery Advanced Controller Interface option is installed. Other applications are not supported and may cause system problems on the E-810.

- Supports Internet Printing Protocol (IPP)

User software

The full set of E-810 user software is provided on the User Software CD.

Adobe PostScript Printer Driver	Enables you to print to the E-810 from Windows 9X/Me, Windows NT 4.0, and Mac OS computers; also supports special E-810 and PostScript 3 features. Windows 2000 users should use the Microsoft PostScript Printer Driver provided with Windows 2000.
PostScript Printer Description file (PPD)	For use with the PostScript printer driver that allows the E-810 to appear in the Print and Page Setup dialog boxes of popular applications. The E-810 PPDs provide information about the E-810 and your particular copier model to the application and printer driver you are using.

PostScript Fonts (Mac OS only)	PostScript screen and printer fonts that correspond to the 136 PostScript printer fonts installed on the E-810 (126 Adobe Type 1 and 10 TrueType). See Appendix B of the <i>Printing Guide</i> for a complete list of PostScript fonts installed on the E-810.
Fiery Downloader	Enables you to print PostScript files, Encapsulated PostScript (EPS) files, and Portable Document Format (PDF) files directly to the E-810 without opening the application in which they were created. Fiery Downloader also enables you to manage the printer fonts installed on the E-810.
Fiery Spooler (Mac OS only)	Enables you to view the order and priority of print jobs, customize printer settings for jobs, delete jobs, and move jobs between queues. You can also use Fiery Spooler to view job managing information.
ColorWise Pro Tools	ICC-open color management tools; enables you to edit and download ICC profiles.
Fiery Scan™	Plug-in modules for Photoshop that enable you to scan images from the copier directly into the application.
Fiery Link	Enables you to monitor the status of connected E-810 servers and the print jobs sent to them.
Command WorkStation software	Enables the operator to control the E-810 functions from Windows 9X/Me and Windows 2000/NT 4.0 workstations. To use the Command WorkStation, see the <i>Job Management Guide</i> .
Color management files	ColorSync (MacOS) and ICM (Windows) color management files that enable you to maintain consistent color from your original artwork to the colors displayed on your monitor to the printed output.

Color reference files	Reference pages that you can print to view the range of colors available on your E-810. For the most predictable color results, refer to these pages when defining colors in applications. For more information on color management, see the <i>Color Guide</i> .
MRJ (Mac OS only)	Mac OS Runtime for Java installer (MRJ) v2.2 is required by all Java-based Fiery utilities. When installing these utilities, if MRJ is not detected, the MRJ installer is automatically launched.

NOTE: The Fiery Link utility and the PostScript printer drivers and printer description files can be installed from the User Software CD or from the E-810 with the Installer WebTool. For instructions, see “Using the Installer WebTool” on page 84.

System requirements

To install the E-810 user software on a Windows or Mac OS computer, the computer must be equipped with a built-in or external CD-ROM drive.

Windows

To print to the E-810, you need:

- A Windows-based computer with an 80486, AMD, or Pentium processor
- Windows 9X/Me, Windows NT 4.0, or Windows 2000
- At least 32MB of RAM for Windows 9X/Me
- At least 32MB of RAM for Windows NT 4.0
- At least 64MB of RAM for Windows 2000

With Microsoft Windows 9X/Me, you also need:

- IPX/SPX or TCP/IP networking protocol installed
- Adobe PostScript Printer Driver for Windows (included with the user software)

With Microsoft Windows NT 4.0, you also need:

- IPX/SPX, TCP/IP, or AppleTalk networking protocol installed
- Adobe PostScript Printer Driver for Windows NT 4.0 (included with the user software)

With Microsoft Windows 2000, you also need:

- IPX/SPX, TCP/IP, or AppleTalk networking protocol installed
- Microsoft PostScript Printer Driver for Windows 2000

To use the Fiery utilities (Fiery Downloader, ColorWise Pro Tools, and Fiery Link) you also need:

- Windows 9X/Me, Windows 2000, or Windows NT 4.0 with NT Service Pack 5 or later
- At least 48MB of RAM; 56MB of RAM is recommended
- TCP/IP networking protocol installed

To use Fiery WebTools, you also need a Java-enabled web browser:

- *Either* Netscape Communicator version 4.5 (or later), *or* Microsoft Internet Explorer version 4.0.1 (and Service Pack 1) or later

NOTE: Netscape and Microsoft release frequent updates to their browsers. As support cannot be guaranteed for all versions, use the versions specified above for best results.

- A monitor, and video memory that supports 16-bit color at a minimum resolution of 800 x 600 pixels
- A TCP/IP enabled network and the IP address or DNS name of the E-810
- Web Services enabled on the E-810

Mac OS

To print to the E-810 you need:

- A Mac OS-based computer
- At least 32MB of RAM

- AppleTalk (EtherTalk)
- Apple System software version 8.5 or later
- Adobe PostScript Printer Driver (provided on the User Software CD)

To use the Fiery utilities, you also need:

- A Mac OS-based computer with Apple System Software version 8.5 or later
- At least 64MB of RAM

To use Fiery WebTools, you also need a Java-enabled web browser:

- *Either* Netscape Communicator v4.5 or later, *or* Internet Explorer v4.0.1 or later

NOTE: Netscape and Microsoft release frequent updates to their browsers. As support cannot be guaranteed for all versions, use the version specified above for best results.

- A monitor and video memory that supports 16-bit color at a minimum resolution of 800 x 600 pixels
- A TCP/IP enabled network and the IP address or DNS name of the E-810
- Web Services enabled on the E-810

UNIX (TCP/IP)

To print to the E-810 with a UNIX workstation, you need:

- A workstation with standard TCP/IP connectivity (for example, Sun SPARCStation or Silicon Graphics workstation with Solaris version 2.5 or later or SunOS version 4.1.x software)
- TCP/IP printing software that conforms to RFC1179 (Berkeley lpd protocol)
- Support for Ethernet II and Token-Ring SNAP

IPX (Novell)

To use the E-810 with an IPX (Novell) network, you need:

- A Novell server
- Novell NetWare software version 3.x, 4.x, or 5.x

- Support for Ethernet SNAP, Ethernet II, Ethernet 802.3, Ethernet 802.2, Token Ring SNAP, and Token Ring

NDPS (Novell)

To use the E-810 with an NDPS network, you need:

- A file server with NetWare Network Operating System version 5.x
- NetWare Client Software version 5.x
- Latest version of the Support Pack and Novell Gateway

Command WorkStation

To run the Command WorkStation application from a remote computer, you need:

- A Windows-based computer with a 200MHz Pentium processor
- Windows 9X/Me/2000 or Windows NT 4.0 with NT Service Pack 6a
- TCP/IP networking protocol installed
- A video adapter card with at least 2MB of video memory
- At least 32MB of RAM
- An 850MB (or greater) hard disk drive
- At least a 2x CD-ROM drive
- A 17" monitor that supports 16-bit color at a minimum resolution of 1024 x 768 pixels

DocBuilder Pro

To run the Command WorkStation application with Fiery DocBuilder Pro™, you need

- A Windows-based computer with a 333MHz Pentium processor
- Windows 9X/Me or Windows NT 4.0 with NT Service Pack 4 or 5
- TCP/IP networking protocol installed
- A video adapter card with at least 2MB of video memory
- At least 64MB of RAM
- An 850MB (or larger) hard disk drive
- At least 90MB of available hard disk space
- At least a 2x CD-ROM drive
- Parallel Port with twenty-four (24) pins (for a dongle)
- A 17" monitor that supports 16-bit color at a minimum resolution of 1024 x 768 pixels

Installing User Software on a Windows Computer

This chapter describes the procedures for installing software and setting up printing from a Windows-based computer running Windows 9X/Me, Windows NT 4.0, or Windows 2000.

The general steps for installing the software are listed below:

- Install the PostScript printer driver and corresponding printer driver files, and set up the printer driver to communicate with the E-810.
- Install Fiery utilities (Fiery Scan, Fiery Link, Fiery Downloader, ColorWise Pro Tools, and Command WorkStation).
- Configure the connection for Fiery utilities.
- Copy additional files from the User Software CD as needed.

In addition to using the User Software CD, you can download printer drivers and the Fiery Link installer from the E-810 with the Installer WebTool (if the site administrator has enabled Internet access to the E-810). For instructions, see “Using the Installer WebTool” on page 84. After you download the printer files, the installation process is identical to installing from the User Software CD.

Setting up PostScript printing with Windows 9X/Me

To set up the E-810 as a PostScript printer, you must install the PostScript printer driver for Windows 9X/Me and the corresponding printer description files. You must also configure a particular type of print connection between the computer and the E-810. If you are printing over a network, you will need to configure a network connection.

If you are printing using SMB (Server Message Block), you can connect to the E-810 and install the printer drivers in a single procedure. For more information, see “Setting up SMB printing with Windows 9X/Me” on page 10.

Installing the PostScript printer driver for Windows 9X/Me

The following procedure describes installing the printer driver from the User Software CD or from the Installer WebTool. The subsequent procedures describe setting up the print connection.


NOTE: The following procedures use Windows 9X illustrations; any Windows Me differences are noted.

TO INSTALL THE POSTSCRIPT PRINTER DRIVER FOR WINDOWS 9X/ME


1. Click Start, choose Settings, and then choose Printers to display the Printers window.
2. Double-click Add Printer, and click Next.
3. Select the option to print to a Local printer, and click Next.

This procedure describes the installation of a local printer. You can modify the connection later, according to your network type.

4. In the dialog box displaying lists of manufacturers and printers, click Have Disk.

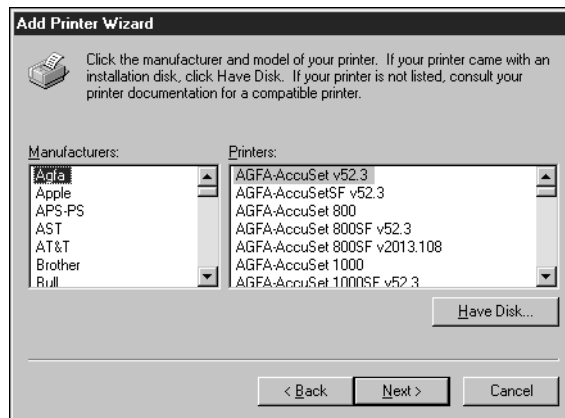

The Install From Disk dialog box prompts you for the disk.

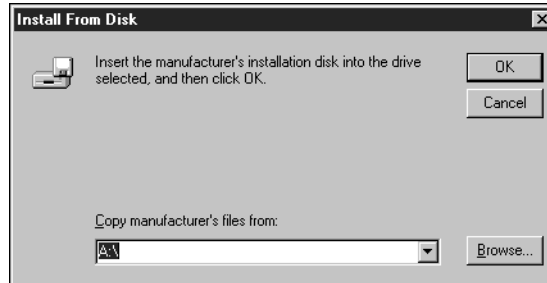

5. If you are installing from the CD, type the name of the CD-ROM drive (for example, D:\), and click Browse. Browse to English\Prntdrvr\Ps_drvr\Win_9x_ME.

If you are installing from the files you downloaded using the Installer, browse to prntdrv\Prntdrv\Ps_drvr\Win_9x_ME.

Make sure “Oemsetup.inf” is selected.


6. Click OK.

The path is copied to the Install From Disk dialog box.

7. Verify the path is correct, and click OK.




8. In the Printers dialog box, select the E-810 file and click Next.

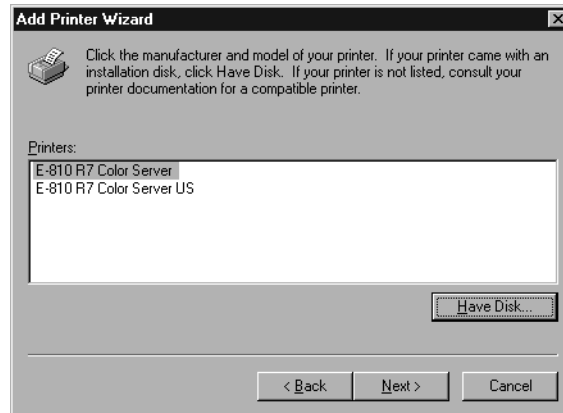

9. Select the LPT1 port and click Next.

You will configure the port later, according to your network type.

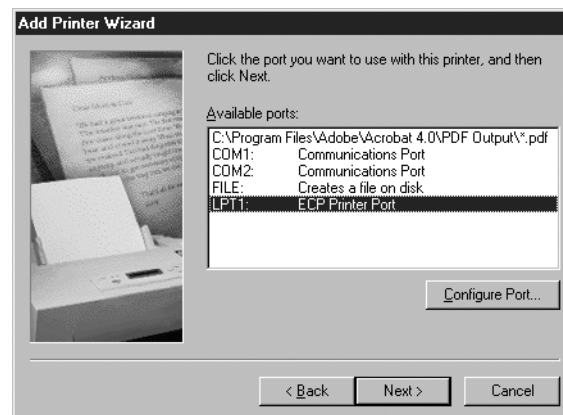

10. Using a maximum of 31 characters, enter a name for the E-810 (or leave the default name) in the Printer Name box.

This name will be used in the Printers and queue windows.

11. If you want the E-810 to be the default printer select Yes; if not, select No. Then click Next.
12. Select No to printing the test page and click Finish.

The necessary files are installed to your hard disk.

Configuring installed options

After you have completed the printer driver installation, you need to configure the options installed on your copier. You need to configure the options manually; you cannot use the Two-Way Communication feature to configure the options automatically.

TO CONFIGURE OPTIONS ON THE E-810 MANUALLY FOR WINDOWS 9X/ME

1. Click the Start button, choose Settings, and then choose Printers.
2. Click the E-810 icon and choose Properties from the File menu.
3. Select the Configuration tab.
4. Select an installed option from the Available Options list and click Add to move the option to the Installed Options list.

The supported options are LCT and Sorter.

5. Click OK.

Updating print options settings automatically

The Two-Way Communication feature updates the E-810 Expert Settings defaults. With Two-Way Communication enabled, you can view the current settings from the Expert Settings window in the printer driver. See the *Color Guide* for more information.


You can change settings from ColorWise Pro Tools on a job-by-job basis and still maintain the original Expert Setting values, which are stored on your computer.

You can then return to the Expert Settings window and use the Default button at any time to print jobs with the latest E-810 settings regardless of the current Two-Way Communication status.

NOTE: Two-Way Communication requires a TCP/IP-enabled network.

TO UPDATE PRINT OPTION SETTINGS AUTOMATICALLY

1. Click Start in the Windows taskbar, choose Settings, and then choose Printers.
2. In the Printers window, select the icon for the E-810 PostScript printer driver.
3. Choose Properties from the File menu.
4. Select the Configuration tab.
5. Check Two-Way Communication.

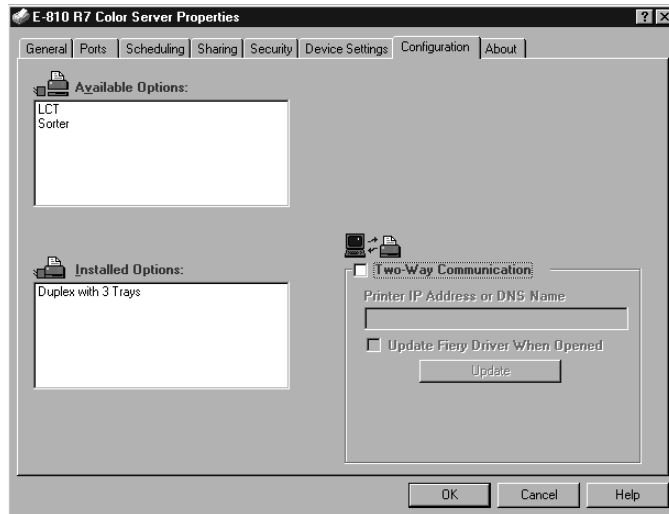

6. Enter the E-810 IP address or DNS name.
7. To allow the printer driver to display the printer's current default settings when you open the printer driver, check Update Fiery Driver When Opened.
8. Click Update.
9. Click OK.

NOTE: To remove this feature, clear the Two-Way communication checkbox and click the Defaults button.

Completing the Windows 9X/Me printer connection

To print from Windows 9X/Me, you need to:

- Set up network servers (if any).
- Set up the E-810 to accept print jobs from your computer,
- Configure a port on each Windows computer for the network.

Completing the Windows 9X/Me IPX/SPX or IPX (Novell) connection

If you are printing through a Novell server, the Novell network and file server should be set up before you begin. The file server should be configured with a print server and print connection for the E-810. For details, see your NetWare documentation and the *Configuration Guide*.

To print from Windows 9X/Me computers over IPX (Novell), you must first set up IPX/SPX protocols, and then configure the E-810 by choosing the IPX frame type and entering the settings for the port you use.


TO SET UP IPX/SPX PRINTING FOR WINDOWS 9X/ME

1. **Click the Start button, choose Settings, and then choose Control Panel.**
2. **Double-click the Network icon.**

Make sure that IPX/SPX-compatible Protocol is listed in the Installed Network Components section.

For instructions, see your Windows 9X/Me documentation.

3. Double-click the IPX/SPX-compatible Protocol icon.

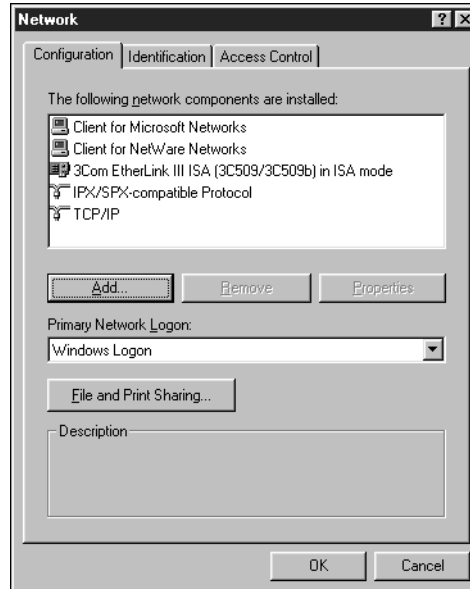


4. Click the Advanced tab.

5. In the Property list, click Frame Type.

6. In the Value pull-down menu, select the Frame Type that corresponds to the one set in E-810 Network Setup.

If necessary, print the Configuration page from the LCD control panel to check which Frame Type(s) are configured.

NOTE: Do not select Auto. Doing so may not select the Frame Type specified on the E-810.

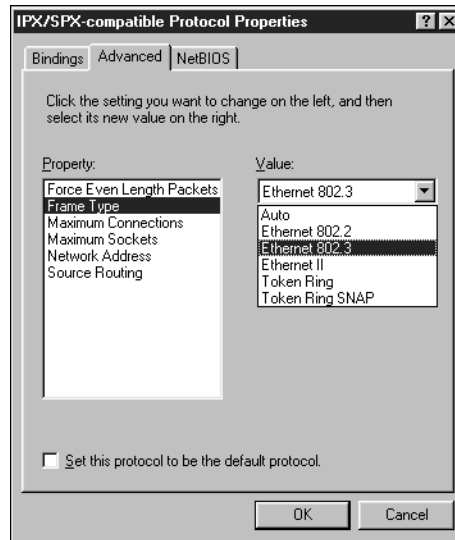

7. Click OK and close the Network Control Panel.
8. When prompted to restart your computer, click Yes.

TO SET UP IPX (NOVELL) PRINTING WITH WINDOWS 9X/ME

1. Click the Start button, choose Settings, and then choose Printers.
2. Click the E-810 printer icon, and then choose Properties from the File menu.
3. Click the Details tab and click Add Port.
A list of connection options appears.
4. In the Add Port dialog box, specify the network path, or click Browse for a display of your network environment.
5. If you are using a NetWare file server, double-click the icon for the NetWare file server you want to use for printing to the E-810.

6. **Click the printer icon for the NetWare print queue you will use and click OK.**
7. **In the Add Port dialog box, verify that the network path is updated and click OK.**

Your print jobs are transmitted to the specified print queue on the Novell file server. The E-810 polls the file server, and if jobs are present, they are transmitted to the E-810.

To confirm the connection, print a Windows 9X/Me test page.

8. **Click the General tab, click Apply, and click Print Test Page.**

If the test page prints successfully, you are ready to print from the computer.

Setting up SMB printing with Windows 9X/Me

If you do not have a Novell network, you can print via SMB printing (also known as Windows or WINS printing). Printing by this method allows you to install the PostScript printer driver and printer description files, and print from your computer to a particular connection (Hold, Print, or Direct) on the E-810. These instructions assume you have the TCP/IP protocol and Client for Microsoft Networks installed.

To set up printing to a second or third print connection, you must install a new printer driver and PPD file. Repeat the procedure “To set up SMB printing on Windows 9X/Me” on page 11. If you install more than one printer, give each a descriptive name during printer driver installation, such as Aero-Print or Aero-Hold, so you can easily identify printers.


BEFORE YOU BEGIN

- **Configure the E-810 for SMB printing in Network Setup>Service Setup>Windows Setup.**

SMB printing is referred to as Windows Printing in Setup, on the Control Panel Map, and on the Configuration page. For more information, see the *Configuration Guide*.

TO SET UP SMB PRINTING ON WINDOWS 9X/ME

1. Double-click the Network Neighborhood icon to display your network environment.

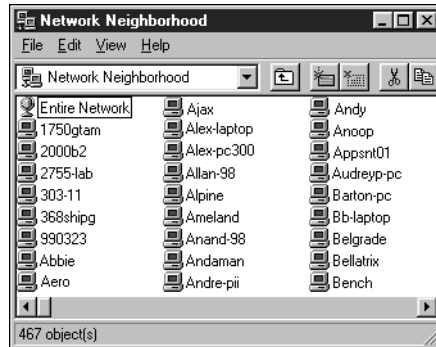


2. Browse for the printer you would like to print to.

The printer name you are browsing for is the name entered in Network Setup> Service Setup> Windows Setup> Server Name. Refer to the Configuration page for this information.

NOTE: You can also locate the printer using the Find feature on your Windows computer. Click the Start button, choose Find, and then choose Computer. Enter the name of the printer, and click Find Now.


If you are not able to locate your E-810, see your network administrator.

3. Double-click the name of the printer to display enabled print connections.

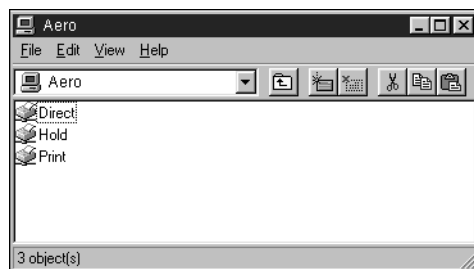

4. Double-click the name of the connection you want to print to.

The Printers dialog box appears, asking whether you would like to set up the printer.

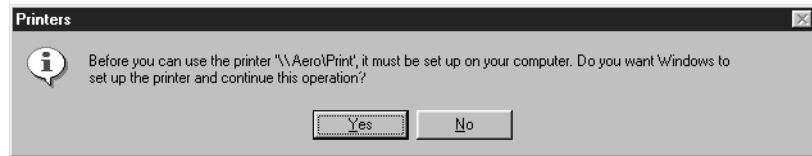


5. Select Yes to install the PostScript printer driver and printer description file for the selected connection.

The Add Printer Wizard appears.

6. Specify whether you print from MS-DOS based programs, and then click Next.

If you choose Yes, you must capture a printer port before proceeding with the installation. See your Windows documentation for details.

7. Enter a name for the E-810 in the Printer name box, and choose whether you want the E-810 to be your default printer. Click Next.

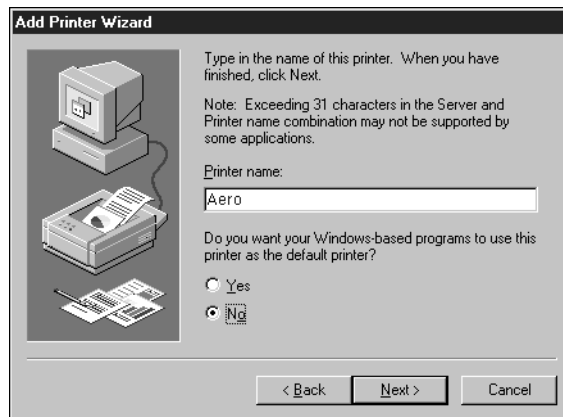

8. You are asked if you would like to print a test page. Choose Yes and click Finish.

The necessary files are installed to your hard disk.

If the test page prints successfully, you are ready to print from the computer.

Setting up IPP printing with Windows 9X/Me

With Internet Printing Protocol (IPP), print jobs are sent to the E-810 over the Internet.

IPP printing is supported directly on Windows 2000 but can be enabled on Windows 9X and Windows Me computers by installing the “wppins.exe” patch file (available on the Windows 2000 Server Product CD). For information about obtaining this patch, contact the Microsoft Corporation.

NOTE: The IPP setup procedures are performed after installing the appropriate printer drivers. See “To install the PostScript printer driver for Windows 9X/Me” on page 2.

BEFORE YOU BEGIN


1. Prepare the E-810 for TCP/IP printing.
2. Make sure the E-810 is configured for IPP printing in Network Setup > Service Setup > IPP Setup. For more information, see the *Configuration Guide*.
3. Specify the printing destination on your computer.

TO SET UP IPP PRINTING WITH WINDOWS 9X/ME

4. Click the Start button, choose Settings, and then choose Printers.
5. In the Printers windows, double-click the icon for the E-810 PostScript printer driver. Choose Properties from the File menu.


6. Select the Details tab and click Add Port.

The Add Port dialog box appears.

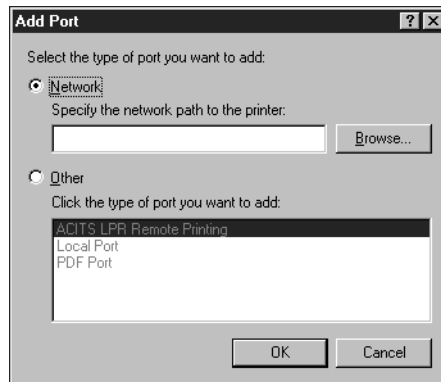**7. Enter a network path for the printer.**

The path for the printer is “http://”, followed by the IP address, or the DNS name, “ipp”, and then by the connection you would like to print to (print, hold, or direct.)

NOTE: You can enter, “http”, “ipp”, and “printer” in either lowercase or uppercase letters.

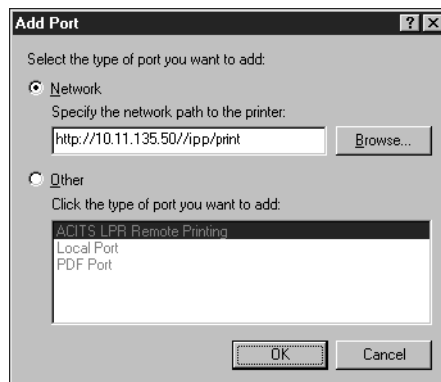**8. Click OK.**

Setting up PostScript printing with Windows NT 4.0 or Windows 2000

To set up the E-810 as a PostScript printer, you must install the PostScript printer driver for Windows NT 4.0 and/or Windows 2000 and its corresponding printer description files. You must also configure a particular type of print connection between the computer and the E-810. If you are printing over a network, you will need to configure a network connection.

The instructions below describe the installation of a local printer. Adding a printer to a local system requires that you log in to your local Windows NT 4.0 or Windows 2000 computer (not the network server domain) and that you be a member of the Administrators group. The procedure for adding a network printer is similar to adding a port. This procedure is described in “Completing the Windows NT 4.0 TCP/IP and LPR connection” on page 24.


The following procedures for Windows NT 4.0 and Windows 2000 describe installing the printer drivers from the User Software CD. The Windows NT 4.0 and Windows 2000 procedures can also be used if you have downloaded the printer files using the Installer WebTool. The procedures that follow describe setting up the print connection.

If you are printing using SMB, you can connect to the E-810 and install the printer drivers in a single procedure. To configure the E-810 for SMB printing, see “Setting up SMB printing on Windows NT 4.0 or Windows 2000” on page 31.

TO INSTALL THE POSTSCRIPT PRINTER DRIVER FOR WINDOWS NT 4.0

- 1. If you are installing from the CD, insert it into the CD-ROM drive.**
- 2. Click Start in the Windows NT taskbar, choose Settings, and then choose Printers.**
- 3. Double-click Add Printer.**


4. To install a printer locally, select My Computer and click Next.

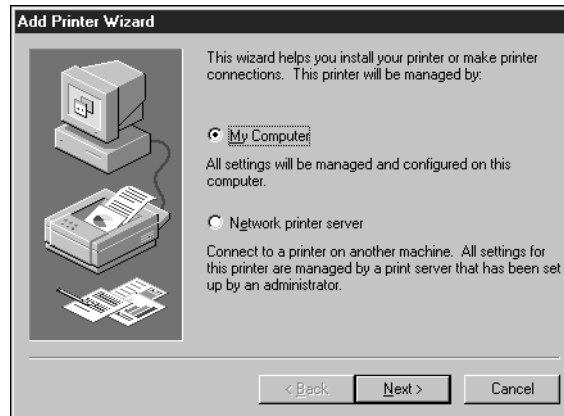


“My Computer” is available if you logged in to a computer on which you have Administrator privileges. If it is not available, you can add a network printer. The procedure is similar to adding a port (see page 25).

5. Check LPT1: and click Next.


This is a general installation that works for the parallel port connection. You can add a network port later, according to your network type.

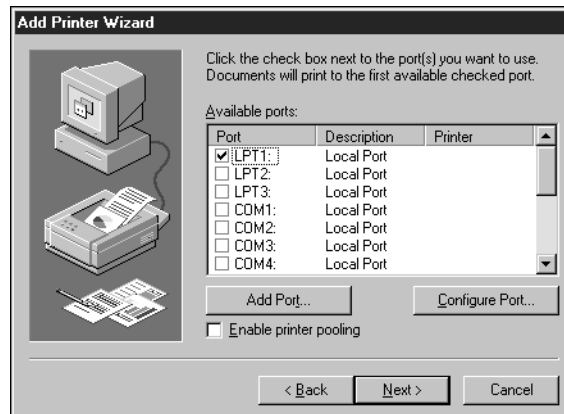

6. In the dialog box displaying lists of manufacturers and printers, click Have Disk.

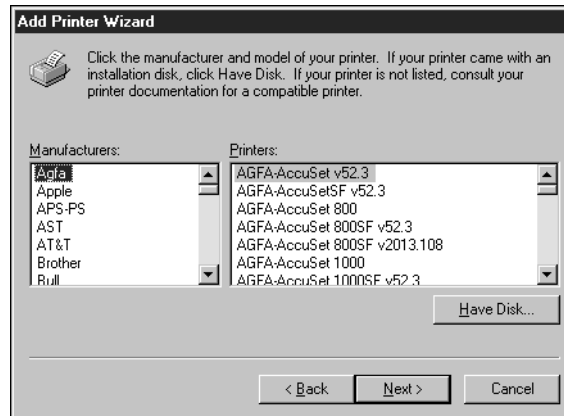

The Install From Disk dialog box prompts you for the disk.

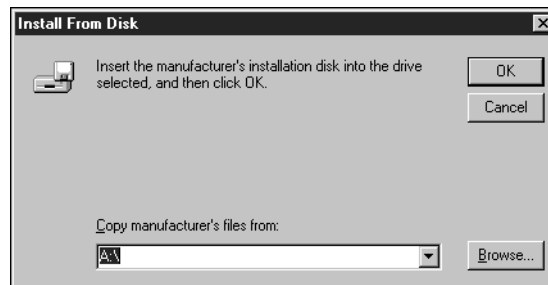

7. If you are installing from the CD, type the name of the CD-ROM drive (for example, D:\), and click Browse.

If you are installing from files you downloaded using the Installer WebTool, type the name of your hard disk drive (for example, C:\), and click Browse.


8. If you are installing from the CD, browse to the English\Prntdrv\Ps_drvr\Win_NT4x folder and click Open.

If you are installing from files you downloaded using the Installer WebTool, browse to the prntdrv\Prntdrv\Ps_drvr\Win_NT4x folder and click Open.


Make sure “Oemsetup.inf” or “Oemsetup” is selected.

The path is copied to the Install From Disk dialog box.


9. Verify the path is correct, and click OK.

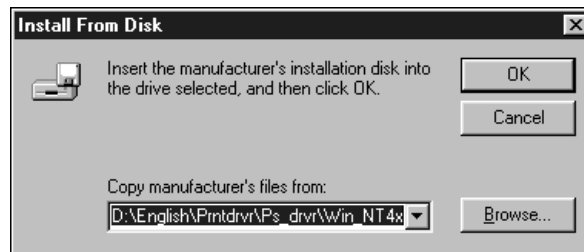


10. In the Printers box, select the E-810 file and click Next.

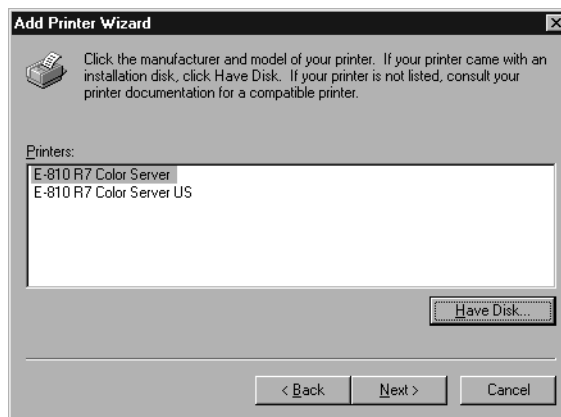

11. Enter a name for the E-810 in the Printer name box, and choose whether you want the E-810 to be your default printer. Click Next.

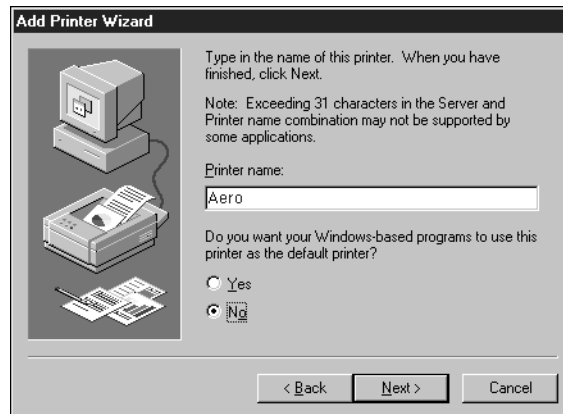

12. Indicate whether you want the printer installed as a shared printer. Click Next.

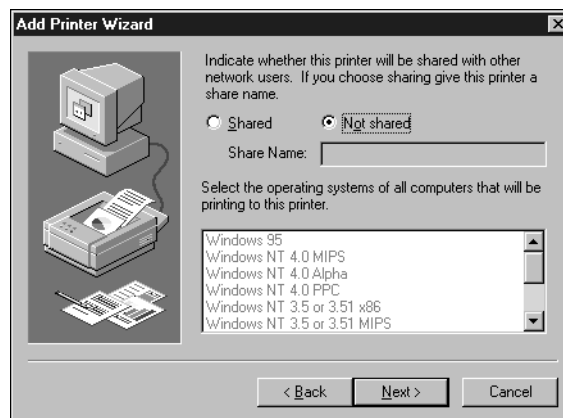

If you select Shared, enter a Share Name for the printer and select the operating systems used by client computers. For information on shared printers, see the *Configuration Guide*.

13. Click No in the next dialog box to postpone printing a test page, and click Finish.


When installation is complete, the Printers window appears with an icon for the newly installed printer.

TO INSTALL THE POSTSCRIPT PRINTER DRIVER FOR WINDOWS 2000

1. Click Start, choose Settings, and then choose Printers to display the Printers window.
2. Double-click the Add Printer icon, and click Next.
3. Select the option to print to a Local printer, and click Next.


This procedure describes the installation of a local printer. You can modify the connection later, according to your network type.

4. Select the LPT1 port and click Next.

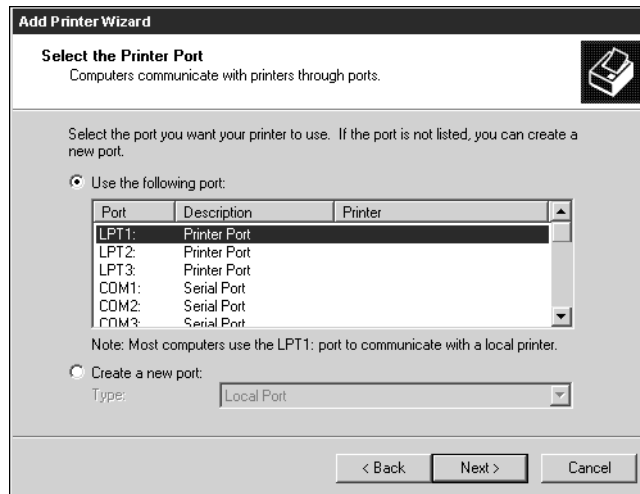

5. In the dialog box displaying lists of manufacturers and printers, click **Have Disk**.

The Install From Disk dialog box prompts you for the disk.

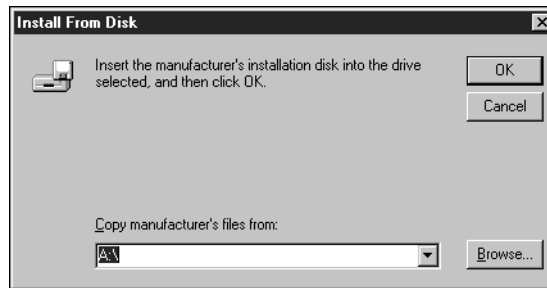

6. Type the name of the CD-ROM drive (for example, D:\), and click **Browse**. Browse to the English\Prntdrv\Ps_drvr\Win_2000 folder.

Make sure “Oemsetup.inf” or “Oemsetup” is selected and click **Open**.


7. Verify the path is correct, and click **OK**.

The path is copied to the Install From Disk dialog box.

8. In the **Printers** box, select the E-810 file and click **Next**.

9. Enter a name for the E-810 in the **Printer Name** box.

This name will be used in the Printers and queue windows.

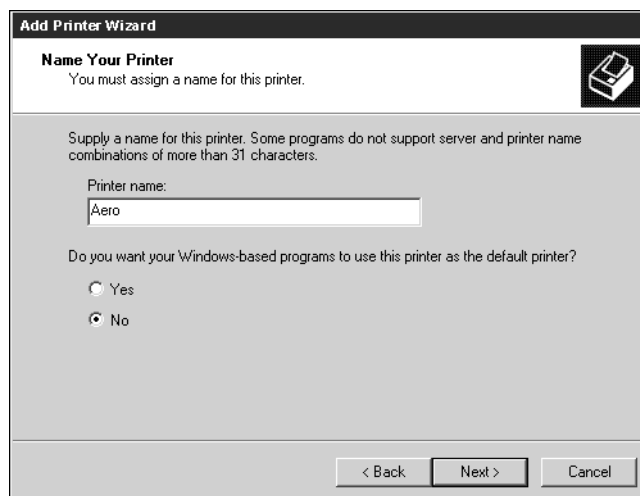


10. Follow the instructions in the remaining windows.

When asked whether to print a test page, choose No.

The necessary files are installed to your hard disk.

NOTE: The Digital Signature Not Found window indicates that the printer driver for Windows 2000 does not have a Microsoft digital signature. However, printing to the E-810 is processed correctly, so click Yes to continue with installation.

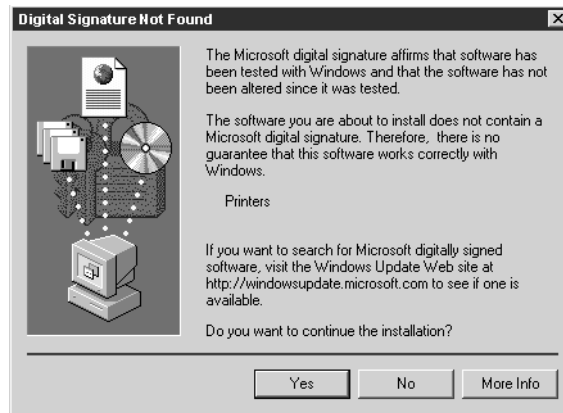**11. If this is the first printer driver you are installing on the computer, you may be prompted to install files from the Windows 2000 CD. Insert the CD-ROM, browse to the win2000\english\i386 folder, and then click OK.**

When installation is complete, the Printers window appears with an icon for the newly installed printer. To enable Internet Protocol Printing (IPP), see “Setting up IPP printing with Windows 2000” on page 33.

You are ready for the instructions to connect to your network type (see “Completing the Windows NT 4.0 or Windows 2000 printer connection” on page 24).

Updating print options settings automatically

The Two-Way Communication feature updates the E-810 Expert Settings defaults. With Two-Way Communication enabled, you can view the current settings from the Expert Settings window in the printer driver. See the *Color Guide* for more information.

You can change settings from ColorWise Pro Tools on a job-by-job basis and still maintain the original Expert Setting values, which are stored on your computer.

You can then return to the Expert Settings window and use the Default button at any time to print jobs with the latest E-810 settings regardless of the current Two-Way Communication status.

NOTE: Two-Way Communication requires a TCP/IP-enabled network.

TO UPDATE PRINT OPTION SETTINGS AUTOMATICALLY

- 1. Click Start in the Windows taskbar, choose Settings, and then choose Printers.**
- 2. In the Printers window, select the icon for the E-810 PostScript printer driver.**
- 3. Choose Properties from the File menu.**
- 4. Select the Configuration tab.**
- 5. Check Two-Way Communication.**
This will activate the Printer IP Address or DNS Name field.
- 6. Enter the E-810 IP address or DNS name.**
- 7. If you would like your printer driver to display the copier's current default settings when opened, check Update Fiery Driver When Opened.**
- 8. Click Update.**
- 9. Click OK.**

NOTE: To remove this feature, uncheck the Two-Way communication checkbox and click the Defaults button.

Completing the Windows NT 4.0 or Windows 2000 printer connection

To print from Windows NT 4.0 or Windows 2000 you need to:

- Set up network servers, if any.
- Set up the E-810 to accept print jobs from your computer.
- Configure a port on each Windows NT or Windows 2000 computer for the network type.

To do this	See
Configure the TCP/IP (LPR port) connection	“Completing the Windows NT 4.0 TCP/IP and LPR connection” on page 24.
Configure the IPX (Novell) connection	“Completing the Windows NT 4.0 or Windows 2000 IPX (Novell) connection” on page 29.

Completing the Windows NT 4.0 TCP/IP and LPR connection

Once you have installed the PostScript printer driver and printer driver files, complete the setup for the TCP/IP and LPR connection as follows:


- Prepare the E-810 to accept print jobs using TCP/IP and LPR protocols.
(For details, see the *Configuration Guide*.)
- Configure the computer for the TCP/IP connection.

Before you continue, ask the system administrator for the IP address assigned to the E-810, as well as the subnet mask and the gateway address, if they are used.

The TCP/IP Protocol and Microsoft TCP/IP Printing software should already be installed on the Windows NT computer.


TO SET UP TCP/IP AND LPR PRINTING FOR WINDOWS NT 4.0

1. Open the Properties dialog box for the E-810, and click the Ports tab.

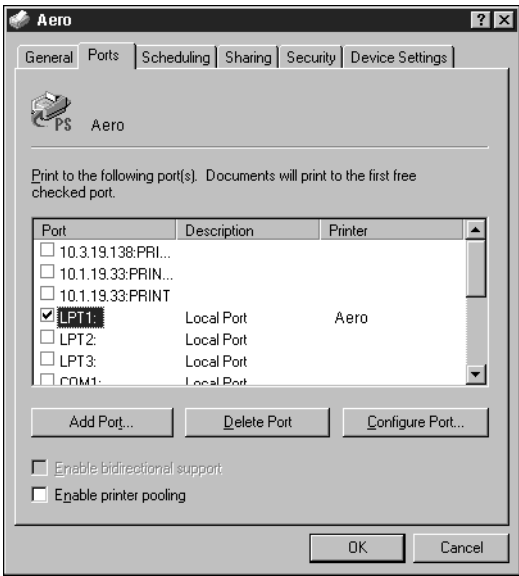


2. Click Add Port.

The available port types are displayed.

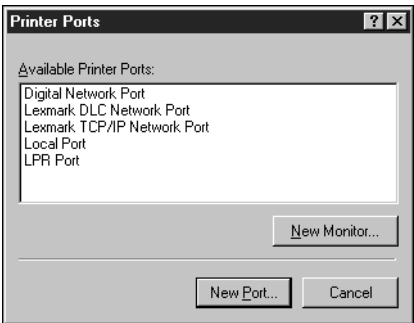

3. Select LPR Port and click New Port.

If the LPR port is not listed, install the TCP/IP network protocol and Microsoft TCP/IP printing software. See the *Configuration Guide* and your Windows documentation.

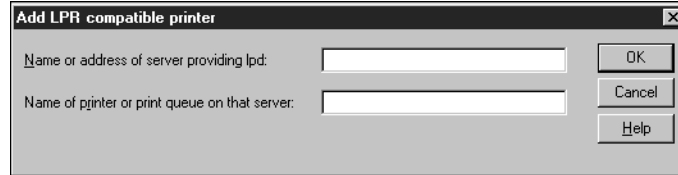4. Enter the IP address of the E-810.

If your network uses Domain Name Services (DNS), enter the DNS name assigned to the E-810 instead of the IP address.

5. Press Tab and type one of the following names, depending on the E-810 connection you would like to print to.

print
hold

NOTE: This name is case-sensitive; type it *exactly* as shown above.

6. Click OK.

The computer checks the address or DNS name you entered and notifies you if it cannot resolve the address.

7. Click Close in the Printer Ports dialog box.

The new port configuration is reflected in the Ports tab. You must now close the Printer Properties dialog box to verify the connection.


8. Click OK to close the Printer Properties dialog box.**9. Reopen the Printer Properties dialog box.****10. Click the General tab and click Print Test Page.**

When you print, your PostScript files are transmitted over the LPR Port connection to the E-810.

11. Click OK to close the Printer Properties dialog box.

TO SET UP TCP/IP AND LPR PRINTING FOR WINDOWS 2000

1. Open the Properties dialog box for the E-810, and click the Ports tab.

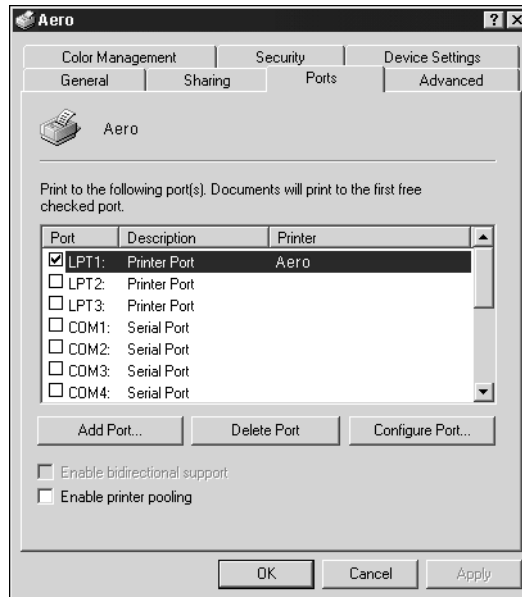

2. Click Add Port.
3. Select Standard TCP/IP Port for Available port types, and click New Port.
4. Click Next in the Add Standard TCP/IP Printer Port Wizard dialog box.
5. Enter the IP address of the E-810.
The IP address will be entered automatically for Port Name.
6. Click Next.
The device will be detected automatically.
7. Click Finish to close the Add Standard TCP/IP Printer Port Wizard dialog box and Close from the Printer Ports dialog box.
8. Click Configure Port in the Properties dialog box.
The Configure Standard TCP/IP Port Monitor dialog box appears.

9. If you have LPD printing enabled at the E-810 Control Panel, select LPR for Protocol and LPR Byte Counting Enabled under LPR Settings.

NOTE: You can also proceed without selecting LPR Byte Counting Enabled under LPR settings.

10. If you have Port 9100 printing enabled at the E-810 Control Panel, select Raw.

“9100” is automatically detected for Port Number under Raw Settings. You can print to the printer connection selected for Port 9100 printing at the E-810 Control Panel.

The screenshot shows the 'Configure Standard TCP/IP Port Monitor' dialog box. The 'Port Settings' tab is selected. The 'Port Name' field contains 'IP 10.11.147.49' and the 'Printer Name or IP Address' field contains '10.11.147.49'. In the 'Protocol' section, the 'Raw' radio button is selected. Under 'Raw Settings', the 'Port Number' field contains '9100'. In the 'LPR Settings' section, the 'Queue Name' field is empty, the 'LPR Byte Counting Enabled' checkbox is unchecked, and the 'SNMP Status Enabled' checkbox is checked. Under 'SNMP Status Enabled', the 'Community Name' field contains 'public' and the 'SNMP Device Index' field contains '1'. The 'OK' and 'Cancel' buttons are located at the bottom right of the dialog.

11. Enter the queue name.

For LPR, use print, hold, or direct.

For Port 9100, you need to manually enter the following port numbers for each print connection under Raw Settings:

direct: 9100 (default) or 9101

print: 9102

hold: 9103

12. Click OK to close the dialog box.

Completing the Windows NT 4.0 or Windows 2000 IPX (Novell) connection

Complete the setup for the IPX (Novell) connection as follows:


- Configure the Novell network and file server for handling E-810 print jobs. The file server should be configured with a print server and print connection for the E-810. For details, see your NetWare documentation.
- Prepare the E-810 for IPX printing.
- Set up the IPX connection on the computer.

NetWare protocols (NWLink IPX/SPX Compatible Transport) and NetWare client services should already be installed on the Windows NT and/or Windows 2000 computer.

TO SET UP IPX (NOVELL) PRINTING FOR WINDOWS NT 4.0 OR WINDOWS 2000

1. Double-click **Network Neighborhood (Windows NT 4.0)** or **My Network Places (Windows 2000)**.
2. Double-click **NetWare or Compatible Network**.

A list of NetWare servers appears.

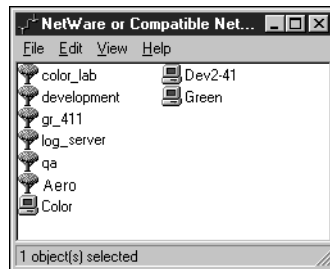


3. Double-click the **NetWare Tree** or **File Server** on which the network administrator defined a print connection for the E-810.


You may have to log in to the file server to see the print connections.

4. Double-click the **print connection** defined for the E-810.

5. If the NetWare server does not have a suitable driver for the E-810, you may be asked whether to set up the printer on your computer. Click Yes.

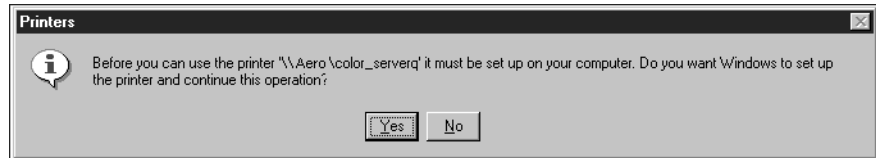


6. Click OK to install the E-810 PostScript printer driver. (Follow the procedure that starts with step 6 on page 17.)

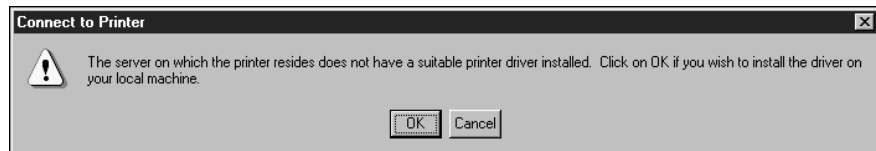

When installation is complete, a new printer window appears, with the name of the print queue on the NetWare server.

7. Choose Properties from the File menu, and then click the Ports tab.

The NetWare queue you just connected to is listed and checked as a port for the E-810.

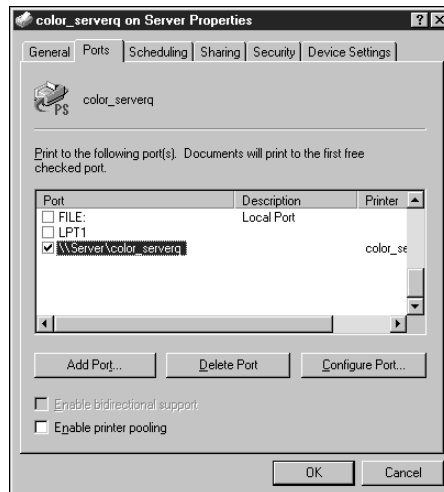

8. Click the **General** tab and click **Print Test Page**.
9. In the printer **Job Notes** window, enter user and job identification information, and click **OK**.

The E-810 polls the NetWare server for print jobs in the print connection defined for the E-810. When you print, your PostScript files are spooled to that connection and transmitted over the queue port to the E-810.

The test page job is listed in the queue window until it is printed.

Setting up SMB printing on Windows NT 4.0 or Windows 2000

If you do not have a Novell network, you can print via SMB printing (also known as Windows or WINS printing). Printing by this method allows you to install the PostScript printer driver and printer description files, and print from your computer to a particular print connection (Hold, Print, or Direct) on the E-810. These instructions assume you have the TCP/IP Protocol and Microsoft TCP/IP printing software installed on your Windows NT or Windows 2000 computer.

To set up printing to a second or third print connection, you must install a new printer driver and PPD file. Repeat the procedure “To set up SMB printing on Windows NT 4.0 or Windows 2000” on page 32. If you install more than one printer, give each a descriptive name during printer driver installation, such as Aero-Print or Aero-Hold, so you can easily identify printers.

NOTE: With Windows 2000, you cannot install the driver and configure the printing connection to the E-810 in a single procedure. Refer to your Windows documentation for more details.

BEFORE YOU BEGIN

- **Configure the E-810 for SMB printing in Network Setup>Service Setup>Windows Setup.**


SMB printing is referred to as Windows Printing in Setup, on the Control Panel Map, and on the Configuration page. For more information, see the *Configuration Guide*.

- **Specify whether to install the PS or PCL printer driver using Point and Print in Network Setup>Service Setup>Windows Setup>Point and Print Drivers.**

NOTE: Windows 2000 does not support Point and Print.

TO SET UP SMB PRINTING ON WINDOWS NT 4.0 OR WINDOWS 2000

1. **Double-click Network Neighborhood (Windows NT 4.0) or My Network Places (Windows 2000).**

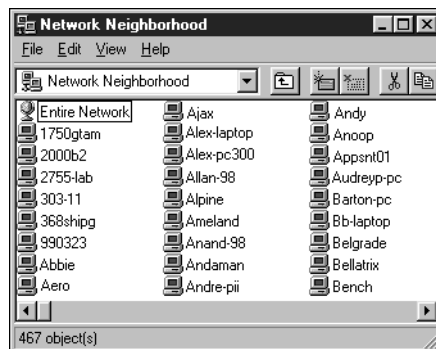

2. **Browse for the printer you would like to print to.**


The printer name you are browsing for is the name entered in Network Setup>Service Setup>Windows Setup>Server Name. Refer to the Configuration page for this information.

The amount of network traffic determines the amount of time required for the Browse function.


NOTE: You can also locate the printer with the Find feature on your Windows computer. Click the Start button, choose Find, and then choose Computer. Enter the name of the printer, and click Find Now.

If you are not able to locate your E-810, see your network administrator.

3. **Double-click the name of the E-810 to display enabled print connections.**

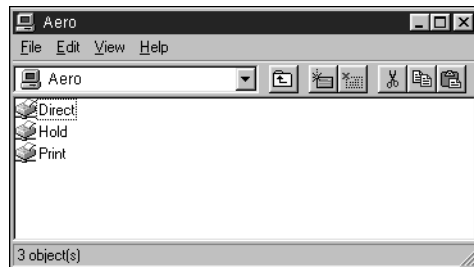

4. **Double-click the name of the connection you want to print to.**
5. **The Printers dialog box appears, asking whether you would like to set up the printer.**

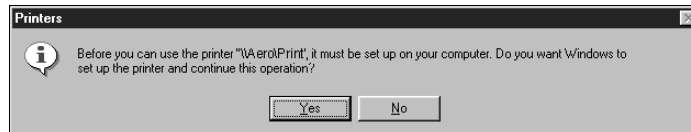

6. **Select Yes to install the PostScript printer driver and printer description file for the selected connection.**

Setting up IPP printing with Windows 2000

With Internet Printing Protocol (IPP), print jobs are sent to the E-810 over the Internet.

NOTE: The IPP setup procedures are performed after installing the appropriate printer drivers (see "To install the PostScript printer driver for Windows 2000" on page 20).

NOTE: IPP printing is not supported on Windows NT.


BEFORE YOU BEGIN

1. Prepare the E-810 for TCP/IP printing.
2. Make sure the E-810 is configured for IPP printing in Network Setup > Service Setup > IPP Setup. For more information, see the *Configuration Guide*.
3. Specify the printing destination on your computer.

TO SET UP IPP PRINTING WITH WINDOWS 2000

1. Click the Start button, choose Settings, and then choose Printers.
2. Double-click the Add Printer icon and click Next.
3. Select Network printer and click Next.
4. Select “Connect to a printer on the Internet or on your intranet.” Enter an IP address or computer name in the URL window.

The URL for the printer is the IP address, or DNS name, followed by “ipp”, then by the connection you want to print to (print, hold, or direct).

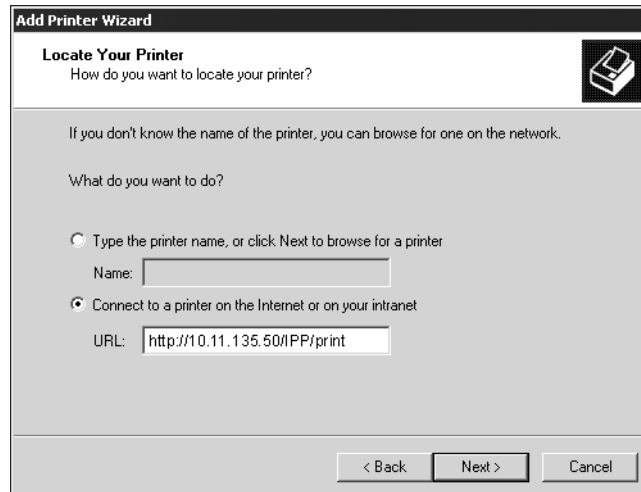

5. Click Next.

The Connect to Printer window appears.

6. Click OK.

7. The Add Printer Wizard dialog box appears.

If you are installing the PostScript printer for Windows 2000 for the first time, follow the procedure described on page 20.

8. Select Yes if you want the E-810 to be the default printer; if not, select No. Click Next.

9. Click Finish.

Installing Fiery utilities

From the User Software CD, you can install these Fiery utilities:

- Fiery Link
- ColorWise Pro Tools
- Fiery Downloader
- Fiery Scan
- Command WorkStation

This software is supported on Windows computers and must be separately installed on each user's computer. The installers for these individual software items are similar. Before installing Fiery utilities, close all open applications before the installation.

The Command WorkStation software installer also installs the Java files necessary to use Fiery Setup from the Command WorkStation.

The TWAIN Fiery Scan Module installer automatically creates a folder named Twain_32 in the Windows folder on your hard disk, and then installs the Fiery Scan plug-in module into the folder.

NOTE: Before installing the TWAIN Fiery Scan module, make sure the TWAIN plug-ins (installed with Adobe Photoshop software) are located in the correct Photoshop\Plugins subfolder. If the TWAIN plug-ins have been deleted, you must reinstall Adobe Photoshop software in order to use Fiery Scan.

TO INSTALL FIERY UTILITIES

1. **Open the appropriate folder for the software you want to install.**
2. **Double-click the Setup.exe icon.**
3. **Follow the instructions in the Setup dialog boxes to complete installation.**

Adobe Acrobat

In Command WorkStation, the DocBuilder Pro feature works in conjunction with Adobe Acrobat. If you have purchased the DocBuilder Pro option, the Acrobat application is included on the Adobe Acrobat for DocBuilder Pro CD.

NOTE: If Adobe Acrobat is installed after Command WorkStation, or you attempt to use DocBuilder Pro while running a previously installed copy of Acrobat, you must restart Command WorkStation in order to use DocBuilder Pro.

For more information about Adobe Acrobat for Windows, see the Readme.pdf file on the Adobe Acrobat for DocBuilder Pro CD.

TO INSTALL ACRBAT

1. **Insert the Adobe Acrobat for DocBuilder Pro CD in the CD-ROM drive.**
2. **Double-click the AutoPlay.exe icon on the CD and follow the instructions.**

Using the software for the first time

Before you can use the newly installed software, you must properly configure the connection to the E-810.

Configuring a connection for Fiery Link

You can use Fiery Link to monitor the status of E-810 servers and view information about the print jobs sent to them.

To view all available E-810 servers, open Fiery Link and click the Edit Fiery List button. All E-810 servers on the local subnet appear in the Available Fierys list of the Edit My Fiery List dialog box. You can specify the E-810 servers to monitor from this

dialog box. If the E-810 is not in your local subnet, you can use Fiery Link options to configure a connection manually, or you can perform an advanced search to locate and connect to E-810 servers anywhere on the network. The procedures that follow describe locating and connecting to a E-810 server, using both manual and advanced search methods.

For information on using Fiery Link, see the *Printing Guide*.


NOTE: Fiery Link is supported over TCP/IP only.

TO CONFIGURE THE CONNECTION TO E-810 SERVERS IN A LOCAL SUBNET

1. **Start Fiery Link. Click the Edit My Fiery List button:** 

The Edit My Fiery List dialog box opens, and all servers found appear in the Available Fierys area of the dialog box.


E-810 name, device name (r7),
and IP address

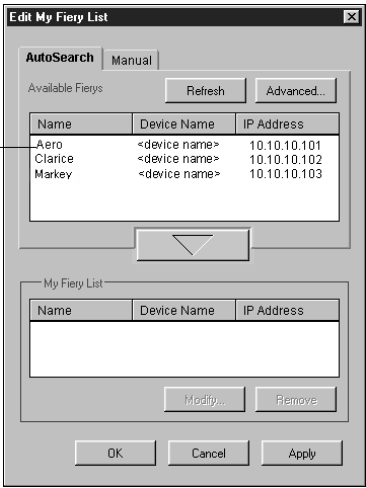

Name	Device Name	IP Address
Aero	<device name>	10.10.10.101
Clarice	<device name>	10.10.10.102
Markey	<device name>	10.10.10.103

NOTE: Only servers that support Fiery Link appear in the Available Fierys area.

2. To add a server to the My Fiery List, select it and click the arrow button.

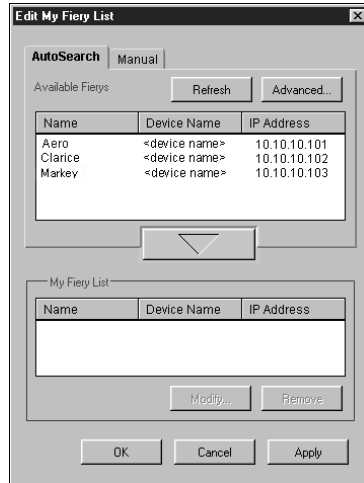


The E-810 appears in the My Fiery List. Repeat step 2 for each server you want to add to the My Fiery List.

3. Click Apply to accept the changes to My Fiery List.
4. Click OK.

TO MANUALLY CONFIGURE THE CONNECTION FOR FIERY LINK

1. Click the **Manual** tab.
2. Enter the DNS name or IP address of the E-810 and click the arrow button.

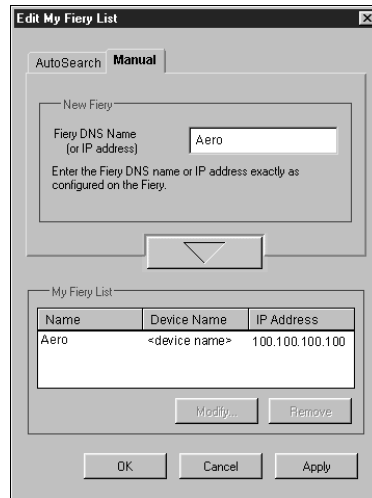

When you click the arrow button, Fiery Link checks for the specified E-810. If the E-810 is found, it appears in the My Fiery List. If it is not found, an error message appears.

To add the E-810 to the My Fiery List without confirming its existence on the network, hold down the Ctrl key while clicking the arrow button.

3. To give the E-810 a nickname, select it in the My Fiery List and click **Modify**.


4. Select Use Nickname, and enter a nickname for the E-810.



The "Modify Fiery Attributes" dialog box contains the following fields and controls:

- Name:** A text field containing "Aero".
- Use Nickname:** A checked checkbox.
- Nickname:** A text field containing "Brad R's Aero".
- Device Name:** A text field containing "<device name>".
- Buttons:** "OK" and "Cancel" buttons at the bottom.

5. Click OK.
6. Click Apply to accept the changes to My Fiery List.

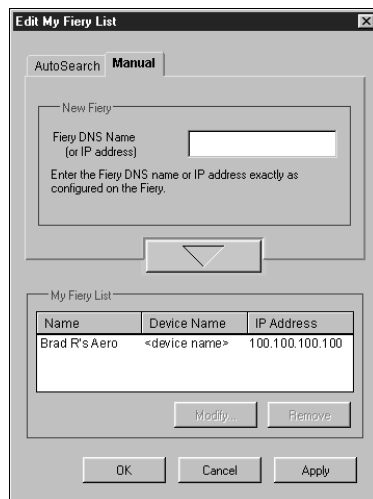

The "Edit My Fiery List" dialog box features two tabs: "AutoSearch" and "Manual". The "Manual" tab is active, showing a "New Fiery" section with a text field for "Fiery DNS Name (or IP address)" and a note: "Enter the Fiery DNS name or IP address exactly as configured on the Fiery." Below this is a downward-pointing arrow button. The "My Fiery List" section contains a table with the following data:

Name	Device Name	IP Address
Brad R's Aero	<device name>	100.100.100.100

Below the table are "Modify..." and "Remove" buttons. At the bottom of the dialog are "OK", "Cancel", and "Apply" buttons.

7. Click OK.

TO CONFIGURE THE CONNECTION FOR FIERY LINK USING AN ADVANCED IP SEARCH

1. Click the AutoSearch tab.
2. Click the Advanced button.
3. To find all E-810 servers within an IP address range, enter the range, and click the arrow button.

The screenshot shows a dialog box titled "Advance Search". It has two tabs: "IP Range" (selected) and "Subnet Addr.". Under the "IP Range" tab, there are two rows of IP address input fields. The first row is labeled "From IP" and contains the values 10, 10, 10, and 100. The second row is labeled "To IP" and contains the values 10, 10, 10, and 254. Below these fields is a large downward-pointing arrow button. Underneath the arrow is a list box with two columns: "IP Ranges /Subnet Addr." and "Parameter Type". The list box is currently empty. To the right of the list box is a "Remove" button. At the bottom of the dialog are "Search" and "Cancel" buttons.

Repeat step 3 for each IP address range you want to search. To remove an IP address range from the list, select the range in the IP Range/Subnet Addr. window and click the Remove button.


You can also search for the server using a range of subnet values. For more information, see “To configure the connection for Fiery Link using an advanced subnet search” on page 43.

4. Click Search.


When the search is complete, all servers found appear in the Available Fierys area of the dialog box.

If the E-810 was not found, and you would like to search again using the same parameters, click Refresh.

NOTE: Only servers that support Fiery Link appear in the Available Fierys area.

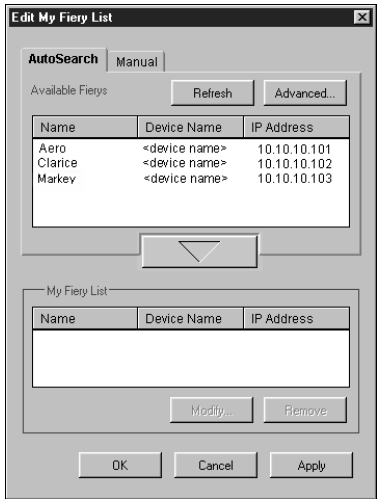

5. To add a server to the My Fiery List, select it and click the arrow button.

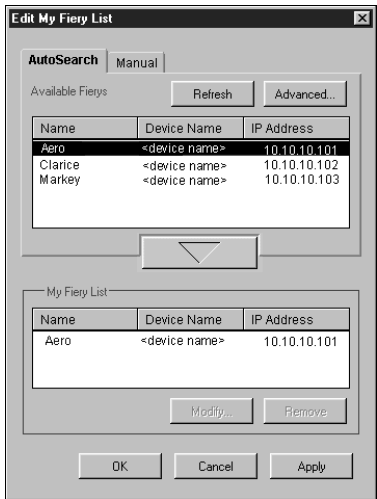

The server appears in the My Fiery List.

Repeat step 5 for each server you would like to add to the My Fiery List.

6. Click **Apply** to accept the changes to My Fiery List.
7. Click **OK**.

TO CONFIGURE THE CONNECTION FOR FIERY LINK USING AN ADVANCED SUBNET SEARCH

1. Click the **AutoSearch** tab.
2. Click the **Advanced** button and click the **Subnet Addr.** tab.
3. Enter the IP address and subnet you want to search, and click the arrow button.

Advanced Search

IP Range **Subnet Addr.**

IP address
 10 11 147 52

Subnet Mask
 255 255 252 0

▼

IP Range / Subnet Addr.	Parameter Type
10.11.147.255	Subnet Addr.

Remove

Search Cancel


The IP address and subnet to be searched appear in the IP Range/Subnet Addr. list. Repeat this procedure for each IP address and subnet you would like to search.

To remove a subnet value from the IP Range/Subnet Addr. list, select it and click the Remove button.

4. Click **Search**.


When the search is complete, all servers found appear in the Available Fierys area of the dialog box.

If the E-810 was not found, and you would like to search again using the same parameters, click Refresh.

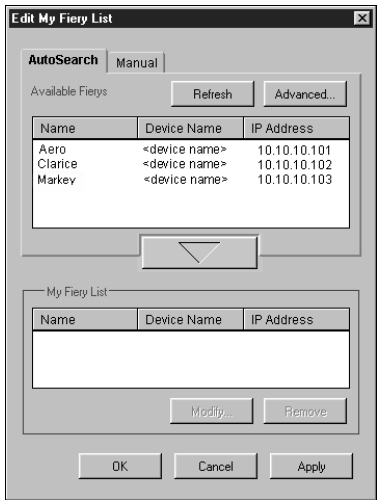

NOTE: Only servers that support Fiery Link appear in the Available Fierys area.

5. To add the E-810 to the My Fiery List, select it and click the arrow button.

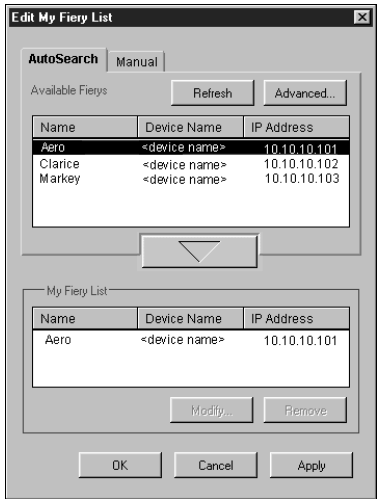

The server appears in the My Fiery List. Repeat step 5 for each server you would like to add to the My Fiery List.

6. **Click Apply to accept the changes to My Fiery List.**

7. **Click OK.**

Configuring the connection for Fiery utilities

The first time you launch one of the Fiery utilities, you are prompted to configure the connection to the E-810. The same configuration is used for all Fiery utilities (including Fiery Scan and Command WorkStation), so any change in one configuration affects all the other connections.

NOTE: The configuration for Fiery Link is described in “Configuring a connection for Fiery Link” on page 36.

BEFORE YOU BEGIN

- **Print the Configuration page from the E-810 Control Panel.**

This page contains information you need when configuring the connection, such as the IP address. If you are using IPX/SPX, note the IPX address for the E-810. In general, you should use the Ethernet IPX address. If you are connected through a Token Ring network, use the Token Ring IPX address.

To connect using TCP/IP, note the IP Address of the E-810. If the E-810 is already registered in a Domain Name Server (DNS) on your network, you can enter the DNS name of the E-810 instead of the IP address. See your Windows system documentation for information.


TO CONFIGURE THE CONNECTION FOR FIERY UTILITIES

1. **Start the utility for which you want to configure a connection.**

For Fiery Scan, start Photoshop, and open Fiery Scan.

For more information, see the *Printing Guide*.

2. If the No Servers Configured dialog box appears, click OK.

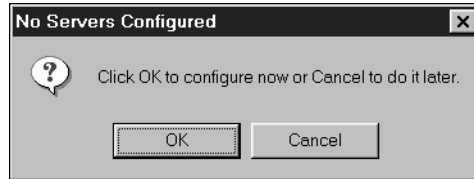

3. Enter the appropriate information for the E-810.

Nickname—Enter a name for the E-810. This name can be any name you wish; it does not have to match the actual Server Name of the E-810.

NOTE: The nickname cannot contain any of the following seven characters:


[] _ " ' <space> <tab>

Protocol—Choose the type of network protocol you are using from the pop-up menu.

NOTE: Fiery utilities for the E-810 are not supported over IPX/SPX. Command WorkStation software is supported on Windows computers over TCP/IP, and on the Fiery Advanced Controller Interface kit over PIPE.

Server Name—If you are using the TCP/IP protocol, enter the IP address (or DNS name) of the E-810.


New Device—Enter the name of the device the E-810 is connected to: r7.

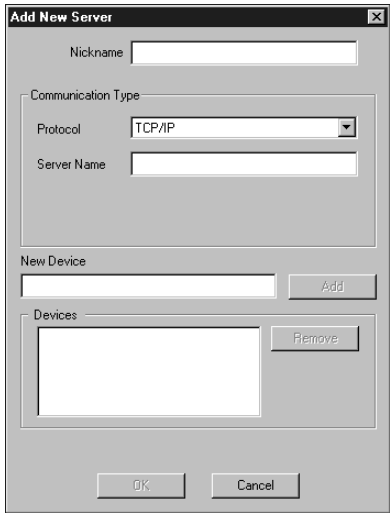A dialog box titled "Add New Server" with a close button (X) in the top right corner. It contains a "Nickname" text field. Below it is a "Communication Type" section with a "Protocol" dropdown menu set to "TCP/IP" and a "Server Name" text field. At the bottom, there is a "New Device" section with a text field and an "Add" button, and a "Devices" list box with a "Remove" button. At the very bottom are "OK" and "Cancel" buttons.

For TCP/IP networks

4. When you have entered all the information, click Add.
5. With the device name (r7) selected in the Devices list, click OK.

The E-810 appears in the list of available servers. The first line of the entry displays the nickname you gave the server, followed by the protocol you chose. The second line displays the device name.

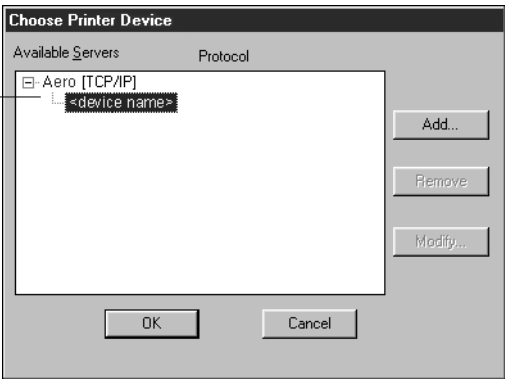A dialog box titled "Choose Printer Device" with "OK" and "Cancel" buttons at the bottom. It features a list box with two columns: "Available Servers" and "Protocol". The first entry is "Aero [TCP/IP]" with a sub-entry "<device name>" below it. To the right of the list box are three buttons: "Add...", "Remove", and "Modify...". A line from the text "Device name of the E-810 (r7)" points to the "<device name>" entry in the list box.

Device name of the E-810 (r7)

6. With the device name (r7) selected in the list of Available servers, click OK to begin using the software.

Modifying the configuration

You should edit the configuration whenever there is any change to your E-810 server or network, such as a server name or IP address. Change the specific E-810 Setup information before configuring the connection.

TO MODIFY THE CONFIGURATION

1. To edit information for a E-810 in the list of available servers, select the E-810 by its nickname and click Modify.
2. Edit information in the Modify Server Settings dialog box as necessary, and click OK when finished.
3. To add a new E-810 to the list of available servers, click Add. Configure the Add New Server dialog box as outlined in steps 3 through 5 in the previous procedure.
4. To remove a E-810, select the E-810 by its nickname, and click Remove.

Copying color files from the User Software CD

You can copy additional color files from the User Software CD to your hard disk. Many of the files are PostScript files that you can also download and print using Fiery Downloader.

Icm folder	ICM monitor setting file and a device profile specially designed for use with the E-810 and particular copier models. For installation instructions, see “Installing the ICM profiles on a Windows computer” on page 50.
------------	--

Calibrat folder (inside English/Clrfiles folder) Four PostScript files of color patches for obtaining measurements: Custom21.ps, Custom34.ps, Stand21.ps, and Stand34.ps.

The numbers in the file names refer to the number of patches on the page. The Custom files allow you to download measurement patches that incorporate the copier's current calibration set. The Standard files allow you to download standard measurement patches that ignore the copier's current calibration set. For information on how to use these files, see the *Color Guide*.

NOTE: These files are provided for expert users and should not be used for day-to-day calibration.

Copying the printer description files for Windows

The User Software CD contains printer description files for popular Windows applications. Pagemaker 6.5 does not support automatic installation of printer description files from the Printers Control Panel. To make the E-810 available in the Print and Page Setup dialog boxes of this application, copy printer description files to the appropriate location.

TO COPY THE PRINTER DESCRIPTION FILES

- 1. On the User Software CD, open the English\Prntdrv\Ps_drvr folder. Select the folder that corresponds to the system that you are using.
For Windows 9X/Me, select English\Prntdrv\Ps_drvr\Win_9x.
For Windows NT, select English\Prntdrv\Ps_drvr\Win_NT4x.
For Windows 2000, select English\Prntdrv\Ps_drvr\Win_2000.
- 2. Copy the printer description file for your E-810 to the appropriate location.

If you use	Copy this file	To this location
PageMaker 5.0 or later	Efa28e10.ppd	For PageMaker 5.0, \ALDUS\USENGLSH\PPD4 For PageMaker 6.0, \PM6\RSRC\USENGLSH\PPD4 For PageMaker 6.5, \PM65\RSRC\USENGLSH\PPD4

Installing the ICM profiles on a Windows computer

The ICM profiles included in the Icm folder on the User Software CD are for use with ColorWise Pro Tools. You can also use the ICM profiles with applications that support ICC standards, such as Photoshop. For most ICC aware applications, the files must be installed into a folder named Color in the System folder. For use with ColorWise Pro Tools, you can copy the files to a folder of your choice.

For more information on using ICC profiles with ColorWise Pro Tools, see the *Color Guide*.

TO INSTALL THE ICM PROFILES ON A WINDOWS COMPUTER

1. **On the User Software CD, open the Icm folder.**
2. **If you are using Windows 9X or Windows Me, copy the profiles to the Windows\System\Color folder on your hard disk.**

If you are using Windows NT or Windows 2000, copy the profiles to the Winnt\System32\Color folder on your hard disk.

NOTE: If a folder named “Color” does not exist in the System32 folder, create one and install the profiles into it.

Loading the monitor settings file

The Efirgb.icm monitor settings file can be used in Photoshop (or other applications that support ICM profiles) to define a source color space for printing to the E-810.


These instructions assume you have installed the ICM profiles included on the User Software CD. For more information, see the previous section.

NOTE: The internal name of an ICC profile may vary slightly from its file name.


TO LOAD THE RGB WORKING SPACE PROFILE FOR PHOTOSHOP 5.X

1. **Launch Photoshop.**
2. **From the File menu, choose Color Settings, and from the Color Settings submenu, choose RGB Setup.**

3. In the RGB Setup dialog box, click Load.

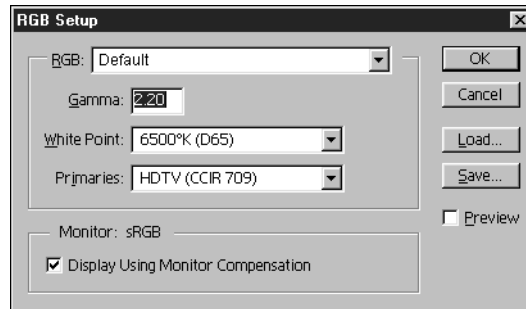

4. For Windows 9X/Me, browse to the Windows\System\Color folder, select Efirgb.icm, and click Load.

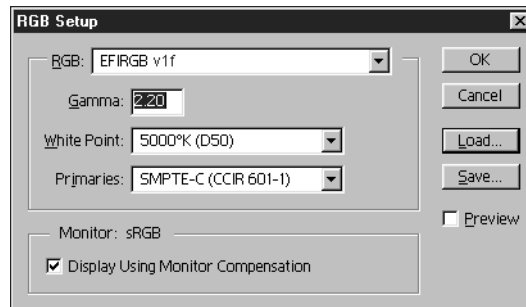

For Windows NT 4.0 and Windows 2000, browse to the Winnt\System32\Color folder, select Efirgb.icm, and click Load.

The Efirgb v1f file appears as the selection in the RGB pop-up menu of the RGB Setup dialog box.

5. Click OK.

For more information about ICM profiles, see your application's documentation.

Installing User Software on a Mac OS Computer

The general steps for installing the E-810 user software and setting up printing on a Mac OS computer are:

- Install the Adobe PostScript printer driver and PostScript Printer Description file (PPD).
- Set up the E-810 in the Chooser.
- Install the Fiery utilities (ColorWise Pro Tools, Fiery Link, Fiery Downloader, and Fiery Spooler).
- Install the printer and screen fonts.
- Install the ColorSync profiles.
- Configure the connection for Fiery utilities.
- Copy additional color-reference and application-specific files from the User Software CD as needed.

In addition to using the User Software CD, you can download printer drivers and the Fiery Link installer from the E-810 with the Installer WebTool (if the site administrator has enabled Internet access to the E-810). For instructions, see “Using the Installer WebTool” on page 84.

Once you download the printer files, the installation process is identical to installing from the User Software CD.

Setting up the E-810 as a PostScript printer

To set up the E-810 as a PostScript printer, you must install the Adobe PostScript printer driver and the PPD file that corresponds to your copier. The Adobe PostScript printer driver and PPD files are provided on the User Software CD. Printer drivers provide a way to communicate information on print jobs among your applications, the E-810, and any other PostScript printer connected to your computer.

Use the following procedures when you are installing printer files from the User Software CD or printer files downloaded using the Installer WebTool.

TO INSTALL THE ADOBEPS PRINTER DRIVER AND PPD FILE

1. **Quit all open applications.**

After you have completed installation, restart your computer.

2. **On the User Software CD, open the English: Printer Driver folder.**

If you are installing from files you downloaded using the Installer WebTool, open the Printer Driver folder on your hard disk.

3. **Double-click the AdobePS 8.6 Installer icon.**

4. **Follow the on-screen instructions.**

The AdobePS Installer installs the Adobe PostScript printer driver, and the PPD file that corresponds to the E-810.

NOTE: If you operate the E-810 in a copy shop, quick print shop, or service bureau, you might want to provide your customers with copies of the printer driver, PPD file, or ICC profiles you use for printing images, as well as any relevant documentation. This ensures that jobs they create and print to files are properly formatted for printing to the E-810.

Setting up the E-810 in the Chooser

After you install the Adobe PostScript printer driver and PPD file (see “Setting up the E-810 as a PostScript printer” on page 53), you need to set up the E-810 in the Chooser in order to take full advantage of its features. This section describes how to set up the E-810 with the AdobePS printer driver.

TO SET UP THE E-810 IN THE CHOOSER

1. **Select Chooser from the Apple menu.**


Make sure AppleTalk is set to Active.

2. **Select the correct AppleTalk Zone, if necessary.**

3. Click the AdobePS icon.

The E-810 appears in the Select a PostScript Printer list in the form of <server name>_<device name>_<print connection>. The device name (r7) is the internal name of your copier.

NOTE: Only the print connections (Direct, Hold, and Print) that have been enabled in Setup appear in the Chooser.

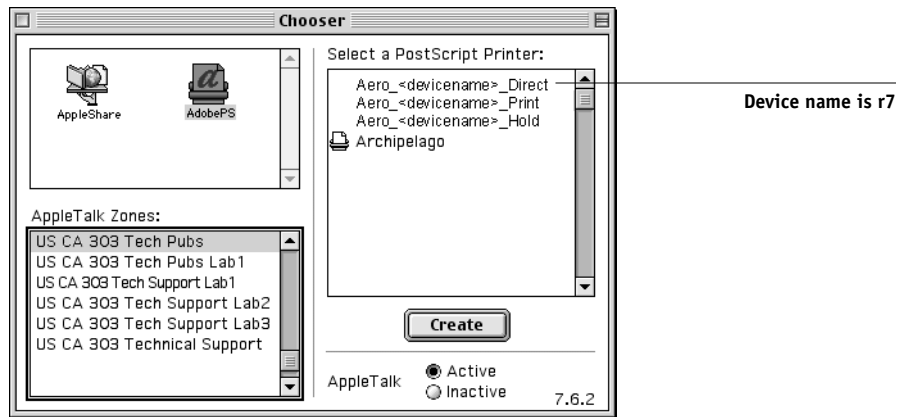


4. Select a E-810 connection from the “Select a PostScript Printer” list, and click Create.

The AdobePS printer driver automatically selects the correct PPD file for your E-810.

NOTE: You will need to set up each print connection separately. Repeat this step for all enabled connections.

5. In the Chooser list, an icon appears next to the newly installed E-810; select it and click Setup.

6. Click **Configure** in the dialog box that appears.

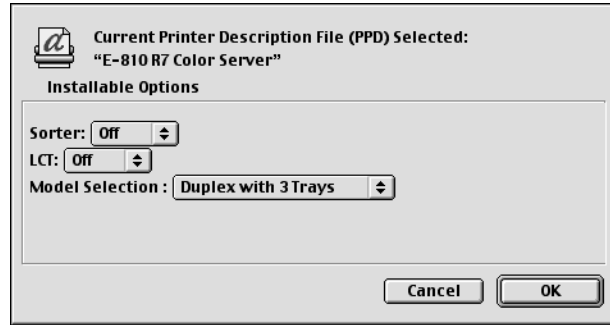

7. Close the Chooser.

Installing E-810 software and fonts

The Mac OS installers function essentially the same for each type of software. Before you begin each installation, determine where you want to install each item on your hard disk. Otherwise, the software is placed by default as described below:

- ColorSync profiles are placed in the ColorSync Profiles folder on your hard disk.
If you are using ColorSync 2.5 or later, install the profiles into the ColorSync Profiles folder inside the System folder. If you are using an earlier version of ColorSync, install the profiles to the ColorSync Profiles folder inside the System:Preferences folder. The printer profile can be moved to a folder of your choice.
- Fiery Downloader, Fiery Spooler, ColorWise Pro Tools, and Fiery Link are placed in a folder named "Fiery f" on the top level of your hard disk.
- Install Fonts are placed in the System folder:Fonts folder on your hard disk.

For instructions on installing Fonts, see "Fonts" on page 77.

TO INSTALL MAC OS SOFTWARE

1. **On the User Software CD, double-click the Installer icon of the item you would like to install.**
2. **Read the Software License Agreement, and click Accept.**
3. **Click Install to copy the item to the default location, or navigate to a location in which to install the item.**

Use the table below as a guide when installing software.

If you are installing	Action	To install
ColorSync Profiles	The ICC profiles are automatically installed into the ColorSync Profiles folder. Perform the steps in “Loading ICC profiles” on page 78 after installation is complete.	Click Install.
Fiery Downloader	Specify a hard disk location for Fiery Downloader software.	Click Install.
Fiery Scan	Navigate to your Photoshop:Plug-ins folder. The Fiery Scan module and Source Manager file is automatically installed to your System Folder:Preferences folder.	Click OK.
Fiery Link	Specify a hard disk location for Fiery Link software.	Click Install.
ColorWise Pro Tools	Specify a hard disk location for ColorWise Pro Tools software.	Click Install.
Fiery Spooler	Specify a hard disk location for Fiery Spooler software.	Click Install.


4. **If prompted, click Quit to close the software installer.**

In order to use ColorWise Pro Tools, Fiery Spooler, or Fiery Link you must have Mac OS Runtime for Java (MRJ 2.2) installed on your computer.

If you do not have MRJ installed, the ColorWise Pro Tools, Fiery Spooler, or Fiery Link installer automatically initiates the MRJ 2.2 installation process.

TO INSTALL MAC OS RUNTIME FOR JAVA

1. Read the Apple Computer Inc. License Agreement and click Agree to install the software.
2. Click Install.

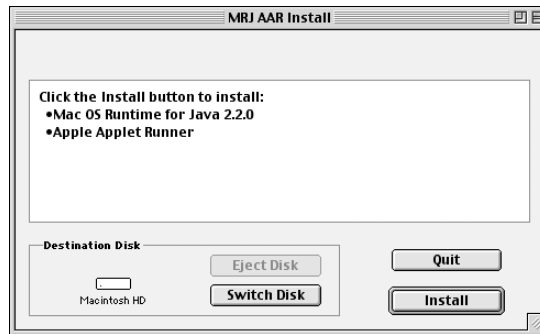

Some files are installed.

3. Click Quit.

You are now ready to configure the ColorWise Pro Tools, Fiery Spooler, and Fiery Link connections to the E-810, as described below.

Configuring a connection for ColorWise Pro Tools

The first time you use ColorWise Pro Tools, you are prompted to configure a connection to the E-810.

NOTE: ColorWise Pro Tools function only over TCP/IP networks.

BEFORE YOU BEGIN

- Print the Configuration page from the Control Panel and note the IP address of the E-810.


TO CONFIGURE A CONNECTION FOR COLORWISE PRO TOOLS

1. Launch the utility by double-clicking its icon.

The Choose Printer Device dialog box appears.



2. If you have previously configured a connection to the E-810, then you are ready to use ColorWise Pro Tools. If you have not configured a connection, click Add.

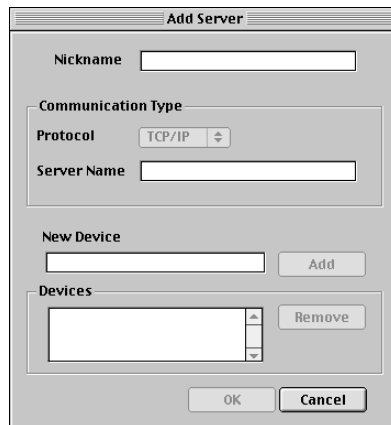

3. Enter the appropriate information for the E-810.

Nickname—Enter a name for the E-810. This can be any name you wish; it does not have to match the actual server name of the E-810.

NOTE: The nickname cannot contain any of the following seven characters:

[] _ " ' <space> <tab>

Protocol—Choose the type of network protocol you are using from the pop-up menu. ColorWise Pro Tools is supported only with TCP/IP, so no selection is necessary.


Server Name—Enter the IP address (or DNS or host name) of the E-810.

New Device—Enter the name of the device the E-810 is connected to: r7. This device name appears in the Printer Setup section of the Configuration page.

4. When you have added all the information, click **Add**.
5. With the device name (r7) selected in the **Devices** list, click **OK**.

The E-810 appears in the list of available servers. The first line of the entry displays the nickname you gave the server, followed by the protocol. The second line displays the device name.

6. With the device name (r7) selected in the list of **Available Servers**, click **Select** to begin using **ColorWise Pro Tools**.

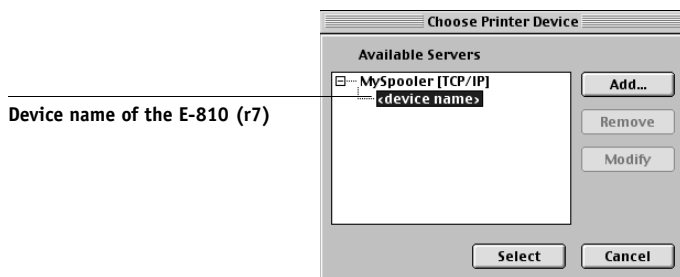

Modifying the configuration

You should edit the configuration whenever there is any change in your original configuration, such as a change of IP address. Change the specific E-810 Setup information before configuring the connection.

TO MODIFY THE CONFIGURATION

1. To edit information for a E-810 in the list of available servers, select the E-810 by its nickname and click Modify. Edit information in the Modify Server Settings dialog box as necessary, and click OK when finished.
2. To add a new E-810 to the list of available servers, click Add. Configure the Add New Server dialog box as outlined in steps 3 through 5 in the previous procedure.
3. To remove a E-810 from the list of available servers, select the E-810 by its nickname and click Remove.

Configuring a connection for Fiery Spooler


BEFORE YOU BEGIN


- Print the Configuration page from the Control Panel and note the IP address of the E-810.

TO CONFIGURE A CONNECTION FOR FIERY SPOOLER

1. Launch the utility by double-clicking its icon.

The Chooser dialog box appears.

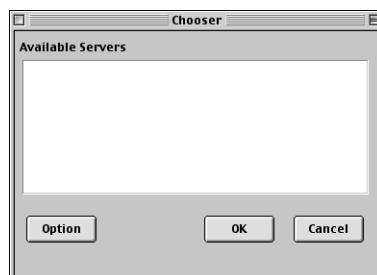


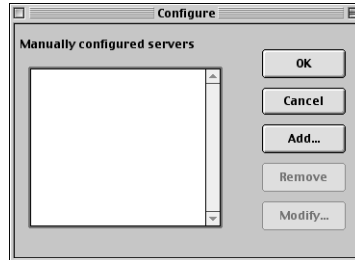2. Click Option.**3. Click Add.****4. Enter the appropriate information for the E-810.**

Name—Enter the IP address (or DNS name) of the E-810.


New Device—Enter the name of the device that the E-810 is connected to: r7. This device name appears in the Printer Setup section of the Configuration page.

5. When you have entered all the information, click Add.

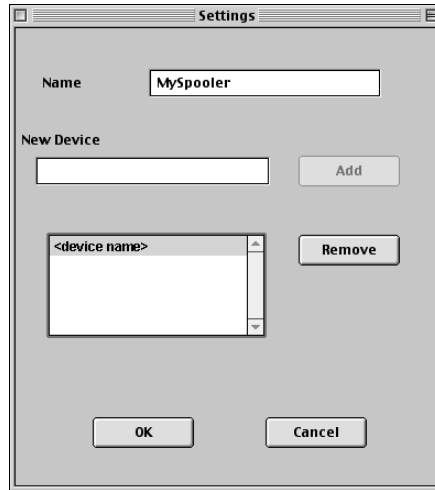


6. With the device name (r7) selected, click OK.

The E-810 appears in a list of configured servers.

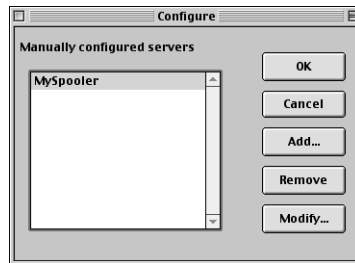

7. Click OK in the Configure dialog box.

The E-810 appears in a list of available servers.

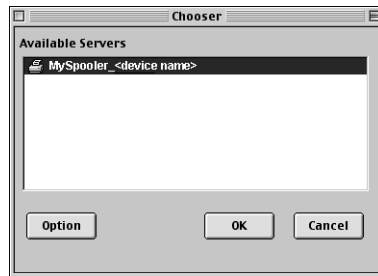

8. With the E-810 selected in the list of available servers, click OK to begin using Fiery Spooler.

Modifying the configuration

You should edit the configuration whenever there is any change to your E-810 or network, such as an IP address or device change. Change the specific E-810 Setup information before configuring the connection.

TO MODIFY THE CONFIGURATION

1. In the Chooser dialog box, click Option.
2. To edit information for a E-810, select the E-810 by its IP address or DNS name and click Modify. Edit information in the Settings dialog box as necessary, and click OK when finished.
3. To add a new E-810, click Add. Configure the Settings dialog box as outlined in 4 through 6 in the previous procedure.
4. To remove a E-810, select the E-810 by its IP address or DNS name, and click Remove.

The list of available servers reflects the modifications you have made.

Configuring a connection for Fiery Link

You can use Fiery Link to monitor the status of E-810 servers and view information about the print jobs sent to them.

When you click the Edit Fiery List button, all E-810 servers on the local subnet appear in the Available Fierys list of the My Fiery List dialog box. You can specify which E-810 servers to connect to and monitor from this dialog box. If the E-810 is not in your local subnet, you can use Fiery Link options to manually configure a connection, or you can perform an advanced search to locate and connect to E-810 servers anywhere on the network. The procedures below describe locating and connecting to a E-810 server using both manual and advanced search methods. For information on using Fiery Link, see the *Printing Guide*.

NOTE: Fiery Link is supported over TCP/IP only.

TO CONFIGURE A CONNECTION TO E-810 SERVERS IN THE LOCAL SUBNET

1. Launch Fiery Link by double-clicking its icon.

The Edit My Fiery List dialog box opens, and all E-810 servers found appear in the Available Fierys area of the dialog box.

E-810 name, device name (r7),
and IP address

Edit My Fiery List

AutoSearchManual

Available Fierys

RefreshAdvanced...

Name	Device Name	IP Address
Aero	<device name>	10.10.10.101
Clarice	<device name>	10.10.10.102
Markey	<device name>	10.10.10.103

My Fiery List


Name	Device Name	IP Address
------	-------------	------------

Modify...Remove

OKCancelApply

NOTE: Only servers that support Fiery Link appear in the Available Fierys area.

2. To add a server to the My Fiery List, select it and click the arrow button.

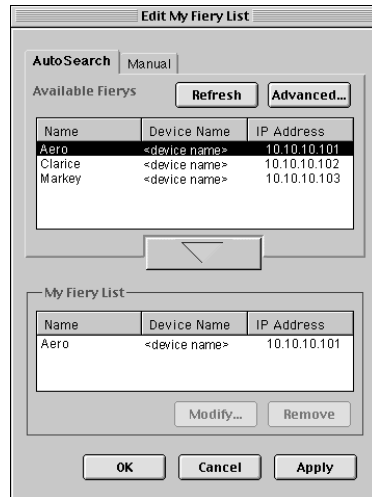

The server appears in the My Fiery List.

Repeat 2 for each server you would like to add to the My Fiery List.

3. Click **Apply** to accept the changes to My Fiery List.
4. Click **OK**.

TO MANUALLY CONFIGURE THE CONNECTION FOR FIERY LINK

1. Click the Manual tab. Enter the DNS name or IP address of the E-810 and click the arrow button.

Edit My Fiery List

AutoSearch **Manual**

New Fiery

Fiery DNS Name (or IP address)

Enter the Fiery name or IP address exactly as configured on the Fiery.

My Fiery List

Name	Device Name	IP Address
Aero	<device name>	100.100.100.100

When the arrow button is clicked, Fiery Link checks for the specified E-810. If the server is found, it appears in the My Fiery List. If it is not found, an error message appears.

To add the server to the My Fiery List without confirming its existence on the network, hold down the Control key while clicking the arrow button.

2. To give the server a nickname, select it in the My Fiery List and click Modify.

3. Select Use Nickname, and enter a nickname for the E-810.

The 'Modify Fiery Attributes' dialog box contains the following fields and controls:

- Name:** A text field containing the text 'Aero'.
- Use Nickname:** A checked checkbox.
- Nickname:** A text field containing the text 'Brad R's Aero'.
- Device Name:** A text field containing the text '<device name>'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.

4. Click OK.

The 'Edit My Fiery List' dialog box features two tabs: 'AutoSearch' and 'Manual'. The 'Manual' tab is active, showing a 'New Fiery' section with a text field for 'Fiery DNS Name (or IP address)' containing 'Aero'. Below this is a note: 'Enter the Fiery name or IP address exactly as configured on the Fiery.' A downward arrow button is positioned below the 'New Fiery' section. The 'My Fiery List' section contains a table with the following data:

Name	Device Name	IP Address
Brad R's Aero	<device name>	100.100.100.100

Below the table are 'Modify...' and 'Remove' buttons. At the bottom of the dialog are 'OK', 'Cancel', and 'Apply' buttons.

5. Click Apply to accept the changes to My Fiery List.
6. Click OK.

**TO CONFIGURE THE CONNECTION FOR FIERY LINK USING AN
ADVANCED IP SEARCH**

1. Click the AutoSearch tab.

The screenshot shows the 'Edit My Fiery List' dialog box. It has two tabs: 'AutoSearch' (selected) and 'Manual'. Under 'AutoSearch', there is a section 'Available Fierys' with a 'Refresh' button and an 'Advanced...' button. Below this is a table with columns 'Name', 'Device Name', and 'IP Address'. The table is currently empty. Below the table is a downward-pointing arrow button. Below the arrow button is a section 'My Fiery List' with a table having the same columns: 'Name', 'Device Name', and 'IP Address'. This table is also empty. Below the table are 'Modify...' and 'Remove' buttons. At the bottom of the dialog are 'OK', 'Cancel', and 'Apply' buttons.

2. Click the Advanced button.

The screenshot shows the 'Advanced Search' dialog box. It has two tabs: 'IP Range' (selected) and 'Subnet Addr.'. Under 'IP Range', there is a section 'From IP' with four input boxes, and a section 'To IP' with four input boxes. Below these is a downward-pointing arrow button. Below the arrow button is a table with columns 'IP Range / Subnet Addr' and 'Parameter Type'. The table is currently empty. Below the table is a 'Remove' button. At the bottom of the dialog are 'Search' and 'Cancel' buttons.

3. To find all servers within a specified IP range, enter an IP Address in the From IP field and an IP address in the To IP field, and click the arrow button.

The image shows a dialog box titled "Advanced Search". It has two tabs: "IP Range" (selected) and "Subnet Addr.". Under the "IP Range" tab, there are two sections: "From IP" and "To IP". The "From IP" section has four input fields containing "10", "10", "10", and "100". The "To IP" section has four input fields containing "10", "10", "10", and "254". Below these sections is a large downward-pointing arrow button. Underneath the arrow is a table with two columns: "IP Range / Subnet Addr." and "Parameter Type". The table contains one row with the value "10.10.10.100.254" in the first column and "IP Range" in the second column. Below the table is a "Remove" button. At the bottom of the dialog are "Search" and "Cancel" buttons.

IP Range / Subnet Addr.	Parameter Type
10.10.10.100.254	IP Range

Repeat 3 for each range of IP addresses you would like to search.

To remove an IP range from the list, select the range in the IP Range/Subnet Addr. window and click the Remove button.

You can also search for the E-810 using a range of subnet values. For more information see “To configure the connection for Fiery Link using an advanced subnet search” on page 72.

4. **Click Search.**

When the search is complete, all servers found appear in the Available Fierys area of the dialog box.

If the E-810 was not found, and you would like to search again using the same parameters, click Refresh.

Edit My Fiery List

AutoSearch | Manual

Available Fierys: **Refresh** **Advanced...**

Name	Device Name	IP Address
Aero	<device name>	10.10.10.101
Clarice	<device name>	10.10.10.102
Markey	<device name>	10.10.10.103

My Fiery List

Name	Device Name	IP Address
------	-------------	------------

Modify... **Remove**

OK **Cancel** **Apply**

NOTE: Only servers that support Fiery Link appear in the Available Fierys area.

5. To add a server to the My Fiery List, select it and click the arrow button.

Edit My Fiery List

AutoSearch | Manual

Available Fierys: **Refresh** **Advanced...**

Name	Device Name	IP Address
Aero	<device name>	10.10.10.101
Clarice	<device name>	10.10.10.102
Markey	<device name>	10.10.10.103

My Fiery List

Name	Device Name	IP Address
Aero	<device name>	10.10.10.101

Modify... **Remove**

OK **Cancel** **Apply**

The server appears in the My Fiery List.

Repeat 5 for each server you would like to add to the My Fiery List.

6. Click **Apply** to accept the changes to My Fiery List.
7. Click **OK**.

**TO CONFIGURE THE CONNECTION FOR FIERY LINK USING AN
ADVANCED SUBNET SEARCH**

1. Click the **AutoSearch** tab and click the **Advanced** button.

Edit My Fiery List

AutoSearch | Manual

Available Fierys

Name	Device Name	IP Address
------	-------------	------------

My Fiery List

Name	Device Name	IP Address
------	-------------	------------

2. Click the Subnet Addr. tab.

The screenshot shows the 'Advanced Search' dialog box. The 'Subnet Addr.' tab is selected. The 'IP address' section has four empty input boxes. The 'Subnet Mask' section has four empty input boxes. Below these is a downward-pointing arrow button. At the bottom, there is a table with two columns: 'IP Range / Subnet Addr.' and 'Parameter Type'. The table is currently empty. Below the table are 'Search' and 'Cancel' buttons, and a 'Remove' button is located above them.

3. Enter the IP address and subnet to search, and click the arrow button.

The screenshot shows the 'Advanced Search' dialog box with the 'Subnet Addr.' tab selected. The 'IP address' section now contains the values 10, 11, 147, and 52 in its four input boxes. The 'Subnet Mask' section contains the values 255, 255, 252, and 0 in its four input boxes. The downward-pointing arrow button is visible. The table at the bottom now contains one row: '10.11.147.255' under the 'IP Range / Subnet Addr.' column and 'Subnet Addr.' under the 'Parameter Type' column. The 'Search' and 'Cancel' buttons are at the bottom, and the 'Remove' button is above them.

The IP address and subnet to be searched appear in the IP Range/Subnet Addr. list. Repeat this procedure for each IP address and subnet you would like to search.

To remove a subnet value from the IP Range/Subnet Addr. list, select it and click the Remove button.

4. Click Search.

When the search is complete, all servers found appear in the Available Fierys area of the dialog box.

If the E-810 was not found, and you would like to search again using the same parameters, click Refresh.

Edit My Fiery List

AutoSearch | Manual

Available Fiery:


Name	Device Name	IP Address
Aero	<device name>	10.10.10.101
Clarice	<device name>	10.10.10.102
Markey	<device name>	10.10.10.103

My Fiery List

Name	Device Name	IP Address
------	-------------	------------

NOTE: Only servers that support Fiery Link appear in the Available Fierys area.

5. To add a E-810 server to the My Fiery List, select it and click the arrow button.

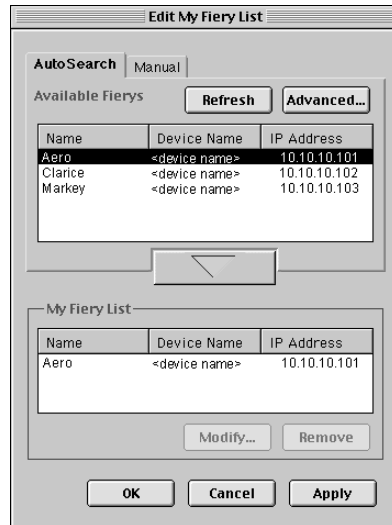

The server appears in the My Fiery List.

Repeat 5 for each server you would like to add to the My Fiery List.

6. Click **Apply** to accept the changes to My Fiery List.
7. Click **OK**.

Configuring a connection for Fiery Downloader


When you launch Fiery Downloader, you must specify an E-810 to connect to.

BEFORE YOU BEGIN

- Print the Configuration page from the Control Panel and note the AppleTalk zone of the E-810.


TO SPECIFY AN E-810 TO CONNECT TO

1. Double-click the Fiery Downloader icon.

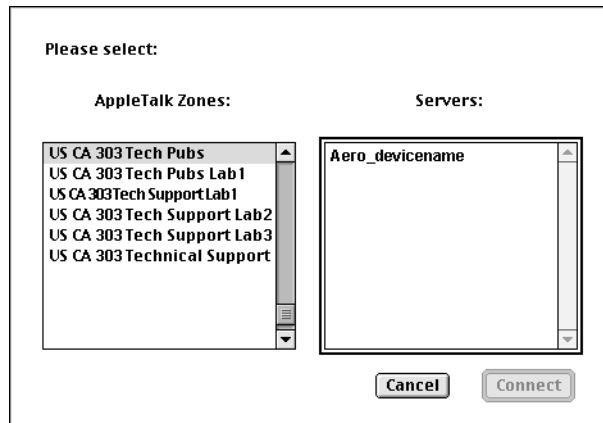

2. Select the AppleTalk zone in which the E-810 is located from the AppleTalk Zones list.
The available servers appear in the Servers list.
3. Select the E-810 to connect to from the Servers list.
4. Click Connect.

5. The Fiery Downloader dialog box appears.

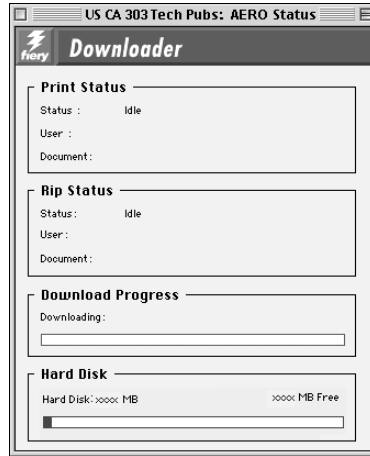

For information on how to use Fiery Downloader, see the *Printing Guide*

Fonts

The Fonts installer on the User Software CD includes screen and printer fonts that correspond to the 136 built-in PostScript printer fonts on the E-810. The Font installer copies both kinds of fonts to the System:Fonts folder on your hard disk. To be available to applications, the screen fonts must remain in the System:Fonts folder. The printer fonts can be copied to a folder of your choice.

NOTE: In the System:Fonts folder, when displayed by Kind, screen fonts appear as type “Font Suitcase” and PostScript printer fonts appear as type “PostScript font.”

TO INSTALL SCREEN AND PRINTER FONTS

1. On the User Software CD, double click the Fonts icon to launch the Fonts installer.
2. Click Install.

By default the fonts are installed to the System folder:Fonts folder on your hard disk.

If you have any applications open, you must quit and relaunch them before the newly installed screen fonts are available.

Copying color files from the User Software CD

You can copy additional color files from the User Software CD to your hard disk.

The User Software CD contains the following color files:

ColorSync files (inside the ColorSync Folder)	If you are using ColorSync 2.5 (or later), install the profiles into the ColorSync Profiles folder inside the System folder. If you are using an earlier version of ColorSync, install the profiles to the ColorSync Profiles folder inside the System:Preferences folder. The printer profile can be moved to a folder of your choice.
Color Files folder (inside the English folder)	<p>The CMYK Color Reference.ps is an 11-page, letter-size PostScript file to use for reference when defining CMYK colors in applications.</p> <p>The PANTONE Book.ps is a 19-page, letter-size PostScript file that indicates the closest equivalent of PANTONE coated colors that the E-810 and your particular copier model can produce. The method used to print the PANTONE Book.ps file differs depending on the Spot Color Matching setting. For more information, see the <i>Printing Guide</i> and the <i>Color Guide</i>.</p> <p>RGB page 01 is a file you can print from Microsoft Word 97 (or later) to view available RGB colors.</p> <p>RGB page 02 is file you can print from Microsoft PowerPoint 6.0 (or later) to view available RGB colors.</p>

Loading ICC profiles

The ICC profiles installed are for use with ColorWise Pro Tools and applications that support ICC standards.


These instructions assume that you have already installed the ICC profiles included on the User Software CD. For more information, see “Copying color files from the User Software CD” on page 78.

NOTE: The internal name of an ICC profile may vary slightly from its filename.

The following procedure describes installing the ICC profiles with ColorSync 4.0. For more information about ColorSync, see your application’s documentation.

TO SET THE COLORSYNC SYSTEM PROFILE

1. Choose **Control Panels > ColorSync** from the Apple Menu.
2. Select **EFIRGB v1f** from the System Profile list.

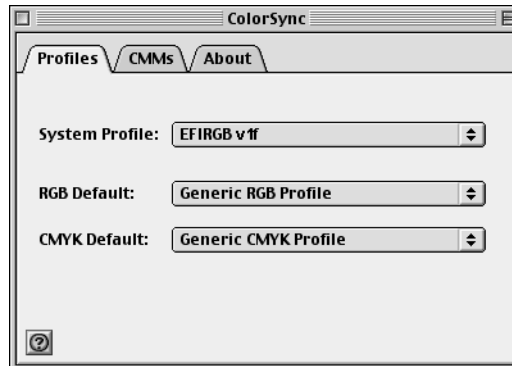

When selected as the ColorSync system profile, EFIRGB v1f sets the optimal source color space for printing to the E-810. The color space set by the EFIRGB v1f profile is the same as that set by the EFIRGB setting of the RGB Source Profile print option.

NOTE: The RGB Source Profile print option setting overrides the ColorSync system profile setting.

3. Close the ColorSync window.


For more information about ICC profiles, see your application's documentation.

Loading the monitor settings file

The EFIRGB ICC monitor settings file can be used in Photoshop, or other applications that support ICC profiles to define a source color space for printing to the E-810.

TO LOAD THE MONITOR SETTINGS FILE IN PHOTOSHOP 5.X:

1. Launch Photoshop.
2. From the File menu, choose Color Settings, and from the Color Settings submenu, choose RGB Setup.
3. In the RGB Setup dialog box, click Load.
4. Browse to the System: Preferences: ColorSync Profiles, select the EFIRGB ICC file, and click Open.

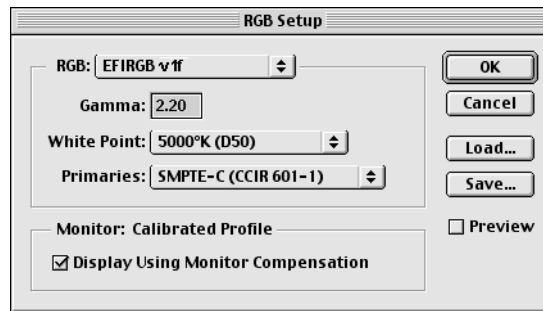

NOTE: If you are using ColorSync 2.5 or later, the ColorSync profile is located in System Folder:ColorSync Profiles.

The EFIRGB v1f file appears as the selection in the RGB pop-up menu of the RGB Setup dialog box.

5. Click OK.

Loading the ICC copier profile

The ICC copier profile enables RGB-to-CMYK conversions that are specific to the kind of copier you are using.

TO LOAD THE ICC COPIER PROFILE IN PHOTOSHOP 5.X:

1. **Launch Photoshop.**
2. **From the File menu, choose Color Settings, and from the Color Settings submenu, choose CMYK Setup.**
3. **In the CMYK Setup dialog box, choose ICC as the CMYK color model.**
4. **Select the profile that corresponds to the E-810 from the Profile pop-up menu.**
5. **Click OK.**

For more information about ICC profiles, see your application's documentation.

Downloading Installers with Fiery WebTools

Fiery WebTools allow you to manage your E-810 remotely from the Internet or from your company's intranet. The E-810 has its own home page from which you can select from a variety of functions, including Status, WebSpooler, WebLink, Web Scan, Installer, and WebDownloader.

For more information on using Fiery WebTools, see the *Printing Guide*.

Setting up Fiery WebTools

In order for network users to access and use Fiery WebTools, you need to set certain E-810 options in Network Setup and Printer Setup. You also need to prepare each user's workstation to communicate with the E-810 over the Internet or intranet.

For more information about Network Setup, see the *Configuration Guide*.

TO SET UP FIERY WEBTOOLS ON THE E-810

1. **Set Enable Ethernet to Yes in Network Setup>Port Setup>Ethernet Port Setup.**
2. **Set Enable TCP/IP for Ethernet to Yes in Network Setup>TCP/IP Ethernet Setup.**
3. **Set Enable Web Services to Yes in Network Setup>Network Service Setup>Web Services Setup.**
4. **Exit Network Setup, and choose OK to Save Changes.**
5. **Exit Printer Setup, and choose OK to Save Changes.**

TO SET UP CLIENT WORKSTATIONS TO USE FIERY WEBTOOLS

1. **Enable TCP/IP networking.**
2. **Make sure the workstation has a valid, unique IP address.**
3. **Make sure the workstation is installed with one of the following Internet browsers:**
Windows 9X/Me, Windows 2000, and Windows NT 4.0—Either Netscape Communicator v4.5 (or later), *or* Microsoft Internet Explorer v4.0.1 and SP1 (or later).
Mac OS—Netscape Communicator v4.5 (or later) *or* Internet Explorer v4.0.1 (or later), with Java enabled.

NOTE: Netscape and Microsoft continue to release frequent updates to their browsers. As support cannot be guaranteed for all versions, use the versions specified above for best results.

4. **Make sure Java is enabled in your Internet browser.**

For more information on setting up the E-810 and your network, see the *Configuration Guide*.

Using the Installer WebTool

The Installer WebTool allows you to easily download printer drivers or Fiery Link directly from the E-810 to your workstation.

TO DOWNLOAD THE PRINTER FILES OR FIERY LINK WITH THE INSTALLER WEBTOOL

1. **Launch your Internet or intranet browser and enter the DNS name or IP address of the E-810.**
2. **Select a login level, enter a password if necessary, and click OK.**

No password is required to log in as Guest. You have full access to the Installer WebTool when logged in as Guest, after it has been configured by the Administrator.

3. Click the Installer button.



4. Under the name of your operating system, click "Printer Files" or "Fiery Link."

A dialog box appears, prompting you to save the file to the location you choose.

5. Browse to the location where you want to save the Prntdrv.exe file or the Fiery Link.exe file, and click Save.

6. Double-click the `Prntdrv.exe` file or the `Fiery Link.exe` file, browse to the location where you want to install the folder, and click **Next**.

The folder is installed to the location you specified.

7. Install the appropriate printer driver for your operating system.

For instructions on installing the printer driver for	See
Windows 9X/Me	“To install the PostScript printer driver for Windows 9X/Me” on page 2.
Windows NT 4.0	“To install the PostScript printer driver for Windows NT 4.0” on page 15.
Windows 2000	“To install the PostScript printer driver for Windows 2000” on page 20.

Troubleshooting

This chapter provides troubleshooting tips.

On a Windows computer

Setting up printing on Windows NT or Windows 2000 Workstations

If you have problems installing the E-810 with Windows NT 4.0 and/or Windows 2000, try installing another PostScript printer (such as the Apple LaserWriter IIg), and then install the E-810. Installing another printer ensures that all files are properly installed and available. For instructions, see your Windows documentation.

For additional information about problems you may encounter using the PostScript Printer Driver for Windows NT 4.0, see the Adobe README file (readmeNT.wri) included in English\Prntdrv\Ps_drvr\Win_NT4x on the User Software CD. For Windows 2000, see your Windows 2000 documentation.

Reinstalling the Adobe PostScript Printer Driver on Windows 9X/Me

If you are reinstalling the Adobe PostScript Printer Driver, delete any previous versions and related files before installing.

For additional information about problems you may encounter using the Adobe Printer Driver for Windows 9X/Me, see the Adobe README file (readme9x.wri) included in English\Prntdrv\Ps_drvr\Win_9x on the User Software CD.

Problems with the Fiery utilities on Windows 9X/Me, Windows NT 4.0, or Windows 2000

1. **If you are using Windows 9X/Me, make sure the TCP/IP networking protocol is enabled.**
2. **If you are using Windows NT or Windows 2000, make sure the TCP/IP networking protocol is enabled.**
3. **Make sure that the connection is configured correctly for your site.**

To check the current configuration, launch a Fiery utility and choose Open from the File menu. Select the E-810 and click Modify to see current settings. If the settings are incorrect, you can change them in this dialog box.

On a Mac OS computer

Setting up the E-810 in the Chooser

If auto-setup does not work and you are prompted to select the PPD, select the appropriate E-810 file in your System:Extensions:Printer Descriptions folder. Select “E-810 r7 Color Server” or “E-810r7 Color Server US”.

Installing screen fonts

If you experience problems installing the PostScript screen fonts from the User Software CD to the System folder:Fonts folder, try the following:

1. **Quit all applications and close all windows.**
2. **Create a new folder and name it “Uninstalled Fonts.”**
This folder must be located outside of the System folder.
3. **Move fonts that you are not using from the System folder:Fonts folder to the Uninstalled Fonts folder.**
4. **Install the fonts from the User Software CD to a folder called CD fonts. Copy the fonts to the System folder:Fonts folder.**

5. **Create an alias to the System folder:Fonts folder and to the Uninstalled Fonts folder.**
6. **Place both aliases on your desktop.**
7. **When necessary, use the aliases to open both folders and move fonts between them.**

If you have any applications running, you must quit and relaunch them in order to view and use the newly installed fonts.

Alternatively, you can try combining fonts from multiple suitcases into a single suitcase.

Index

A

- Adobe Acrobat 36
 - installation 36
- Adobe Acrobat for DocBuilder Pro CD 36
- Adobe PageMaker for Windows, *see*
PageMaker for Windows
- Adobe PostScript 3 fonts xii
- Adobe PostScript printer driver, *see* PostScript
printer driver
- Advanced Controller Interface kit xiii
- AppleTalk xvii
- AppleTalk, connecting to Mac OS 54

B

- Berkeley lpd protocol xvii

C

- cable, color server xii
- Calibrat folder, for Windows users 49
- Chooser
 - selecting the server in 54
 - setting up color server in 88
- CMYK Color Reference.ps 78
- Color Files folder, for Macintosh users 78
- color management files xiii, xiv
- color reference files xv, 78
 - for Macintosh users 78
- color server, specifications xii, xiii
- ColorSync and ICM color management
files xiv
- ColorSync Profiles 56
- ColorSync Profiles, installing for Mac OS 57
- ColorWise color management files xiii
- ColorWise Pro Tools 35
 - configuring the connection to the Fiery
(Mac OS) 58
 - Configuring the connection to the Fiery
(Windows) 36

- ColorWise Pro Tools, installing for Mac
OS 56

Command WorkStation

- installing for Windows 35
- system requirements xviii
- Windows requirements xviii
- Configuration page 11, 32, 45
- connecting
 - Windows NT 4.0 with TCP/IP 24
- connection on Mac OS, configuring 58 to
77
- connection on Windows, configuring 45 to
48
- Custom21.ps (Windows) 49
- Custom34.ps (Windows) 49

D

- device name 47, 60, 62
 - Windows 2000 with TCP/IP 26
 - Windows NT 4.0 with TCP/IP 26
- DNS name xvi, xvii, 26, 39, 45, 62, 67
- Domain Name Server, *see* DNS

E

- Efirgb.icc monitor settings file for
Mac OS 79
- Efirgb.icm monitor settings file for
Windows 50
- EPS files xiv
- Ethernet, SNAP frame type xii
- Ethernet 100BaseTX cable xii

F

- Fast Ethernet 100BaseTX cable xii
- Fast Ethernet 10BaseT cable xii
- Fiery Downloader 35
 - EPS files xiv
 - installing for Mac OS 56, 57
 - overview xiv
 - PDF files xiv

Fiery Link 35
 configuring the connection on
 Mac OS 65 to 75
 configuring the connection on
 Windows 36 to 45
 installing for Mac OS 56
 Fiery Scan
 installing for Mac OS 57
 Fiery Spooler xiv
 configuring the connection on
 Mac OS 61 to 64
 installing for Mac OS 57
 modifying the configuration
 (Mac OS) 64
 overview xiv
 Fiery TWAIN module
 installing
 TWAIN module (Mac OS) 57
 Fiery utilities
 configuring the connection on
 Mac OS 58 to 77
 configuring the connection on
 Windows 45 to 48
 installing for Mac OS 56
 installing for Windows 35
 Mac OS requirements xvii
 problems on Windows 9X/Me,
 Windows NT, or Windows 2000 88
 Windows requirements xvi
 see also Fiery Downloader, Fiery Spooler
 Fiery WebTools
 Installer WebTool xv, 84 to 85
 setting up 83 to 84
 system requirements xvi, xvii
 Windows requirements xvi
 fonts
 Adobe PostScript 3 xii
 installer for Mac OS 77
 installing 77, 88
 Multiple Master xiii

 printer fonts 77
 screen fonts 77
 substituting in PDF files xiii
 TrueType xiii, xiv
 Fonts folder 88
 Frame Type option 8

I

ICC device profile 81
 ICC device profile, loading in Photoshop 4.0
 (Mac OS) 81
 ICC monitor settings profile, specifying in
 Photoshop (Mac OS) 79
 ICM and ColorSync color management
 files xiv
 Icm folder (Windows) 48
 Installable Options
 specifying, from Windows 9X/Me
 printer driver 5
 installers
 Mac OS 56
 Windows 35
 installing
 Adobe PostScript printer,
 Windows 2000 20 to 22
 Adobe PostScript printer, Windows 9X/
 Me 2 to 4
 Adobe PostScript printer,
 Windows NT 4.0 15 to 19
 Command WorkStation 35
 Fiery Scan Plug-in (Mac OS) 57
 Mac OS software 57
 PostScript printer driver for Mac OS 54
 screen and printer fonts 77
 software for Mac OS 56
 software for Windows 35
 internal name, for Windows NT 4.0 with
 TCP/IP 26
 Internet Explorer, recommended browser for
 WebTools xvi, 84
 IP address xvi, xvii, 48

IPP printing setup
 on Windows 2000 33 to 35
 on Windows 9X 13 to 14
 on Windows Me 13 to 14

IPX
 address 45
 printing for Windows 2000 29 to 31
 printing for Windows NT 4.0 29 to 31
 system requirements xvii
 Windows 2000 29
 Windows NT 4.0 29

IPX/SPX
 configuring the connection 45
 Windows 2000 29
 Windows NT 29

J

Java xvi, xvii, 35, 84

M

Mac OS
 copying color files 78
 fonts 77
 Installer WebTool 53
 installing Fiery utilities 53, 56
 installing software 57
 system requirements xvi
 troubleshooting 88

Mac OS requirements
 Fiery utilities xvii

Mac OS Runtime for Java, installing 58

Microsoft Internet Explorer
 supported browser version for
 WebTools xvi, 84

monitor settings file, Mac OS 79 to 80

N

Netscape Communicator xvii

Netscape Communicator, recommended
 browser for WebTools xvi, 84

NetWare, network port with
 Windows 9X/Me 9

NetWare client setup
 Windows 2000 29
 Windows 9X/Me 29
 Windows NT 29

O

Oemsetup.inf file 3, 18, 21

P

PageMaker for Windows 49

PANTONE Book.ps 78

PDF files xiii, xiv

Photoshop 5.0
 loading the ICC device settings profile
 (Mac OS) 81
 loading the ICC monitor settings file
 (Mac OS) 80
 loading the RGB working space profile
 (Windows) 50

PostScript
 printing with Windows 1, 15
 screen fonts xiv

PostScript Level 3 xiii

PostScript printer
 setting up color server as 53 to 77

PostScript Printer Description file, *see* PPD

PostScript printer driver
 for Mac OS 54
 for Windows xv
 installing using WebTools 84 to 85
 version included with user software xvii

Windows 2000 20 to 22

Windows 9X/Me
 PostScript printer driver 2 to 4
 Windows NT 4.0 15 to 19

PostScript printer driver for Mac OS
 installing 54

PostScript printing
 Windows 9X/Me 1

PowerPoint, RGB color reference file 78

PPD

- copying files for Windows applications 49
- overview xiii
- selecting the PPD in the Chooser 88
- Windows 2000 21
- Windows 9X/Me 4
- Windows NT 4.0 18

Printer Driver, installable options

- Windows 9X/Me 5

printer drivers, *see* PostScript printer drivers**printing**

- Windows 2000 24
- Windows NT 4.0 24
- see also* PostScript printing

Prntdrv.exe file 86**R****RAM *see* memory xvi****remote server management 83****RGB page 01 78****RGB page 02 78****S****screen fonts 77, 88****SMB printing setup**

- on Windows 2000 31 to 33
- on Windows 9X/Me 10 to 12
- on Windows NT 4.0 31 to 33

Solaris, supported version xvii**specifications, color server xii, xiii****Spooler, *see* Fiery Spooler****Stand21.ps (Windows) 49****Stand34.ps (Windows) 49****SunOS, support version xvii****System 8.0 *see also* Mac OS xvii****system requirements**

- Command WorkStation xviii
- IPX xvii
- Mac OS xvi
- UNIX xvii
- Windows xv

T**TCP/IP**

- printing software conforming to RFC1179 xvii

thinnet cable xii**Token Ring, option xiii****Token Ring networking, option xiii****troubleshooting**

- Mac OS computers 88
- Windows computers 87

U**Uninstalled Fonts folder 88****UNIX workstations, requirements for**

- printing to color server xvii

unshielded twisted pair (UTP) cable xii**User Software CD**

- contents (Mac OS) 53
- contents (Windows) 35
- installing from, for Mac OS 54, 78
- troubleshooting fonts 88

W**WebTools, *see* Fiery WebTools****Windows**

- copying color files 48
- installing Fiery utilities 35
- system requirements xv
- troubleshooting 87

Windows 2000

- IPX 29 to 31
- IPX/SPX 29
- PostScript printer driver 20 to 22
- printing requirements 24
- setting up PostScript printing 15
- troubleshooting 88

Windows 9X/Me

- setting up PostScript printing 1
- SMB printing 10 to 12
- troubleshooting 87

- Windows NT 4.0
 - IPX 29 to 31
 - IPX/SPX 29
 - PostScript printer driver 15 to 19
 - printing requirements 24
 - setting up PostScript printing 15
 - troubleshooting 87
- Windows requirements
 - Command WorkStation xviii
 - Fiery utilities xvi
 - Fiery WebTools xvi
- WINS Name Server 11, 32
- Word, RGB color reference file 78

303 Velocity Way
Foster City, California 94404 USA

www.efi.com

26 Cunningham Street
North Sydney NSW 2060, Australia

Alameda Santos, 234 Suites 603 to 605
01418-000 São Paulo SP, Brasil

Kaiserwerther Straße 115
D-40880 Ratingen, Duesseldorf, Deutschland

Eastern Europe and Central Asia
Luegallee 18, D-40545 Duesseldorf, Deutschland

Parque Empresarial San Fernando, Edificio Francia
28830 Madrid, España

Immeuble Atria—5, Place des Marseillais
94227 Charenton-Le-Pont, Cedex, France

28/F, Soundwill Plaza, 38 Russell Street
Causeway Bay, Hong Kong

Centro Direzionale Milanofiori, Strada 6, Palazzo E1
20090 Assago (Milano), Italia

Shinjuku I-Land Wing 13F, 3-1 Nishi Shinjuku 6-chome,
Shinjuku-ku, Tokyo 160-0023, Japan

Boeing Avenue 201 - 207
1119 PD Schiphol-Rijk, Nederland

60-B Peck Seah Street
Singapore 079323

Frösundavägs Allé 15 4tr
169 70 Solna, Sverige

Stonebridge House, Padbury Oaks, Old Bath Road
Longford, Middlesex UB7 0EW, UK

プリンター機能の操作方法に関するお問い合わせは、
「リコープリンターコールセンター、imagico ダイヤル」にご連絡ください。



コールはイマジコ

0120-056-140

Electronics
FOR **Imaging™**

●受付時間：9～12時、13～17時（土、日、祝祭日、リコーの休業日を除く）

Color Controller E-810

CONFIGURATION GUIDE

For use with the following color copiers:
Ricoh Aficio Color 6513
Gestetner CS213d
RexRotary CS813d
nashuatec CS513d
infotec 7513
Savin SDC413



Copyright © 2001 Electronics For Imaging, Inc. All rights reserved.

This publication is protected by copyright, and all rights are reserved. No part of it may be reproduced or transmitted in any form or by any means for any purpose without express prior written consent from Electronics For Imaging, Inc., except as expressly permitted herein. Information in this document is subject to change without notice and does not represent a commitment on the part of Electronics For Imaging, Inc.

The software described in this publication is furnished under license and may only be used or copied in accordance with the terms of such license.

This product may be covered by one or more of the following U.S. Patents: 4,500,919; 4,837,722; 5,212,546; 5,343,311; 5,424,754; 5,467,446; 5,506,946; 5,517,334; 5,537,516; 5,543,940; 5,553,200; 5,615,314; 5,619,624; 5,625,712; 5,666,436; 5,760,913; 5,818,645; 5,835,788; 5,866,856; 5,867,179; 5,959,867; 5,970,174; 5,982,937; 5,995,724; 6,002,795; 6,025,922; 6,041,200; 6,046,420; 6,065,041; 6,067,080; 6,112,665; 6,116,707; 6,118,205; 6,122,407; 6,134,018; 6,141,120; 6,151,014; 6,166,821; 6,184,873; 6,185,335; 6,201,614; 6,215,562; 6,219,659; 6,222,641; 6,225,974; 6,226,419; 6,238,105; 6,239,895; D406,117; D416,550; D417,864; D419,185; D426,206; D430,206; RE36,947

Trademarks

Fiery, the Fiery logo, Fiery Driven, ColorWise, EDOX, EFICOLOR, and RIP-While-Print are registered trademarks of Electronics For Imaging, Inc. in the U.S. Patent and Trademark Office and certain other foreign jurisdictions.

EFI, the Electronics For Imaging logo, eBeam, the Fiery Driven logo, Fiery LX, Fiery Si, Fiery X2, Fiery X2e, Fiery X3e, Fiery X4, Fiery XJ, Fiery XJe, Fiery XJ-W, Fiery Z4, Fiery ZX, Fiery X4, Fiery Z5, Fiery Z18, Fiery Z16, AutoCal, ColorCal, Command WorkStation, Continuous Print, DocBuilder, DocBuilder Pro, EFI Densitometer, Fiery Downloader, Fiery Driver, Fiery Link, Fiery Prints, Fiery Print Calibrator, Fiery Scan, Fiery ScanBuilder, Fiery Spark, Fiery Spooler, FreeForm, Harmony, Memory Multiplier, NetWise, PowerWise, RIPChips, ScanBuilder, Splash, the Splash logo, STARR Compression, Velocity, Velocity Balance, Velocity Build, Velocity Estimate, Velocity Scan, VisualCal, WebTools, WebSpooler, WebInstaller, and WebStatus are trademarks of Electronics For Imaging, Inc.

All other terms and product names may be trademarks or registered trademarks of their respective owners, and are hereby acknowledged.

Legal Notices

APPLE COMPUTER, INC. ("APPLE") MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE. APPLE DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE APPLE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE APPLE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL APPLE, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE APPLE SOFTWARE EVEN IF APPLE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. Apple's liability to you for actual damages from any cause whatsoever, and regardless of the form of the action (whether in contract, tort [including negligence], product liability or otherwise), will be limited to \$50.

Part Number: 45022700

FCC Information

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Class B Declaration of Conformity

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Industry Canada Class B Notice

This Class B digital apparatus complies with Canadian ICES-003.

Avis de Conformation Classe B de l'Industrie Canada

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

RFI Compliance Notice

This equipment has been tested concerning compliance with the relevant RFI protection requirements both individually and on system level (to simulate normal operation conditions). However, it is possible that these RFI Requirements are not met under certain unfavorable conditions in other installations. It is the user who is responsible for compliance of his particular installation.

Dieses Gerät wurde sowohl einzeln als auch in einer Anlage, die einen normalen Anwendungsfall nachbildet, auf die Einhaltung der Funkentstörbestimmungen geprüft. Es ist jedoch möglich, dass die Funkentstörbestimmungen unter ungünstigen Umständen bei anderen Gerätekombinationen nicht eingehalten werden. Für die Einhaltung der Funkentstörbestimmungen einer gesamten Anlage, in der dieses Gerät betrieben wird, ist der Betreiber verantwortlich.

Compliance with applicable regulations depends on the use of shielded cables. It is the user who is responsible for procuring the appropriate cables.

Die Einhaltung zutreffender Bestimmungen hängt davon ab, dass geschirmte Ausführungen benutzt werden. Für die Beschaffung richtiger Ausführungen ist der Betreiber verantwortlich.

Software License Agreement

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS SOFTWARE. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE. INSTALLING OR USING THE SOFTWARE INDICATES THAT YOU AGREE TO AND ACCEPT THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS AGREEMENT YOU MAY RETURN THE UNUSED SOFTWARE FOR A FULL REFUND TO THE PLACE OF PURCHASE.

License

Electronics For Imaging, Inc. ("EFI") grants you a non-exclusive license to use the software ("Software") and accompanying documentation ("Documentation") included with the Product. The Software is licensed, not sold. You may use the Software solely for your own customary business or personal purposes. You may not rent, lease, sublicense or lend the Software. You may, however, permanently transfer all of your rights under this Agreement to another person or legal entity provided that: (1) you transfer to the person or entity all of the Software and Documentation (including all copies, updates, upgrades, prior versions, component parts, the media and printed materials, and this Agreement); (2) you retain no copies of the Software and Documentation, including copies stored on a computer; and (3) the recipient agrees to the terms and conditions of this Agreement.

You may not make or have made, or permit to be made, any copies of the Software or portions thereof, except as necessary for backup or archive purposes in support of your use of the Software as permitted hereunder. However, under no circumstances may you make or have made, any copies of any Software included on the ROM, the hard disk drive or any other component of the controller board or hardware. You may not copy the Documentation. You may not attempt to alter, disassemble, decompile, decrypt or reverse engineer the Software.

Proprietary Rights

You acknowledge that the Software is proprietary to EFI and its suppliers and that title and other intellectual property rights therein remain with EFI and its suppliers. Except as stated above, this Agreement does not grant you any right to patents, copyrights, trade secrets, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software. You may not adopt or use any trademark or trade name which is likely to be similar to or confusing with that of EFI or any of its suppliers or take any other action which impairs or reduces the trademark rights of EFI or its suppliers.

Confidentiality

You agree to hold the Software in confidence, disclosing the Software only to authorized users having a need to use the Software as permitted by this Agreement and to take all reasonable precautions to prevent disclosure to other parties.

Remedies And Termination

Unauthorized use, copying or disclosure of the Software, or any breach of this Agreement will result in automatic termination of this license and will make available to EFI other legal remedies. In the event of termination, you must destroy all copies of the Software and all of its component parts. All provisions of this Agreement relating to disclaimers of warranties, limitation of liability, remedies, or damages, and EFI's proprietary rights shall survive termination.

Limited Warranty And Disclaimer

EFI warrants to the original purchaser ("Customer") for thirty (30) days from the date of original purchase from EFI or its authorized retailer that the Software will perform in substantial conformance to the Documentation. EFI warrants the media containing the Software against failure during the above warranty period. EFI makes no warranty or representation that the Software will meet your specific requirements, that the operation of the Software will be uninterrupted or error free, or that all defects in the Software will be corrected.

EXCEPT FOR THE ABOVE EXPRESS LIMITED WARRANTY, EFI MAKES AND YOU RECEIVE NO WARRANTIES OR CONDITIONS ON THE SOFTWARE, EXPRESS, IMPLIED, STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND EFI SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limitation Of Liability

IN NO EVENT WILL EFI OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST PROFITS, COST OF COVER OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING FROM THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE OR FAILURE OF THE SOFTWARE, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF EFI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. YOU ACKNOWLEDGE THAT THE PRICE OF THE PRODUCT REFLECTS THIS ALLOCATION OF RISK. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. EFI DOES NOT EXCLUDE LIABILITY IN RESPECT OF PERSONAL INJURY, DEATH, WILLFUL MISCONDUCT OR GROSS NEGLIGENCE, EXCEPT TO THE MAXIMUM EXTENT THAT IT CAN BE EXCLUDED OR LIMITED BY LAW.

Export Controls

You agree that you will not export or re-export the Software in any form in violation of any applicable laws or regulations of the United States or the country in which you obtained them.

U.S. Government Restricted Rights

Software provided with this Product is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.

General

The laws of the State of California govern this Agreement. You agree that this Agreement shall not be subject to the United Nations Convention on Contracts for the International Sale of Goods (1980). This Agreement is the entire agreement held between us and supersedes any other communications or advertising with respect to the Software. If any provision of this Agreement is held invalid, the remainder of this Agreement shall continue in full force and effect.

If you have any questions, please see EFI's web site at www.efi.com.

Contents

Introduction

About this manual	xi
Organization	xii
About the documentation	xii

Chapter 1: Connecting to the Network

E-810 on the network	1-1
Stages of installation on the network	1-2
Quick path to installation	1-4
Connecting network cable to the E-810	1-10
Back view of the E-810	1-10
Ethernet connection	1-11

Chapter 2: Preparing for E-810 Setup

Levels of access and control	2-1
E-810 print connections	2-1
Passwords	2-3
Fiery WebTools	2-4
Control level scenarios	2-6
E-810 system software	2-8
About Setup	2-8
Local Setup from the E-810	2-9
Network server setup requirements	2-9
Ensuring the copier connection	2-10

Chapter 3: Performing Setup from the Control Panel

About E-810 Setup	3-1
Making changes to Setup	3-1
Network server setup requirements	3-1
E-810 Setup from the Control Panel	3-2
Accessing Setup options	3-3
About the Control Panel Setup interface	3-5
Types of Setup screens	3-6
Server Setup options	3-8
Network Setup options	3-10
Port Setup options	3-13
Protocol Setup options	3-14
Service Setup options	3-22
Printer Setup options	3-35
PostScript Setup options	3-36
Color Setup options	3-39
Administrative functions in the Setup menu	3-42
Job Log Setup	3-42
Change Password	3-43
Exit Setup	3-45
Clearing the E-810	3-45
Restoring the E-810 to factory defaults	3-45
Printing a Configuration page from the Control Panel	3-46

Chapter 4: Setting up the E-810 from a Windows Computer

Accessing Setup	4-1
Local Fiery Setup	4-2
Remote Fiery Setup	4-3
General Setup options	4-4
Passwords	4-5
Job Log Setup	4-7

Network Setup	4-8
Adapters/Ports	4-8
Protocols	4-10
Services	4-15
Printer Setup options	4-30
Printer Connections	4-30
PS (PostScript) Setup	4-31
Color Setup	4-32
Exiting Setup	4-34
Printing the Configuration page	4-35

Chapter 5: Setting up Network Servers

Support for Fiery utilities	5-1
E-810 on a NetWare 5.x network with NDPS	5-2
Tips for experts—NetWare 5.x networks	5-2
Configuring a NetWare 5.x server for printing	5-3
E-810 on a NetWare 3.x or 4.x network	5-5
Tips for experts—IPX networks	5-6
Overview of IPX printing to the E-810	5-6
Configuring a NetWare 3.x or 4.x server for printing	5-7
E-810 on a TCP/IP network with Windows NT 4.0	5-11
Tips for experts—Windows NT 4.0 with TCP/IP	5-11
Configuring a Windows NT 4.0 server to support the E-810	5-12
Configuring the E-810 and clients for Fiery WebTools	5-16
Setting the WebLink destination	5-17
E-810 on a network with UNIX workstations	5-18
Tips for experts—UNIX workstations	5-18
Important note about the remote printer name	5-19
Setting up the E-810 on TCP/IP networks	5-19
Managing print jobs	5-21

Chapter 6: Administering the E-810

Administrator functions	6-1
Maintaining optimal E-810 performance	6-3
Troubleshooting the E-810	6-4
Troubleshooting during Setup from the Control Panel	6-4
Runtime error messages	6-9

Appendix A: Token Ring Network Option

E-810 Token Ring option	A-1
Connecting Token Ring hardware	A-1
IPX/SPX installations	A-3
TCP/IP installations	A-3
Setting up Token Ring on the E-810	A-3
Setting up NetWare Windows clients	A-3

Index

Introduction

This manual is intended for anyone who is responsible for integrating the Color Controller E-810™ into a business environment that includes networked personal computers. After you set up the Color Controller E-810 and client workstations as described in this manual and in *Getting Started*, individual users can print to the Color Controller E-810 as a high-performance color Adobe PostScript printer.

NOTE: The term “E-810” is used in this manual to refer to the Color Controller E-810. The name “Aero” is used in illustrations to represent the E-810.

The E-810 includes support for the Fiery WebTools™ and software for Command WorkStation™, which enable an operator to manage all jobs sent to the E-810. Although it may not be the case at all sites, the documentation for this product assumes the presence of an operator who controls and manages jobs sent by users from remote workstations.

Any connectivity or administrative features specific to the copier are described in *Getting Started*, the *Printing Guide*, or the *Release Notes*.

About this manual

This manual covers the following topics:

- Basic configuration of the E-810 to support printing over AppleTalk, TCP/IP, and IPX (Novell) networks
- Configuring Novell, Microsoft Windows NT 4.0, and Windows 2000 servers and UNIX systems to provide E-810 printing services
- Administering network printing
- Using the E-810 in mixed network environments
- Setting up a Token Ring connection

NOTE: The network guidelines in this book are not intended to replace the services of an experienced network engineer.

Organization

This manual is organized as follows:

- Chapter 1 illustrates the supported network configurations and shows the network connectors on the E-810.
- Chapter 2 describes how to prepare for E-810 Setup, including planning system security through access levels.
- Chapter 3 describes E-810 configuration (Setup) from the Control Panel.
- Chapter 4 describes E-810 Setup from a Windows computer.
- Chapter 5 provides guidelines for setting up Windows network servers and UNIX systems for printing to the E-810 and for using the Fiery WebTools.
- Chapter 6 summarizes some administrative features of E-810 software that are available for IPX/SPX, TCP/IP, and AppleTalk networks, and offers troubleshooting hints.
- Appendix A describes the Token Ring option.

NOTE: Administrator features described in other manuals are summarized on page 6-1.

About the documentation

This manual is part of a set of E-810 documentation, which includes the following manuals for users and system administrators:

- The *Configuration Guide* explains basic configuration and administration of the E-810 for the supported platforms and network environments. It also includes guidelines for setting up UNIX, Windows NT 4.0, and Novell NetWare servers to provide printing services to clients.
- *Getting Started* describes how to install software to enable users to print to the E-810. Specifically, it describes installation of printer files and other user software provided on the User Software CD. It also explains how to connect each user to the network.
- The *Printing Guide* describes the printing features of the E-810 for users who send jobs via remote workstations on the network.

- The *Color Guide* provides information on managing the color output of your E-810. It addresses concepts and issues associated with printing to the E-810 and outlines key workflow scenarios. This manual explains how to calibrate your copier and take advantage of the ColorWise® color management system as well as features in ColorWise Pro Tools™. In addition, the *Color Guide* offers information on printing from popular Windows and Mac OS applications.
- The *Job Management Guide* explains the functions of the Fiery® utilities, including Command WorkStation, and how they can be used to manage jobs. This book is intended for an operator or administrator, or a user with the necessary access privileges, who needs to monitor and manage job flow, and troubleshoot problems that may arise.
- *Release Notes* provide last-minute product information and workarounds for some of the problems you may encounter.

Chapter 1: Connecting to the Network

This chapter summarizes the stages in setting up the E-810, and includes diagrams that refer you to other chapters or other manuals for completing your installation. Check those references to find the information you need quickly.

E-810 on the network

When the E-810 is connected to a network, it behaves as a networked PostScript printer. The built-in Ethernet interface on the E-810 supports the following network protocols:

- AppleTalk
- TCP/IP (the lpd, nbt, and http protocols)

TCP/IP stands for Transmission Control Protocol/Internet Protocol. The lpd protocol is the standard TCP/IP printing protocol. The nbt protocol supports Windows (SMB) printing. The http protocol is commonly used for Web pages on the Internet and on intranets.

- IPX/SPX (Novell)

IPX/SPX stands for Internetwork Packet Exchange/Sequenced Packet Exchange.

These protocols (rules that enable computers on a network to communicate with each other) are supported on Mac OS, Windows, and UNIX platforms and can run concurrently on the same cable. Workstations that use other protocols can print through a server that uses one of the protocols mentioned. A Token Ring option is also available. This option supports the TCP/IP and IPX/SPX protocols. The E-810 is auto-sensing, and can handle all of these connections simultaneously.

When you add the E-810 to a network, it is assumed that a network administrator has already installed a network cabling system and connected workstations and servers.

Stages of installation on the network

Installation can be performed by a network or printing administrator. The stages of a successful installation are:

- **Physically connecting the E-810 to a functioning network**

Prepare a network node for the E-810—obtain cable and route it to the location where the E-810 will be installed (near the copier) and attach the cable to the network interface of the E-810. See page 2-10 for details.

NOTE: If you plan to run the Command WorkStation software, you will need to install the software and connect the Command WorkStation computer to the network along with the E-810. See *Getting Started*.

- **Configuring the network server**

When network servers are required, you need to configure those servers to provide client access to the E-810 as a color PostScript printer. See Chapter 5 for information on configuring network servers in Windows and UNIX network environments.

- **Setting up the E-810**

Configure the E-810 for your particular printing and network environment. First read Chapter 2, and then see the following chapters for details.

- **Preparing client workstations for printing**

Install the files needed for printing, install additional user software, and connect the client to the E-810 over the network. These steps are described in *Getting Started*, and some information is provided in Chapter 5 of this manual.

- **Administering the E-810**


Monitor and maintain system performance and troubleshoot problems that arise. See Chapter 6 of this manual, and the *Job Management Guide* for details.

1

1-3 Stages of installation on the network

Summary of E-810 network installation


CONNECTION

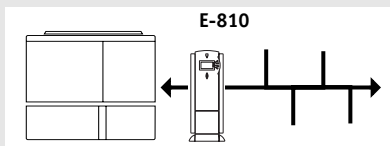

Prepare a network node. Connect the E-810 to the copier and the network. If you use a computer running the Command WorkStation software, connect it to the network.

SERVER CONFIGURATION

Network server

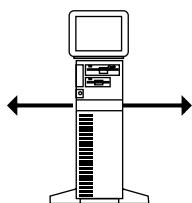


Configure UNIX, Windows NT 4.0, and IPX (Novell) servers to specify E-810 print queues and E-810 users.

No special configuration of AppleShare servers is required.


E-810 SETUP

 E-810



On the E-810 Control Panel, configure, at a minimum, the Server Setup, Network Setup, and Printer Setup. From the Control Panel, WebSetup, or Command WorkStation, configure the remaining Setups. Calibrate the E-810.

CLIENT SETUP

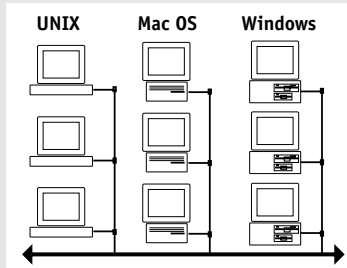

At each computer from which users print to the E-810:

- Install the appropriate printer files and connect to one or more queues.
- Install Fiery utilities and an Internet browser for those computers that will use them.
- Verify the E-810 in the list of printers and run a test print.



E-810 available on the network

Quick path to installation

The diagrams on the following pages show typical systems used for printing and running Fiery software from remote workstations. Find the page with your preferred platform and network type, and then look up the setup procedures referenced in the “Key to setup” at the upper left of each diagram.

The diagrams describe devices that use the supported networking protocols. They are logical diagrams and are not intended to describe the physical arrangement (topology) of devices on the network. A variety of physical arrangements is possible with each logical arrangement. For example, twisted pair Ethernet networks commonly use a star configuration around a hub, rather than a bus arrangement. The design of physical networks is beyond the scope of this manual.

If the network uses more than one protocol or more than one type of workstation, combine the setups listed for each component of your system. Multiple protocols (shown in the diagrams as parallel lines) can run on the same cable. A solid connection from the E-810 with an arrow indicates that other supported network types can be operational at the same time.

A Token Ring card is required for connection to a Token Ring network. For more information, see Appendix A.

NOTE: The IPX/SPX and TCP/IP functionality outlined in this section is available on both Ethernet and Token Ring networks. AppleTalk is supported on Ethernet only.

The protocols used in these diagrams are indicated as follows:



1


1-5 Quick path to installation

Mac OS environment with AppleTalk

Key to setup:

- 1 Mac OS computer
- 2 E-810 Setup

Getting Started
Chapter 3

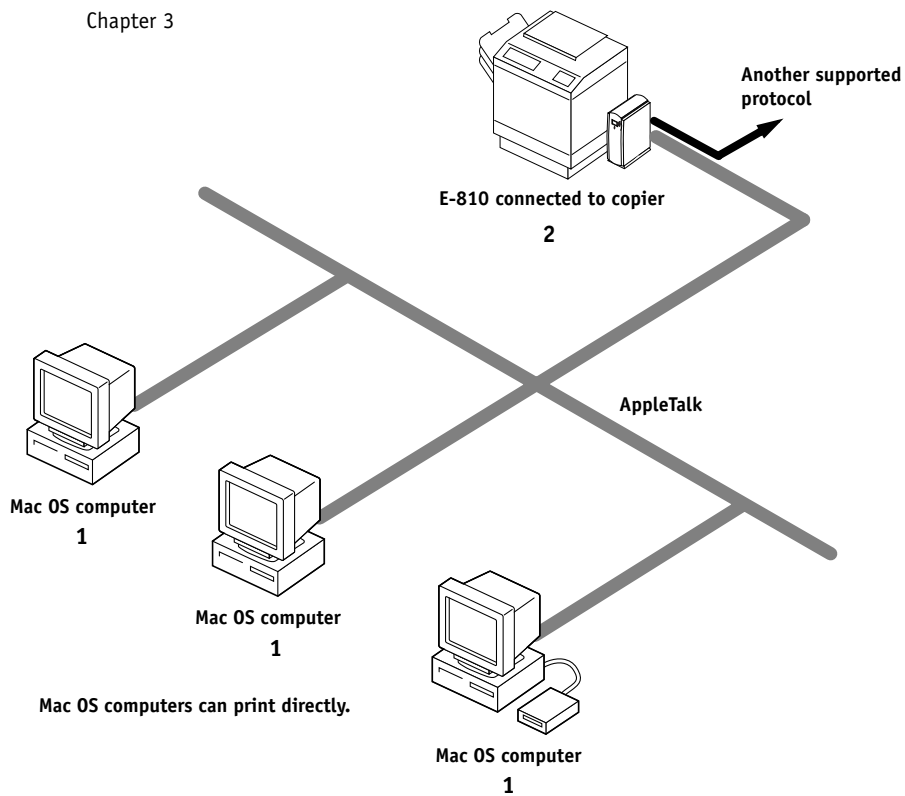



1

1-6 Connecting to the Network

Windows computers in a Novell environment

Key to setup:

- | | |
|-----------------------------|------------------------|
| 1 NetWare server | page 5-5 |
| 2 E-810 Setup | Chapter 3 |
| 3 NetWare client | <i>Getting Started</i> |
| 4 Windows computer with SPX | page 5-10 |

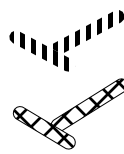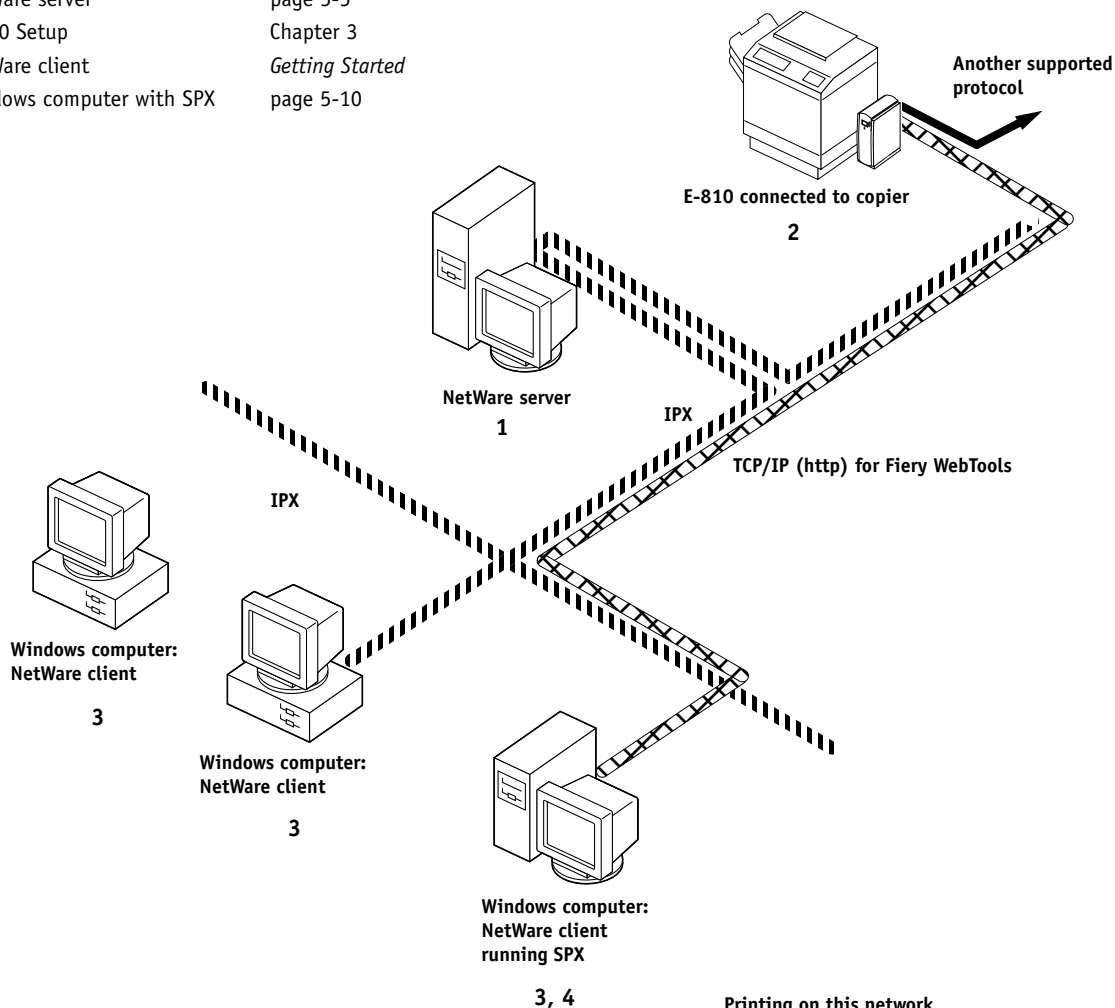

IPX protocol

SPX protocol (TCP/IP or AppleTalk possible)

Printing on this network

All Windows computers can print through the NetWare server.

For using Fieri WebTools

A Windows computer with TCP/IP (http) loaded.


1

1-7 Quick path to installation

Windows NT 4.0 Server environment

Key to setup:

- | | |
|-------------------------|-----------|
| 1 Windows NT 4.0 Server | page 5-12 |
| 2 E-810 Setup | Chapter 3 |
| 3 Windows NT 4.0 client | page 5-14 |


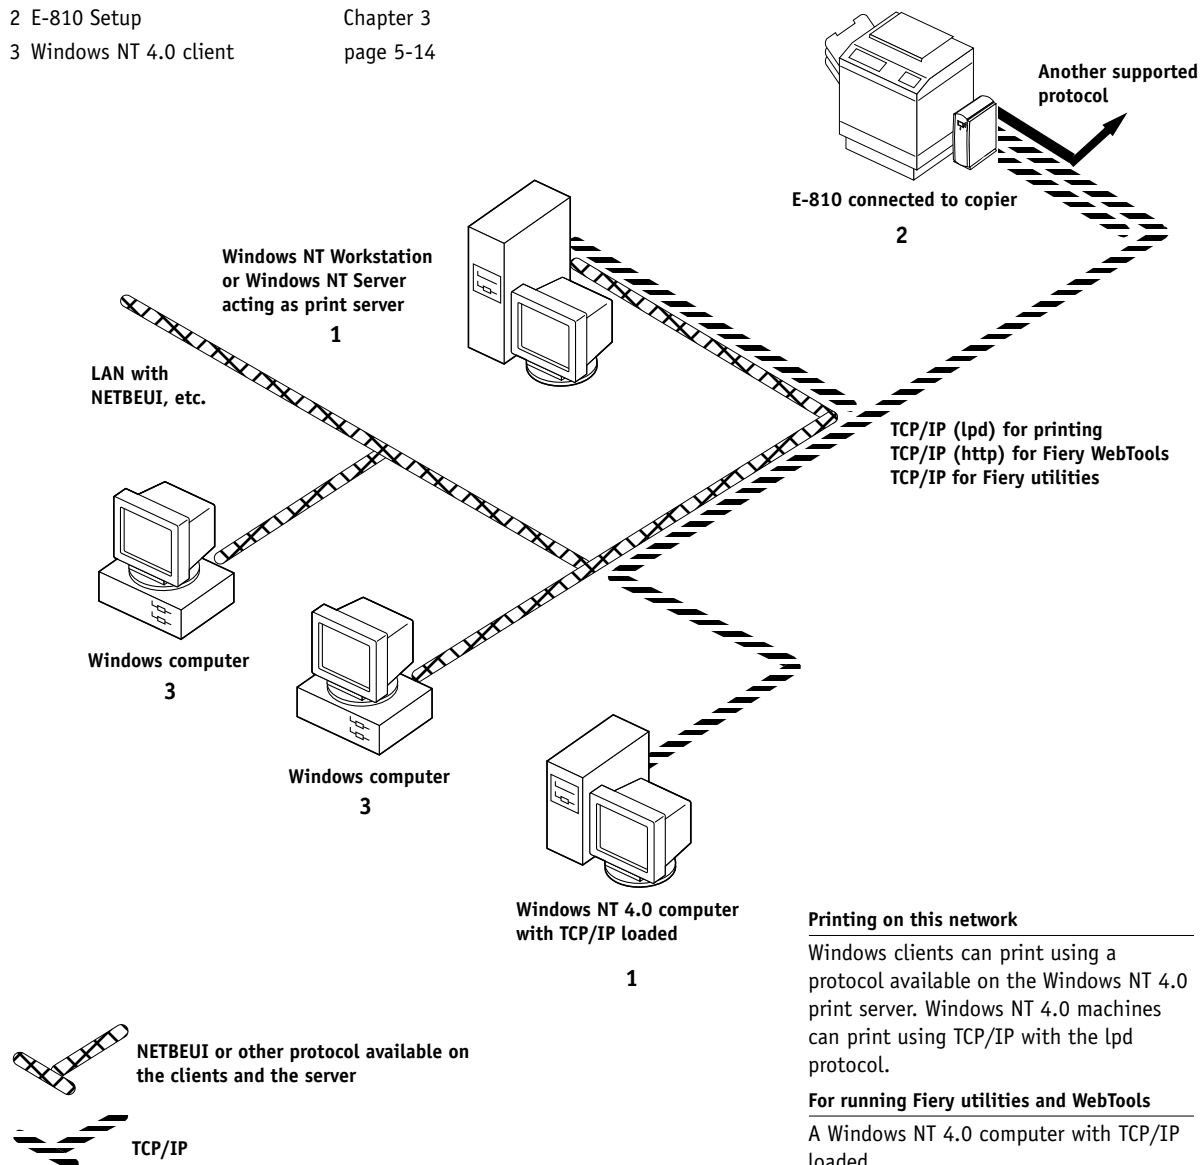


Windows computers using Windows printing

Key to setup:

- 1 Windows computer
- 2 E-810 Setup

 Getting Started
Chapter 3

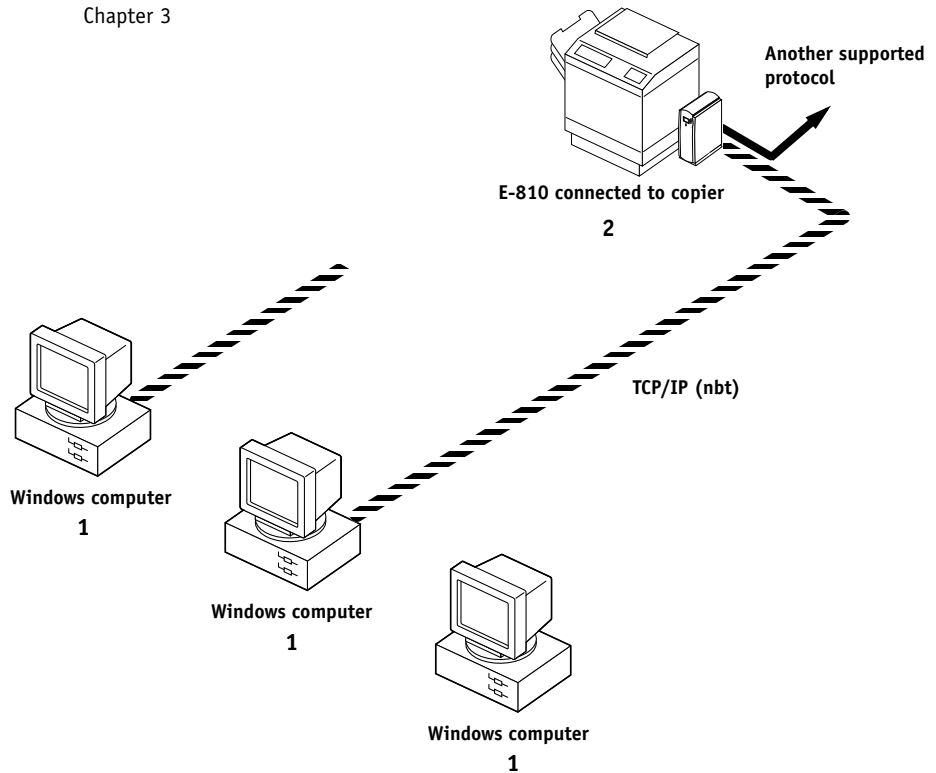

For Windows printing


Windows (SMB) printing enabled on the E-810

Windows NetBios and TCP/IP enabled on the computer

UNIX workstations and Windows NT 4.0 computers on a TCP/IP network

Key to setup:

- | | |
|-------------------------|------------------------------------|
| 1 UNIX server/host | page 5-18 |
| 2 E-810 Setup | Chapter 3 |
| 3 UNIX workstation | page 5-18 |
| 4 TCP/IP client | <i>Getting Started</i> , Chapter 3 |
| 5 Windows NT 4.0 client | page 5-14 |

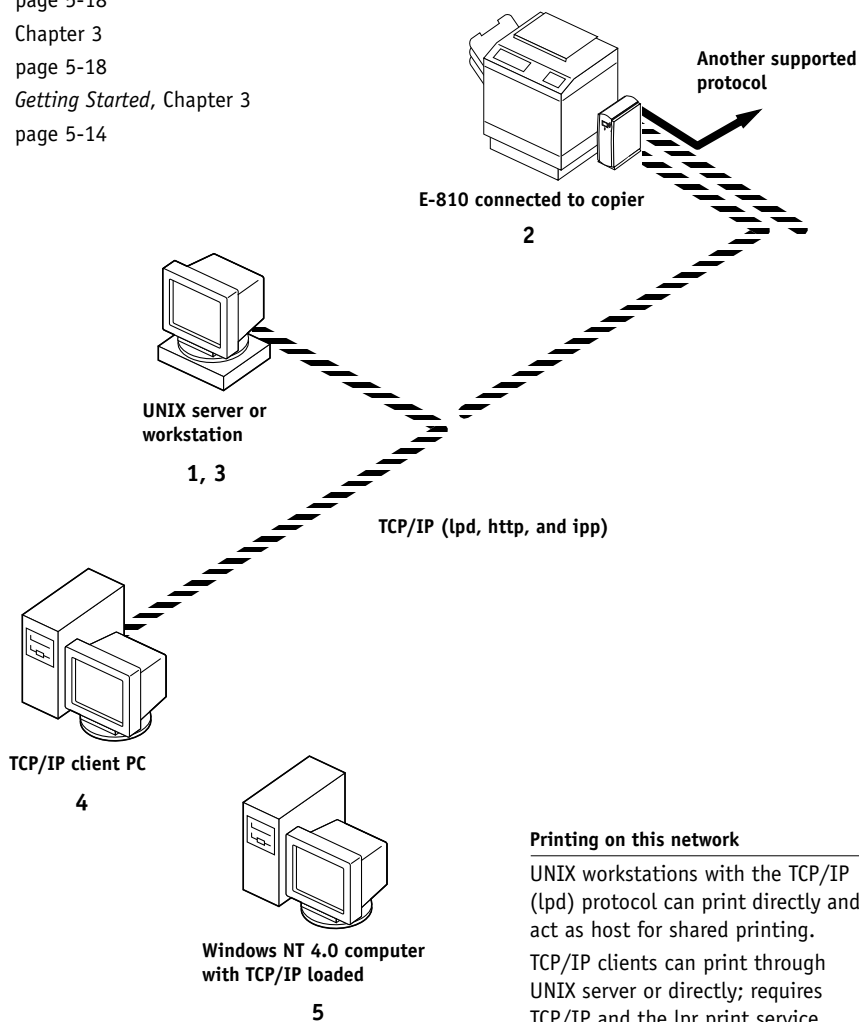

Printing on this network

UNIX workstations with the TCP/IP (lpd) protocol can print directly and act as host for shared printing.

TCP/IP clients can print through UNIX server or directly; requires TCP/IP and the lpr print service loaded.

For running Fiery utilities and WebTools

Windows computers with TCP/IP loaded can use these applications.


Connecting network cable to the E-810

In this section, the back panel of the E-810 is illustrated, followed by information for connecting to the Ethernet board. For information about connecting to a Token Ring network, see Appendix A.



Shut down the E-810 before attaching it to any network device. If the E-810 has just finished processing, wait 5 seconds after the system reaches the Idle state before using the power switch to turn off the E-810. See the *Job Management Guide* for the proper shutdown procedure.

Back view of the E-810

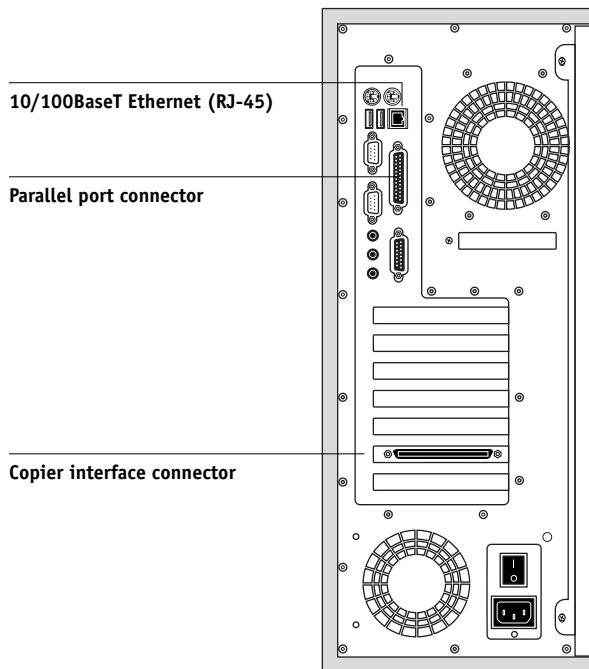

Ethernet connection

For connecting to Ethernet, the E-810 supports Unshielded Twisted Pair (UTP) cabling, defined as Category 5 for use with 100BaseT; or as Category 3, Category 4, or Category 5 for use with 10BaseT. The cable uses an 8-pin RJ-45 connector that plugs into the RJ-45 socket on the E-810.

NOTE: The 100BaseT type supported by the E-810 is 100BaseTX, also known as Fast Ethernet. If an Ethernet hub is used, it must be a 100BaseTX hub. The term “100BaseT” is used to refer to 100BaseTX.

TO CONNECT TO THE ETHERNET BOARD

- **Connect the network cable to the RJ-45 connector on the back of the E-810.**

You must use a Category 5 unshielded twisted pair cable network cable for 100BaseT.

Chapter 2: Preparing for E-810 Setup

To prepare for printing at your site, you need to do some initial E-810 configuration, or Setup, to specify the network environment and the kind of printing you will do. Before you perform Setup, you must decide the levels of access you will implement for your site. Administrators and operators must also understand how E-810 system software is structured in order to configure and use the E-810 system correctly.

Levels of access and control

When you configure the E-810 during Setup, you (as system administrator) implement a particular level of control by enabling or not enabling print connections, passwords, and access to Fiery WebTools. The level of control you implement can range from strict to moderate to minimal—or none at all.

- Strictest control might be appropriate for a high-volume printing environment where an administrator or operator controls the job flow and all printing; jobs sent by users are spooled (stored) to the E-810 disk until the operator decides it is time to print them. In addition, only the administrator and/or operator have access to job management tools. This is the recommended level of control.

NOTE: The term “job management tools” is used in this manual to refer to Command WorkStation, Fiery Spooler, and Fiery WebSpooler.

- Least control might be appropriate for a small site where anyone on the local network can control all printing and E-810 functions. Although there may be an administrator or operator charged with certain duties, all users have equal access to the system and job management tools.

E-810 print connections

The E-810 supports three print connections: Hold queue, Print queue, and Direct connection. These print connections can be enabled, or “published,” to users on the network when you configure Printer Setup. All published connections are constantly checked for the presence of jobs. The Print queue and the Direct connection give remote users more direct access to the E-810 than the Hold queue. Therefore, do not publish the Print queue and the Direct connection in environments where stricter control is desired.

In addition, you can enable the Printed queue, which is a storage area for the most recent jobs from the Print queue. The Printed queue makes it convenient to reprint those jobs. In Setup, you enable the Printed queue and specify the maximum number of jobs retained in the queue (see page 3-9). Reprinting jobs in the Printed queue requires the job management tools.

Hold queue

Jobs sent to the Hold queue are spooled to the E-810 hard disk for printing at a later time or for repeated printing. Because the Hold queue is a storage place, jobs sent to it cannot proceed through the printing process until the operator intervenes, using the the job management tools (see the *Job Management Guide*).

Print queue

This is the standard E-810 queue. Jobs sent to the Print queue are processed and printed in the order they are received. Jobs prioritized by an operator with the job management tools and jobs sent via the Direct connection can take priority over jobs sent to the Print queue.

To use the Fiery utilities and Fiery WebTools, you must enable either the Hold queue or the Print queue.

Direct connection

The Direct connection transmits jobs directly to the E-810, but only when the E-810 is not processing another job. If the E-810 is busy, the job remains at the user workstation until the E-810 is ready. The job is then processed as soon as the previous job is finished and before the next queued job is processed.

Jobs sent to the Direct connection are not stored on the E-810 hard disk, and they cannot be selected for reprinting, moving, or deletion. Therefore, the Direct connection provides a measure of security for sensitive files. Jobs sent to the Direct connection *do* appear in the Job Log, for job management purposes.

You cannot use the Direct connection for lpd printing over TCP/IP.

NOTE: To download fonts to the E-810, you must publish the Direct connection.

Passwords

You can implement password requirements as a means of controlling access to E-810 functions. The E-810 allows you to set the following passwords in Setup:

- Administrator—from the Control Panel, Command WorkStation, or Fiery WebSetup
- Operator—from Command WorkStation or Fiery WebSetup

NOTE: By default, *no* passwords are set on the E-810. If you do not specifically set passwords, all users will have administrator privileges, which include access to important functions such as Setup (including setting passwords) and job control. It is *strongly recommended* that you set *at least* an Administrator password to protect the E-810 from random or accidental changes to Setup.

Administrator privileges

Administrator control, which confers control of Setup, is the highest level of control, since the person who has access to Setup can control the printing and job management environment. Administrator privileges include publishing print connections, setting passwords, deleting fonts, clearing the E-810 of all job data, performing calibration, and setting the WebLink™ destination.

When performing a function from the E-810 Control Panel that prompts you for the Administrator password, you must enter it promptly. Otherwise, the E-810 Control Panel returns to Idle, and you must start over again.

Operator privileges

Operator control includes control of print jobs from the job management tools, including the ability to override job settings.

Guest privileges (no password)

No password is needed for a user to log in as a Guest from the job management tools. A Guest can view the status of active jobs but cannot make changes to jobs or to the E-810 state.

Fiery WebTools

The E-810 can support Internet or intranet access with Fiery WebTools from Windows and Mac OS computers. To enable use of Fiery WebTools, you must do the following in Setup:

- Enable TCP/IP.
- Set an IP address, subnet mask, and gateway address for the E-810.
- Enable Web Services.

Instead of manually assigning the IP address, subnet mask, and gateway address, you can use DHCP, RARP, or BOOTP protocols to assign some or all of these addresses (see page 3-16).

You can set passwords to control access to Fiery WebTools features. If you do not specifically set these passwords, all users have access to all Fiery WebTools functions (see page 2-3). Fiery WebTools include Status, WebSpooler, WebLink, WebScan, WebDownloader, WebSetup, and Installer.

Status

The Status WebTool provides you with current information on the jobs processing and printing on the E-810. It is not affected by passwords. For more information, see the *Printing Guide*.

WebSpooler

The WebSpooler interface is very similar to that of Command WorkStation. It allows remote users to preview, manipulate, reorder, reprint, and delete jobs currently spooling, processing, or printing on the E-810. It also allows the administrator and operator to edit and merge jobs (Thumbnails A and B) and to view, print, or delete the Job Log.

Fiery WebSpooler access can be controlled by setting an Operator password in Setup. If you set a password, only users with that password can manipulate jobs from Fiery WebSpooler. A user who does not have the password can still log in to Fiery WebSpooler as a Guest with view-only access (see page 2-3). For more information, see the *Job Management Guide*.

WebLink

WebLink provides all users with a link to a pre-set Fiery WebLink destination. To change the WebLink destination, see page 5-17. This function requires the Administrator password, if one has been set. See “Passwords” on page 2-3.

NOTE: If you do not set the Administrator password, any user can change the WebLink destination, which affects all users. For this reason, it is strongly recommended that you set an Administrator password.

WebScan

With WebScan, you can retrieve scanned documents from a computer on the Internet or your organization’s intranet. For more information, see the *Printing Guide*.

WebDownloader

WebDownloader allows you to download PostScript, PDF, and ASCII files directly to the E-810 without first opening the file in an application.

WebSetup

WebSetup allows you to view and modify E-810 Setup options from a remote workstation. For more information, see Chapter 4.

NOTE: Fiery WebSetup is supported on Windows computers only.

Installer

The Installer WebTool allows users to download installers for printer drivers directly from the E-810. It is not affected by passwords. For more information, see *Getting Started*.

Control level scenarios

Typical scenarios of access and control, ranging from least control to strictest control, are described in this section. Choose the scenario that best matches your site requirements, and then refer to the corresponding number in the table for guidance on how to configure your system for those requirements.

NOTE: It is *strongly recommended* that you set *at least* an Administrator password to prevent unauthorized changes to system settings.

1. (Least control—*not recommended*) No designated administrator or operator

All users have equal access to all system functions including Setup, clearing the E-810, deleting printer fonts, setting the WebLink destination, performing calibration, printing to all E-810 print connections, and managing all jobs from the job management tools.

2. A designated administrator but no designated operator

Only an administrator can perform Setup, calibration, and other administrator functions, but all other system functions are accessible to all users, including printing to all E-810 print connections, and managing all jobs from the job management tools.

3. A designated administrator and a superuser operator

Only an administrator can perform Setup, calibration, and other administrator functions, and only an operator or administrator can control jobs from the job management tools. Users can print to all E-810 print connections.

4. A designated administrator and a designated operator, no Fiery WebTool access

Only an administrator can perform Setup, calibration, and other administrator functions, and only an operator or administrator can control jobs from the job management tools; users can print to the Hold queue and Print queue, but not to the Direct connection; the operator controls all job flow, but jobs sent to the Print queue may not require operator intervention; no access to Fiery WebTools.

5. (Strictest control) A designated administrator and a designated operator, no Fiery WebTool access, operator controls all jobs

Only an administrator can perform Setup, calibration, and other administrator functions, and only an operator or administrator can control jobs from the job management tools; users can print only to the Hold queue; the administrator and the operator have complete control of job flow; no access to Fiery WebTools.

Use these settings in Setup	1 (Least)	2	3	4	5 (Strictest)
Enable Direct connection	√	√	√		
Enable Print queue	√	√	√	√	
Enable Web Services	√	√	√		
Set an Administrator Password (<i>strongly recommended</i>)		√	√	√	√
Set an Operator password			√	√	√

E-810 system software

The E-810 uses Windows NT Workstation system architecture to receive and process jobs and send job data to the copier. To log in to the E-810, enter Administrator as the user name, and enter the password.

NOTE: Configuring and monitoring the Windows NT functions from the E-810 require the Fiery Advanced Controller Interface option. For more information, contact your authorized service/support technician.

Resident on the Windows NT Workstation is the following software unique to the E-810:

- **Server**—The Server is an independent software process that is started automatically whenever Windows NT is booted. As the central element of E-810 system software, the Server process controls the spooling, rasterizing, and printing of jobs, as well as job management (the Job Log), storage, and retrieval.

When the Server is not running, jobs cannot be received by the E-810, job processing cannot occur, job data cannot be transferred to the copier for printing, and Command WorkStation cannot connect to the E-810. In the event that you need to restart the Server process, right-click the FieryBar™ and choose Restart Fiery.

- **Command WorkStation**—Command WorkStation is the interface tool for the Server. It provides a graphical means of viewing and controlling Server functions.

About Setup

Setup configures the E-810 to communicate with other devices and manage print jobs. You must perform Setup the first time you turn on the E-810 after new system software is loaded, or any time Server software is reinstalled. An initial Setup using default settings is adequate for getting the E-810 to reach Idle status, but not for full functionality. When your network or user printing environment changes, you can change Setup options accordingly.

You must perform initial Setup at the E-810 Control Panel. Configure at least Server Setup, Network Setup, and Printer Setup, in that order. Afterwards, you can complete or change most Setup options from a Windows computer, using Command WorkStation or Fiery WebSetup.

Local Setup from the E-810

You can also perform Setup locally at the E-810, using Server Setup, a Windows NT Control Panel. Some of the settings you specify in Server Setup configure the Server process (such as print job defaults), while some configure the Windows NT Workstation environment (such as system date and time). Depending on the settings you change in Server Setup, you must restart Windows NT before your changes take effect.

Setup options for local Setup are divided into three groups:

General Setup	System settings, passwords, and Job Log options
Network Setup	All the active network systems that will transmit print jobs to the E-810
Printer Setup	E-810 print connections to be made available to users, and color defaults for jobs

The other Setup applications (Command WorkStation or Fiery WebSetup) have different interfaces, but allow you to set most of the same options.

Network server setup requirements

For Token Ring, Novell, and Windows NT (using TCP/IP) networks, the network servers must be configured for printing to the E-810 *before* you configure E-810 network settings in Setup. Refer to the diagrams in Chapter 1 for chapter references to information about network server setup.

To configure network settings in Setup, you need a live network connection, so that the E-810 can query the network for zones, servers, and server-based queues.

Whenever the configuration of the E-810, the copier, or the network itself changes at your site, you can alter individual settings to correspond to the changed environment. Changing network or port settings may require that you make changes to other Setup options as well.

Ensuring the copier connection

Complete the following steps *before* you configure the E-810 and the workstations that will print to the E-810. A service technician will have performed some initial installation.

TO PREPARE FOR E-810 CONFIGURATION

1. **Print a copier test page to make sure the copier is functioning normally.**
2. **Turn off the copier and connect the interface cable from the copier to the E-810.**
3. **To confirm this connection, turn on the copier and the E-810, and print a Test Page from the E-810 Control Panel.**

To print a Test Page, press the Menu button on the Control Panel to display the Functions menu. Choose Print Pages, and then Test Page.
4. **With both the copier and the E-810 turned off, connect the network cable to the E-810, as described in Chapter 1.**

The network should already be installed and operational.
5. **Turn on the copier and then the E-810.**
6. **Prepare network servers to share E-810 user software and to enable networked users to print to the E-810.**

See Chapter 5 for details.
7. **Perform E-810 Setup as described in Chapter 3.**

Chapter 3: Performing Setup from the Control Panel

Setup is required the first time the E-810 is turned on after new system software is loaded. In this initial Setup, you (or the service technician who loads the software) choose the language to use for E-810 Control Panel menus and messages.

About E-810 Setup

In initial Setup, you must configure at least Server Setup, Network Setup, and Printer Setup, in that order, from the Control Panel. If you do not configure the remaining Setups, the E-810 uses default settings. These defaults allow the E-810 to reach the Idle state, but might not allow users to print to the E-810. You need to make settings appropriate for the printing environment at your site.

Making changes to Setup

After initial Setup, you can change Setup options from the Control Panel (page 3-2), E-810 Server Setup (a Windows NT application), Fiery WebSetup, or Command WorkStation (page 4-3). Most Setup options can be set using any of these methods.

NOTE: Configuring and monitoring the Windows NT functions on the E-810 require the Fiery Advanced Controller Interface option. For more information, contact your authorized service/support technician.

Network server setup requirements

For Novell and Windows NT 4.0 (using TCP/IP) networks, the network servers must be configured for printing to the E-810 *before* you configure E-810 network settings in Setup. You need a live network connection so the E-810 can query the network for zones, servers, and server-based queues. The diagrams on pages 1-5 through 1-9 give chapter references for network server setup.

You must configure the E-810 with the correct Windows NT domain name. This is especially important for Windows printing, also known as SMB printing. For E-810 systems that include the Fiery Advanced Controller option, open the Start Menu>Settings>Control Panel>Network>Identification tab, and enter the correct domain name. You must also select Create a Computer Account in the Domain, and enter the user name and password of a user who can add workstations to the specified domain. For configurations that do not include the Fiery Advanced Controller option, you need to add the E-810 to the domain from a networked Windows NT 4.0 server, using the Server Manager utility.

Whenever the configuration of the E-810, the copier, or the network itself changes at your site, you can alter individual settings to correspond to the changed environment. Likewise, if printing needs or administrative requirements change, you can alter the corresponding settings. Changing network or port settings may require that you make changes to other Setup options as well.

E-810 Setup from the Control Panel

Setup performed from the Control Panel configures the E-810 to communicate with other devices and manage print jobs sent to it.

Setup provides these groups of options:

- Server Setup to specify system options
- Network Setup to specify all the active network systems that transmit print jobs to the E-810
- Printer Setup to specify how print jobs and queues are managed
- PS Setup to specify PostScript settings
- Color Setup to specify color settings
- Job Log Setup to specify how the E-810 handles its log of printed jobs


The Change Password option in the Setup menu allows you to create and change the Administrator password on the E-810.

Accessing Setup options

The Control Panel on the front of the E-810 enables you to set options and view information about jobs printed to the E-810. It comprises the following parts:

- Activity light—indicates normal or problem activity
- Line selection buttons—select a setting and proceed to the next option
- Display window—shows status information and options for setting up the E-810
- Up and down buttons—scroll menus, options, and settings
- Menu button—cancels without saving changes; also toggles to Functions menu

E-810 Control Panel

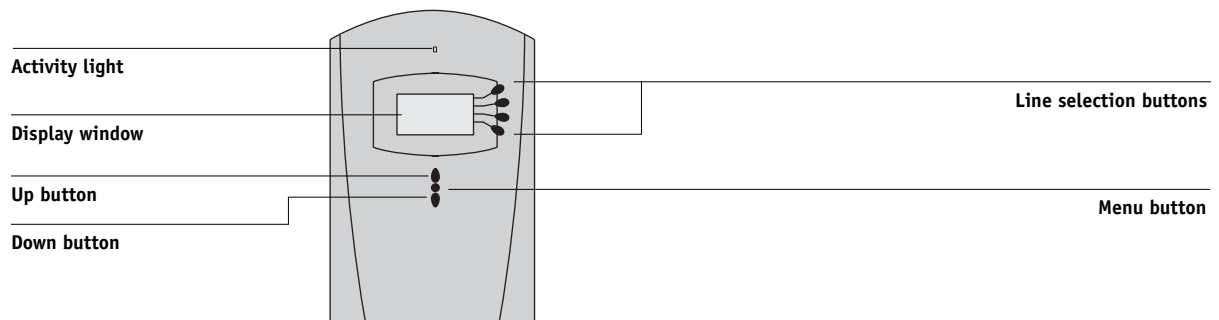

The *Job Management Guide* describes the online display screens in detail. This chapter describes only the screens you might see when performing Setup.

TO ACCESS SETUP WHEN THE E-810 IS AT IDLE


1. **Make sure the information screen on the Control Panel reads Idle.**

If Printing or RIPping appears, the E-810 is processing, and you must wait until the system finishes and reaches the Idle state.

2. **Press the Menu button on the Control Panel to go to the Functions menu.**
3. **Scroll with the Down arrow button and press the line selection button next to Run Setup.**

If an Administrator password has been set on the E-810, you are prompted to enter it before you can perform Setup (see page 3-43).

4. **When prompted, confirm your choice to proceed to Setup.**

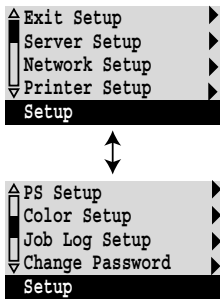

5. **Press the line selection button to choose a Setup menu or command.**

Press the down button to view the remaining screens of the main Setup menu.

6. **Perform, in order, Server Setup, Network Setup, and Printer Setup.**

This is the minimum required for initial Setup. Later, you can complete the remaining Setups either from the Control Panel or from a Windows computer.

7. **Set an Administrator password to protect your Setup from unauthorized alteration.**

Review the settings described in this chapter. For more information on Control Panel menus other than those in Setup, see the *Job Management Guide*.

About the Control Panel Setup interface

When you perform Setup from the Control Panel, you select one menu after another and enter information about your E-810 and your network and printing environment.

In each Setup screen, the last line of the display window shows the name of the current Setup menu. Most of the menus you see are shown on the Control Panel Map, a flowchart that can be printed from the Control Panel.

TO PRINT THE CONTROL PANEL MAP

1. **At the Control Panel, press the Menu button to access the Functions menu.**

2. **Press the button next to Print Pages.**

The Control Panel displays the first four types of pages you can print. To see the remaining types of pages, press the Down arrow button.

3. **Press the button for Control Panel Map.**

Types of Setup screens

There are two types of Setup options:

Multiple choice questions

You are given choices (for example, Yes or No, or a list of options from which to choose). Only one choice is displayed at a time, in highlighted text. The currently selected (or default) value appears first.


Use the Up and Down arrow buttons to scroll through the choices, and choose OK when the correct information is displayed.

Information entry options

You must specify the information for your site, for example, the printer name or IP address.

Use the Up and Down arrow buttons to scroll the alphanumeric symbols to make your selection.

The cursor position is highlighted, and two of the line selection buttons become left and right arrow buttons. Arrows appear on the display window next to the corresponding buttons. Use these buttons to move between positions for entering information.

NOTE: When you enter text, enter it from left to right, as the Left arrow button acts as a delete key as well as a cursor-moving key. This is indicated in the display by the delete symbol ().

The following section provides three specific examples of these types of options.

Example: Multiple choice

Publish Print Queue Yes OK	Publish Print Queue No OK
Printer Setup	Printer Setup

Press the Up or Down arrow button to display the other option or options.

When the setting you want is displayed, press the button beside OK to continue.

Example: Information entry with fields

Subnet Mask 255.0.0.0 > < OK	Subnet Mask 255.0.0.0 > < OK	Subnet Mask 255.255.0.0 > < OK
TCP/IP (Ethernet)	TCP/IP (Ethernet)	TCP/IP (Ethernet)

From the starting position, press the Right arrow button to move the cursor to the right.

The next field is selected. Press the Up or Down arrow button to change the number.

When the correct number is displayed, press the Right arrow button to move to the third field. Press the Left arrow button to go back and edit, or press OK to select the choice and continue.

Example: Information entry with individual characters

Enter Your File Server Password █ > [X] OK	Enter Your File Server Password 9 > [X] OK	Enter Your File Server Password 9█ > [X] OK
Bindery Setup	Bindery Setup	Bindery Setup

From the starting position, press the Up or Down arrow button to enter the first character.

When the correct character is displayed, press the Right arrow button to move the cursor to the next position.


Press the Up or Down arrow button to enter a character in the second position. The delete button erases the current character and moves the cursor to the left. Pressing OK enters what is currently displayed.

NOTE: If you make a mistake during Setup, you can always use the Menu button to cancel without saving changes. Pressing the Menu button cancels what you are doing in the current screen to bring you to the next higher-level menu. You may need to press Menu more than once to return to the top level for the particular Setup in which you are working. Once at the top level, you can enter a Setup menu again, or exit without making changes.

When you have entered the settings, you need to save the changes. You are usually prompted to do so. If you choose Yes, your settings overwrite previous settings. If you choose No, your previous settings are retained. If necessary, the E-810 reboots after you exit from the Setup menu.

Server Setup options

The Server Setup menu lets you specify system information that pertains to the E-810 itself and all users. Accessing the menu is described on page 3-4.

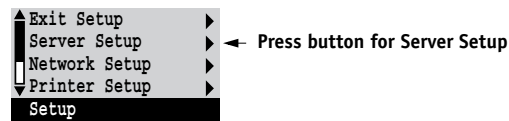

When you choose Server Setup, the options appear in sequence as described below. Default values, where applicable, appear in square brackets. Words shown in *italics* indicate that a product- or site-specific value is displayed.

Server Name

Default server name

Enter a name for the E-810 (up to 14 characters). This is the name that appears in the Chooser on an AppleTalk network.

NOTE: Do not use the device name (r7) as the server name. Also, if you have more than one E-810, do not give them the same name. Windows NT is not designed to handle two computers with the same name in the same workgroup or domain.

System Date

Enter the correct system date in the standard form for your usage. The date is used on the Job Log.

System Time

Enter the correct system time. Enter the time based on the 24-hour clock in the form HH:MM (Hours:Minutes). The time is used on the Job Log.

Print Start Page**Yes/No [No]**

Specify whether the E-810 should print a start page every time it is restarted. The start page displays information about the E-810, including the server name, current date and time, amount of memory installed in the E-810, network protocols enabled, and connections published.

Use Character Set**Macintosh/DOS/Windows [Macintosh]**

Specify whether the Control Panel and Command WorkStation should use the Macintosh, DOS, or Windows character set for displaying file names. This is important if file names include accented or composite characters (such as é or æ).

For mixed-platform networks, choose the option that gives the best overall representation of the special characters you use.

Enable Printed Queue**Yes/No [Yes]**

Specify whether to enable the Printed queue, which creates a storage location on the E-810 disk for recent jobs that were printed from the Print queue. Users with Administrator or Operator access to the job management tools can reprint jobs from the Printed queue without resending them to the E-810. If you select No, jobs are deleted from the E-810 disk immediately after they are printed.

Jobs Saved in Printed Queue**1-99 [10]**

This option appears only if Enable Printed Queue is set to Yes. Specify the number of jobs to be stored in the Printed queue. Jobs in the Printed queue take up space on the E-810 hard disk. If disk space is low, use a smaller value for saved jobs.

Clear Each Scan Job**24 hours after scan/72 hours after scan/Manually/Now [24 hours after scan]**

 
Specify how you want to remove scanned data from the HDD. If you select Manually, the scanned data remains on the HDD until specifically deleted, or until all scanned jobs are cleared by the Administrator.

Save Changes**Yes/No [Yes]**


Select Yes to activate any changes made in the Server Setup; select No to return to the main Setup menu without making any changes.

Network Setup options

Network Setup configures the E-810 to receive print jobs over the network systems that will be used at your site.



 In the Setup menu, choose Network Setup, where you specify network addresses and names to be used by workstations, servers, and the E-810 when they communicate with each other.



The Network Setup menu includes three submenus that let you choose port types, protocols, and network services. You must perform Port Setup and enable at least one port.

For each item you enable, you are prompted to enter settings for that item. Default values, where applicable, appear in this manual with square brackets.

You need to display and select options only for the network systems that are currently used at your site. If your network requirements change, you can change Network Setup at any time.

If the E-810 is configured to enable more than one protocol, it automatically switches to the correct protocol when it receives a print job.

The available network types, and the Setup areas that pertain to them, are summarized in the following table.

For this Network or Connection Type	Use this Port Setup	Use this Protocol Setup	Use this Service Setup
AppleTalk over Ethernet	Ethernet Setup	AppleTalk Setup	AppleTalk printing (PAP) is enabled automatically
TCP/IP over Ethernet	Ethernet Setup	TCP/IP Setup: Ethernet Setup	LPD Setup Web Services Setup Windows Setup Port 9100 Setup IPP Setup
IPX/SPX over Ethernet	Ethernet Setup	IPX/SPX Setup	PServer Setup (NDS, Bindery, or both)

If the Token Ring option is installed, you have these additional options:

For this Network or Connection Type	Use this Port Setup	Use this Protocol Setup	Use this Service Setup
TCP/IP over Token Ring	Token Ring Setup	TCP/IP Setup: Token Ring Setup	LPD Setup Web Services Setup Windows Setup Port 9100 Setup IPP Setup
IPX/SPX over Token Ring	Token Ring Setup	IPX/SPX Setup	PServer Setup (NDS, Bindery, or both)

 
TO ACCESS NETWORK SETUP OPTIONS**1. Confirm that the network cable is connected to the E-810.**

During Network Setup, the E-810 queries the network for zones, servers, and server-based queues. If you perform Network Setup without a connected and functioning network, default settings are used that may not meet your needs.

2. Choose Network Setup from the main Setup menu.**3. Choose Port Setup from the Network Setup menu.****4. To use Ethernet, choose Ethernet Setup from the Port Setup menu, and enter the appropriate settings.****5. If the Token Ring option is installed, choose Token Ring Setup and enter the appropriate settings.****6. When you have finished entering port settings, choose Exit Port Setup, and then choose Protocol Setup.****7. Enter the appropriate settings for the protocol or protocols you will use.****8. When you have finished entering protocol settings, choose Exit Protocol Setup, and then choose Service Setup.****9. Enter the appropriate settings for the services you will use.**

The options are described in detail in the following pages.

TO EXIT NETWORK SETUP**1. When you have finished entering service settings, choose Exit Network Setup.****2. Choose Yes when prompted to save changes.****3. From the main Setup menu, choose another Setup, or choose Exit Setup.**



Network Setup
Port Setup



Port Setup options

You can enable Ethernet and Token Ring simultaneously. To configure the E-810, choose each port type you use and enter the settings for that port. Since network setups are nested, the names of higher-level menus are shown in this chapter to the left of each menu heading.

Ethernet Setup

Enable Ethernet Yes/No [Yes]

Select Yes if you have Ethernet cabling connected to the E-810.

Ethernet Speed Auto Detect/100 Mbps/10 Mbps [Auto Detect]

Select Auto Detect if your network environment is mixed, or if you do not know the network speed. If you know the speed of the network to which the E-810 is attached (10 Mbps or 100 Mbps), select it.



Token Ring Setup

Enable Token Ring Yes/No [No]

Select Yes if the E-810 is to be connected to a Token Ring network.

Token Ring Speed Auto Detect/16 Mbps/4 Mbps [Auto Detect]

Select Auto Detect if your network environment is mixed, or select the speed (4 Mbps or 16 Mbps) of the network to which the E-810 is attached.

Maximum Frame Size (bytes) 4202/2154/1130/632 [4202]

Select the maximum frame size recommended by the network administrator at your site. If you are uncertain of the setting to use, select the default value (4202).

Enable Source Routing Yes/No [No]

Select Yes if your network supports source routing.

Network Setup
Port Setup



Source Routing
Request All Routes
Yes/No [No]

 
This option appears only if you enabled Source Routing. Select Yes if you want the Request packet to travel to its destination by all routes.

Source Routing
Respond All Routes
Yes/No [Yes]

This option appears only if you answered No to the previous option. Select Yes if you want the Response packet to return by all routes to the originating computer.

Protocol Setup options

To configure the E-810, choose each protocol and enter the settings for that protocol. You can enable AppleTalk, TCP/IP, and IPX/SPX communication simultaneously.



Network Setup
Protocol Setup

AppleTalk Setup**Enable AppleTalk**
Yes/No [Yes]

 
Select Yes if you have an AppleTalk network connected to the E-810. This setting enables the E-810 to communicate over AppleTalk networks.

AppleTalk Zone
List of zones


The E-810 searches the network for AppleTalk zones in your network segment. Scroll through the list to select the AppleTalk zone in which you want the E-810 to appear. If your segment has only one zone, the E-810 is assigned to that zone automatically.

The message “No AppleTalk zone found” may mean your network has no zones, or the network cable is not connected (see page 6-4). Choose OK to dismiss the message.

TCP/IP Setup options



 To configure the E-810 for TCP/IP, choose TCP/IP Setup.




Choose Ethernet Setup and enter the appropriate settings. Choose each network type you use (Ethernet and/or Token Ring) and enter the appropriate settings. Token Ring Setup appears as an option only if you have enabled Token Ring in Port Setup.

NOTE: If TCP/IP is running on *both* an Ethernet and a Token Ring network, it is assumed that the two networks are already routed to each other. The E-810 does not function as a router.

When you set an IP address, subnet mask, or gateway address for the E-810 during Setup, you can allow the E-810 to get these addresses automatically from a DHCP, BOOTP, or RARP server. First, turn on or reboot the E-810 and allow it to reach Idle. Next, make sure the DHCP, BOOTP, or RARP server is running. Finally, perform E-810 Setup.

 TCP/IP Setup with Ethernet



Ethernet Setup

Enable TCP/IP for Ethernet

Yes/No [Yes]

Select Yes if you have a TCP/IP network connected to the E-810 over Ethernet cabling.

If you use Token Ring, enabling TCP/IP for Token Ring is required for enabling the Fiery WebTools.

NOTE: If you are using TCP/IP for printing from Windows computers, enabling TCP/IP here also enables you to use Fiery utilities from Windows computers using TCP/IP protocols.

Enable Auto IP Configuration**Yes/No [Yes]**

Select Yes to allow the E-810 to obtain its Ethernet IP address by searching the network. Depending on your network and the protocol you select in the following option (DHCP, BOOTP, or RARP), the IP address can change. Select No to assign the E-810 a static IP address that will not change. If you select No, you proceed to the IP Address option, where you manually set the IP address.

Select protocol**DHCP/BOOTP/RARP [DHCP]**

This option appears only if you answered Yes to Enable Auto IP Configuration. Select the protocol over which the E-810 should search for its IP address. Both DHCP and BOOTP allow the E-810 to obtain the Ethernet IP address and Subnet Mask automatically. RARP obtains only the Ethernet IP address.

Depending on your network, the E-810 might be assigned a different address after you reboot the E-810. With the DHCP setting, the E-810 can be assigned a different address even if it is not rebooted. Make sure the network is already configured properly for the protocol you select.

Get Gateway Address Automatically**Yes/No [Yes]**

Use this option to get the gateway address automatically for printing with TCP/IP. This option appears only if you selected DHCP or BOOTP as the protocol in the previous option.

If you select a DHCP or BOOTP protocol and later change it to RARP, you must return to Setup and set this option to No. You can then set the address manually. This is because RARP does not support automatic assignment of the gateway address.

IP Address
[127.0.0.1]

Enter the E-810 IP address for Ethernet. This IP address, unlike an IP address set automatically, remains the same if you reboot the E-810. You must change the default to a valid address for your network. For information about setting up printing with TCP/IP, see Chapter 5.

Subnet Mask
[255.255.255.0]

This option lets you modify the subnet mask for printing with TCP/IP over Ethernet. To set the subnet mask, enter one of the following values:

- 255.0.0.0 if the IP address starts with a number less than 128
- 255.255.0.0 if the IP address starts with a number from 128 through 191
- 255.255.255.0 if the IP address starts with a number greater than 191

NOTE: Confirm the subnet mask setting with your network administrator before proceeding. In some cases, the required setting may be different from those listed.

Gateway Address
[127.0.0.1]

This option appears only if you answered No to Get Gateway Address Automatically, or if you selected RARP as the protocol.

Use this option to set the gateway address for printing with TCP/IP. If your network uses a gateway, you must change the default to a correct gateway address for your network.

TCP/IP Setup with Token Ring

Enable TCP/IP for Token Ring, and enter the IP address and subnet mask. Then, if your TCP/IP network has a gateway, and users outside the gateway plan to print to the E-810 using TCP/IP, enter the gateway address.

Network Setup
Protocol Setup
TCP/IP Setup



Token Ring Setup

Enable TCP/IP for Token Ring

Yes/No [Yes]

Select Yes if you have a TCP/IP network connected to the E-810 over Token Ring.

If you use Token Ring, you must enable TCP/IP for Token Ring in order to enable the Fiery WebTools.

NOTE: If you are using TCP/IP for printing from Windows computers, enabling TCP/IP here also lets you use the Fiery utilities from Windows computers using TCP/IP protocols.

Enable Auto IP Configuration

Yes/No [Yes]

Select Yes to allow the E-810 to obtain its Token Ring IP address. Depending on your network and the protocol you select in the following option (DHCP, BOOTP, or RARP), the IP address can change. Select No to assign the E-810 a static IP address that will not change. If you select No, you proceed to the IP Address option, where you manually set the IP address.

Select protocol

DHCP/BOOTP/RARP [DHCP]

This option appears only if you answered Yes to Enable Auto IP Configuration. Select the protocol over which the E-810 should search for its IP address. Both DHCP and BOOTP allow the E-810 to obtain the Token Ring IP address and Subnet Mask automatically. RARP obtains only the Token Ring IP address.

Depending on your network, the E-810 might be assigned a different address after you reboot the E-810. With the DHCP setting, the E-810 can be assigned a different address even if it is not rebooted.

Make sure the network is already configured properly for the protocol you select.

Get Gateway Address Automatically**Yes/No [Yes]**

Use this option to get the gateway address automatically for printing with TCP/IP. This option appears only if you selected DHCP or BOOTP as the protocol in the previous option.

If you select a DHCP or BOOTP protocol and later change it to RARP, you must return to Setup and set this option to No. You can then set the address manually. This is because RARP does not support automatic assignment of the gateway address.

IP Address**[127.0.0.1]**

Enter the E-810 IP address for Token Ring. This IP address, unlike an IP address set automatically, remains the same if you reboot the E-810. You must change the default to a valid address for your network. For information about setting up printing with TCP/IP, see Chapter 5.

Subnet Mask**[255.255.255.0]**

This option lets you modify the subnet mask for printing with TCP/IP over Token Ring. To set the subnet mask, enter one of the following values:

 
- 255.0.0.0 if the IP address starts with a number less than 128
- 255.255.0.0 if the IP address starts with a number from 128 through 191
- 255.255.255.0 if the IP address starts with a number greater than 191

NOTE: Confirm the subnet mask setting with your network administrator before proceeding. In some cases the required setting may be different from those listed.

Gateway Address**[127.0.0.1]**

This option appears only if you answered No to Get Gateway Address Automatically, or if you selected RARP as the protocol.

Use this option to set the gateway address for printing with TCP/IP. If your network uses a gateway, you must change the default to a correct gateway address for your network.




IPX/SPX Setup options

To specify the frame types the E-810 uses for IPX/SPX protocols, choose IPX/SPX Setup from the Protocol Setup menu. You must choose at least one frame type to enable IPX/SPX protocols. The E-810 supports the following frame types for IPX/SPX:

- For Ethernet—Ethernet 802.2, Ethernet 802.3, Ethernet II, and Ethernet SNAP
- For Token Ring—Token Ring and Token Ring SNAP

For protocols other than IPX/SPX, the frame type is automatically enabled and does not require setup, as follows:

With this protocol	And these printing services	This frame type is automatically enabled
AppleTalk	PAP (Printer Access Protocol)	Ethernet SNAP
TCP/IP with Ethernet	LPD (Line Printer Daemon)	Ethernet II
TCP/IP with Token Ring	LPD (Line Printer Daemon)	Token Ring SNAP

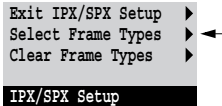


```
Exit IPX/SPX Setup >
Select Frame Types <-
Clear Frame Types >
IPX/SPX Setup
```

Select Frame Types

Enable IPX Auto Frame Type Yes/No [Yes]

Specify whether the E-810 should try to bind to all available frame types automatically. The E-810 does so whether or not all frame types are appropriate. To determine the frame types that were successfully bound, save your changes, exit Setup, allow the E-810 to reboot, and print a Configuration page. The Configuration page lists only one of the frame types that were successfully bound.

If you answer No to this option, you can select frame types manually. You must choose at least one frame type to enable IPX/SPX protocols.

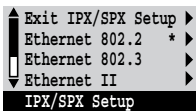

```
Exit IPX/SPX Setup >
Ethernet 802.2 * >
Ethernet 802.3 >
Ethernet II >
IPX/SPX Setup
```

The frame selection screen allows you to make multiple selections. Depending on your Port Setup selection, only Ethernet frame types, only Token Ring frame types, or all frame types are displayed.


Press the line selection button beside each frame type used on your IPX/SPX network. An asterisk (*) appears beside each selected frame type. Press the line selection button again to deselect a frame type. Use the Up and Down buttons to scroll to additional frame types. The E-810 binds to each frame type as you select it.

When you have selected all the frame types used, choose Exit IPX/SPX Setup.

Clear Frame Types

You can clear all frame types at once by choosing Exit IPX/SPX Setup, then choosing IPX/SPX Setup and selecting Clear Frame Types.

Service Setup options

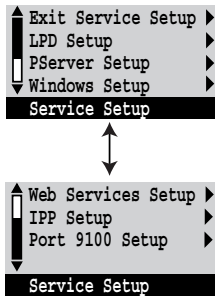

Network Service Setup has options for TCP/IP and IPX/SPX networks.

- LPD Setup enables lpd printing on TCP/IP networks.
- For IPX/SPX networks, PServer Setup allows you to enter the names of the Novell objects that are concerned with E-810 print jobs.
- Windows Setup enables the Microsoft Server Message Block (SMB) protocol, which supports peer-to-peer printing, also known as Windows or SMB printing.
- Web Services Setup enables the http protocol and the use of the Fiery WebTools.
- IPP Setup enables the Internet Printing Protocol.
- Port 9100 Setup allows users to download jobs to a print connection on the E-810.

PServer is a program in the E-810 that can service the Novell print queues assigned to the Novell print servers you have set up for printing to the E-810. When you choose PServer Setup and enable PServer, you can set up NDS (Novell Directory Services), Bindery Services, or both. NDS is used with NetWare 4.x/5.x; Bindery Services are used with NetWare 3.x or with NetWare 4.x/5.x in bindery emulation mode.

LPD Setup options

Network Setup
Service Setup
LPD Setup



Enable LPD
Yes/No [Yes]

Select Yes to allow lpd printing. See “Setting up the E-810 on TCP/IP networks” on page 5-19 for more information.

PServer Setup options

Network Setup
Service Setup
PServer Setup

**Enable PServer
Yes/No [No]**

Select Yes if you have a Novell network connected to the E-810.

Exit PServer Setup
NDS Setup
Bindery Setup
Polling Interval
PServer Setup



Choose NDS Setup if your network uses NetWare 4.x/5.x in native mode. Choose Bindery Setup if your network uses NetWare 3.x or uses NetWare 4.x/5.x in bindery emulation mode.

If your network uses *both* NDS and Bindery, set up NDS first. If you set up NDS after Bindery, you will overwrite Bindery Setup.

If your network uses both NDS and Bindery, and uses NetWare 4.x/5.x servers in bindery emulation, note that the E-810 cannot service NDS and bindery emulation servers on the same NDS tree.

Network Setup
Service Setup
PServer Setup

**NDS Setup**

Before entering NDS settings, be sure the E-810 is connected to the network and that you have configured an NDS directory tree with a Printer, a Print Server, and one or more Print Queue objects for E-810 jobs (see page 5-7). To perform NDS Setup, you may need permission to browse the NDS tree. If access to the Print Server is restricted, you need a login password.

The main objective of NDS Setup is to specify the Print Server object. In addition, you can indicate the location of the E-810 print queues.

NOTE: The terms NetWare server, Novell server, and IPX server are in common use and are used here interchangeably to mean the server on an IPX network running Novell NetWare networking software.

**Enable NDS
Yes/No [No]**

Select Yes if the NetWare servers you will use to print to the E-810 are running NetWare 4.x/5.x in native mode.

Select NDS Tree***List of trees***

Use the Up and Down buttons to browse the list of NDS trees available to the E-810. Choose OK when you have displayed the tree that contains the Printer, Print Server, and Print Queue objects you have previously defined for the E-810.

Your new NDS tree selection automatically overwrites any previous tree selection. If you change the NDS tree selection and there are also current Bindery settings, you are alerted that they will be deleted. If you continue with NDS Setup, you can replace Bindery settings afterwards. If you do not want to continue, exit NDS Setup by pressing the Menu button.

**Is user login needed
to browse NDS tree?****Yes/No [No]**

Select No if no password is required to browse the tree. You can proceed to navigate to the Print Server object.

Select Yes if network permissions require that you log in to browse the NDS tree and see the Print Server object you want to select. If you select Yes, you are prompted to navigate to the User Login object.

**Navigate the NDS
tree to the User
Login object.**

This message is displayed if you selected Yes for the previous option. Choose OK and browse the NDS tree as described in the following paragraphs.

***NDS Tree name
Object list, “..”***

Browsing to find the User Login object begins with the NDS tree that you selected previously (with Select NDS Tree). Use the Up and Down buttons to scroll a list of objects in the tree beneath the [Root] in the hierarchy, or use the navigation symbol “..” to go up one level at a time.

In each subsequent browse screen, the top line represents your current location. The second line contains:

- A list of objects in the current container directly below your current location
- The symbol “..” to go up one level

With an object selected, choose OK to travel down the tree, or choose “..” to go up the tree. When you select an object and choose OK, that object is displayed on the top line, and the second line lists objects directly below it.

Continue to browse the NDS tree until the User Login object is displayed in the second line. Choose OK.

Enter Password

Enter the login password for the NDS tree, using the Up and Down buttons to select characters, and the Left and Right arrow buttons to move the cursor. Choose OK.

Navigate the NDS tree to the Print Server.

Choose OK to browse the NDS tree to the Print Server object.

Browsing to find the Print Server object begins with the NDS tree that you selected previously (with Select NDS Tree). In each subsequent browse screen, the top line represents your current location. The second line contains:

- A list of objects in the current container directly below your current location
- The symbol “..” to go up one level

With a container object selected, choose OK to travel down the tree, or choose “..” to go up the tree. When you select an object and choose OK, that object is displayed on the top line, and the second line lists objects directly below it.

When the Print Server is displayed in the second line, choose OK.

Enter Print Server Password

Enter the Print Server password, using the up and down buttons to enter characters, and the left and right arrow buttons to move the cursor. Choose OK. (If no password is required, choose OK.)

**Server should look
for print queues in:
Entire NDS Tree/Specified subtree [Entire NDS Tree]**

By default, the E-810 searches the entire NDS tree for E-810 print connections. This option lets you restrict the search for E-810 print jobs to a subtree (the Print Queue root) in which the E-810 print connections have been defined. This makes the search more efficient. Select Entire NDS Tree if the tree is small. Select Specified Subtree to restrict the search and specify the subtree.

If you select Entire NDS Tree, choosing OK returns to PServer Setup. Proceed with Bindery Setup (see page 3-27), set the Polling Interval (see page 3-32), or choose Exit PServer Setup to return to the Service Setup menu.

**Browse to the root
of the Print Queue
subtree.**

This message is displayed if you selected Specified Subtree in the previous option. Choose OK to browse the NDS tree to the Print Queue subtree.

Browsing to find the container object begins with the NDS tree that you selected previously (with Select NDS Tree). In each subsequent browse screen, the top line represents your current container. The second line contains:

- A list of objects directly below your current location
- The symbol “..” to go up one level
- The symbol “.” to select the current container object (displayed in the top line) without traveling down the tree

With an object selected, choose OK to travel down the tree, or choose “..” to go up the tree. When you select an object and choose OK, that object is then displayed on the top line, and the second line lists objects contained within.

When the container that contains print queues is displayed in the second line, choose OK. In the next screen, choose “.” and choose OK to select the object in the top line.

When the E-810 displays the container name, choose OK to return to PServer Setup.

Proceed with Bindery Setup (see page 3-27), set the Polling Interval (see page 3-32), or choose Exit PServer Setup to return to the Service Setup menu.

Network Setup
 Service Setup
 PServer Setup



Bindery Setup options


Bindery Setup

Use Bindery Setup if you have already configured one or more bindery servers (file servers running NetWare 3.x or NetWare 4.x/5.x in bindery emulation) with a Print Server and a Print Queue for E-810 jobs. Before entering bindery settings, be sure the E-810 is connected to the network and the NetWare file server is running. If Guest Login is not supported, you need a valid user name and password.

NOTE: The terms NetWare server, Novell server, and IPX file server are in common use and are used here interchangeably to mean the server on an IPX network running Novell NetWare networking software.

Bindery Setup menu

Because you can set up more than one Novell server to handle E-810 print jobs, an additional menu is displayed for this purpose. The options are:

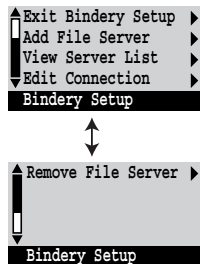

- **Add File Server**—creates a new file server connection to the E-810. You can set up a maximum of eight file server connections. After you have finished adding a new server, you return to the Bindery Setup menu, and you can set up another server if you wish.
- **View Server List**—displays the list of file servers that have already been selected to communicate with the E-810.
- **Edit Connection**—lets you change the NetWare Print Server that will print to the E-810.
- **Remove File Server**—lets you disconnect the E-810 from a file server to which it is currently connected. Remove a file server when you want to reduce the number of connections to the E-810 or re-assign the connection to a different NetWare file server.
- **Exit Bindery Setup**—lets you exit this menu after you have added all servers, viewed a list of file servers, or removed a file server from the list.

NOTE: If you change your mind about any of the menus you have selected, use the Menu button to escape and return to the main Bindery Setup menu. To cancel all changes, you must exit Network Setup and select No to Save Changes.

Network Setup ▶
Service Setup ▶
PServer Setup ▶
Bindery Setup ▶

Add File Server

This option gives you two ways to add a Novell NetWare file server.

Select File Server

From List/Search by Name [From List]

You may select the file server from a scrollable list, or by a name search.

Choose From List if your network does not have a large number of file servers.

Select Search by Name if the number of file servers is so large that scrolling through the list would take a long time.

If you selected **From List**:

Add Server

List of all servers

The E-810 obtains a list of NetWare file servers by querying the IPX network. Use the up and down buttons to select a NetWare file server from the list. Choose the server on which you have configured a print server and print queue to handle E-810 print jobs.

If you selected **Search by Name**:

Enter First Letters of Server Name

Use the up and down buttons to enter the first letters of the name of the file server you want to use, and choose OK.

Add Server

List of servers matching the search

This option is displayed if you entered letters to search. Scroll to select the server you want from the list.

Once you have chosen a file server, the E-810 immediately tries to log in as a guest without a password. If it succeeds, it skips to the NetWare Print Server option.

If you try to add a file server but all E-810 connections are already in use, you are prompted to remove a file server (see “Remove File Server” on page 3-31).

File Server Login**administrator/supervisor/Enter Login Name [supervisor]**

This option appears only if a password is required for login or if there is no guest account or the guest account is restricted. Choose Enter Login Name to enter your own login name and password or to log in as a guest. Choose administrator or supervisor if you have those privileges.

Enter Your Login Name**[guest]**

This option and the next appear only if you selected Enter Login Name for the File Server Login. Enter your login name or select guest.

Enter Your File Server Password

Enter the password for logging in to your NetWare file server.

NetWare Print Server***Print Server Name***

Select the name of the print server that you have configured in the NetWare utility PCONSOLE. This is the print server that will route print jobs to the E-810 from computers on IPX networks.

Enter Your Print Server Password

This option appears only if your NetWare print server is set up to require you to log in with a password. Enter your print server password.

Choose Add Server again until you have connected each NetWare file server you have configured for printing to the E-810. When you have added all the IPX file servers for your site, choose Exit Bindery Setup.

- Network Setup ▶
- Service Setup ▶
- PServer Setup ▶
- Bindery Setup ▶

View Server List

Supported servers

This option lets you view the list of file servers currently connected to the E-810, that is, servers you have added in Bindery Setup. You are notified if there are none. When you choose OK, you return to the Bindery Setup menu.

- Network Setup ▶
- Service Setup ▶
- PServer Setup ▶
- Bindery Setup ▶

Edit Connection

On each connected NetWare file server, you have defined a print server to handle E-810 print jobs. Use this option to change the print server assigned to the E-810.

Choose File Server

File server name

From the list of connected NetWare file servers, choose the file server whose print server you wish to change.

NetWare Print Server

List of print servers on selected file server

Choose the name of the print server that you want to use. This is the print server that will route print jobs to the E-810 from computers on IPX networks.

If you change your mind, press the Menu button to return to the Bindery Setup menu without making a change.

Enter Your Print Server Password

This option appears only if your NetWare print server is password-protected. Enter your print server password.

The Bindery Setup menu is displayed again. You can edit other connections, choose another Bindery Setup option, or choose Exit Bindery Setup.

Network Setup ▶
Service Setup ▶
PServer Setup ▶
Bindery Setup ▶

Remove File Server

Remove support for *File server name*

Allows you to select a NetWare file server from a list of connected file servers and remove the connection to it. You are notified that you have removed the connection, and the Bindery Setup menu is displayed again. If you change your mind and do not want to remove any of the file servers, press the Menu button.

You can choose another Bindery Setup option (such as adding another file server) or choose Exit Bindery Setup and proceed to set the polling interval.

Network Setup ▶
Service Setup ▶
PServer Setup ▶
Bindery Setup ▶

Exit Bindery Setup

Choose Exit Bindery Setup after you have viewed a list of IPX file servers, removed a file server from the list, or connected all the configured NetWare file servers. After you select Exit Bindery Setup, you return to the PServer Setup menu.

Polling Interval options

Network Setup
Service Setup
PServer Setup



Polling Interval

Whether you use NDS or Bindery services, choose Polling Interval from the main PServer Setup menu. If you do not reset the interval, the default value of 15 seconds is used.

NetWare Server Poll Interval in Seconds 1-3600 [15]

Specify the interval, in seconds, at which the E-810 communicates with the Novell print server to see if there are print jobs waiting.

NOTE: If you select a short interval, the amount of network traffic increases. This may slow down other network jobs.

Windows Setup options

Network Setup
Service Setup
Windows Setup



Enable Windows Printing Yes/No [Yes]

Enabling Windows Printing enables Server Message Block (SMB), the file and printer sharing protocol built into Windows. Enabling SMB allows the E-810 to be listed on the network so that Windows clients can print to a particular print connection (Hold, Print, or Direct) on the E-810 without any other networking software. For information on setting up a Windows computer for Windows printing, see *Getting Started*. Windows printing runs via TCP/IP, so you must configure TCP/IP on the E-810 and on all computers that use Windows printing.

Use Automatic Configuration**Yes/No [No]**

This option appears if you chose DHCP or BOOTP as the protocol for automatically obtaining the IP address of the E-810 (see page 3-18).

Choose Yes to have the E-810 use a WINS name server and automatically obtain its IP address. After making your choice, proceed to the Server Name option.

Choose No to proceed to the Use WINS Name Server option, where you specify whether to use a WINS name server, and then to the WINS IP Address option, where you specify its IP address.

Use WINS Name Server**Yes/No [No]**

Broadcasts from SMB devices cannot pass across a router without a WINS name server. Setting up the WINS name server is outside the scope of this manual. To find out if a name server is available, contact your network administrator.

WINS IP Address**[127.0.0.1]**

This option appears only if you choose Yes for WINS Name Server. Change the default address to the correct IP address for the WINS Name Server. Obtain the correct address from your network administrator.

Server Name***Default Name***

The server name is the name that will appear on the network for accessing the E-810 via SMB. The default name is the same as the server name assigned in Server Setup (see page 3-8).

Server Comments

Server comments (optional) can contain information about the printer. These comments are listed in the Properties of the E-810 in Network Neighborhood and can be up to 15 characters long.

Set Domain Name

Select from list/Enter manually [Select from list]

This option provides two ways to specify the workgroup or domain where you want the E-810 to appear.

If you selected **Select from list:**

Choose Domain

List of domains

Select the workgroup or domain from the list.

If you selected **Enter manually:**

Workgroup or Domain

Enter the name of the workgroup or domain. For more information about entering text and characters, see “Types of Setup screens” on page 3-6.

Web Services Setup

- Network Setup ▶
- Service Setup ▶
- Web Services Setup ▶

Enable Web Services

Yes/No [Yes]

Select Yes to make the Fiery WebTools available to users (see page 5-16).

TCP/IP must be enabled on the E-810 and on user workstations. The Fiery WebTools include WebSpooler, Status, WebLink, WebScan, WebDownloader, WebSetup, and Installer.

A Java-enabled Web browser and a valid IP address are required for each user. See *Getting Started* for details on browser choice and workstation requirements.

IPP Setup

- Network Setup ▶
- Service Setup ▶
- IPP Setup ▶

Enable IPP

Yes/No [Yes]

Select Yes to enable printing with the Internet Printing Protocol (IPP). You must enable Web Services. For information on setting up user computers to use IPP printing, see *Getting Started*.

Network Setup ▶
 Service Setup ▶
 Port 9100 Setup ▶

Port 9100 Setup

Enable Port 9100 Yes/No [Yes]

This option allows applications to open a TCP/IP socket to the E-810 at Port 9100 to download a print job.

Port 9100 Queue Direct/Print Queue/Hold Queue [Print]

Specify the E-810 print connection for downloading jobs to Port 9100. Only the print connections you have enabled in Printer Setup are available.

Exit Service Setup

 
This returns you to the main Network Setup menu. Choose Exit Network Setup.

Save Changes Yes/No [Yes]

Select Yes to activate any changes made in Network Setup; select No to return to the main Setup menu without making any changes.

Printer Setup options

Printer Setup configures the connections and printing behavior associated with a particular printing device. For more information on E-810 print connections, see page 2-1.



1. In the main Setup menu, choose Printer Setup.
2. Enter the options appropriate to the printing requirements at the site.
3. When you have finished, save changes.

In the list of options that follows, default values, where applicable, appear in brackets.

NOTE: For users to use the Fiery utilities and Fiery WebTools or print to the E-810 over a TCP/IP network, you must publish at least the Hold queue or the Print queue.

Publish Direct Connection**Yes/No [Yes]**

This option enables users to print (or download) jobs to the E-810 without spooling. Jobs printed to the Direct connection are not saved in the Printed queue.

If you plan to download fonts to the E-810, you must publish the Direct connection.

Publish Print Queue**Yes/No [Yes]**

This option enables users to print (or download) jobs to the Print queue. Jobs that are printed to the Print queue are spooled to the E-810 disk and printed on a first-in, first-out basis. Only queues published in the Printer Setup are available to users.

Publish Hold Queue**Yes/No [Yes]**

 
Use this option to enable users to print (or download) jobs to the Hold queue. Jobs in the Hold queue can only be printed by copying or moving the jobs to the Print queue with the job management tools.

Save Changes**Yes/No [Yes]**

Select Yes to activate any changes made in the Printer Setup; select No to return to the main Setup menu without making any changes.

PostScript Setup options

PS (PostScript) Setup allows you to set defaults for the E-810. Users can override most of these defaults on a job-by-job basis. However, users printing from UNIX or DOS command lines cannot override defaults from their applications. Therefore, you must set defaults in PostScript Setup. For information about these defaults, see the *Printing Guide*.

TO ACCESS POSTSCRIPT SETUP OPTIONS

1. In the main Setup menu, choose PS Setup.
2. Enter the options appropriate to the printing requirements at the site.
3. When you have finished, save changes.

In the list of options that follows, default values, where applicable, appear in square brackets.

Default Paper Sizes

US/Metric [default is US in the United States, but Metric in Europe]

Specify whether to print on US paper sizes (for example, Letter, Legal, 11x17), or Metric paper sizes (for example, A4, A3) by default. When no page size is defined within a PostScript file, jobs are printed on Letter paper if you selected US, or A4 paper if you selected Metric.

Convert Paper Sizes

US [A4/A3->Letter/11x17], Europe [Letter/11x17->A4/A3]

Specify whether to convert paper sizes in documents automatically to the default paper sizes specified. For example, if you select Letter/11x17->A4/A3, a letter size document is automatically printed on A4 paper. If you select No, the E-810 prints the document only if it finds a media source in the size specified by the file.

NOTE: This option works in conjunction with the Default Paper Sizes option. For example, if Convert Paper Sizes is set to Letter/11x17->A4/A3, and Default Paper Sizes is set to US, then jobs are printed A4/A3 size. This also includes E-810 system pages such as the Start Page, Test Page, and Job Log.

Page Order

Forward/Reverse [Reverse]

Specify the page order for printed output. Forward prints pages in the order received, so the last page is on the top of the stack and the first page is on the bottom. Reverse prints jobs in reverse order, so that the first page is on the top of the stack and the last page is on the bottom.

Color Mode**CMYK/Grayscale [CMYK]**

Specify whether to print color (CMYK) or Grayscale images to the E-810 by default. CMYK gives you full color prints. Select CMYK as the Color Mode before performing calibration on the E-810. Grayscale converts all colors into shades of gray.

Print to PS Error**Yes/No [No]**

Specify whether the E-810 should print the available portion of a print job when it encounters a PostScript error. Select Yes to print the portion of the job that was processed before the error occurred; select No to cancel the print job entirely when a PostScript error is encountered. Leave this option at No unless you encounter printing problems.

Allow Courier Substitution**Yes/No [Yes]**

Specify whether to substitute Courier for fonts that are unavailable when you download files to the E-810, or when you print a document for which you do not have the corresponding printer font. If this option is set to No, jobs with fonts that are unavailable on the E-810 hard disk generate a PostScript error and do not print. This setting does not apply to PDF files; font substitution occurs automatically in PDF files.

Print Cover Page**Yes/No [Yes]**

Specify whether the E-810 prints a cover page (job summary) at the end of each print job. If you select Yes, each print job is followed by a page containing the name of the user who sent the job, the document name, the server name, the time the job was printed, the number of pages printed, and the status of the job. If a PostScript error occurs and the Print to PS Error option is set to Yes, the cover page lists the PostScript error message instead of the job status.

Toner Reduction**On/Off [Off]**

Specify whether to minimize the effects of “blasting,” which occurs when excess amounts of toner on certain media types “blast” beyond the color density boundaries defined in the print job.

Save Changes
Yes/No [Yes]

Select Yes to activate any changes made in PS Setup; select No to return to the main Setup menu without making any changes.

 
Color Setup options

Color Setup allows you to set defaults the E-810 uses to control color output. Mac OS and Windows users who use the printer drivers provided on the User Software CD can override most of these defaults on a job-by-job basis. However, users printing from UNIX or DOS command lines cannot override defaults from their applications. Therefore, you must set defaults in Color Setup.

The preferred method for setting color defaults is to use Color Setup, part of the ColorWise Pro Tools. The color options are described in this section for your reference. For information about these defaults, see the *Printing Guide* and the *Color Guide*.

NOTE: Besides the defaults described in this section, Mac OS and Windows users have additional settings available from the printer drivers.

TO ACCESS COLOR SETUP OPTIONS



1. In the main Setup menu, choose Color Setup.
2. Enter the options appropriate to the printing requirements at the site.
3. When you have finished, save changes.

In the list of options that follows, default values, where applicable, appear in square brackets.

RGB Source Profile
EFIRGB/sRGB (PC)/Apple Standard/None [EFIRGB]

The RGB source is the color space used to control color for conversion from screen to printed output. EFIRGB is based on the reference points used in the creation of the E-810 software. sRGB is based on an average of a large number of PC monitors. Apple Standard is the standard reference point for Apple's ColorSync software.

Rendering Style**Photographic/Presentation/Abs. Colorimetric/Rel. Colorimetric [Presentation]**

The color rendering dictionary (CRD) defines how colors are converted from the RGB color space to device CMYK. Photographic, designed for images, retains the relative balance between colors to maintain the overall appearance of the image. Presentation, designed for bright colors, produces the saturated prints needed for most business presentations, but handles photographic images the same way as the Photographic CRD. Absolute Colorimetric provides the closest match to the CMYK device being simulated, including rendering the paper color as the background. Relative Colorimetric provides a close match to the CMYK device being simulated, regardless of the media used.

CMYK Simulation Profile**SWOP-Coated (EFI)/DIC (EFI)/Euroscale (EFI)/None [US: SWOP-Coated (EFI)/Europe: Euroscale (EFI)]**

CMYK simulation allows color correction to simulate printed output on a commercial press, so that the E-810 output can be used for proofing. The SWOP-Coated standard is used in the United States, DIC in Japan, and Euroscale in Europe. Custom simulations are user defined and named. The simulations provided with the E-810 have the designation “EFI” after their names.

If users create and load custom simulations on the E-810 with ColorWise Pro Tools, these also appear in the list of simulations. A custom simulation can be selected as the default simulation. See the *Color Guide* for more information about custom simulations.

CMYK Simulation Method**Quick/Full [Quick]**

Quick simulation assumes that the copier toners match the printer’s inks, and all changes affect only one color (C, M, Y, or K) at a time. Full simulation allows for more flexibility in matching toner to ink and all changes interact to maintain a better color balance.

RGB Separation**Output/Simulation [Output]**

This option defines how the E-810 processes RGB jobs. Select Output for RGB jobs that you print to the final output device. Select Simulation to simulate an output device that is not the device to which you are printing.

Output Profile***Default profile***

Specify the default output profile to use for printing. Additional profiles can be created and downloaded to the E-810 with ColorWise Pro Tools.

Pure Black Text/Graphics**On/Off [On]**

The Pure Black Text/Graphics option optimizes black text and line art. The option also minimizes toner use for documents consisting of both color and black-only pages.

With this option On, black text and line art are printed with black toner only. With the option Off, black text and line art are printed using all four colors of toner. See the *Color Guide* for more information.

Black Overprint**On/Off [On]**

With this option On, black text overprints on colored backgrounds. With this option Off, black text knocks out color backgrounds. Generally this option should be On. See the *Color Guide* for more information.

Spot Color Matching**On/Off [On]**

With this option On, the E-810 uses an internal lookup table to print the best equivalents of PANTONE colors. With this option Off, PANTONE colors are printed using the CMYK values defined in the original applications. See the *Color Guide* for more information.

Save Changes**Yes/No [Yes]**

 
Select Yes to activate any changes made in Color Setup; select No to return to the main Setup menu without making any changes.

Administrative functions in the Setup menu

The remaining choices in the Setup menu are intended to help you manage print jobs and color output but are not required for printing.

- **Job Log Setup** allows you to specify whether the E-810 prints and clears its log of printed jobs automatically.
- **Change Password** enables you to create or change an Administrator password on the E-810 so that casual users cannot enter the Setup menus and change settings without permission. The Administrator password also controls many functions available from the job management tools.

TO SET JOB LOG OPTIONS



1. Scroll the main Setup menu and choose **Job Log Setup**.
2. Enter the options as described in the following section.
3. When you have finished, save changes.

Job Log Setup

The Job Log is a record of all jobs processed or printed on the E-810, whether they originate from a user workstation, a networked server, or the E-810 itself. The Job Log can be printed from the Control Panel or from the job management tools.

The printed Job Log lists information about each job including user name, document name, time and date printed, and number of pages. Windows 95/98/Me, Windows NT 4.0, and Mac OS users can enter job-specific notes that appear in the Job Log. See the *Printing Guide* for details.

By default, the Job Log is not printed or cleared automatically. You can change these defaults in Job Log Setup. You can also print and clear the Job Log from the job management tools.

Default values for the following options, where applicable, appear in square brackets.

Auto Print Job Log Every 55 Jobs**Yes/No [No]**

Use this option to specify whether the E-810 prints the Job Log after every 55 jobs. Setting the Job Log for automatic printing is useful if each printed page is important at your site.

Auto Clear Job Log Every 55 Jobs**Yes/No [No]**

Use this option to specify whether to clear the Job Log after every 55 jobs. If you do not enable this option, and do not clear the Job Log from the E-810 or from a remote workstation, the E-810 saves a record of all jobs.

In addition to automatic clearing or manual clearing from a remote workstation, the Job Log (together with all queued jobs) is also cleared when you choose Clear Server from the Functions menu, when system software is reinstalled, or when a new version of system software is installed on the E-810.

NOTE: If Auto Print Job Log Every 55 Jobs is set to No, setting this option to Yes has no effect.

Job Log Page Size**Tabloid/A3 Letter/A4 [Tabloid/A3]**

Select the paper size for printing the Job Log. Regardless of page size, 55 jobs are listed on a page. The paper size used depends on the Default Paper Sizes setting in PS Setup. If the Default Paper Sizes setting is US, the Job Log is printed on Tabloid or Letter size paper, with Tabloid the default.

Save Changes**Yes/No [Yes]**

Select Yes to activate any changes made in Job Log Setup; select No to return to the main Setup menu without making any changes.

Change Password

Change Password enables you to set or change the Administrator password for the E-810. Anyone with the Administrator password can modify the Setup options, and control the flow and order of print jobs with the job management tools.

 
When the E-810 is installed, there is no password. If you do not create an Administrator password, users are not required to enter a password to modify the Setup or use the administrator functions in the job management tools. If an Administrator password has been set previously, you are required to enter it when you run Setup. Use the up and down buttons to select the characters and the left and right arrow buttons to move between them (see “Types of Setup screens” on page 3-6).

For more information on Administrator access privileges, see page 2-3.

For information on controlling print jobs with the job management tools, see the *Job Management Guide*.

NOTE: The Operator password can be set and changed only from Fiery WebSetup or Command WorkStation.

TO CHANGE THE E-810 PASSWORD



1. Scroll the main Setup menu and choose Change Password.
2. Enter and confirm the password as described below.

New Password

 
Use the up and down buttons to select the characters and the Left and Right arrow buttons to move between them. Enter characters from left to right, since the left arrow line selection button is a delete key. The password can be any combination of letters and numbers up to 19 characters. Choose OK when you are done. Be sure to keep track of the password.

NOTE: The only way to remove a password that you cannot remember is to reinstall the system software.

Verify New Password

Enter the new password again exactly as you entered it initially. If you make a mistake, you are prompted to enter the password again. The new password is effective after you save changes and reboot the E-810.

Exit Setup



Choose Exit Setup from the first screen of the main Setup menu when you have finished making Setup changes.

The E-810 reboots and any changes you saved during the Setup take effect.

Clearing the E-810

The Clear Server command enables you to clear all queued print jobs from the E-810—jobs in the E-810 Print, Hold, and Printed queues. Jobs can also be deleted, either individually or as a group, from the job management tools. Clear Server also clears the Job Log, all jobs archived on the E-810 hard disk, the index of archived jobs, and, finally, all FreeForm masters and the index of FreeForm masters. If you keep Job Logs, print or export the Job Log before you choose Clear Server.

To clear the E-810, scroll the Functions menu and choose Clear Server. You are asked to confirm your selection. If the Administrator password has been set, you are prompted to enter it.

NOTE: To clear the E-810 without using the E-810 Administrator password, you must log in to Windows NT as Administrator, and use the Clear Server command from either the FieryBar menu or the Command WorkStation Server menu.

Restoring the E-810 to factory defaults

When E-810 system software is first installed, a backup copy is made automatically. This backup includes the E-810 system software. If the Fiery Advanced Controller Interface option was originally installed, the backup also includes the Windows NT operating system. You can recover the system from this backup without having to reload the software from CDs.

All job data is cleared when you restore the backup. For information about the items that are cleared, see “Clearing the E-810” on page 3-45. You must perform Setup again because the E-810 is restored with default settings.

TO RESTORE THE E-810

1. **Make sure the E-810 is Idle.**
2. **Press the Menu button and choose Shut Down.**
3. **Choose Reboot System.**
4. **Immediately press the top line selection button and hold it down until the diagnostics have finished.**

See “E-810 Control Panel” on page 3-3 for the location of the line selection button. During reboot, a progress bar indicates when the diagnostics have been completed.

5. **Choose Restore Backup.**

Printing a Configuration page from the Control Panel

The Configuration page lists all the settings in effect from the current Setup. After you have finished running Setup, print a Configuration page to confirm your settings. The Configuration page can also be printed from Command WorkStation. See page 4-35 for details.

After you make changes to Setup and choose Exit Setup, the E-810 reboots. This allows the E-810 to recognize the new settings and display them properly on the Configuration page. Allow the E-810 to reboot and return to Idle before printing a Configuration page. In particular, the reboot is necessary if you specified the DHCP, BOOTP, or RARP protocol to obtain an IP address automatically for the E-810.

Post the current Configuration page near the server for quick reference. Users need the information on this page, such as the current printer default settings.

The other pages you can print from the Control Panel of the E-810 or from Command WorkStation include the Test Page, Font List, Job Log, Control Panel Map, and PANTONE, CMY, and RGB color charts. For information on these pages, see the *Job Management Guide*.

TO PRINT THE CONFIGURATION PAGE

1. **At the Control Panel, press the Menu button to access the Functions menu.**
2. **Choose Print Pages.**
3. **Choose Configuration.**

Chapter 4: Setting up the E-810 from a Windows Computer

After you have performed initial Setup (Server, Network, and Printer Setup) from the Control Panel, you can change most Setup options from a Windows computer.

Accessing Setup

In addition to using the Control Panel, you can set up the E-810 two ways: locally and remotely. Local Setup is for systems with the Fiery Advanced Controller Interface option. Local Setup uses a Windows NT application, Fiery Server Setup. Remote Setup is performed from a Windows computer using Fiery WebSetup or Command WorkStation.

NOTE: In this chapter, illustrations for both Setup interfaces, where applicable, appear side by side: local Setup on the left, remote Setup on the right. Some Setup options cannot be accessed from remote Setup; use local Setup or the E-810 Control Panel instead.

Regardless of how you access Setup, you must log in as Administrator, both at the E-810 and within the Setup application you use. After the E-810 is rebooted, log in at the Windows NT Logon window with Administrator as the login name and the password, if required. This login and password are the Windows NT login and password.

To use the Setup applications (Fiery WebSetup or Command WorkStation), you must enter the E-810 Administrator password. This is set either from the Control Panel, Fiery WebSetup, or Command WorkStation.

See *Getting Started* for system requirements and setup instructions for Fiery WebSetup and Command WorkStation.


NOTE: Fiery WebSetup is supported for Windows computers only.

Local Fiery Setup

You can access E-810 Server Setup in these ways:

- Right-click the FieryBar on the Windows NT 4.0 desktop and choose Set Up Fiery.
- Right-click the Fiery icon in the Windows NT 4.0 taskbar and choose Set Up Fiery.
- Start Command WorkStation and choose Setup from the Server menu.

The Setup window is displayed.

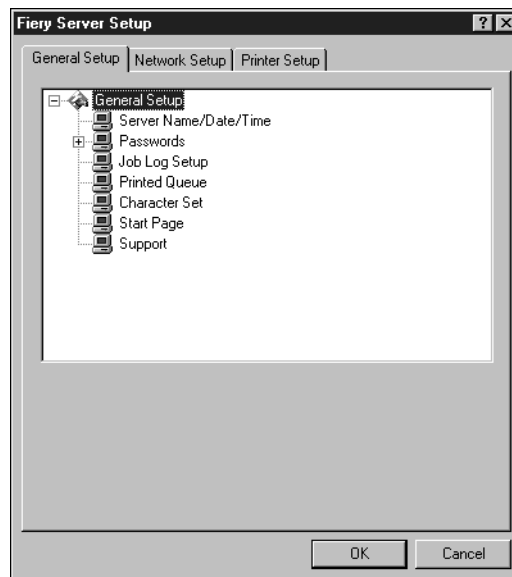

You see the available settings only when you select the particular option. For example, to view or change the setting for the Character Set option, select Character Set by clicking it once. The available settings are displayed at the bottom of the window.

After making your selections in a window, click the Apply button if it is present. When you have finished performing Setup, click OK to close the entire Setup window.

Remote Fiery Setup

You can access remote Setup from Fiery WebSetup or Command WorkStation.


TO ACCESS FIERY WEBSHUTDOWN

1. Start your Internet browser application and enter the IP address of the E-810.
2. Log in as Administrator.
3. When the E-810 home page appears, click the WebSetup button.

TO ACCESS SETUP FROM COMMAND WORKSTATION

1. Start the Command WorkStation application.
2. Log in as Administrator.
3. Choose Setup from the Server menu.



Regardless of how you access Setup remotely, the following window appears.

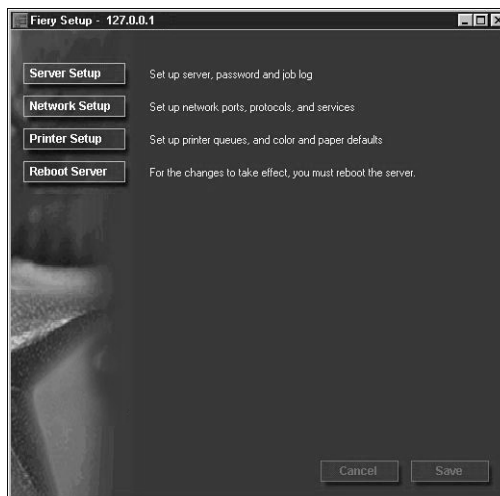

NOTE: The interface of remote Setup from Command WorkStation and from Fiery WebSetup is identical. The remote Setup illustrations in this chapter are from Command WorkStation.

General Setup options

You can specify E-810 system settings that affect all users, such as the name of the E-810, system date and time, passwords, and Job Log printing.

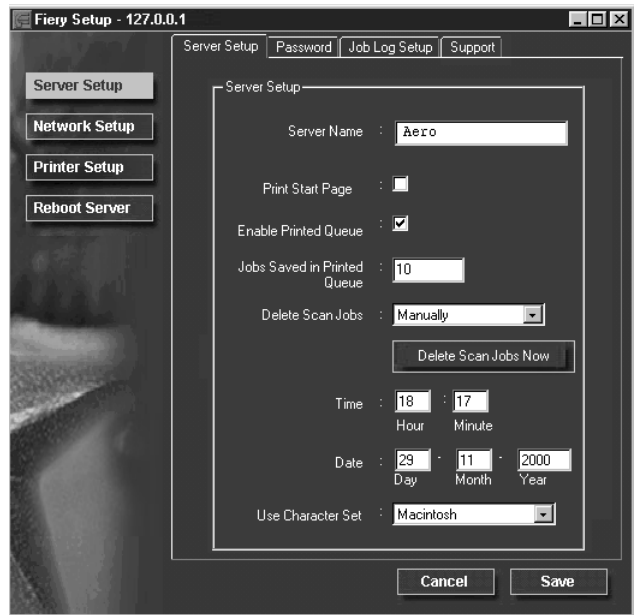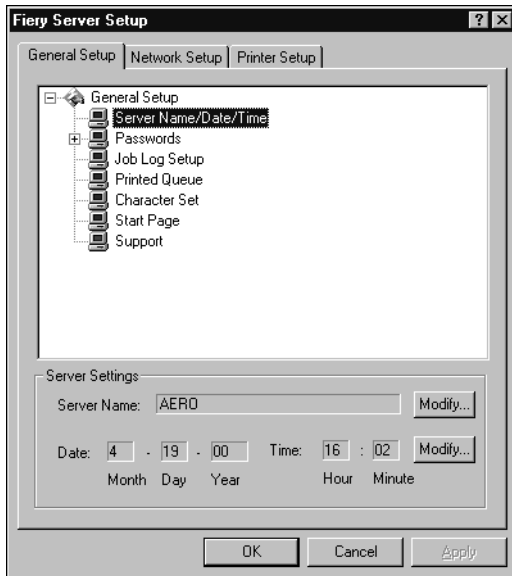

Server Name—Specify a name for the E-810. This is the name that appears in the Chooser on an AppleTalk network.

If you are using local Setup, click Modify, click Change, and then enter the Server Name in the Computer Name field.

NOTE: Do not use the device name (r7) as the server name. Also, if you have more than one E-810, do not give them the same name. Windows NT does not support more than one computer with the same name in the same workgroup or domain.

Date and Time—Specify the system date and time, which are recorded on the Job Log.

Enable Printed Queue—Specify whether to enable the Printed Queue, a storage location on the E-810 disk for recently printed jobs. You can reprint jobs from the Printed queue without resending them to the E-810. If the Printed queue is not enabled, jobs are deleted from the E-810 disk immediately after they are printed.

Jobs Saved in Printed Queue—Specify the number of jobs to be stored in the Printed Queue. Jobs in the Printed queue take up space on the E-810 hard disk.

Delete Scan Jobs—Specify how often to automatically delete scan jobs from the E-810 hard disk. Select Manually to leave scan jobs on the HDD until specifically deleted using the Delete Scan Jobs Now button.

Character Set—Specify whether the Control Panel and the job management tools should use the Macintosh, DOS, or Windows character set for displaying file names. This is important if a file name includes accented or composite characters (such as é or æ). For mixed-platform networks, select the setting that gives the best overall representation of the special characters you use.

Start Page—Specify whether the E-810 should print a start page when it is turned on or rebooted. The Start Page displays information about the E-810, including server name, current date and time, amount of memory installed, network protocols enabled, and print connections published.

Support—Enter names, phone numbers, and e-mail addresses of contact people at your organization who provide support for the E-810 and the copier. In remote Setup, use the Support tab.

Passwords



You can set, change, and remove passwords for the E-810. These passwords, specific to the Server process, have different uses from the Windows NT Administrator and Operator passwords. Keep careful track of the passwords you set for each.

Administrator—Controls access to Setup; Administrator privileges also include Operator privileges.

Operator—Controls access to job management functions via the job management tools.

NOTE: For more information on E-810 passwords and the access privileges they allow, see page 2-3.

By default, *no* passwords are set. If you do not specifically set passwords, all users will have access to important functions such as Setup (including setting passwords) and job control. It is strongly recommended that you set at least an Administrator password to protect the E-810 from unauthorized changes to Setup.

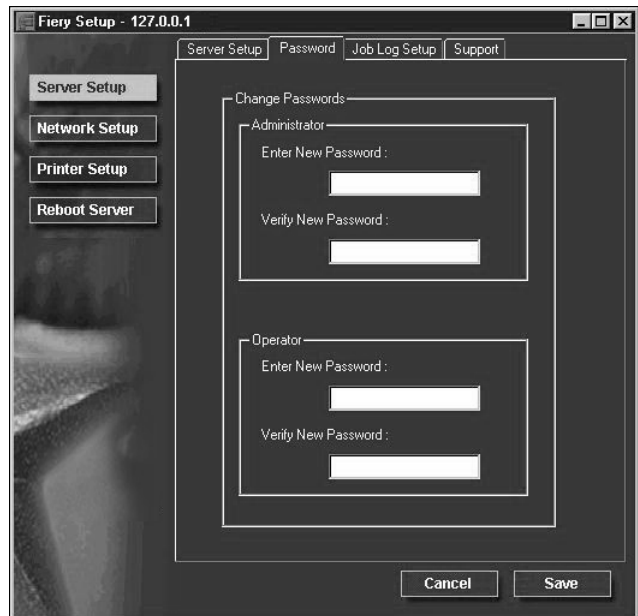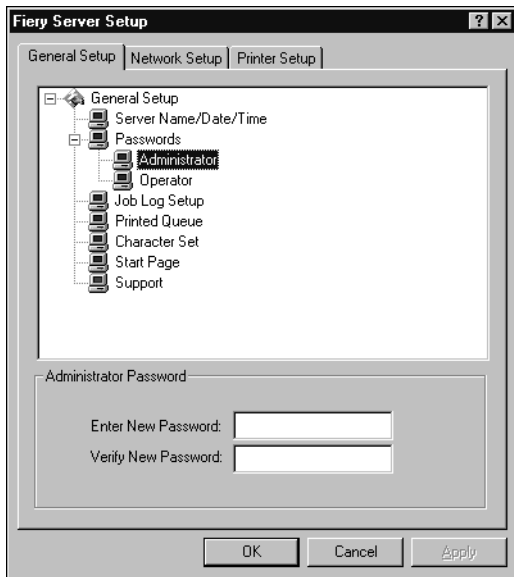

TO SET OR CHANGE A PASSWORD

1. **Select the password you want to change.**
2. **Type the password in both the Enter New Password and Verify New Password fields.**



Passwords are case-sensitive and can be any combination of letters and numbers up to 19 characters. You must enter the password *exactly* the same way both times. The new password remains in effect until you change it again.

TO REMOVE A PASSWORD

1. **Select the password you want to delete.**
2. **Delete the asterisks (*) in both the Enter New Password and Verify New Password fields.**

If you forget the Administrator password, contact your authorized service representative to reinstall E-810 system software. This clears the Administrator password and allows you to set a new one.

Job Log Setup

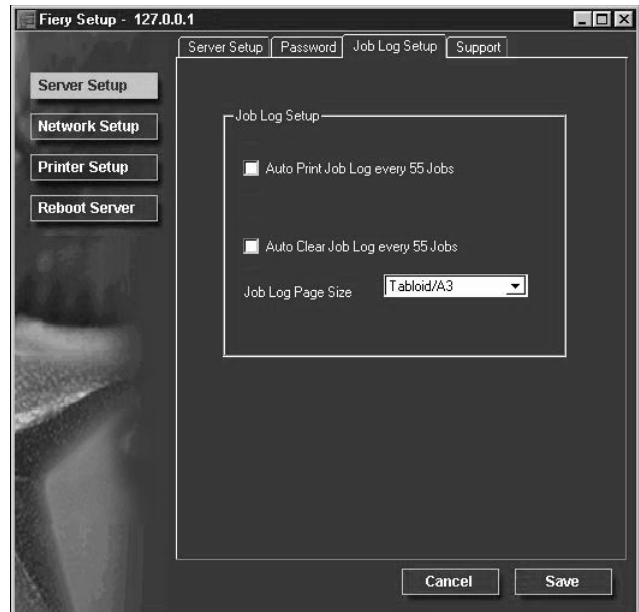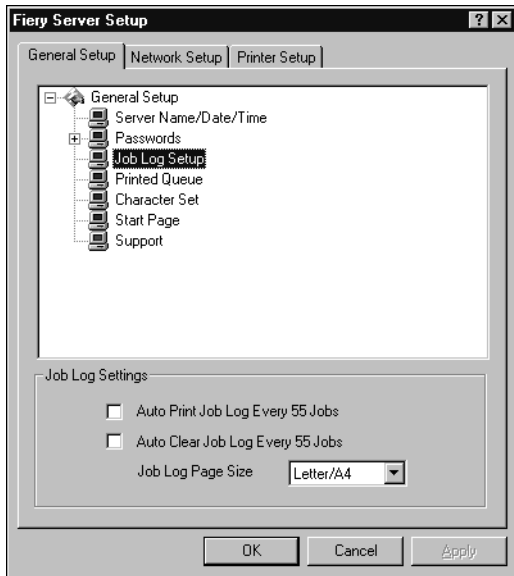

Auto Print Job Log Every 55 Jobs—Specify whether the E-810 prints the Job Log after every 55 jobs. The Job Log lists the last 55 jobs processed on the E-810, with accounting information about each one, including user name, document name, time and date printed, number of pages, and other job information.

Auto Clear Job Log Every 55 Jobs—Specify whether the E-810 clears the Job Log after every 55 jobs. If you do not select this option, the E-810 saves a file containing a record of all jobs ever printed. Since this file takes up space on the E-810 hard disk, clearing the Job Log frees up additional disk space.

You can clear the Job Log manually at any time from the job management tools. The Job Log is also cleared when you clear the E-810 with the Clear Server command.

Job Log Page Size—Select the size of paper to print the Job Log on.

Network Setup



Network Setup configures the E-810 to receive print jobs over the networks that are used at your site. If the E-810 is configured to enable more than one protocol, it automatically switches to the correct protocol when it receives a print job. When two network ports are enabled, print jobs can be received over all ports at the same time.

You can view and specify the following network settings in Network Setup:

- Adapters and ports—view currently configured network adapters and port settings
- Protocols—including AppleTalk, IPX/SPX, and TCP/IP
- Print Services—including LPD printing (TCP/IP), NetWare printing (PServer), Windows print sharing (SMB), HTTP support (WWW), and Port 9100 printing

Adapters/Ports

In local Setup only, the installed network boards are displayed. You cannot change this information. From remote Setup, you can enable Ethernet or Token Ring. These options are described in the next section.

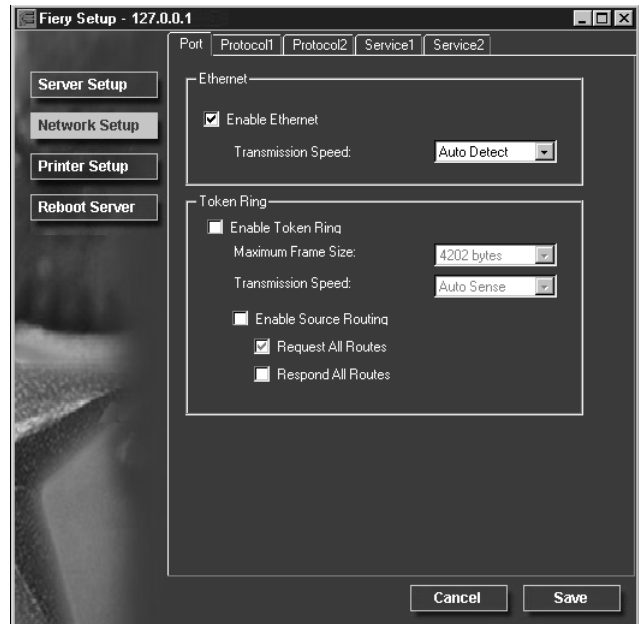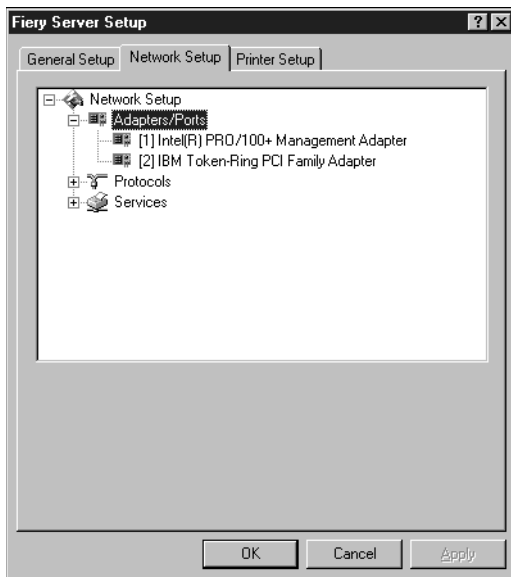

Ethernet (Port Setup)

Enable Ethernet—Select if the E-810 is to be connected to an Ethernet network.

Transmission Speed—Select Auto Detect if your network environment is mixed, or select the speed (10 Mbps or 100 Mbps) of the network to which the E-810 is attached.

Token Ring (Port Setup)

Enable Token Ring—Select if the E-810 is connected to a Token Ring network.

Maximum Frame Size—Select the maximum frame size recommended by the network administrator at your site. If you are uncertain of the setting to use, select the default value (4202).


Transmission Speed—Select Auto Sense if your network environment is mixed, or select the speed (4 Mbps or 16 Mbps) of the network to which the E-810 is attached.

Enable Source Routing—Select if your network supports source routing.

Request All Routes—This option is active only if you enabled Source Routing. Specify whether you want the Request packet to travel to its destination by all routes.

Respond All Routes—This option is available only if the previous option is not selected. Select if you want the Response packet to return by all routes to the originating computer.

Protocols

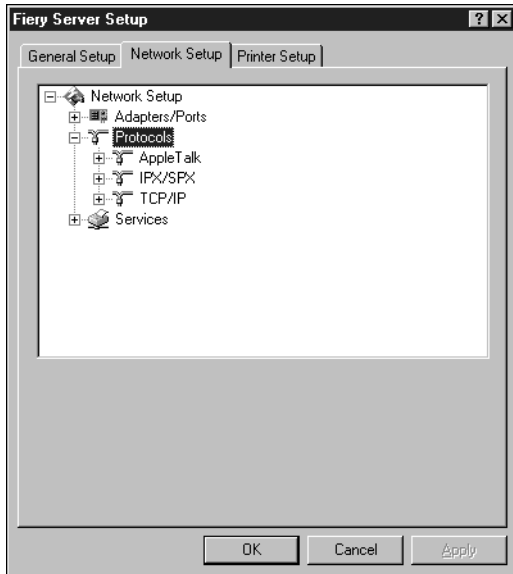

You can change AppleTalk, IPX/SPX, and TCP/IP protocol settings for the E-810. From remote Setup, you change these settings on the Protocol1 and Protocol2 tabs. Local Setup works in conjunction with the Windows NT Network Control Panel. When you click the Modify or Advanced button next to the setting in local Setup, the system opens the Network Control Panel, where you complete the settings.

Unlike remote Setup, local Setup does not provide separate settings for enabling and configuring a protocol. For example, remote Setup has two settings for AppleTalk: one to enable AppleTalk, and the other to set the AppleTalk zone. In local Setup, there is only the setting for AppleTalk zone. By default, the AppleTalk, IPX/SPX, and TCP/IP protocols are installed and enabled. You can verify a protocol is enabled in the Bindings tab of the Network Control Panel.

TO CHANGE PROTOCOL SETTINGS IN LOCAL SETUP

1. **Click the Modify or Advanced button next to the setting.**

The Windows NT Network Control Panel opens.

2. **Click the Protocols tab.**

3. **Select the protocol to modify.**

Unless you have installed additional protocols, the choices are AppleTalk, NWLink IPX/SPX Compatible Transport, and TCP/IP.

4. **Click Properties, make your selections, and click Apply.**



5. **Click OK to close the Properties dialog box.**

6. **Click OK to close the Network dialog box.**

If you have disabled any of the protocols in this procedure, use the Bindings tab of the Windows NT Network Control Panel when you are ready to re-enable the protocols.



AppleTalk

The current AppleTalk zone is displayed.

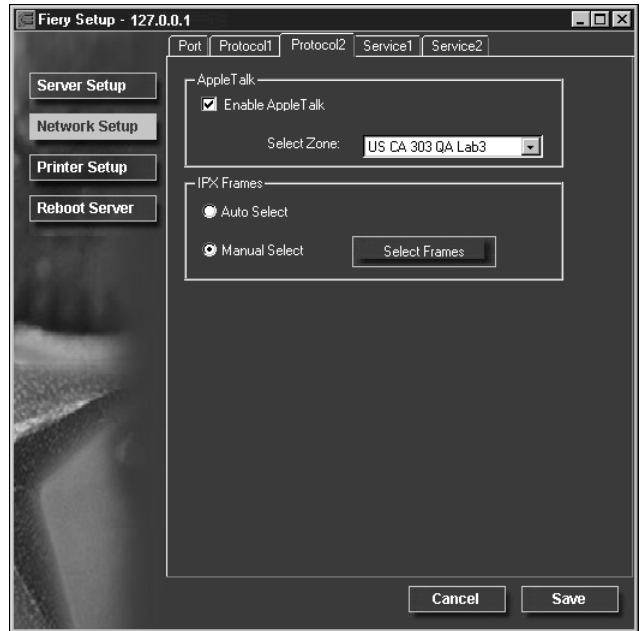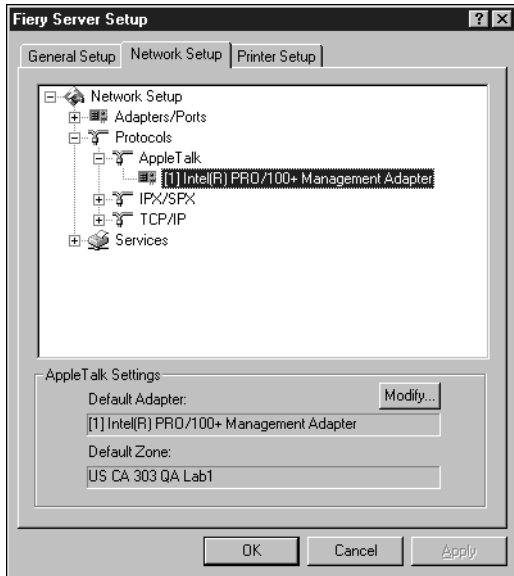

IPX/SPX



Use this option to specify IPX/SPX frame types.

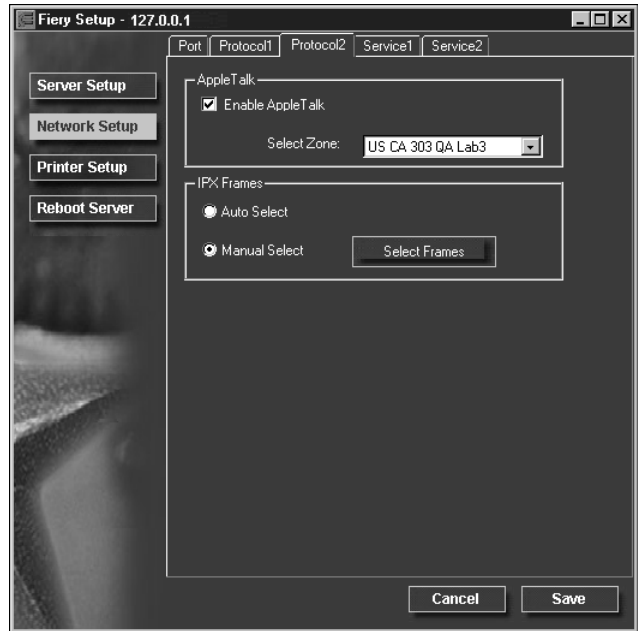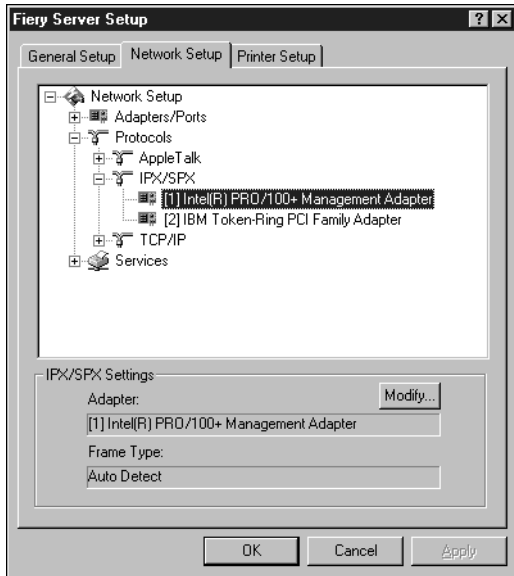

The E-810 supports these following Ethernet frame types for IPX/SPX: Ethernet 802.2, Ethernet 802.3, Ethernet II, and Ethernet SNAP. For Token Ring, the supported frame types are Token Ring and Token Ring SNAP. You can also allow the E-810 to select the frame type automatically.

TCP/IP

Specify TCP/IP settings. The current settings for IP address, subnet mask, and default gateway address are displayed. For information about setting up printing with TCP/IP, see Chapter 5.

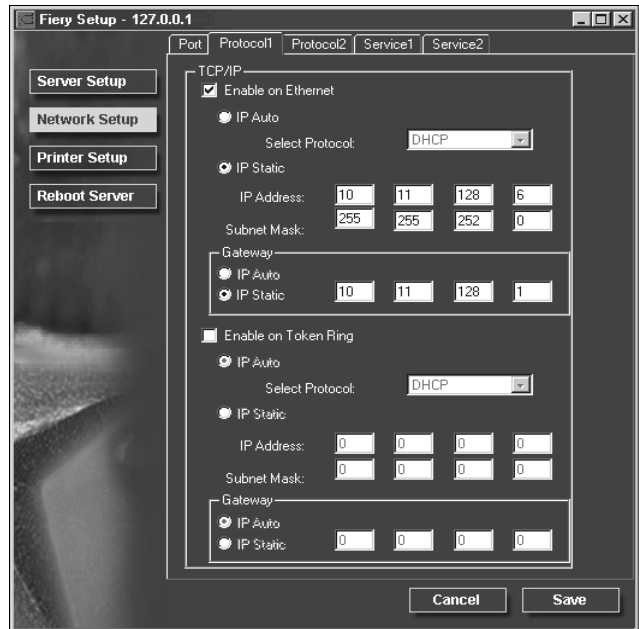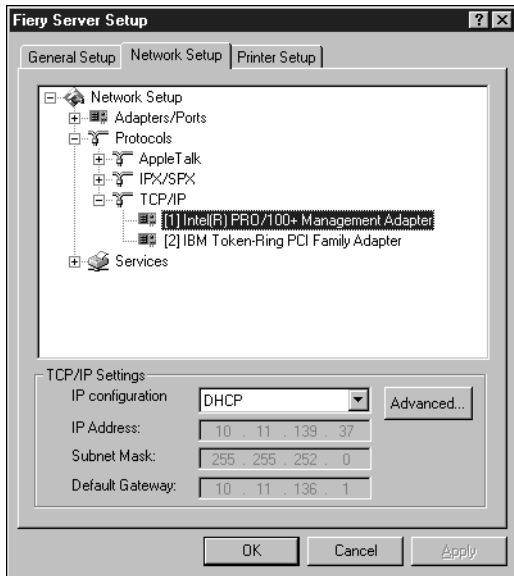

The E-810 requires a unique, valid IP address. You can set a static address yourself, or specify that the E-810 use DHCP, BOOTP, or RARP to obtain IP addresses automatically.

NOTE: If you specify the DHCP, BOOTP, or RARP protocol, the E-810 reboots when you save your changes and exit Setup. Allow the E-810 to reboot and return to Idle before printing a Configuration page or proceeding with any other operations.

To set the subnet mask, enter one of the following values:

255.0.0.0 if the IP address starts with a number less than 128

255.255.0.0 if the IP address starts with a number from 128 through 191

255.255.255.0 if the IP address starts with a number greater than 191



NOTE: Confirm the subnet mask setting with your network administrator before proceeding. In some cases, the required setting may be different from those listed.

If your TCP/IP network has a gateway, and users outside the gateway plan to print to the E-810 using TCP/IP, enter the gateway address.

In remote Setup, the Token Ring information appears, even if you have not enabled Token Ring on the E-810.

NOTE: The E-810 stores assigned IP addresses, even if you later disable TCP/IP. If you need to assign the E-810 IP address to another device, first set the E-810 address to a null address.



Services

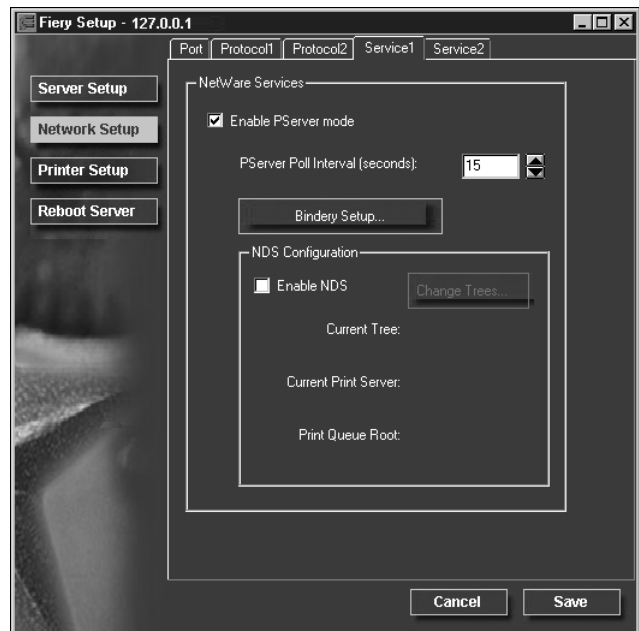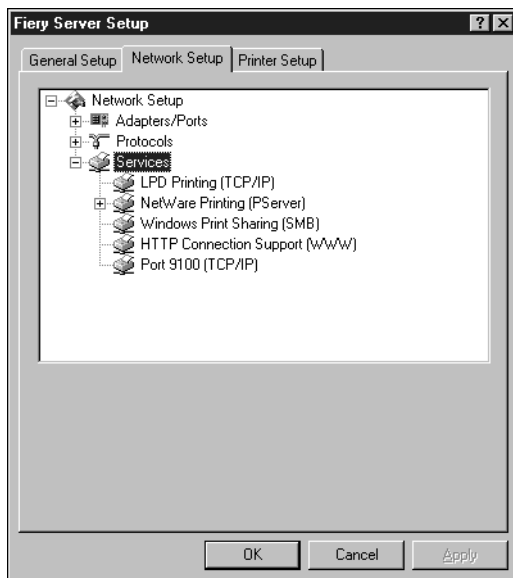

You can configure the following network services:

- LPD Printing (TCP/IP)—enable or disable LPD print services.
- NetWare Printing (PServer)—specify NDS and Bindery services (page 4-17).
- Windows Print Sharing (SMB)—enable or disable SMB print services.
- HTTP Support (WWW)—enable or disable support for Fiery WebTools.
- Port 9100—enable or disable support for Port 9100 printing.

LPD Printing

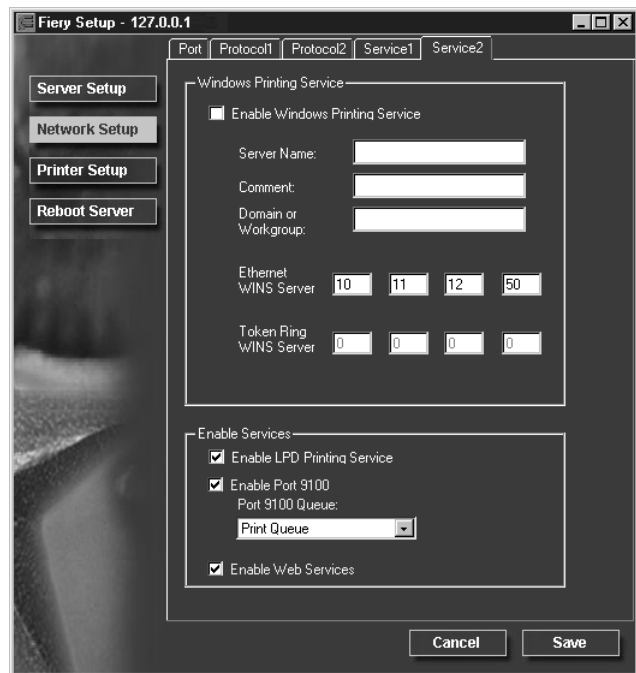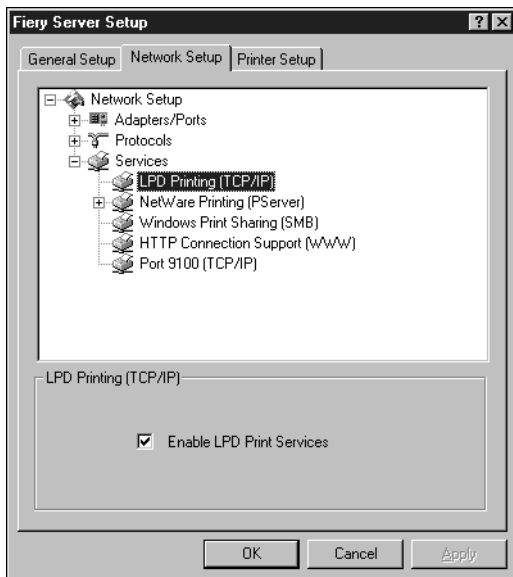

Enable LPD Print Services—Select to enable or disable LPD printing services.

NetWare Printing (PServer) options

The following procedures for setting up NetWare printing depict the windows from local Setup at the E-810. If you use remote Setup, the procedures are similar.

- NDS Setup
- Bindery Setup
- Poll Interval


Setting up the E-810 for NDS printing

Only one NDS tree can be connected. To specify or change the NDS Tree, click Modify and specify settings in the NDS Print Server dialog box as described below.


The currently selected NDS Tree and Print Server are displayed.

TO SPECIFY THE NDS TREE SETTING

1. Check Enable NDS and click Modify.

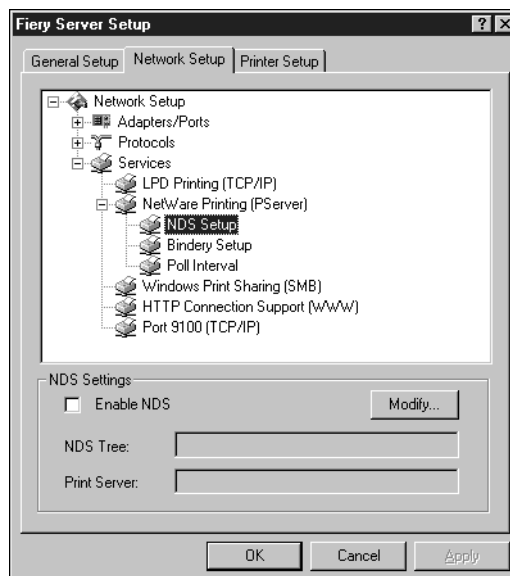


2. In the NDS Connection window that appears, double-click an NDS tree in the first column.

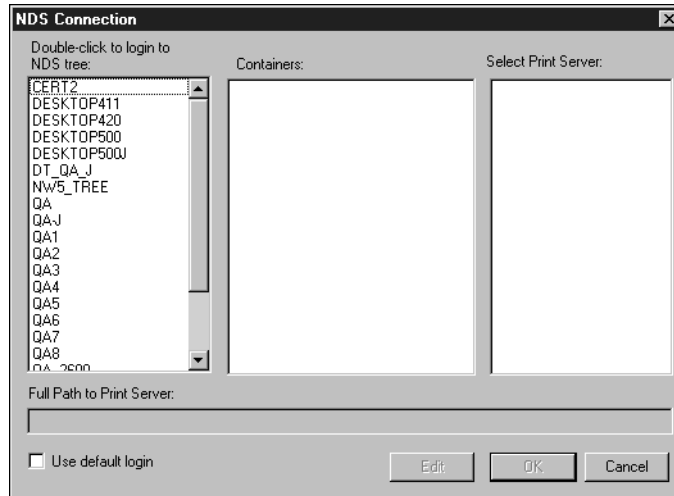


3. Navigate to the NDS container and click OK.

If necessary, enter the password.

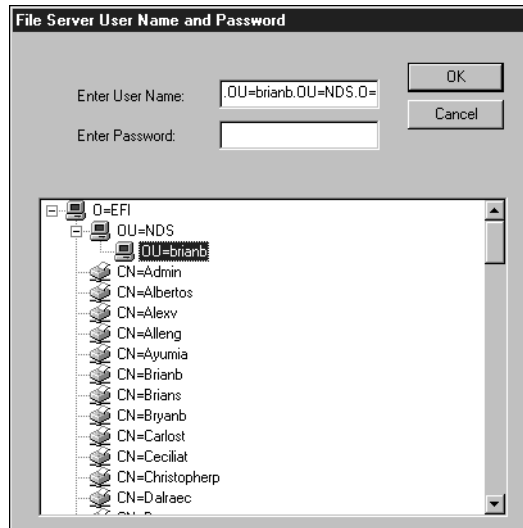


4. Select a Container from the center column.

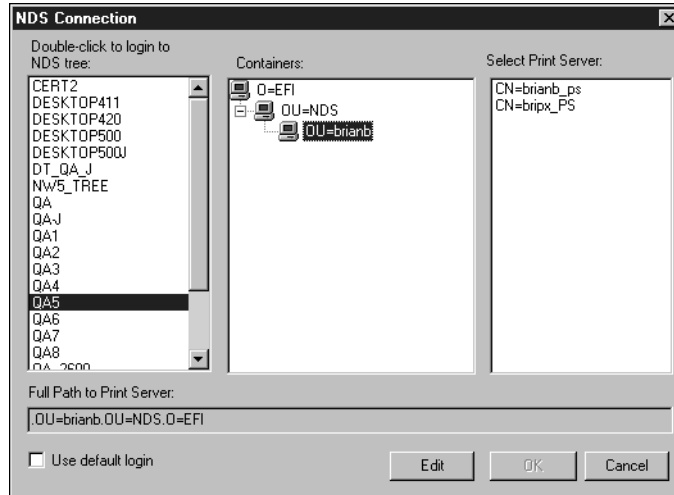

5. Double-click a Print Server from the list on the right.


The full path to the Print Server is displayed.

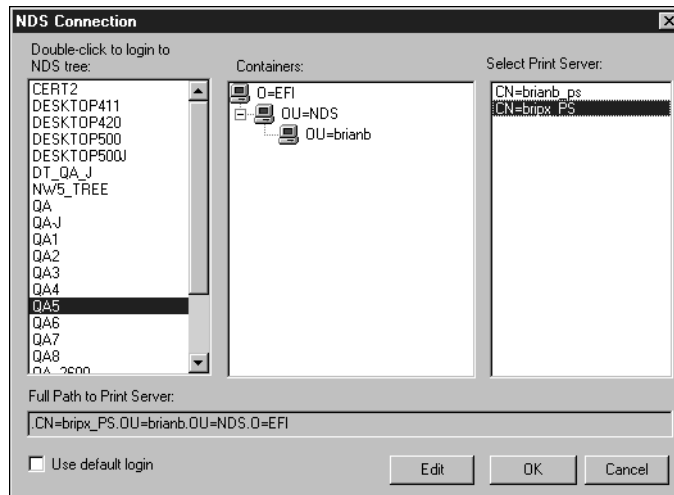

Another way to change the path is to click Edit and type the path to the Print Server.


6. Click OK.

The Network Setup window appears, displaying the path to the selected Print Server.

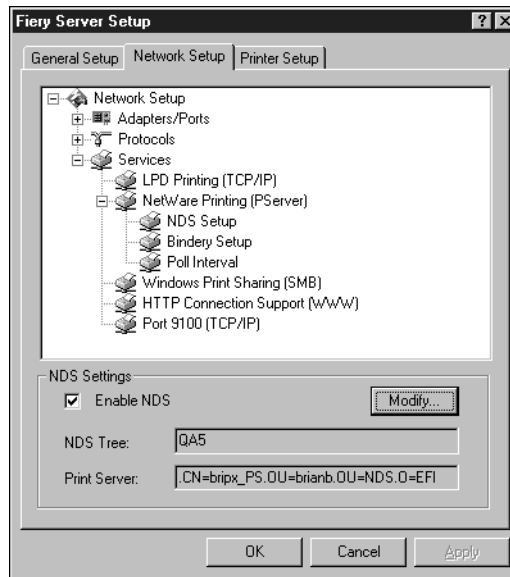

Bindery Setup


Enable or disable Bindery services. The currently connected servers are displayed. A maximum of eight Bindery servers can be connected.

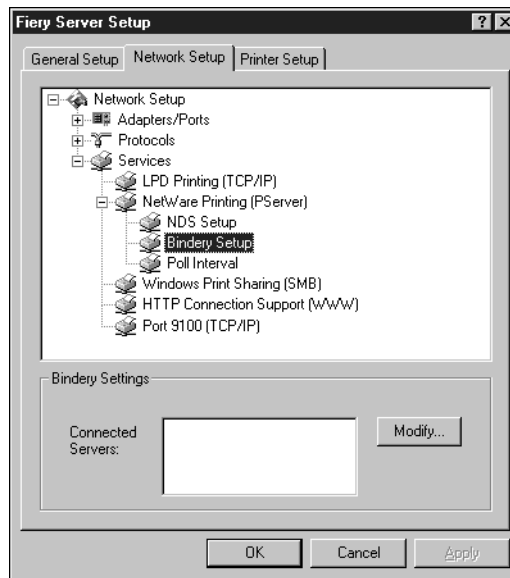

To add, remove, or change Bindery connections, click Modify and specify settings in the Bindery Connections dialog box as described in the following section.

TO ADD BINDERY CONNECTIONS


1. Open the Bindery Connections dialog box by clicking **Modify** in the Bindery Setup dialog box.
2. Select a File Server from the list on the left.

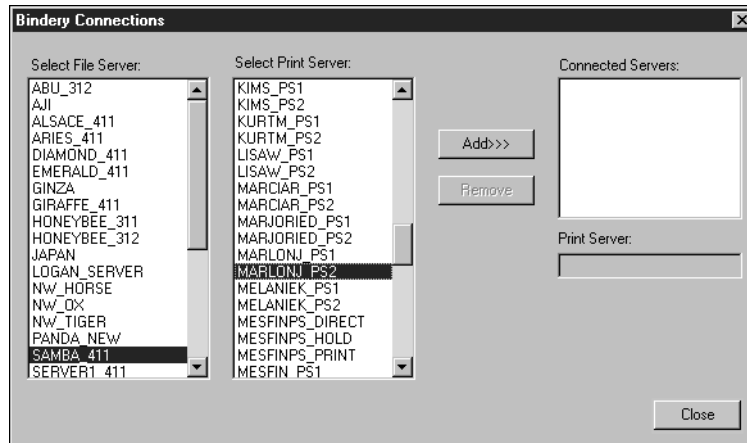

If necessary, enter the appropriate user name and password in the File Server User Name and Password dialog box to log in to the selected file server.

3. Select a Print Server from the list in the center and click **Add**.


The name of the newly added server appears in the Connected Servers list.

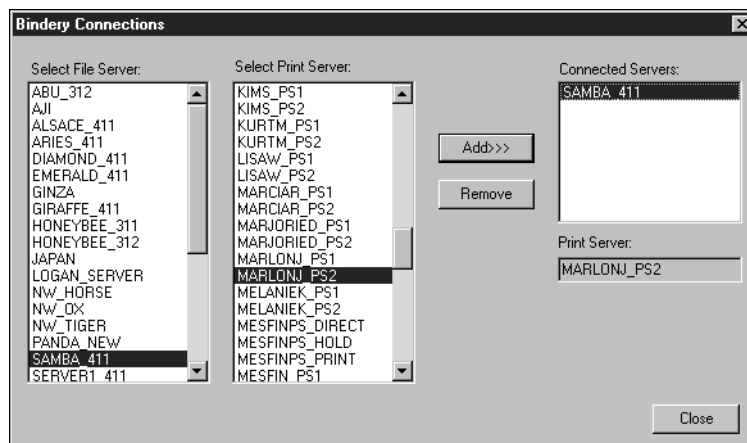

To add another server, repeat the previous steps. Up to eight servers can be connected.

4. When you have finished adding servers, click OK.

When you return to the Network Setup dialog box, the connected servers are displayed in the Bindery Settings area.

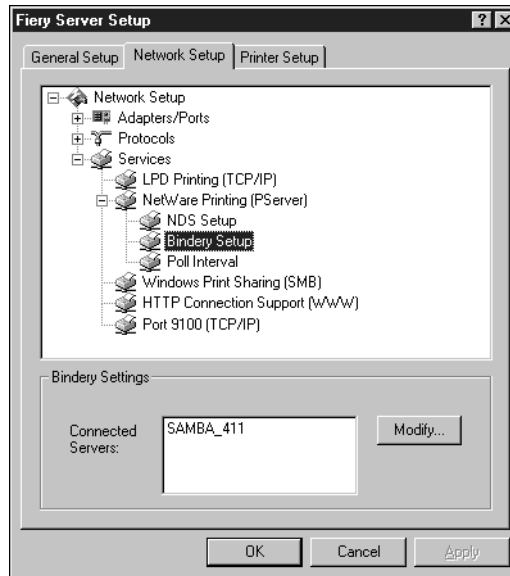


TO REMOVE BINDERY CONNECTIONS

1. Click **Modify** in the **Bindery Setup** dialog box.

The Bindery Connections dialog box opens.

2. Make your selections in the **Select File Server** and **Select Print Server** lists.


The name of the connected server appears in the **Connected Servers** list.

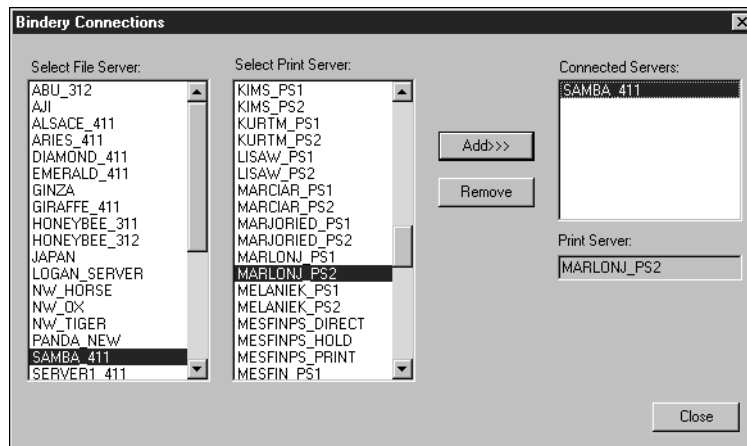

3. With the **File Server** selected in the list of **Connected Servers**, click **Remove**.
4. Click **OK**.

Poll Interval

Specify the polling interval (in seconds) for NetWare printing.


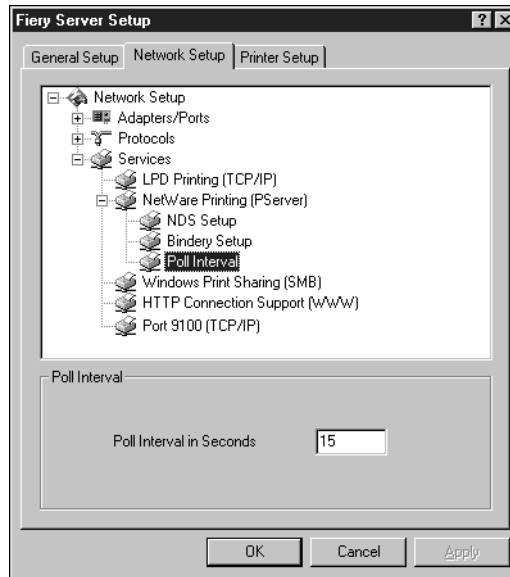


Windows Print Sharing (SMB)

For setting up the Windows printing service, these characters are allowed in the text fields: uppercase letters, numerals, spaces, and the following characters:

- _ . ~ ! @ # \$ % ^ & () { } \ ' , "

NOTE: Lowercase letters are *not* allowed, except in the Comment field.

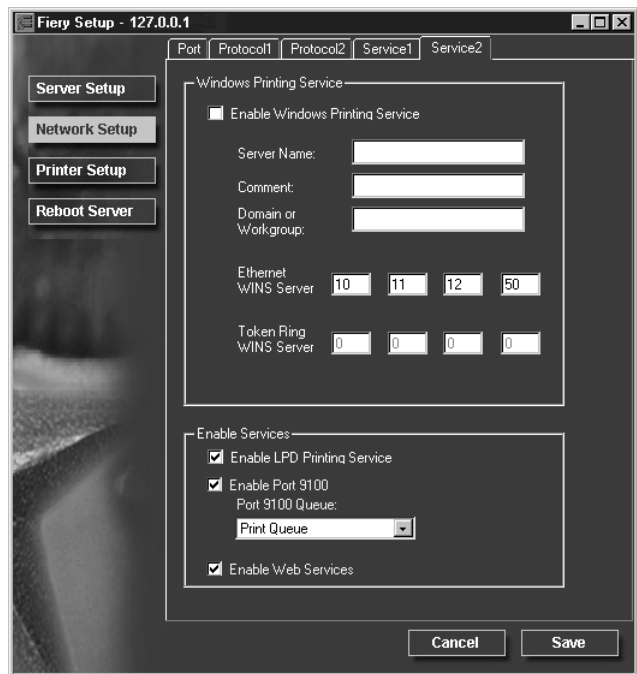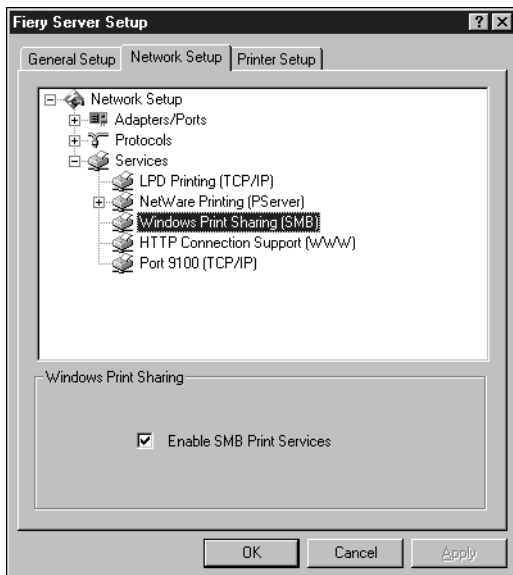

Enable SMB Print Services—Select to enable SMB (Server Message Block), the file and printer sharing protocol built into Windows. Enabling SMB allows the E-810 to be listed on the network so that Windows clients can print to a particular print connection (Hold, Print, or Direct) on the E-810 without any other networking software. For information on how to set up a Windows client for Windows printing, see *Getting Started*.

NOTE: Windows (SMB) printing runs over TCP/IP, so you must configure TCP/IP on the E-810 and on computers that use Windows printing.

The remaining options are found only in remote Setup. To change them with local Setup, use the Network Control Panel in Windows NT.

Server Name—The server name is the name that appears on the network. It can, but does not have to, be the same name as the server name assigned to the E-810 (see page 4-4).

When entering a server name using Fiery WebSetup, you are limited to a 10-character server name. You can enter a server name of more than 10 characters using the E-810 Control Panel or Command WorkStation.

Comment—You can enter information about the printer, up to 15 characters. These comments are listed in the Properties of the E-810 in Network Neighborhood. Lowercase letters are allowed in this field.



Domain or Workgroup—Enter the workgroup or domain where the E-810 should appear.

Ethernet WINS Server—Enter the IP address of the Ethernet WINS name server.

Token Ring WINS Server—Enter the IP address of the Token Ring WINS name server.

Broadcasts from SMB devices cannot be routed beyond their original network segment without a WINS name server. Setting up the WINS name server is outside the scope of this manual. To find out if a name server is available, contact your network administrator.



HTTP Connection Support (WWW)

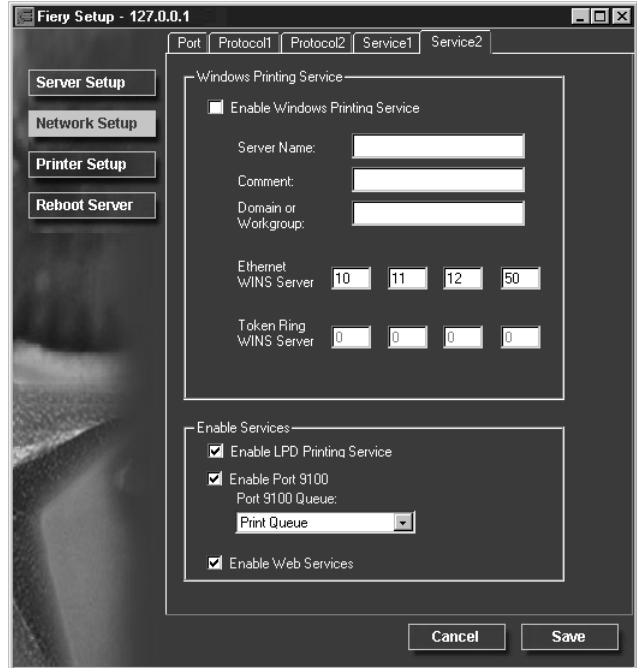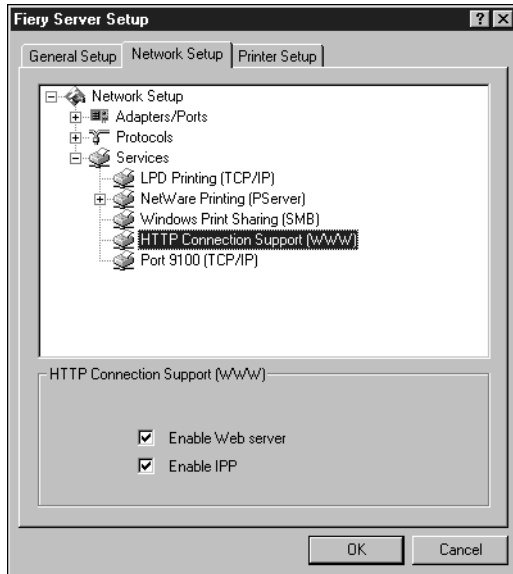

Enable Web Services—Select to make the Fiery WebTools available to users (see page 5-16). TCP/IP must already be enabled on the E-810 and on users' computers. The Fiery WebTools include Fiery WebSpooler, Status, WebLink, WebSetup, WebDownloader, WebScan, and Installer. A Java-enabled Web browser and a valid IP address are required for each user. See *Getting Started* for details on supported browsers and workstation requirements.

Enable IPP—Select Yes to enable printing with the Internet Printing Protocol (IPP). You must enable Web Services. For information on setting up users' computers to use IPP printing, see *Getting Started*.

Port 9100 printing

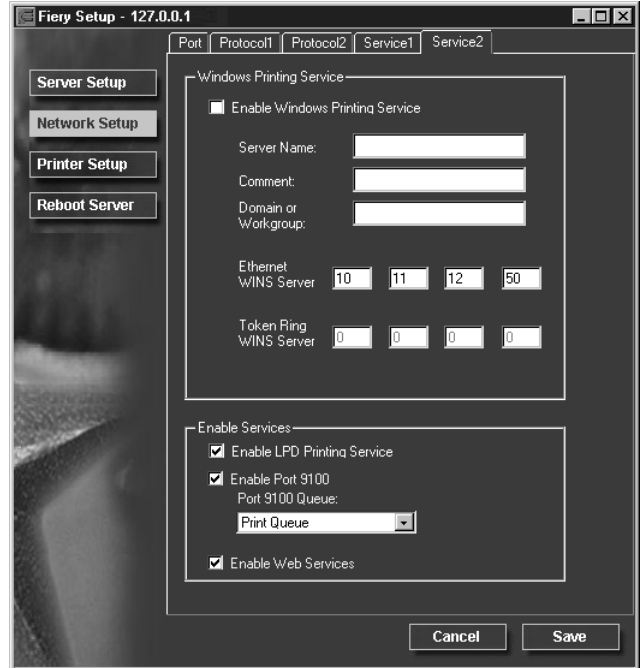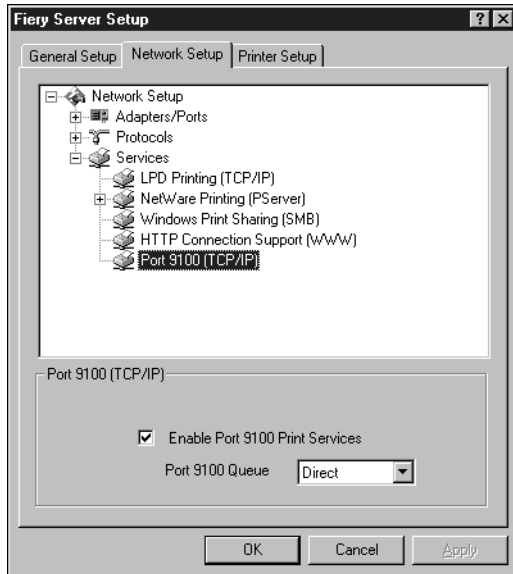

Enable Port 9100 Print Services—This option allows applications to open a TCP/IP socket to the E-810 at Port 9100 to download a print job.

Port 9100 Queue—You can attach Port 9100 to any of the published E-810 print connections.

Printer Setup options



You can specify the following settings in the Printer Setup tab:

- Printer Connections
- PS (PostScript) Setup
- Color Setup

NOTE: In the following illustrations, “Device name” represents the model of the copier connected to the E-810, which is r7.

Printer Connections



Specify whether to publish the Print Queue, Hold Queue, and the Direct Connection.

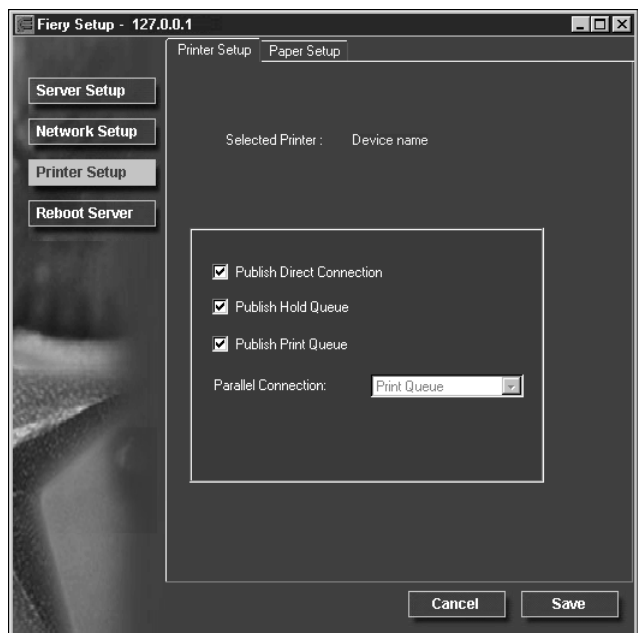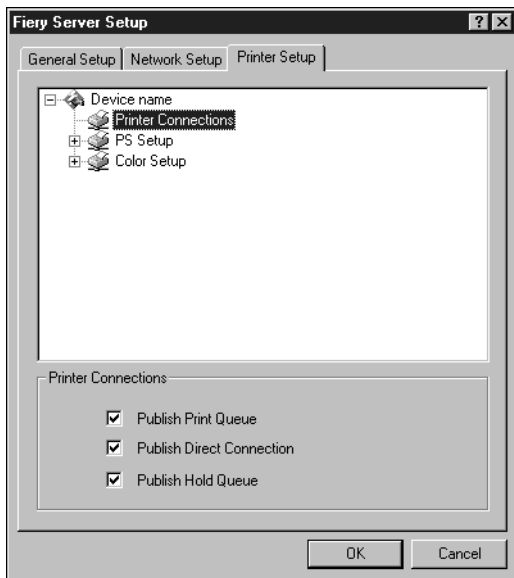

PS (PostScript) Setup

The options in the PS Setup menu in local Setup are located on the Paper Setup tab in remote Setup.

NOTE: In the following illustrations, “Device name” represents the model of the copier connected to the E-810, which is r7.

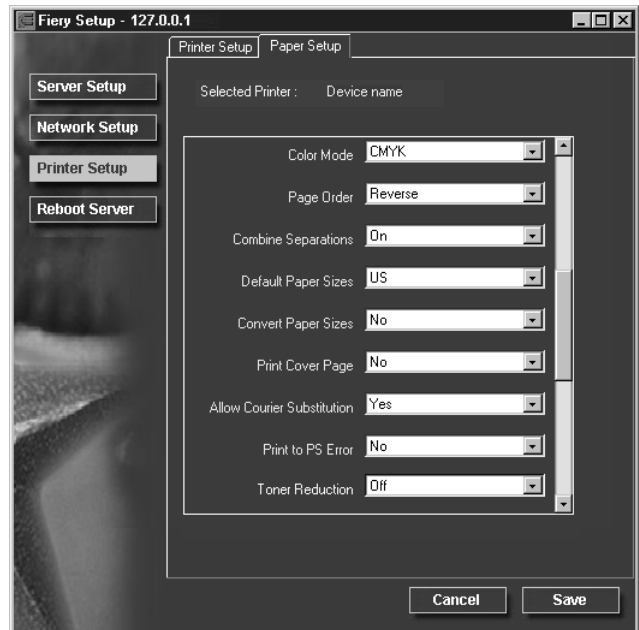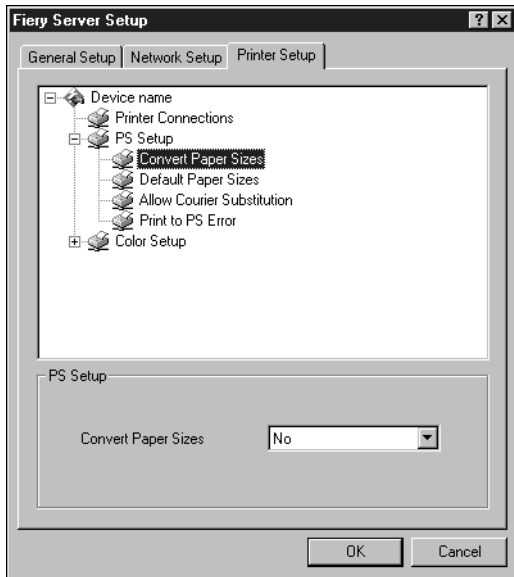

Convert Paper Sizes—Specify whether to convert paper sizes automatically to the default paper sizes specified. For example, if you select Letter/11x17->A4/A3, a letter size job is automatically printed on A4 paper. If you select No, the E-810 prints the job only if it finds a media source in the size specified by the job.

Color Mode—Specify whether to print color (CMYK) or Grayscale images to the E-810 by default. CMYK gives you full color prints. Select CMYK as the Color Mode before performing calibration on the E-810. Grayscale converts all colors into shades of gray.

Toner Reduction—Specify whether to minimize the effects of “blasting,” which occurs when excess amounts of toner on certain media types “blast” beyond the color density boundaries defined in the print job.

Page Order—Specify the page order for printed output. Forward prints pages in the order received, so that the last page is on the top of the stack and the first page is on the bottom. Reverse prints jobs in reverse order, so the first page is on the top of the stack and the last page is on the bottom.

Default Paper Sizes—Specify whether to print on US paper sizes (for example, Letter, Legal, Tabloid), or Metric paper sizes (for example, A4 and A3) by default. When no paper size is defined within a PostScript file, jobs are printed on Letter-size paper if you select US, or A4 paper if you select Metric.

Print Cover Page—Specify whether the E-810 prints a cover (job summary) page at the end of each print job. If this option is set to Yes, each print job is followed by a page containing the name of the user who sent the job, the document name, the server name, the time the job was printed, the number of pages printed, and the status of the job. If a PostScript error occurs and the Print to PS Error option is set to Yes, the Cover Page lists the PostScript error message instead of the job status.

Allow Courier Substitution—Specify whether to substitute Courier for unavailable fonts. When this option is off, jobs requiring fonts unavailable on the E-810 hard disk generate a PostScript error and do not print. This setting does not apply to PDF files; font substitution occurs automatically for PDF files.

Print to PS Error—Specify whether the E-810 should print the available portion of a print job when it encounters a PostScript error. In general, this option should be set to No.

- When you set this option to No, printing of the entire job is canceled when a PostScript error occurs, but the processed portion of the job and the PostScript error information are stored on the E-810. You can view the job and the error information from the job management tools.
- When you set this option to Yes, the portion of the job processed before the error occurred is printed.



Color Setup

The color job defaults can be overridden on a job-by-job basis.

- A user can specify a different setting at print time from the printer driver.
- An administrator or operator can specify a different setting from the job management tools after the job has been sent to the E-810.

The preferred method for setting color defaults is to use Color Setup, part of the ColorWise Pro Tools. The color options are described in this section for your reference. For information about these defaults, see the *Printing Guide* and the *Color Guide*.

NOTE: In the following illustrations, “Device name” represents the model of the copier connected to the E-810, which is r7.

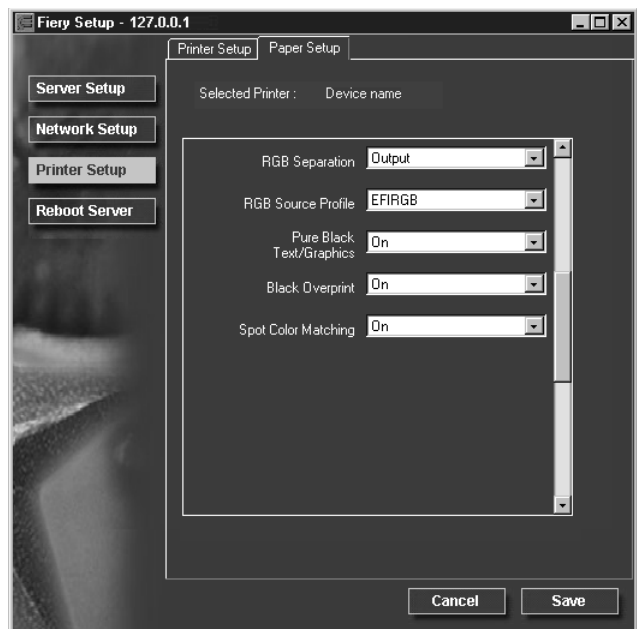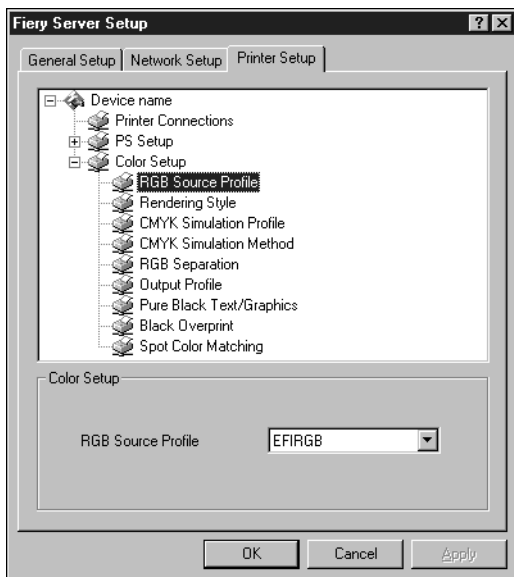

RGB Source Profile—Specify the RGB source space to be applied to RGB data.

Rendering Style—Specify the Rendering Style to be applied to RGB data.

CMYK Simulation Profile—Specify the simulation to be applied to CMYK data.

CMYK Simulation Method—Specify the simulation method to be used.

RGB Separation—This option defines how the E-810 processes RGB jobs. Select Output for RGB jobs that you print to the final output device. Select Simulation to simulate an output device that is not the device to which you are printing.

Output Profile—Specify the output profile to use for printing. Additional profiles can be created and downloaded to the E-810 with ColorWise Pro Tools.

Pure Black Text/Graphics—Specify whether to optimize black text and line art. This option also minimizes toner use for documents containing both color and black-only pages.

When this option is on, black text and line art are printed with black toner only. When this option is off, black text and line art are printed using all four colors of toner.

Black Overprint—When this option is on, black text overprints on colored backgrounds. With this option is off, black text knocks out color backgrounds. In general, this option should be on.

Spot Color Matching—When this option is on, the E-810 uses an internal lookup table to print the best equivalents of PANTONE colors. When this option is off, PANTONE colors are printed using the CMYK values defined in the originating applications.

Exiting Setup

When you have finished specifying Setup options, click OK and close the Setup dialog box. You are notified that the E-810 must be restarted for the new settings to take effect. You can reboot now or later. If Command WorkStation is running, the connection to the E-810 is lost and you must log in again when the Server has restarted.

If you changed the network configuration or other settings affecting Windows NT Workstation, you must reboot Windows NT for those changes to take effect.

After you have completed Setup and rebooted the E-810 for the first time, install the user software for printing on remote workstations as described in *Getting Started*. To confirm the network connection and your Setup, print a test job from a remote workstation.

Printing the Configuration page

The Configuration page lists the settings in effect for the current Setup. After you have performed Setup, print a Configuration page to confirm your settings.

The other pages you can print from Command WorkStation include the test page, Job Log, color charts, and font list. For information on these E-810 pages, see the *Job Management Guide*.

TO PRINT THE CONFIGURATION PAGE

1. In Command WorkStation, choose **Print Pages** from the **File** menu.
2. Click **Configuration**.
3. Click **Print**.

Post the current Configuration page near the server for quick reference. Users need the information on this page, such as the current printer default settings.

Chapter 5: Setting up Network Servers

This chapter describes environments that typically include one or more network servers—Novell NetWare servers and Windows NT 4.0 servers—that share printing to the E-810. It describes setting up servers that use IPX/SPX or TCP/IP protocols for communicating with the E-810. In addition, it includes guidelines for setting up direct communication from Windows NT 4.0 workstations or UNIX workstations, where a network server is optional. The chapter also outlines the requirements for users to print to the E-810 and to run the Fiery utilities and Fiery WebTools.

The E-810 can accept jobs concurrently from NetWare, Windows NT 4.0, and AppleShare servers, as well as jobs sent directly from Windows NT 4.0 or UNIX workstations. Because AppleShare servers require no special configuration, they are not discussed in this chapter, except for use in a Windows NT 4.0 environment (see “E-810 on a TCP/IP network with Windows NT 4.0” on page 5-11).

If your network is based on Windows NT 4.0, proceed to page 5-11. For information on UNIX workstations, proceed to page 5-18.

Support for Fiery utilities

The following table describes the Fiery utilities supported over each protocol and Windows platform. More information is provided in later sections, according to your network type.

Fiery utility	Windows 9X/Me/2000 IPX	Windows 9X/Me/2000 TCP/IP	Windows NT/ 2000 IPX	Windows NT/ 2000 TCP/IP
ColorWise Pro Tools	—	√	—	√
Command WorkStation	—	√	—	√
Fiery Downloader	√	√	√	√
Fiery Scan	—	√	—	√

E-810 on a NetWare 5.x network with NDPS

The E-810 supports printing over a NetWare 5.x network running either the TCP/IP protocols or the IPX protocol. For pure IP printing, the E-810 takes advantage of features in NDPS (Novell Distributed Print Services). For IPX printing, the E-810 supports the PServer service in Bindery emulation or through NDS (Novell Directory Services). For more information on IPX-based printing, see “E-810 on a NetWare 3.x or 4.x network” on page 5-5.

NOTE: Setting up a NetWare environment correctly requires the presence and active cooperation of the Novell network administrator. You must have administrator privileges on the network to create new NDS or bindery objects.

NDPS is not like earlier queue-based versions of NetWare printing. Instead, you use an NDPS Manager and a Printer Agent, which control the tasks previously handled by a print queue, print server, and spooler. You can also make the printer driver available for clients to download from Windows 98/Me and Windows NT 4.0/2000 computers.

The E-810 can receive print jobs from NetWare clients over Ethernet or Token Ring network topologies. (Appendix A describes the Token Ring option.) During E-810 Setup, you select the frame type or types that will be used for communication between the E-810 and network servers. Frame type refers to the format of a communications packet; frame types are specified in a startup file when the NetWare server (or any other workstation) loads its network drivers.

Tips for experts—NetWare 5.x networks

Setting up the E-810 in an NDPS environment is similar to setting up any other PostScript printer on the network. The following information is useful for experienced network administrators:

- **Make sure you have a valid IP address for the E-810 and for any workstations that will print to it or run the Fiery utilities.**
- **In E-810 Setup, enable TCP/IP and enter the IP address, subnet mask, and gateway address for the E-810. You can enter these manually or use DHCP, RARP, or BOOTP protocols to assign the addresses dynamically.**
- **Bidirectional communication features in NDPS are not supported on the E-810.**

Configuring a NetWare 5.x server for printing

Before you begin

The following procedure assumes NDPS has been installed during NetWare 5.x installation and that a Broker is running on the server. Unless you have manually unloaded the Broker, it loads and runs when you install NDPS. Make sure you are using the latest NetWare 5.x service pack and Novell gateway. Finally, create an NDPS Manager. For more information, see your NetWare documentation.

In E-810 Setup, make sure you have enabled TCP/IP (page 3-15) and LPD printing (page 3-22) on the E-810. You can ping the E-810 (page 5-20) to verify that TCP/IP communication is successful.

Setting up the E-810 on a NetWare 5.x network

Depending on the security needs at your organization, you can set up the E-810 as a Public Access printer or a Controlled Access printer. The following procedure describes setting up a Public Access printer. You can then convert this type of printer to Controlled Access if necessary. For more information, see your NetWare documentation.

TO SET UP THE E-810 AS A PUBLIC ACCESS PRINTER


1. In **NetWare Administrator**, double-click the **NDPS Manager** object you created.
2. In the **Details** window for the **NDPS Manager** object, click the **Printer Agent List** button.

The list of Printer Agents appears.

3. Click **New**.

The **Create Printer Agent** dialog box appears.

4. In the Printer Agent (PA) Name field, enter a name.

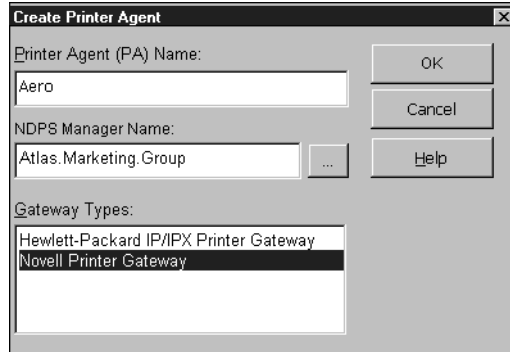

5. Under Gateway Types, select Novell Printer Gateway, and click OK.
6. In the Configure Novell PDS for Printer Agent dialog box, select “((NONE))”, and click OK.
7. In the Configure Port Handler dialog box, choose “Remote LPR on IP” as the connection type, and click Next.
8. For Host Address, enter the IP address of the E-810.
9. For Printer Name, enter the name of the E-810 print connection you want users to print to, and click Finish.

This name must be either print or hold.
10. In the Select Printer Drivers dialog box, select the printer driver for Windows 9X/Me and the driver for Windows NT 4.0/2000.
11. Click Continue, and click OK.

E-810 on a NetWare 3.x or 4.x network

The NetWise™ features built into the E-810 support the following network operating environments:

- NetWare 4.x—NDS (Novell Directory Services)
- NetWare 3.x—Bindery services
- Servers running NetWare 4.x in bindery emulation mode

For Ethernet-based networks, the IPX/SPX protocol is supported. For Token Ring-based NetWare networks, both IPX/SPX and TCP/IP are supported.

NOTE: Setting up a NetWare environment correctly requires the presence and active cooperation of the Novell network administrator. You must have administrator privileges on the network to create new NDS or bindery objects.

The term “bindery server” is used to refer to a Novell file server running NetWare 3.x, or NetWare 4.x in emulation mode. The term “NDS” is used to describe components of a NetWare operating system running NetWare 4.x in native mode.

NetWare clients print to the E-810 through the Novell network server. Server setup and client network setup are outlined in this chapter. Client printing setup is described in *Getting Started*, and printing is described in the *Printing Guide*.

The E-810 can receive print jobs from NetWare clients over Ethernet or Token Ring network topologies. (Appendix A describes the Token Ring option.) During E-810 Setup, you select the frame type or types that will be used for communication between the E-810 and network servers. Frame type refers to the format of a communications packet; frame types are specified in a startup file when the NetWare server (or any other workstation) loads its network drivers.

Tips for experts—IPX networks

Setting up the E-810 is similar to setting up any other PostScript printer on the network. The following information is useful for experienced network administrators.

The E-810 with IPX connections has these characteristics:

- **Both NetWare 3.x and NetWare 4.x are supported directly. NetWare 4.x is also supported through bindery emulation.**
- **A minimum connection to the E-810 consists of a NetWare file server, a NetWare print server, and a NetWare queue.**
- **A single directory tree (for NetWare 4.x) and up to eight bindery servers can be configured simultaneously.**

This limit is the same regardless of whether the E-810 is connected to the network via Ethernet, via Token Ring, or both.

- **The E-810 looks for print jobs on one NetWare print server per bindery server.**
- **Each print server can store jobs for any print connection on the E-810.**
- **Windows computers (whether a Novell server is present or not) can use IPX/SPX protocols for communicating with the E-810 directly to use Fiery utilities.**

Overview of IPX printing to the E-810

NetWare file servers support the creation of print queues, which are storage areas for print jobs. When a client on a remote computer decides to print, the job is directed to a print queue on the NetWare file server and spooled to the NetWare server disk, freeing up the client workstation.

You must give the NetWare queue names a specific extension corresponding to the E-810 print connection, as follows:

_print
_hold
_direct

NOTE: These extension names must be in English and in all lowercase letters.

You do not need to rerun Setup when you add or remove a NetWare queue; however, you should reboot the E-810 after you create or remove a queue.

When the E-810 is configured to connect to a NetWare server, it polls the NetWare server for jobs in each of its queues. If jobs are found, they are automatically transferred over the network to the matching connection on the E-810. For example, jobs from the NetWare queue with the `_print` extension are sent to the E-810 Print queue, and so on. While a job is processed and printed, a record of the job is being created. You can access the Job Log containing these records at any time.

Configuring a NetWare 3.x or 4.x server for printing

The following sections explain how to set up a NetWare file server so that networked users can print to the E-810 from their workstations, and the E-810 can obtain print jobs from the NetWare server.

For *each* NetWare file server that you configure, follow these general steps. More detail is provided in subsequent sections and in your NetWare documentation.

- Make sure the server is connected to a functioning IPX network.
- Log in as the Supervisor on a PC connected to the NetWare file server.
- For NetWare 4.x installations, set up an NDS connection (see page 5-9).
- For NetWare 4.x in emulation mode, set the bindery context (see page 5-9).
- For NetWare 3.x and for NetWare 4.x in bindery emulation, set up a file server, a print server, and a print queue for the E-810 (see page 5-10).

With bindery services, you can route all E-810 print jobs through the same NetWare file server, or you can configure more than one file server to handle E-810 jobs.

The functions you perform on the Novell server, the E-810, and the client workstation are summarized in the following tables. The first table applies to NDS connections, and the second to bindery connections. Complete the operations in the left column, then the center column, then the right column.

Configuring an NDS connection

Abbreviations:

FS = file server

PS = print server

PQ = print queue (on the NetWare server)

On NDS FS	In Setup from Command WorkStation	On client workstation
In NETADMIN: Create NDS PQs Create NDS printer and assign PQs Create PS and assign the printer Configure users of the PQs	Port Setup Ethernet Setup Protocol Setup IPX/SPX Setup—select frame types Service Setup PServer Setup and NDS Setup Select Root Browse to select PS Specify PQ search root (optional) Set Polling Interval	Install user software. For printing: Connect client to PQs that you set up on the NetWare FS (associated with the PS selected in NDS Setup). For running the Fiery utilities: Configure the connection to the E-810.

Configuring a bindery connection

On Bindery FS	In Setup from Command WorkStation	On client workstation
In PCONSOLE: Select NetWare FS (up to 8) For each FS: Configure PS Configure PQ Configure users of the PQ	Port Setup Ethernet Setup Protocol Setup IPX/SPX Setup—select frame types Service Setup PServer Setup and Bindery Setup Add FS (up to 8) Set Polling Interval	Install user software. For printing: Connect client to PQs that you set up on the NetWare FS (associated with the PS selected in Bindery Setup). For running the Fiery utilities: Configure the connection to the E-810.

Setting up an NDS connection

In NDS, all NetWare entities (objects) are organized in a hierarchical tree structure. Objects have a name, properties, and a context that defines the location of the object in the directory tree. For the E-810, you are mainly concerned with defining a printer, a print server object, and one or more print queue objects. Objects are created in NetWare administrator programs such as PCONSOLE, NETADMIN, or NetWare Administrator.

The top-level tree object is known as the [Root] object. The name of the [Root] object is also the name of the tree. Below the [Root] are other objects: either containers (which consist of other objects) or leaf objects (which do not contain other objects). Access to objects is controlled by rights that are defined as properties of each object. Rights are established by network administrators.

Setting the NetWare 4.x bindery context

You can connect only one directory tree to the E-810. If you need to connect additional NetWare 4.x servers, you can do so by using bindery emulation, which causes the 4.x server to behave like and be accepted as a NetWare 3.x server.

NOTE: The file server you select must not be in the same tree as the one you selected in NDS Setup.

You can connect up to eight bindery servers, whether in native 3.x mode or 4.x emulation mode, to the E-810. If your server is using NetWare 3.x, proceed to “Setting up a NetWare print queue for bindery” on page 5-10.

In order to set up the NetWare 4.x server in bindery emulation mode for printing to the E-810, the network administrator must do the following:

- Determine the Directory Services path to the container in which the print server and the print queue for the E-810 will be created.

The container defines the “bindery context” for your network structure.

- Edit the network startup file to set the bindery context.
- Activate the new bindery context.

Setting up a NetWare print queue for bindery

For NetWare 3.x and for 4.x in emulation mode, the NetWare print server and print queue for E-810 are created and configured from NetWare Print Console (PCONSOLE), a NetWare utility that is stored in the NetWare PUBLIC directory.

As with NDS, first you create several NetWare entities on a Novell server, then you select them in Network Setup (see page 3-27).

Setting up NetWare Windows clients for printing

Before setting up client workstations for printing, make sure you perform Network Setup (see page 3-10), and that the settings reflect the entities you created in the NetWare administrator utilities (see page 5-7).

NOTE: For printing to the E-810, connect all Windows clients to a Novell NetWare server and permit them to connect to the Netware print server or servers on which you defined a NetWare print queue for the E-810.

After the Novell server and the E-810 have been set up, client setup consists of:

- Installing the networking protocol, binding it to the network adapter card, and permitting the client to log in to the NetWare file server.

On Windows 9X/Me workstations, load both the IPX/SPX-compatible protocol and the Client for NetWare Networks from the Network Control Panel.

On Windows NT 4.0/2000 workstations, install Client Services for NetWare. Use the CSNW option in the Control Panel to set printing options and specify a preferred NetWare server.

- Setting up the E-810 as a PostScript printer by installing a PostScript printer driver and the E-810 PPD (PostScript printer description).
- Adding a network port and connecting the workstation to one or more NetWare queues that have been defined for the E-810.

For more information, see *Getting Started*.

- Installing E-810 software, such as color reference files.

See *Getting Started* for details.

E-810 on a TCP/IP network with Windows NT 4.0

When a Windows NT 4.0 computer is configured to connect to the E-810 using TCP/IP, it can print directly to the E-810. If the computer shares the printer over the network, it is acting as a print server to Windows NT 4.0/2000 and Windows 9X/Me/2000 clients. Client machines print to the E-810 by printing to the Windows NT 4.0 print server. You can then monitor and control printing at the Windows NT 4.0 server computer.

Typical system combinations are:

- Print server running Windows NT 4.0 Server; clients running Windows NT 4.0/2000 Workstation and Windows 9X/Me
- Print server running Windows NT 4.0/2000 Workstation and clients running Windows 9X/Me

With TCP/IP protocols loaded, you can run the Fiery utilities and Fiery WebTools from a Windows NT 4.0/2000 or Windows 9X/Me computer.

The Windows NT 4.0 server can also use AppleTalk protocols for printing to the E-810 as an alternative to TCP/IP. When you create a printer to share with AppleTalk users, do not “capture” the printer. Capturing the printer forces all users to print to the server, rather than directly to the printer. If you capture the printer, E-810 print connections will not appear in the Mac OS Chooser.

Tips for experts—Windows NT 4.0 with TCP/IP

Setting up printing from Windows NT 4.0 using TCP/IP protocols is similar in some respects to setting up UNIX workstations with TCP/IP. When TCP/IP network connections are made from Windows NT 4.0 workstations, note the following:

- **Make sure you have a valid IP address for the E-810 and for any workstations that will print to it or run the Fiery utilities.**
- **In E-810 Setup, enable TCP/IP and enter the IP address, Subnet mask, and Gateway address for the E-810.**

You can enter these addresses manually or use DHCP, RARP, or BOOTP protocols to assign them dynamically.

- **Make sure the E-810 name and address are listed in a domain name server (DNS) or hosts name database used by your system.**
- **Make sure the system host table includes the correct internal name for the E-810 as a remote printer.**

See page 5-19 for more information.

- **For Windows NT 4.0, install the appropriate printer driver files on the Windows NT 4.0 server.**

For more information, see *Getting Started*.

- **Repeat the installation for all users who print to the E-810.**

Each server and workstation running the Fiery utilities with TCP/IP also needs the TCP/IP protocol and the Fiery utility software.

Configuring a Windows NT 4.0 server to support the E-810

To configure a Windows NT 4.0 server to communicate with the E-810, follow these general steps. More detail is provided in subsequent sections and in your Microsoft documentation.

- Load the TCP/IP network protocol on the server and configure it with an IP address, subnet mask, and gateway.
- Enter the host name of the E-810 in the host database used by your system (see page 5-13).
- Perform E-810 Setup.
- On the Windows NT 4.0 server, create a printer for each E-810 print connection, install the appropriate printer drivers and (optionally) share the printer on the network (see page 5-14).
- Enter the host name and remote printer name of the E-810 in the printer connection. See page 5-19 for more information.
- If the Windows NT 4.0 server is also a workstation, install the Fiery utilities (see *Getting Started*).

Adding the E-810 to the TCP/IP network

If your TCP/IP network consists of Windows NT 4.0, Windows NT 4.0 clients, and Windows 2000 clients, use the directions in this section. If the network also includes UNIX workstations, also refer to the directions on page 5-19.

TO ADD THE E-810 TO A TCP/IP NETWORK WITH A WINDOWS NT 4.0 SERVER

- 1. Register the IP address of the E-810 in the host name database used by your system.**

For installations that do not have a network administrator or central host name database, add the E-810 to the hosts file on the Windows NT 4.0 server. Also add it to the hosts file on any workstations that have TCP/IP loaded and will use the Fiery utilities.

The Windows NT 4.0 hosts file provides compatibility with the UNIX hosts file. The hosts file is used as a local Domain Name Services (DNS) equivalent. It has the same format as the /etc/hosts file on UNIX servers. The format of the hosts entry is:

IP Address<TAB>host name<TAB>#comments

where <TAB> indicates that you press the Tab key.

To determine the IP address and server name of your system, print a Configuration page (see page 3-46).

NOTE: If the E-810 has already been defined in an /etc/hosts file or equivalent host name database on a UNIX workstation on your network, it is recommended that you use the same host name here as you used for the name of the remote printer in the /etc/printcap file.

- 2. Perform E-810 Setup to support TCP/IP printing.**

Enter the options in Protocol Setup (IP address of the E-810, subnet mask, and gateway address).

Installing the E-810 as a shared printer

The first step in creating a printer is installing the printer driver files, which give your applications access to printer features. You can use the installation instructions in *Getting Started* for every workstation that will print directly and independently to the E-810. However, if you are an administrator running Windows NT 4.0 Server, Windows NT 4.0 Workstation, or Windows 2000 Professional, you can also create a printer and share it with clients on the network. When a printer is shared, clients who are not able or are not given permission to establish an independent network connection to the E-810 can still print through the server.

You can specify sharing of the printer during installation of the E-810 printer files. If you have not yet installed the E-810 printer files on the Windows NT 4.0 print server computer, do so now following the instructions in *Getting Started*. During installation, enter the information necessary to share the E-810.

If you have already installed the E-810 printer files on the computer you are using as an NT 4.0 print server, see your Windows documentation for information about sharing the E-810.

If more than one E-810 print connection is published (for example, if both the Print queue and the Hold queue are published), you may want to create a printer for each print connection, so that you and other users can print to each connection directly. When prompted to specify the printer name, enter a name that indicates the E-810 print connection.

Configuring clients of a Windows NT 4.0 server

Each client of a Windows NT 4.0 server is already using a network protocol to communicate with the server. Each client can print to the E-810 if it has been shared by a Windows NT 4.0 Server, Windows NT 4.0 Workstation, or Windows 2000 Professional computer. In that case, the client does not have to use the same network protocol to connect to the Windows NT 4.0 server as the server uses to communicate with the E-810.

TO CONNECT AND PRINT TO THE E-810 SHARED BY A WINDOWS NT 4.0 SERVER

- **For Windows 9X/Me/2000 clients, before printing, double-click the Windows NT 4.0 server icon in the Network Neighborhood window, and double-click the printer name.**

You will be prompted to set up the printer. When you choose to set it up, the Add Printer Wizard dialog box appears. Follow the procedures in *Getting Started*.

- **For Windows NT 4.0 Workstation clients, before printing, connect to the print server computer and select the E-810. Right-click and choose the Open command.**

When prompted, click Yes to have Windows set up the printer.

After clients have selected the printer, they can choose it from the Print Setup, Page Setup or Print dialog box of their application. Clients can change printing options for their own job, but printer properties appear dimmed, unavailable for changing. When a client chooses Print, the job is transmitted to the Windows NT 4.0 print server, and from there to the selected print connection on the E-810. The job is listed in the Print Manager on the client workstation, and the administrator can track it in the E-810 window in the Print Manager on the Windows NT 4.0 print server.

Configuring Windows computers without a Windows NT 4.0 server

If your network does not have a Windows NT 4.0 server, Windows 98/Me and Windows NT 4.0/2000 workstations can still print to the E-810. This method of printing is called Windows, or SMB, printing. In this type of network environment, computers running Windows 9X/Me/2000 and Windows NT 4.0 Workstation operate in a peer-to-peer environment and communicate directly with the E-810 when users send print jobs.

Many of the same prerequisites for setting up printing through a Windows NT 4.0 server also apply to setting up Windows printing where a server is not present. The prerequisites are summarized below, and you can find more detail in the E-810 documentation and your Microsoft documentation.

- **Print a Configuration page (see page 3-46).**
Use the information on this page to determine the current E-810 settings.
- **Load the TCP/IP network protocol (for Windows 9X/Me/2000 only, also load Client for Microsoft Networks) on the computer.**

- **Verify the Workgroup name of the computer in the Windows Network control panel.**
Make sure the Workgroup name is the same as the one listed in E-810 Setup.
- **For Windows 9X/Me/2000 only, in the Windows Network control panel, configure the computer to allow file sharing, and then restart the computer.**
- **Ping the E-810 (see page 5-20) to verify TCP/IP communication is successful.**

Configuring the E-810 and clients for Fiery WebTools

The Fiery WebTools provide access to many E-810 functions via the Internet (or intranet), providing additional flexibility in remote management. You can access the Fiery WebTools from a Windows or Mac OS computer.

NOTE: Fiery WebSetup is supported for Windows computers only.

TO SET UP FIERY WEBTOOLS ON THE E-810

1. **In E-810 Network Setup, enable TCP/IP.**
2. **Set a valid, unique IP address for the E-810, and then set the subnet mask. Set a gateway address if necessary.**
3. **Enable Web Services.**
4. **In E-810 Printer Setup, confirm the Print Queue is published.**

TO SET UP FIERY WEBTOOLS ON A COMPUTER

1. **Enable TCP/IP networking.**
2. **Assign the workstation a valid, unique IP address and subnet mask, and a gateway address if needed.**
3. **Install an Internet browser that supports the Java language and frames.**
Make sure Java is enabled. See *Getting Started* for more information on supported browsers and Fiery WebTools requirements.

TO ACCESS THE FIERY WEBTOOLS

1. **Start the Internet browser.**
2. **Enter the IP address or DNS name of the E-810.**
3. **Press Enter.**

The E-810 home page appears. Click the name of a particular WebTool.

4. **Use the Configure button to enable only certain WebTools for users.**

Setting the WebLink destination

The pre-set WebLink destination can be changed; this function requires the Administrator password, if one has been set.

TO CHANGE THE WEBLINK DESTINATION

1. **Start your Internet browser application.**
2. **Enter the IP address or the DNS name of the E-810.**

The E-810 home page appears.
3. **Enter the Administrator password (if required) and click OK.**
4. **Press the Control key (Mac OS) or Ctrl key (Windows) as you click the WebLink button.**

The Update WebLink dialog box appears.
5. **Enter the new WebLink address (URL) and click OK.**

E-810 on a network with UNIX workstations

When a UNIX workstation is configured with the lpd protocol, and connected to the E-810 over a TCP/IP network, it can print directly to the E-810.

Setting up UNIX workstations requires an administrator with root privileges. After the initial configuration, UNIX users simply submit print jobs to a named printer.

The job management tools, along with the other Fiery utilities and Fiery WebTools, are unavailable on the UNIX platform. A Windows or Mac OS computer on the same network as the UNIX computer that is set up to use TCP/IP for printing to the E-810 can use the job management tools to manage print jobs that originate from all workstations on the network.

Tips for experts—UNIX workstations

Setting up the E-810 in a UNIX environment has the same requirements as setting up any printer or new device:

- **A distinct IP address is needed for the E-810 as well as for each workstation on the network.**
- **You select a name for the E-810 that goes with the IP address.**
- **The IP address of the E-810 must be registered for the network in a host database, and also on the E-810 itself.**
- **The Print queue or the Hold queue (or both) must be published.**

Lpd printing to the Direct connection is not supported.

The following information applies especially to the E-810:

- **E-810 is a printer controller that understands lpd protocols.**
- **E-810 has a remote printer name you must use in order to communicate with it successfully.**

See the next section for details.

Important note about the remote printer name

Whichever UNIX system you use, the name used for remote printer (or `rp` in the `/etc/printcap` file) in configuring the E-810 must be one of the following:

`print`
`hold`

The remote printer name is also used when setting up your Windows NT 4.0 Workstation, Windows NT 4.0 Server, or Windows 2000 Professional to connect to the E-810 over TCP/IP. Enter the remote printer name when you set up your Windows NT 4.0 printer, as the “Name of printer or print queue on that (lpd host) server” in the Add LPR Compatible Printer dialog box (see *Getting Started*).

Setting up the E-810 on TCP/IP networks

Every machine (host) on a TCP/IP network, including the E-810, must have a unique 32-bit internet address (IP address). Contact your network administrator to obtain an address for the E-810. Workstations on a TCP/IP network can print directly to the E-810 as a remote printer, or can print to a Windows NT 4.0 server or UNIX workstation acting as a print server. Since the E-810 spools jobs and acts as a print server, there is no advantage in placing another print server between a workstation and the E-810. If you choose to do so, however, there is no difference in setup except that a client machine does not have its own spooling area.

TO SET UP E-810 PRINTING ON UNIX SYSTEMS

- 1. Specify the appropriate settings in E-810 Server Setup.**

To access E-810 Setup, see page 3-4.

- 2. Specify the appropriate settings in E-810 Network Setup.**

Enter a valid IP address, subnet mask, and gateway address for the E-810.

- 3. Specify the appropriate settings in E-810 Printer Setup.**

Publish the Print queue and/or the Hold queue.

TO SET UP TCP/IP FOR COMMUNICATION WITH THE E-810

1. A superuser (with root login) must add the E-810 to the network's IP host table or other system database of network printers.
2. In the file or utility used by your network, specify the remote printer name, the print server protocol, the queue, and the spool file for the E-810 name you assigned.
3. Make the E-810 available as a printer to other network users.
4. To verify the TCP/IP connection, ping the IP address or the host name. From any computer on the network, at the command prompt, type:

ping <IP address>

Type the E-810 IP address assigned in E-810 Network Setup.

After the E-810 is set up as a network printer, you can also ping the name you gave to the E-810:

ping <hostname>

The server should respond with a message such as

Reply from <IP address> ...

Some systems will respond with a continuous display of output from the IP address. To stop the output, type Control-C. You can use the ping command at any time.

TO PRINT TO THE E-810

- On a UNIX system running SunOS 4.x or other BSD-based variant, use the `lpr` command to send a job to the E-810.
- On a UNIX system running Solaris 2.x or any System V implementation of UNIX, use the `lp` command to send a job to the E-810.
- Windows NT 4.0 users with the TCP/IP protocol loaded can send print jobs to the E-810 from their applications or from a command prompt.

When Windows NT 4.0 users print from applications, they can set print options with the driver, but not from the UNIX command line.

Managing print jobs

UNIX network administrators can use UNIX utilities for viewing the list of jobs, and for printing and removing jobs that are spooled on UNIX servers. If the network includes a Windows NT 4.0/2000 workstation that has TCP/IP protocols loaded, you can use Command WorkStation or Fiery Downloader to download fonts and files.

You can also use the job management tools to manage jobs from remote workstations. See the *Job Management Guide* for more information.

Even without the Fiery utilities, you can:

- Set up the E-810 to print a log of printed jobs automatically after every 55 jobs (see Job Log Setup on page 3-42).
- Print a Job Log manually at any time from the Command WorkStation Functions menu (see the *Job Management Guide*).

Chapter 6: Administering the E-810

This chapter provides tips on managing E-810 printing, and includes some troubleshooting hints.

Administrator functions

Administration features are included with the user software and are built into the E-810 itself. The following table describes where to find information on these features (page references refer to this manual).

For these operations	And these tasks	See
Setting up network servers	Setting up servers to manage and share printing services	This manual
Connecting and setting up the E-810	Connecting the E-810 and performing E-810 Setup	This manual
	Setting up the E-810 to allow user access to Fiery WebTools	This manual <i>Getting Started</i> <i>Release Notes</i>
Setting up the printing environment	Setting printer defaults, including modes, imaging, paper size handling, error handling Setting copier model-specific options	Printer Setup, page 3-35 and 4-30 PS Setup, page 3-36 and 4-31 <i>Color Guide</i> <i>Printing Guide</i>
Setting up the job environment	Publishing the Direct connection or the Print queue or Hold queue to end users on various platforms	Printer Setup, page 3-35 and 4-30 Chapter 5
Protecting integrity of users' jobs, maintaining consistency of E-810 settings	Setting the Administrator password	Passwords, page 3-43 and 4-5 Chapter 2

For these operations	And these tasks	See
Setting up all new users	Setting up printing, including installing PostScript printer drivers and PPD files for the printer Installing optional user software Installing color reference pages (CMYK swatches, PANTONE Reference, color sample pages) Preparing users to access Fiery WebTools	<i>Getting Started</i> <i>Release Notes</i>
Getting users started with printing	Printing to the E-810 Setting job-specific options Using Fiery utilities	<i>Printing Guide</i> <i>Job Management Guide</i>
Controlling the job flow	Using Fiery WebTools, Command WorkStation and Fiery utilities and for managing job priorities, tracking current jobs, canceling jobs, printing jobs in the Hold queue, reprinting from the Printed or Hold queue	<i>Printing Guide</i> <i>Job Management Guide</i> <i>Release Notes</i>
Job management	Viewing, printing, and exporting the Job Log, user notes Setting automatic printing and clearing for the Job Log	<i>Job Management Guide</i> <i>page 4-7</i>
Calibration and color management	Printing with CMYK simulations Calibrating the E-810 Printing color samples and swatch pages Installing color profiles	<i>page 3-40</i> <i>Printing Guide</i> <i>Color Guide</i> <i>Getting Started</i>
Maintaining optimal E-810 performance	Tips Deleting jobs, clearing queues	<i>page 6-3</i> <i>Job Management Guide</i>
Troubleshooting	Troubleshooting E-810 Setup Printing, printer, and user software troubleshooting	<i>page 6-4</i> <i>Printing Guide</i> <i>Job Management Guide</i>

Maintaining optimal E-810 performance

The E-810 does not require maintenance. Beyond the obvious requirements of servicing and maintaining the copier and replenishing consumables, there are a few things you can do to improve the overall performance of your system:

- **Make the best use of your network connections**

Publish only connections that will be used; the E-810 constantly checks all published connections, even if they are inactive. Match the NetWare polling interval and the number of queues or connections to the demand for printing.

Review the published connections by printing a Configuration page. Eliminate the connections that are not being used. It is easy to re-establish them when needed.

- **Leave some jobs that are less urgent to times when there is less network traffic or printing**

Recurring print jobs or jobs that are not urgent can be printed to the Hold queue. At low-traffic times, the administrator or a user of the job management tools with Operator privileges can move (or copy) all the Hold queue jobs to the Print queue for printing.

- **Reduce unnecessary network communication**

Large numbers of users running Fiery utilities, especially with frequent updates, may have a significant effect on E-810 performance.

- **Make sure you have adequate disk space on the E-810**

Periodically review the list of jobs in the Hold queue, and the number of jobs being retained in the Printed queue.

An administrator can print or delete jobs that are in the Printed queue and Hold queue. Consider printing or offloading inactive jobs. If disk space on the E-810 is frequently low, you can disable the Printed queue (in Server Setup) and choose not to publish the Hold queue (in Printer Setup).

To move or remove queued jobs, use the job management tools. When you free up disk space by removing inactive jobs, new jobs are spooled and printed more quickly.

Troubleshooting the E-810

Startup diagnostics are described in the *Installation and Service Guide* for service technicians. Contact your authorized service/support center if you see any startup error messages on the Command WorkStation computer or if the E-810 does not reach Idle status.

Troubleshooting during Setup from the Control Panel

The following section explains some error and alert messages that you may see during Setup that might not be self-explanatory.

Network Setup messages

After this Setup screen	This message	Means
Enable AppleTalk (Network Setup>Protocol Setup>AppleTalk Setup)	No AppleTalk zone found.	The Ethernet network cable is not attached to the connector on the E-810, or the network cable is not plugged into the hub or network. If your AppleTalk network has zones, and you want to specify a zone for the E-810, you must connect the network cable to the E-810 before performing AppleTalk Setup. Also could mean that the AppleTalk network doesn't have zones. Zones are not required for printing to the E-810. Press OK to continue.
Protocol Setup or Service Setup (Network Setup)	You must first enable a network port.	Enable at least one network port (Ethernet or Token Ring) in Port Setup before beginning Protocol Setup or Service Setup.
Frame Type selection (Network Setup>Protocol Setup>IPX/SPX Setup)	Invalid frame size.	The network hub is not connected to a Novell machine when the E-810 tries to bind.
	Warning! IPX network number is zero.	No other IPX machine can be found on the network, or the network hub is not connected to the network, when the E-810 tries to bind. When this occurs, the network number defaults to zero.
	Can't detect Token Ring hardware. Token Ring hardware not installed or not functioning.	E-810 queries the Token Ring hardware. Error indicates that some components are not installed, are not installed correctly, or not installed in the correct device. An unsupported Token Ring board may be in use. Check with your authorized service/support center.

After this Setup screen	This message	Means
Token Ring Setup	Can't autodetect the ring speed. No device on ring.	The E-810 is trying to detect the current ring speed, but it is the only machine on the Token Ring network. Connect another machine to the Token Ring network first, before connecting the E-810.
Enable NDS (Network Setup>Service Setup> PServer Setup> NDS Setup)	No NDS trees found.	No NDS trees were found on the Novell network. Check to see that the frame types on the E-810 are properly configured.
Select NDS Tree (Network Setup>Service Setup>PServer Setup> NDS Setup)	Warning! Selecting a new NDS tree deletes Bindery setup.	<p>You have previously connected the E-810 to a different NDS tree. NetWise supports only a single NDS tree connection. To avoid a potential conflict with an existing tree connection (for example, if the connection was made through a NetWare 4.x server in emulation mode), all bindery settings will be deleted.</p> <p>If you choose OK, and choose Yes in the following message (Delete Bindery setup and continue?), bindery settings are deleted and have to be re-entered in Bindery Setup.</p> <p>To avoid deleting the bindery settings, press the Menu key, or select OK and choose No in the following message (Delete Bindery setup and continue?).</p> <p>Repeat NDS Setup without changing the NDS tree, or exit to Bindery Setup to review your current bindery settings.</p>
Navigating NDS tree (Network Setup>Service Setup>PServer Setup> NDS Setup)	___ is empty.	The chosen container contains no sub-containers or objects relevant to the current mode of navigation.
Bindery Setup (Network Setup>Service Setup>PServer Setup> Bindery Setup)	If you also plan to use NDS, set up NDS before Bindery.	No NDS settings are present. You are reminded to perform NDS Setup before Bindery Setup in case your network includes both NDS and bindery servers.

After this Setup screen	This message	Means
Select File Server From List (Network Setup>Service Setup>PServer Setup>Bindery Setup)	Error. Cannot open bindery connection to NDS server.	Select this server through NDS setup or disable NDS and select it through bindery.
	No NetWare file server found.	No file server was found when E-810 queried the network to create a list of supported servers or a list of all servers. Check cable connections and make sure the NetWare server is turned on.
Enter First Letters of Server Name (Network Setup>Service Setup>PServer Setup>Bindery Setup)	File server name not found. Try again?	No file server with those letters was found when E-810 queried the network. Check the name of the NetWare file server, check cable connections, and make sure the NetWare server is turned on.
View Server List, Edit Connection (Network Setup>Service Setup>PServer Setup>Bindery Setup)	No file server is selected.	No file server has been added in Bindery Setup.
Add File Server (Network Setup>Service Setup>PServer Setup>Bindery Setup)	All connections used. Remove server?	You have added the maximum number of bindery servers, which is eight. You now have the option of disconnecting one of those servers, so as to add another.
Add Server, Enter Your Login Name, Enter Your File Server Password (Network Setup>Service Setup>PServer Setup>Bindery Setup)	No NetWare print server found.	No print server was found when E-810 queried the file server you selected. You must configure a print server and a print queue for every NetWare file server that will handle E-810 print jobs (see page 5-7).

After this Setup screen	This message	Means
Any Bindery Setup screen	Novell error code, followed by a message.	<p>Novell NetWare has reported an error. Command WorkStation reports the error number and displays a brief message.</p> <p>For the most common errors (listed in the following table), a screen is displayed that enables you to retry the action that evoked the error, such as adding a server. If that is not possible, you are prompted to notify the Novell administrator, who will need to troubleshoot the network.</p> <p>Consult NetWare Administrator documentation for further explanation of Novell error codes.</p>

In Network Setup, when you configure the IPX (Novell) connection, the E-810 queries the network for Novell file servers and trees, and attaches to them temporarily. If a guest login is enabled, it will be used. If not, you are prompted to log in from Command WorkStation.

If the selected NetWare file server or tree does not have a guest account, or if the guest account has expired or has been disabled by the NetWare supervisor, you will be prompted to notify the IPX (Novell) administrator. In that case, there are two options:

- Enable a guest account on the NetWare server or tree for the purpose of setup.
- Log in with a different account. At the ENTER LOGIN NAME screen, change the default name (guest) to supervisor or enter another valid login name. When you are prompted for a password, enter the correct password for the account you named.

For any Novell error, make sure:

- Your IPX (Novell) network is connected to the E-810.
- The NetWare server you are trying to access is running.
- The Novell network has been configured with at least one print server and queue for the E-810.
- You have the appropriate permissions and login information, including username and password, if necessary.
- The E-810 is configured with the correct frame types for communication with the desired Novell servers.

Novell error messages

Novell error	Cause	Suggested action or exit
220 Guest account not available.	The guest account, which you have chosen for initial login, has expired or has been disabled by the NetWare supervisor.	Enable a guest account on the NetWare server for the purpose of setup. Alternatively, log in to a different account. In the ENTER LOGIN NAME screen, change the default name (guest) to supervisor or another valid login name. When you are prompted for a password, enter the correct password for the account you named.
222 Unable to log in to server. Password has expired for login name.	The server has connected to a file server, but is unable to log in to the file server or print server because the password has expired for the login account name or the named print server.	Select a different login account or print server. The error screen exits to the File Server Login screen (if login to file server failed) or NetWare Print Server screen (if login to Print Server failed). Pressing the Menu button returns to the PServer Setup screen.
252 Unable to log in to server. Login does not exist.	The server has connected to a file server, but is unable to log in to the server because the selected login account does not exist on the file server.	Select a different login account. The error screen exits to the File Server Login screen. Pressing the Menu button returns to the PServer Setup screen.
255 Unable to connect to file server. File server is down or out of connections.	The Novell file server is down or out of connections. This error occurs while the server is trying to connect to the requested file server.	Select a different file server (or try to get someone else to log off). Pressing the Menu button returns to the PServer Setup screen.
nnn Notify IPX (Novell) Administrator.	Indicates other network errors when the E-810 is already connected to a file server. Something unexpected has happened and the user generally cannot recover without intervention of the network administrator. Error #197 indicates that you have exceeded the number of login attempts permitted for this account on the NetWare file server. Error #255 usually indicates a hard failure.	Notify the Novell administrator and report the error number. The error screen exits to the PServer Setup screen.

Runtime error messages

For error messages related to canceling jobs and printing, including the Disk Full message and alerts to load media, see the *Job Management Guide*. These messages are reported by the job management tools.

Users can turn on PostScript error reporting as a print option from Mac OS applications.

Check power and cable

This message indicates that the interface cable between the E-810 and the copier is not connected, or a print job is ready but the copier is not turned on.

Printer not found

Most failures to find a printer on the network are due to conflicting or missing name or address settings for the E-810. You must enter names in specific places. The required names are:

- TCP/IP host name (also known as the DNS name), which is defined by your organization.

Enter the host name as the Server Name in E-810 Setup.

- Remote printer (internal machine) name. Use one of the following:
print
hold

You must reconfigure one of the Fiery utilities on each workstation if you change the DNS name (also known as the TCP/IP host name) of the E-810.

Check the table below for the appropriate name to use.

In this location	For this item	IPX/SPX networks	TCP/IP networks	See
Server Setup	Server Name option	Administrator defines name	Administrator defines name	page 3-8
Windows NT hosts file	host name	—	DNS name (TCP/IP host name)	page 5-11
Windows NT setup for TCP/IP	lpd host name	—	DNS name (TCP/IP host name)	page 5-11 and <i>Getting Started</i>
	Name of printer on lpd host machine	—	print or hold	
UNIX /etc/printcap file (BSD)	rp line	—	print or hold	page 5-18
Solaris	lpadmin queuename	—	print or hold	
NetWare administration utility	print queues (must be all lowercase and in English)	_direct _print _hold	—	page 5-6
Add New Server dialog box, when configuring a Fiery utility	New Device	r7	r7	<i>Getting Started</i>
	Server Name	Server name of E-810 as specified in Setup	DNS name (TCP/IP host name)	

Cannot connect to E-810 with Fiery utilities

If users cannot connect to the E-810, check the following:

- E-810 Setup—the appropriate network protocol must be enabled, with the correct parameters (for example, for TCP/IP, the IP address; for IPX/SPX, a correct frame type setting), and you must publish either the Print queue or Hold queue.

In IPX/SPX Setup, verify that the IPX network protocol has bound to all the frame types in use by the NetWare servers that handle E-810 print jobs.

You can check these settings quickly by printing a Configuration page.

- On the client workstation—the appropriate network protocol(s) must be loaded, and your Windows directory should contain a configured Efinl.ini file.

Cannot connect to the E-810 with Command WorkStation

If there is a problem connecting to the E-810, an error message is displayed.

The problem can occur:

- When the E-810 is first turned on
- When the E-810 reboots
- When you have changed settings affecting the server address and have not reconfigured the connection to the server

If you see this problem, try the following solutions, in order:

- A remote workstation running the Fiery utilities or Fiery WebTools may be interfering by obtaining status information. If possible, close the remote application, and try again to connect.
- Restart the Command WorkStation application and try again to connect.
- Check the configuration of the connection and modify it if necessary, or delete the Efnl.ini file and start over with the process of configuring the connection as described in *Getting Started*.

For Windows 9X/Me/2000, the Efnl.ini file is located in \WINDOWS.

For Windows NT 4.0, the Efnl.ini file is located in \WINNT.

- Reboot the E-810.
- See the *Job Management Guide* for information on other error conditions.



Appendix A: Token Ring Network Option

Token Ring is an alternative network architecture to Ethernet architecture. Token Ring networks offer a high resistance to failure and are commonly used in large or high-traffic network installations.

Token Ring networks operate by passing a network token around the electronic equivalent of a ring. The token is a data packet that circulates from one network node to another, controlling access to the network. In practice, each workstation is connected to a port on one or more media attachment units (MAUs) which act as network hubs for the ring connection.


This appendix describes the Token Ring option and cable connections, and refers you to the remaining configuration required for printing to the E-810.

E-810 Token Ring option

The E-810 supports Token Ring networks that use IPX and TCP/IP protocols. To use the E-810 with a Token Ring network, a Token Ring network interface card provided by EFI must be installed in the E-810. You can use either shielded twisted pair (STP) or unshielded twisted pair (UTP) cable.

Connecting Token Ring hardware

The service/support center that installs the E-810 typically also installs the Token Ring option at the same time and configures the E-810 to enable printing.

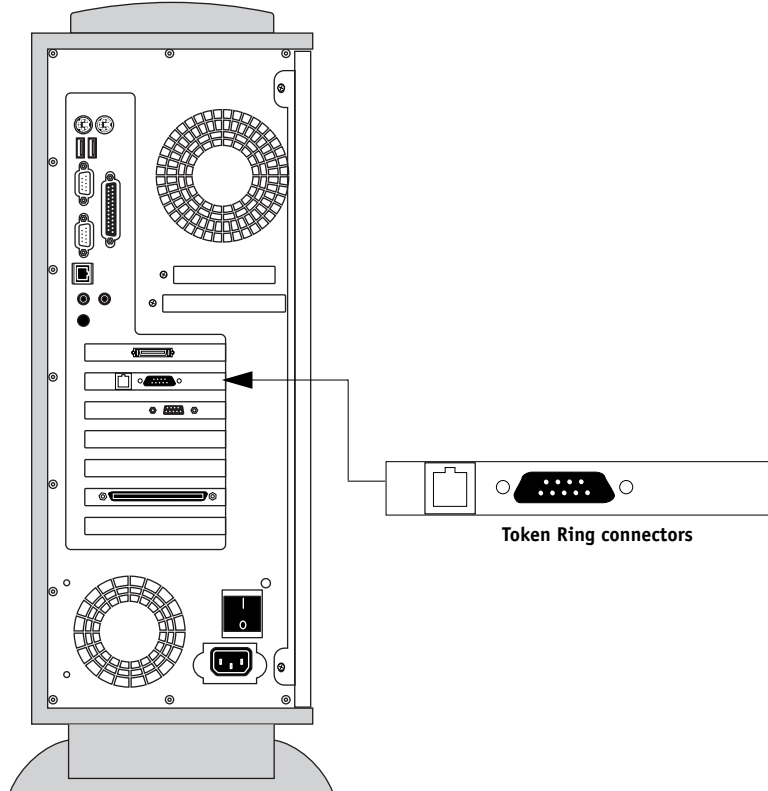Back view of the E-810 with the Token Ring option installed

Turn off the E-810 before connecting it to any network device.

NOTE: Do not attach cable to both Token Ring connectors.

TO CONNECT CABLE TO THE E-810

1. **Turn off the E-810.**
2. **Connect the cable from the Token Ring MAU to the E-810 Token Ring card.**

Configure the NetWare, Windows NT, or UNIX server to print to the E-810 (see the next two sections). Then proceed to page 3-2 for E-810 Setup.

IPX/SPX installations

If your network uses IPX/SPX protocols with Token Ring, configure at least one printer, one E-810 Print Server, and one E-810 Print Queue on the NetWare server as described in “Configuring a NetWare 3.x or 4.x server for printing” on page 5-7. You can configure up to eight bindery servers and one NDS tree connection to the E-810. This total is the same whether the E-810 is connected by Token Ring, Ethernet, or both. For more information, see “Setting up an NDS connection” on page 5-9.

TCP/IP installations

If your network uses TCP/IP protocols with Token Ring, configure at least one printer and one E-810 queue on a Windows NT server (see “Configuring a Windows NT 4.0 server to support the E-810” on page 5-12) or UNIX server (see “Setting up the E-810 on TCP/IP networks” on page 5-19).

Setting up Token Ring on the E-810

Token Ring Setup on the Control Panel is similar to Ethernet Setup. From Network Setup, perform Port Setup, Protocol Setup, and Service Setup. The setups you need are summarized in the table on page 3-11.

NOTE: Connect the Token Ring cable before doing E-810 Network Setup, so that the Token Ring card can configure itself properly.

Setting up NetWare Windows clients

Client setup is exactly the same as for IPX clients using Ethernet. See “Setting up NetWare Windows clients for printing” on page 5-10 for details.

Index

Numerics

- 100BaseT connector 1-11
- 10BaseT 1-11
- 8-pin RJ-45 connector 1-11

A

- access level scenarios 2-6, 2-7
- access to network and software 2-1
- accessing Setup
 - from Control Panel 3-3
 - from Windows computer 4-1
- Adapters/Ports information, Setup 4-8
- Add File Server, Bindery
 - Setup 3-27, 3-28, 4-22
- administrator
 - features of color server 3-42
 - functions 6-1 to 6-2
 - installing the color server 1-2
 - managing print jobs 6-1
 - password 3-43
- Administrator password
 - changing from Control Panel 3-43
 - changing from Windows computer 4-6
 - for setting the WebLink
 - destination 2-5, 5-17
 - privileges 2-3
- Allow Courier Substitution
 - option 3-38, 4-32
- AppleTalk 1-5
 - color server name 3-8, 4-4
 - network diagram 1-5
 - protocol setup 3-14, 4-10
 - supported on Ethernet only 1-4
 - with Windows NT 5-11
- AppleTalk Setup
 - from Control Panel 3-14
 - from Control Panel, summary 3-11
 - from Windows computer 4-12

- AppleTalk zone 3-14, 4-12
- Auto Clear Job Log Every 55 Jobs
 - option 3-43, 4-7
- Auto Print Job Log Every 55 Jobs
 - option 3-43, 4-7

B

- Bindery file servers
 - connecting 3-28, 4-22
 - defined 5-5
 - emulation mode 3-22, 4-16, 5-5
 - setting up context 5-9 to 5-10
- Bindery Setup
 - adding Bindery connections 3-28, 4-22
 - on color server 3-27 to 3-31, 4-21
 - removing Bindery
 - connections 3-31, 4-24
 - requirements for NetWare server 3-27
- Black Overprint option 3-41, 4-34
- BOOTP protocol 3-15, 3-16, 3-18, 3-19
- Broker, NDPS printing 5-3

C

- cables, Token Ring option A-2
- canceling Setup changes 3-8
- changing
 - Administrator password 3-43, 4-6
 - Bindery connection 3-30
 - host name or DNS name 6-9
 - Novell print server, Bindery 3-27, 3-30
- characters
 - allowed in remote Windows Printing
 - Service Setup 4-26
 - used on Control Panel 3-9, 4-5
- Choose File Server for editing Bindery
 - connection 3-30
- Chooser, AppleTalk 3-8, 4-4

- choosing a Bindery Server to
 - connect 3-28, 4-22
- Clear Each Scan Job option 3-9
- Clear Frame Types, IPX/SPX Setup 3-21
- Clear Server option 3-43, 3-45
- clearing the Job Log 3-43, 4-7
- client setup
 - Fiery WebTools 5-16
 - network printing 5-10 to 5-15
 - overview 1-2
 - Token Ring A-3
- CMYK printing by default 3-38, 4-31
- CMYK Simulation Method
 - option 3-40, 4-33
- CMYK Simulation Profile option 3-40, 4-33
- Color Mode option 3-38, 4-31
- color server
 - back view showing connectors 1-10
 - back view with Token Ring option A-2
 - Control Panel 3-3
 - display window 3-3
 - maintaining and improving
 - performance 6-3
 - naming 3-8, 4-4
 - network installation summary 1-3
 - power switch 1-10
 - Setup, *see* Setup
- Color Setup 3-39, 4-32
- Command WorkStation xi
 - problems connecting to color
 - server 6-11
 - Setup from 4-2
- Comment option, Windows
 - printing 3-33, 4-27
- Configuration page
 - determining IPX frame types
 - bound 3-21
 - printing 3-46, 4-35
 - troubleshooting connection
 - problems 6-11
- Configure button, Fiery WebTools 5-17
- configuring color server
 - from Control Panel 3-1 to 3-45
 - from Windows computer 4-1 to 4-34
 - preparing for 2-10
- configuring network clients
 - NetWare 5-10
 - Windows NT 5-14
- configuring network servers
 - NetWare 5-6, 5-7
 - UNIX 5-19
 - Windows NT 5-12
- connected Novell servers,
 - Bindery 3-30, 4-23
- connecting
 - copier interface cable 2-10
 - network cable 1-10
 - to a Bindery file server 3-28, 3-29
 - to multiple Bindery file servers 3-27
 - Token Ring cable A-2
- control levels 2-7
 - scenarios 2-6
 - setting 2-1
- Control Panel
 - accessing Setup 3-3, 3-4
 - Change Password option 3-42
 - Clear Server option 3-43, 3-45
 - Color Setup 3-39
 - help map, *see* Control Panel Map
 - illustrated 3-3
 - illustrated Setup examples 3-7
 - initial Setup from 3-1
 - Job Log Setup 3-42
 - Network Setup 3-10
 - Printer Setup 3-35
 - PS (PostScript) Setup 3-36
 - Server Setup 3-8
 - Setup interface 3-5
- Control Panel Map 3-5
- Convert Paper Sizes option 3-37, 4-31
- Courier font, substitution with 3-38, 4-32
- cover page, printing at end of job 3-38, 4-32

D

date, setting 3-8, 4-4
 Default Paper Sizes option 3-37, 4-32
 Delete Scan Jobs option 4-5
 delete symbol, in Setup display 3-6
 destination, Fiery WebLink 5-17
 device
 name 3-8, 4-4, 4-30, 4-31, 4-33, 6-10
 DHCP protocol 3-15, 3-16, 3-18, 3-19
 diagrams of network setup 1-4 to 1-9
 Direct connection
 described 2-1, 2-2
 publishing 3-36, 4-30
 required for downloading fonts 2-2
 disconnecting a Bindery file
 server 3-27, 3-31
 disk space 6-3
 DNS (Domain Name
 Server) 5-12, 5-13, 6-9
 Domain or Workgroup option, Windows
 printing 3-34, 4-27
 downloading fonts, Direct connection
 requirement 2-2

E

Edit Connection, Bindery Setup 3-30
 explained 3-27
 Enable AppleTalk option 3-14
 Enable Auto IP Configuration
 option 3-16, 3-18
 Enable Ethernet option 3-13, 4-9
 Enable IPP option 3-34, 4-28
 Enable LPD option 3-22, 4-16
 Enable NDS option 3-23, 4-17
 Enable Port 9100 Print Services
 option 3-35, 4-29
 Enable Printed Queue option 3-9, 4-5
 Enable PServer option 3-23
 Enable Source Routing option 3-13, 4-9
 Enable TCP/IP for Ethernet
 option 3-15, 4-14

Enable TCP/IP for Token Ring
 option 3-18, 4-14
 Enable Token Ring option 3-13, 4-9
 Enable Web Services option 3-34, 4-28
 Enable Windows Printing option 3-32, 4-26
 enabling
 client utilities 3-15, 3-18
 Fiery WebTools 3-34, 4-28
 Enter First Letters of Server Name (search
 option), Bindery Setup 3-28
 Enter Your File Server Password, Bindery
 Setup 3-29
 Enter Your Login Name, Bindery
 Setup 3-29
 Enter Your Print Server Password, Bindery
 Setup 3-29, 3-30
 error messages 3-38, 6-4
 “No AppleTalk zone found” 3-14
 during Setup 6-4
 during startup 6-7
 NetWare 6-7
 runtime 6-9
 Ethernet 1-11
 frame types 4-13
 network 5-2, 5-5
 Port Setup 3-13
 protocols supported 1-4
 Ethernet Setup from Control Panel 3-12
 Ethernet Speed 3-13
 in Port Setup 3-13
 in Protocol Setup 3-15
 Ethernet Setup from remote Setup
 Port Setup 4-9
 Ethernet Speed option 3-13, 4-9
 Exit Bindery Setup 3-31
 explained 3-27
 exiting Setup, Control Panel 3-8, 3-45

F

Fiery WebDownloader, described 2-5
 Fiery WebLink 2-5
 setting the destination 5-17

Fiery WebSetup, described 2-5

Fiery WebSpooler

- described 2-4
- reprinting jobs in Printed queue 3-9

Fiery WebTools 2-4, 5-16 to 5-17

- accessing 5-17
- enabling 3-34, 4-28
- enabling only certain WebTools 5-17
- Installer 2-5
- setting up 5-16
- Status 2-4

FieryBar

- accessing Clear Server command 3-45
- accessing Setup 4-2
- restarting the server process 2-8

File Server 4-22, 4-24

File Server Login option, Bindery 3-29

File Server Password (Bindery) 3-29

File Server, Bindery 4-22, 4-24

font substitution 3-38, 4-32

frame types supported

- AppleTalk 3-20
- IPX/SPX, Ethernet 3-20, 4-13
- IPX/SPX, Token Ring 3-20, 4-13
- TCP/IP 3-20

From List option (adding a file server) 3-28

G

gateway address, setting 3-17, 3-19

General Setup options 4-4 to 4-7

guest login (Novell)

- in Bindery Setup 3-28
- in Network Setup 6-7

Guest privileges (no password) for WebSpooler 2-4

H

Hold queue 3-36, 4-30

- described 2-1, 2-2

host name 5-12, 5-13, 6-9

- database 5-12

I

improving color server performance 6-3

Installer WebTool, *see* Fiery WebTools

installing color server on network 1-2

Internet

- accessing server with Fiery WebTools 2-4
- WebLink access 5-17

Internet Printing Protocol, enabling 3-34

IP address

- assigning automatically 3-16, 3-18
- for Ethernet Setup 3-17
- for Token Ring Setup 3-19
- required for TCP/IP printing 5-19

IPP Setup 3-34

IPX (Novell) 5-5 to 5-10

- Bindery file server, connecting 3-27
- client utilities 5-6
- NDS (Novell Directory Services) 3-22, 4-16, 5-9
- NetWare client setup 5-10
- NetWare server setup 5-7
- network diagram 1-6
- overview of printing 5-6
- setting bindery context 5-9
- setting up printing 5-7
- terms used to describe 3-27
- tips for experts 5-6

IPX/SPX

- installing with Token Ring A-3
- polling interval 4-25
- protocol setup 3-20
- selecting frame types 3-21
- Setup 3-20
- summary of Setup options 3-11

J

Java to support Internet browser 5-16

Job Log

- clearing automatically 3-43
- clearing jobs from 3-45

- default options 3-42
 - defined 3-42
 - printing automatically 3-43
 - setting the page size used 3-43, 4-7
- Job Log Setup
 - from Control Panel 3-42
 - from Windows computer 4-7
- job management tools
 - defined 2-1
 - deleting jobs with 3-45
 - printing Job Log 3-42
- Jobs Saved in Printed Queue option 3-9, 4-5

L

- lpd (TCP/IP) 5-18
 - printing 2-2, 3-22, 4-16
 - setup summary 5-19 to 5-20

M

- Mac OS computers
 - on AppleTalk network 1-5
 - with Windows NT 5-11
- maintaining color server performance 6-3
- Maximum Frame Size option, Token Ring Setup 3-13, 4-9
- maximum server connections, Bindery 3-27
- media attachment unit (MAU) A-1
- Menu button 3-8
- messages, *see* error messages
- multiple Bindery file servers,
 - connecting 3-27

N

- naming the color server 3-8, 6-9
- NDPS (Novell Distributed Print Services) 5-2
- NDPS Manager 5-2
- NDS (Novell Directory Services) 3-22, 4-16, 5-9
 - defined 5-5
 - enabling 3-23
 - print queue subtree 3-26

- Setup on color server 3-23 to 3-26
 - setup requirements 3-23
- NDS Print Server 4-17
- NDS Setup 3-23
- NDS tree
 - browsing 3-23, 3-24, 4-17
 - browsing to print queue root 3-26
 - browsing to Print Server 3-25
 - browsing to User Login object 3-24
 - password 3-24
- NETADMIN 5-8
- NETBEUI 1-7
- NetWare
 - Bindery and NDS on the same network 3-23
 - Bindery Services 3-22
 - Directory Services 3-22, 4-16
 - error messages 6-7, 6-8
 - NDS (Novell Directory Services) 5-9
 - print server poll interval 3-32
 - setting up network on the Control Panel 3-23
- NetWare 4.x bindery context 5-9
- NetWare File Server, Bindery
 - connecting 3-27, 3-28
 - finding available servers 3-28
 - removing connection 3-31
 - selecting for editing 3-30
 - setting up more than one 3-27
- NetWare Print Console 5-10
- NetWare Print Server poll interval 3-32
- NetWare Print Server, Bindery 3-29, 3-30
 - changing the selection 3-27, 3-30
 - connecting 3-29, 3-30
 - password 3-29
- NetWare Server Poll Interval 3-32
- NetWare, supported networking environments 5-5
- network
 - AppleTalk 1-5
 - boards 4-8

- cable 2-10
- installation diagrams 1-2 to 1-9
- installation summary 1-3
- IPX (Novell) 1-3, 1-4, 1-6
- lpd (TCP/IP) 1-3, 1-4, 1-9
- protocols supported 1-1
- using multiple protocols 1-4
- with Windows NT 1-7
- Network Setup 2-9
 - exiting 3-12
 - from Control Panel 3-10 to 3-35
 - from Windows computer 4-8 to 4-29
 - part of initial Setup 4-1
 - troubleshooting 6-7
 - with Token Ring option A-3
- New Password option 3-44
- Novell, *see* NetWare

O

- Operator password 2-4, 3-44
 - privileges 2-3
- Output Profile option 3-41, 4-33

P

- Page Order option 3-37, 4-32
- paper size used by default 3-37
- Paper Sizes option 4-32
- passwords 4-5
 - Administrator privileges 2-3
 - Administrator, changing 3-43
 - Bindery print server 3-29
 - Fiery WebTools 2-4
 - for WebLink destination 2-5
 - for WebSpooler 2-4
 - NDS Tree 3-24
 - Novell file server, Bindery 3-29
 - Operator privileges 2-3
 - Print Server 3-25
 - setting 2-3
- PC compatibles
 - on IPX (Novell) network 1-6
 - on TCP/IP network 1-9

- PCONSOLE (NetWare utility) 3-29
- PDF files, font substitution in 3-38, 4-32
- platforms supporting utilities 5-1
- polling interval for NetWare print jobs 3-32, 4-25
- Port 9100 printing 4-29
- Port 9100 Queue option 4-29
- Port 9100 Setup 3-35
- Port Setup from Control Panel 3-12
 - Ethernet Setup 3-13
 - Token Ring Setup 3-13
- PostScript error 3-38
- PostScript Setup, *see* PS Setup
- Print Cover Page option 3-38, 4-32
- Print queue 2-2, 3-9, 3-36, 4-30
 - described 2-1, 2-2
 - publishing 3-36
- print queues 3-9
 - NDS 3-26
 - NetWare server (Bindery) 3-28
- Print Server
 - adding 4-23
 - selecting 4-19, 4-22
- Print Server password 3-25
- Print Start Page option 3-9, 4-5
- Print to PostScript Error option 3-38, 4-32
- Printed queue 2-2, 3-9
- printer
 - connection failure 6-9
 - not found 6-9
 - not in Chooser 6-9
- Printer Agent, NDPS 5-2
- Printer Setup 2-9
 - from Control Panel 3-35
 - from Windows computer 4-30
 - part of initial Setup 4-1
 - Printed queue options 4-5
- printing
 - CMYK by default 3-38
 - Configuration page from Control Panel 3-46
 - connections 2-1

- connections and queues 3-35
- cover page for each job 3-38
- Job Log automatically 3-43
- reprinting previously printed jobs 2-2
- start page at startup 3-9, 4-5
- printing connections 2-1
- problems, *see* troubleshooting
- protocols
 - for assigning IP address
 - automatically 3-16, 3-18
 - network 1-1
 - setting up 3-14, 4-10
 - See also* AppleTalk, IPX, IPX/SPX, TCP/IP
- PS (PostScript) Setup 3-36, 4-31
- PServer
 - defined 3-22
- PServer Setup 4-17
 - options 3-23
- PServer, *see* NetWare
- Publish Direct Connection
 - option 3-36, 4-30
- Publish Hold Queue option 3-36, 4-30
- Publish Print Queue option 3-36, 4-30
- publishing connections, overview 2-1
- Pure Black Text/Graphics option 3-41, 4-34

Q

- queues
 - clearing all 3-45
 - publishing 3-36, 4-30

R

- RARP protocol 3-15, 3-16, 3-18, 3-19
- Remove File Server, Bindery Setup 3-31
 - explained 3-27
- removing
 - Bindery file server connection 3-31
- Rendering Style option 3-40, 4-33
- reprinting jobs 2-2
- Request All Routes, Token Ring source
 - routing 3-14, 4-9

- Respond All Routes, Token Ring source
 - routing 3-14, 4-9
- RGB Separation option 3-40, 4-33
- RGB Source option 3-39, 4-33
- RJ-45 connector 1-11
- root login 5-20
- routers 3-15

S

- Save Changes
 - Color Setup, Control Panel 3-41
 - Job Log Setup, Control Panel 3-43
 - Network Setup, Control Panel 3-12, 3-35
 - Printer Setup, Control Panel 3-36, 3-39
 - Setup, Control Panel 3-8, 3-10
- Search Name option (adding a file server) 3-28
- Select File Server option 3-28
- Select Frame Types option 3-21
- Select NDS Tree option 3-24
- Select protocol (Setup option) 3-16, 3-18
- selecting
 - Bindery servers 3-30
 - default paper size 3-37, 4-32
- Server Name option 3-8, 4-4
- Server Name option, Windows
 - printing 3-33, 4-27
- Server Setup 2-8, 2-9
 - exiting 4-34
 - from Control Panel 3-8
 - from Windows computer 4-4
 - part of initial Setup 4-1
- Service Setup options 3-22, 4-15
- setting up NDS connection 5-9
- Setup
 - initial (on the Control Panel) 3-1
 - making changes to 3-1
 - screen types 3-6, 3-7
 - See also* Server Setup, Network Setup, Printer Setup, PS Setup, Color Setup, Job Log Setup

- Setup from Control Panel
 - accessing 3-3
 - administrative functions 3-42
 - Color Setup 3-39
 - error messages 6-4
 - Job Log Setup 3-42
 - Network Setup 3-10
 - Port Setup 3-13
 - Printer Setup 3-35
 - Protocol Setup 3-14 to 3-20
 - Server Setup 3-8
 - Service Setup 3-22
 - summary 3-2
- Setup menu 3-4
- SMB, *see* Windows printing
- Source Routing, Token Ring
 - Setup 3-13, 4-9
- Spot Color Matching option 3-41, 4-34
- Start Page, printing 3-9, 4-5
- Status WebTool, *see* Fiery WebTools
- STP (shielded twisted pair) cable A-1
- Subnet Mask option 3-17, 3-19
- superuser 5-20
- Support option 4-5
- Supported Servers, Bindery Setup 3-30
- System Date option 3-8, 4-4
- System Time option 3-9, 4-4

T

- TCP/IP
 - adding server to network 5-13
 - Ethernet Setup from Control Panel 3-15
 - host name 6-9
 - http protocol 1-1
 - installing with Token Ring A-3
 - lpd printing 4-16
 - lpd protocol 1-1
 - nbt protocol 1-1
 - network diagram 1-9
 - on both Ethernet and Token Ring 3-15
 - protocol setup 3-15
 - published connections 3-35

- setting up printing from
 - Windows NT 5-11 to 5-15
- settings 4-14
- Setup from Control Panel 3-15
 - summary 3-11
- Token Ring Setup from Control Panel 3-18
 - with UNIX workstations 5-18
- terminology, Novell 3-27
- time, setting 3-9, 4-4
- Token Ring
 - client setup A-3
 - frame types 3-21, 4-13
 - network interface card A-1
 - overview A-1 to A-3
 - Port Setup 3-13
 - protocols supported 1-4
 - summary of Setup 3-11
 - summary of Setup required A-3
- Token Ring Setup
 - in Port Setup 3-13
 - in TCP/IP Setup 3-18
- Token Ring Speed option 3-13
- Toner Reduction option 3-38, 4-31
- Transmission Speed (Ethernet) option 4-9
- Transmission Speed (Token Ring)
 - option 4-9
- troubleshooting
 - Command WorkStation connection
 - problems 6-11
 - connection to printer fails 6-9
 - Printer not found in the selection list of
 - Fiery utilities 6-11
 - Printer not found—TCP/IP or IPX
 - networks 6-9
 - Setup, Control Panel 6-4
- twisted pair cable 1-11

U

- UNIX
 - managing print jobs 5-21
 - on TCP/IP network 1-9, 5-18

- printcap file 6-10
- printing to color server 5-20
- remote printer name 6-10
- setting up printing to color server 5-19
- tips for experts 5-18
- Use Character Set option 3-9, 4-5
- Use WINS Name Server option 3-33, 4-27
- utilities
 - enabling protocol on the
 - server 3-15, 3-18
 - required print connections 3-35
- UTP (unshielded twisted pair) cable A-1

V

- View Server List, Bindery Setup 3-30
 - explained 3-27

W

- Web Services Setup 3-34, 4-28
- WebDownloader, *see* Fiery WebDownloader
- WebLink, *see* Fiery WebLink
- WebSetup, *see* Fiery WebSetup

- WebSpooler, *see* Fiery WebSpooler

- WebTools, *see* Fiery WebTools

- Windows 95/98

- printing in Windows NT
 - environment 5-11, 5-15

- Windows computers, printing without a

- Windows NT 4.0 server 5-15

- Windows NT

- changing network configuration 4-34

- Control Panel 2-9

- network environment 1-7

- setting up Windows NT server 5-12

- with TCP/IP 1-7, 1-9

- Windows

- printing 1-1, 3-32, 4-16, 4-26, 5-15

- domain issues 3-2

- setting domain or workgroup 3-34, 4-27

- WINS IP Address option 3-33, 4-27

- WINS name server 3-33

303 Velocity Way
Foster City, California 94404 USA

www.efi.com

26 Cunningham Street
North Sydney NSW 2060, Australia

Alameda Santos, 234 Suites 603 to 605
01418-000 São Paulo SP, Brasil

Kaiserwerther Straße 115
D-40880 Ratingen, Duesseldorf, Deutschland

Eastern Europe and Central Asia
Luegallee 18, D-40545 Duesseldorf, Deutschland

Parque Empresarial San Fernando, Edificio Francia
28830 Madrid, España

Immeuble Atria—5, Place des Marseillais
94227 Charenton-Le-Pont, Cedex, France

28/F, Soundwill Plaza, 38 Russell Street
Causeway Bay, Hong Kong

Centro Direzionale Milanofiori, Strada 6, Palazzo EI
20090 Assago (Milano), Italia

Shinjuku I-Land Wing 13F, 3-1 Nishi Shinjuku 6-chome,
Shinjuku-ku, Tokyo 160-0023, Japan

Boeing Avenue 201 - 207
1119 PD Schiphol-Rijk, Nederland

60-B Peck Seah Street
Singapore 079323

Frösundavägs Allé 15 4tr
169 70 Solna, Sverige

Stonebridge House, Padbury Oaks, Old Bath Road
Longford, Middlesex UB7 0EW, UK

プリンター機能の操作方法に関するお問い合わせは、
「リコープリンターコールセンター、imagicダイヤル」にご連絡ください。



コールはイマジオ

0120-056-140

Electronics
FOR **Imaging™**

●受付時間：9～12時、13～17時（土、日、祝祭日、リコーの休業日を除く）

Color Controller E-810

PRINTING GUIDE

For use with the following color copiers:

Ricoh Aficio Color 6513

Gestetner CS213d

RexRotary CS813d

nashuatec CS513d

infotec 7513

Savin SDC413



Copyright © 2001 Electronics For Imaging, Inc. All rights reserved.

This publication is protected by copyright, and all rights are reserved. No part of it may be reproduced or transmitted in any form or by any means for any purpose without express prior written consent from Electronics For Imaging, Inc., except as expressly permitted herein. Information in this document is subject to change without notice and does not represent a commitment on the part of Electronics For Imaging, Inc.

The software described in this publication is furnished under license and may only be used or copied in accordance with the terms of such license.

This product may be covered by one or more of the following U.S. Patents: 4,500,919; 4,837,722; 5,212,546; 5,343,311; 5,424,754; 5,467,446; 5,506,946; 5,517,334; 5,537,516; 5,543,940; 5,553,200; 5,615,314; 5,619,624; 5,625,712; 5,666,436; 5,760,913; 5,818,645; 5,835,788; 5,866,856; 5,867,179; 5,959,867; 5,970,174; 5,982,937; 5,995,724; 6,002,795; 6,025,922; 6,041,200; 6,046,420; 6,065,041; 6,067,080; 6,112,665; 6,116,707; 6,118,205; 6,122,407; 6,134,018; 6,141,120; 6,151,014; 6,166,821; 6,184,873; 6,185,335; 6,201,614; 6,215,562; 6,219,659; 6,222,641; 6,225,974; 6,226,419; 6,238,105; 6,239,895; D406,117; D416,550; D417,864; D419,185; D426,206; D430,206; RE36,947

Trademarks

Fiery, the Fiery logo, Fiery Driven, ColorWise, EFICOLOR and RIP-While-Print are registered trademarks of Electronics For Imaging, Inc. in the U.S. Patent and Trademark Office and certain other foreign jurisdictions.

EFI, the Electronics For imaging logo, eBeam, EDOX, the Fiery Driven logo, Fiery LX, Fiery SI, Fiery X2, Fiery X2e, Fiery X3e, Fiery X4, Fiery XJ, Fiery XJe, Fiery XJ-W, Fiery Z4, Fiery ZX, AutoCal, Colorcal, Command WorkStation, Continuous Print, DocBuilder, DocBuilder Pro, EFICOLOR, EFICOLOR Works, Fiery Downloader, Fiery Driver, Fiery Espresso, Fiery Link, Fiery Prints, Fiery Print Calibrator, Fiery Scan, Fiery Spark, Fiery Spooler, Freedom of Press, FreeForm, Harmony, Memory Multiplier, NetWise, PowerWise, RIPChips, ScanBuilder, the SkySpool logo, Splash, STARR Compression, Velocity, VisualCal, WebTools, WebSpooler, WebInstaller, and WebStatus, are trademarks of Electronics For Imaging, Inc.

All other terms and product names may be trademarks or registered trademarks of their respective owners, and are hereby acknowledged.

Legal Notices

APPLE COMPUTER, INC. ("APPLE") MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE. APPLE DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE APPLE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE APPLE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL APPLE, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE APPLE SOFTWARE EVEN IF APPLE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. Apple's liability to you for actual damages from any cause whatsoever, and regardless of the form of the action (whether in contract, tort [including negligence], product liability or otherwise), will be limited to \$50.

Part Number: 45022698

FCC Information

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Class B Declaration of Conformity

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Industry Canada Class B Notice

This Class B digital apparatus complies with Canadian ICES-003.

Avis de Conformation Classe B de l'Industrie Canada

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

RFI Compliance Notice

This equipment has been tested concerning compliance with the relevant RFI protection requirements both individually and on system level (to simulate normal operation conditions). However, it is possible that these RFI Requirements are not met under certain unfavorable conditions in other installations. It is the user who is responsible for compliance of his particular installation.

Dieses Gerät wurde sowohl einzeln als auch in einer Anlage, die einen normalen Anwendungsfall nachbildet, auf die Einhaltung der Funkentstörbestimmungen geprüft. Es ist jedoch möglich, dass die Funkentstörbestimmungen unter ungünstigen Umständen bei anderen Gerätekombinationen nicht eingehalten werden. Für die Einhaltung der Funkentstörbestimmungen einer gesamten Anlage, in der dieses Gerät betrieben wird, ist der Betreiber verantwortlich.

Compliance with applicable regulations depends on the use of shielded cables. It is the user who is responsible for procuring the appropriate cables.

Die Einhaltung zutreffender Bestimmungen hängt davon ab, dass geschirmte Ausführungen benutzt werden. Für die Beschaffung richtiger Ausführungen ist der Betreiber verantwortlich.

Software License Agreement

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS SOFTWARE. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE. INSTALLING OR USING THE SOFTWARE INDICATES THAT YOU AGREE TO AND ACCEPT THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS AGREEMENT YOU MAY RETURN THE UNUSED SOFTWARE FOR A FULL REFUND TO THE PLACE OF PURCHASE.

License

Electronics For Imaging, Inc. ("EFI") grants you a non-exclusive license to use the software ("Software") and accompanying documentation ("Documentation") included with the Product. The Software is licensed, not sold. You may use the Software solely for your own customary business or personal purposes. You may not rent, lease, sublicense or lend the Software. You may, however, permanently transfer all of your rights under this Agreement to another person or legal entity provided that: (1) you transfer to the person or entity all of the Software and Documentation (including all copies, updates, upgrades, prior versions, component parts, the media and printed materials, and this Agreement); (2) you retain no copies of the Software and Documentation, including copies stored on a computer; and (3) the recipient agrees to the terms and conditions of this Agreement.

You may not make or have made, or permit to be made, any copies of the Software or portions thereof, except as necessary for backup or archive purposes in support of your use of the Software as permitted hereunder. However, under no circumstances may you make or have made, any copies of any Software included on the ROM, the hard disk drive or any other component of the controller board or hardware. You may not copy the Documentation. You may not attempt to alter, disassemble, decompile, decrypt or reverse engineer the Software.

Proprietary Rights

You acknowledge that the Software is proprietary to EFI and its suppliers and that title and other intellectual property rights therein remain with EFI and its suppliers. Except as stated above, this Agreement does not grant you any right to patents, copyrights, trade secrets, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software. You may not adopt or use any trademark or trade name which is likely to be similar to or confusing with that of EFI or any of its suppliers or take any other action which impairs or reduces the trademark rights of EFI or its suppliers.

Confidentiality

You agree to hold the Software in confidence, disclosing the Software only to authorized users having a need to use the Software as permitted by this Agreement and to take all reasonable precautions to prevent disclosure to other parties.

Remedies And Termination

Unauthorized use, copying or disclosure of the Software, or any breach of this Agreement will result in automatic termination of this license and will make available to EFI other legal remedies. In the event of termination, you must destroy all copies of the Software and all of its component parts. All provisions of this Agreement relating to disclaimers of warranties, limitation of liability, remedies, or damages, and EFI's proprietary rights shall survive termination.

Limited Warranty And Disclaimer

EFI warrants to the original purchaser ("Customer") for thirty (30) days from the date of original purchase from EFI or its authorized retailer that the Software will perform in substantial conformance to the Documentation. EFI warrants the media containing the Software against failure during the above warranty period. EFI makes no warranty or representation that the Software will meet your specific requirements, that the operation of the Software will be uninterrupted or error free, or that all defects in the Software will be corrected.

EXCEPT FOR THE ABOVE EXPRESS LIMITED WARRANTY, EFI MAKES AND YOU RECEIVE NO WARRANTIES OR CONDITIONS ON THE SOFTWARE, EXPRESS, IMPLIED, STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND EFI SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limitation Of Liability

IN NO EVENT WILL EFI OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST PROFITS, COST OF COVER OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING FROM THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE OR FAILURE OF THE SOFTWARE, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF EFI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. YOU ACKNOWLEDGE THAT THE PRICE OF THE PRODUCT REFLECTS THIS ALLOCATION OF RISK. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. EFI DOES NOT EXCLUDE LIABILITY IN RESPECT OF PERSONAL INJURY, DEATH, WILLFUL MISCONDUCT OR GROSS NEGLIGENCE, EXCEPT TO THE MAXIMUM EXTENT THAT IT CAN BE EXCLUDED OR LIMITED BY LAW.

Export Controls

You agree that you will not export or re-export the Software in any form in violation of any applicable laws or regulations of the United States or the country in which you obtained them.

U.S. Government Restricted Rights

Software provided with this Product is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.

General

The laws of the State of California govern this Agreement. You agree that this Agreement shall not be subject to the United Nations Convention on Contracts for the International Sale of Goods (1980). This Agreement is the entire agreement held between us and supersedes any other communications or advertising with respect to the Software. If any provision of this Agreement is held invalid, the remainder of this Agreement shall continue in full force and effect.

If you have any questions, please see EFI's web site at www.efi.com.

Contents

Introduction

About this manual	xi
About the documentation	xii
How the E-810 works	xiii
About printer drivers and PPDs	xiii
Before you begin	xiv

Chapter 1: Printing from Windows Computers

Printing from applications	1-1
Setting options and printing from Windows 9x/Me	1-1
Working with custom page sizes in Windows 9x/Me	1-14
Setting options and printing from Windows NT 4.0	1-16
Working with custom page sizes in Windows NT 4.0	1-20
Setting options and printing from Windows 2000	1-23
Working with custom page sizes in Windows 2000	1-27
Saving files to print at a remote location	1-30
Printing with Fiery Downloader or Fiery WebDownloader	1-30

Chapter 2: Printing from Mac OS Computers

Printing from applications	2-1
Selecting the E-810 in the Chooser	2-1
Setting options and printing from Mac OS computers	2-3
Defining custom page sizes	2-6
Printing with Fiery Downloader or Fiery WebDownloader	2-7

Chapter 3: Printing from UNIX Workstations

Printing to the E-810	3-1
------------------------------	-----

Chapter 4: Special Features

Printing variable data documents with FreeForm	4-1
How FreeForm works	4-1
Creating the master-elements document	4-2
Creating the variable-elements document	4-3
Combining the FreeForm Master with the variable-elements document	4-4
Using FreeForm	4-5
Printing simulations	4-9
Printing duplex pages	4-9
Scanning from the copier	4-10
Fiery Scan color conversion settings	4-11
Using Fiery Scan	4-11
Scan to HDD	4-16

Chapter 5: Downloading Files and Fonts

Using Fiery Downloader	5-1
Printing with Fiery Downloader	5-4
Downloading and managing printer fonts	5-8

Chapter 6: Tracking and Managing Print Jobs

Fiery WebTools	6-1
Checking E-810 status with the Status WebTool	6-2
Accessing information with WebLink	6-3
Downloading files with Fiery WebDownloader	6-3
Accessing scanned jobs with WebScan	6-4
Fiery Link	6-6
Fiery Link tools	6-8
Preferences	6-9
My Fiery List	6-11
Windows taskbar menu	6-11

Appendix A: Print Options

Where to set print options	A-1
Print option override hierarchy	A-2
Default settings	A-2
More about print options	A-9

Appendix B: Font List

PostScript printer fonts	B-1
Adobe Type 1 fonts	B-1
TrueType fonts	B-5

Appendix C: Troubleshooting

Maintaining optimal system performance	C-1
Troubleshooting	C-2
General printing problems	C-2
Problems with print quality	C-4
Problems with Fiery Downloader	C-5
Problems with Fiery Scan	C-6
Problems with Fiery WebTools	C-6

Index

Introduction

You can use the Color Controller E-810™ to print final documents or proof jobs you will later print on an offset press. You send a print job to the Color Controller E-810 as you would to any other printer—you select it from the Printers dialog box on Microsoft Windows computers, or in the Chooser on Apple Mac OS computers and then print from within any application.

NOTE: The term “E-810” is used in this manual to refer the Color Controller E-810. The name “Aero” is used in illustrations to represent the E-810.

Although it may not be the case at all sites, it is assumed that an operator controls and manages jobs sent by users from remote workstations. For information on the features of Command WorkStation™, Fiery® WebSpooler™, and Fiery Spooler™, see the *Job Management Guide*.

About this manual

This manual is intended for those remote users who send jobs via the network between their workstation and the E-810. It covers the following topics:

- Printing from a Windows computer
- Printing from a Mac OS computer
- Printing from UNIX
- Using special features, such as printing variable data documents, press simulations, duplex pages, and scanning images from the copier using Adobe Photoshop and the Fiery Scan™
- Downloading files and fonts using Fiery Downloader™ and Fiery WebDownloader™
- Monitoring jobs and accessing information using Fiery WebTools™ and Fiery Link™
- Specifying and overriding job settings, a list of fonts installed on the E-810, and troubleshooting information

About the documentation

This manual is part of a set of E-810 documentation that includes the following manuals for users and system administrators:

- The *Configuration Guide* explains basic configuration and administration of the E-810 for the supported platforms and network environments. It also includes guidelines for setting up UNIX, Windows NT 4.0, and Novell NetWare servers to provide Adobe PostScript printing services to clients.
- *Getting Started* describes how to install software to enable users to print to the E-810. Specifically, it describes installation of PostScript printer drivers, printer description files, and other user software provided on the User Software CD. It also explains how to connect each user to the network.
- The *Printing Guide* describes the printing features of the E-810 for users who send jobs via remote workstations on the network.
- The *Color Guide* provides information on managing the color output of your E-810. It addresses concepts and issues associated with printing to the E-810, and outlines key workflow scenarios. This manual explains how to calibrate your copier and take advantage of the ColorWise® color management system, as well as features of ColorWise Pro Tools™. In addition, the *Color Guide* offers information on printing from popular Windows and Mac OS applications.
- The *Job Management Guide* explains the functions of the E-810 client utilities and how they can be used to manage jobs. This book is intended for an operator or administrator, or a user with the necessary access privileges, who needs to monitor and manage job flow and troubleshoot problems that may arise.
- *Release Notes* provide last-minute product information and workarounds for some of the problems you may encounter.

How the E-810 works

The E-810 receives files from computers on the network, processes (RIPs) those files, and then sends them to the copier's print engine for printing.

Windows and Mac OS computers communicate with the E-810 by means of a PostScript printer driver and PostScript printer description (PPD) files. The driver enables you to use special features of the E-810 from the Print dialog box.

About printer drivers and PPDs

A printer driver manages printing communication between your application software and the printer. It interprets the instructions generated by the application software, merges those instructions with printer-specific PPD options you specify, and translates all that information into PostScript, a language the printer understands. In other words, the printer driver writes a PostScript file based on your original file and the options you set from the Print dialog box.

A PPD file contains information about the features and capabilities of a particular device (for example, what paper sizes and media types are supported). The printer driver reads the information in the PPD file and presents that information to you in the form of options you can choose from the Print dialog box. The PPD for the E-810 includes information about the features of both the copier and the E-810.

For information on the PPD options, see Appendix A.

Before you begin

Before using the E-810, follow these steps:

1. **Confirm that the system administrator has completed Setup, as described in the *Configuration Guide*.**
2. **Find out what printer defaults the administrator specified in Setup.**

These default settings can affect the results of your print jobs. Check with your administrator or operator for information on these default settings.
3. **Confirm that the user software is installed correctly on your workstation, as described in *Getting Started*.**
4. **Consult the *Color Guide* for information on print options and application features that affect color output.**
5. **Find out how your workstation is configured for printing on the network.**

If your site has an operator who controls all printing, you may have access to the Hold queue only. In this case, all jobs you send are spooled to the E-810 and held until the operator sends them to their next stage of processing.

You may also have access to the Print queue. If you send jobs to this queue, jobs spool to the E-810 and proceed to RIP and print according to your job settings—unless someone (you, or an operator, for example) intervenes.

Lastly, you may have access to the Direct connection, which sends jobs straight to the server without spooling.

6. **Find out whether the E-810 is set up to use Fiery WebTools and what your access privileges are.**

The administrator may or may not have enabled access to the server via the Internet (or an intranet). If access is enabled, a password may be required to use certain functions.

Chapter 1: Printing from Windows Computers

This chapter describes printing to the E-810 from Windows 9x/Me, Windows NT 4.0, and Windows 2000. You can print from a networked Windows computer or from a computer using Windows (WINS) printing. If you plan to print files at another location, you should follow the procedures described in “Saving files to print at a remote location” on page 1-30.

Another way to print from a Windows computer is to download PostScript (PS), Encapsulated PostScript (EPS), or Portable Document Format (PDF) files using Fiery Downloader or Fiery WebDownloader. Basic instructions are provided at the end of this chapter; for details on using Fiery Downloader, see Chapter 5.

NOTE: For information on setting up the Windows environment for printing with Windows servers connected to the E-810, see the *Configuration Guide*. For information on how to connect to the E-810 over the network, install printer drivers, and install the Fiery utilities, see *Getting Started*.

Printing from applications

Once you have installed the E-810 printer driver and set it to the proper port as described in *Getting Started*, you can print directly from most Windows applications. Simply choose the Print command from within your application.

To achieve the best printing results from specific applications, see the *Color Guide*.

Setting options and printing from Windows 9x/Me

To print from Windows 9x/Me, use the Adobe PostScript printer driver for Windows 9x/Me. The driver is included with the E-810 user software.


Once you have installed the Adobe PostScript printer driver and the PPD file, you can specify print settings for a particular job and print it to the E-810.

To print from Windows 9x/Me applications by connecting your computer to a print server via the network, one of the following is required: a NetWare server, a Windows NT server, or a UNIX server. For more information, see the *Configuration Guide*.

To print from Windows 9x/Me applications without connecting to a print server, you can use Server Message Block (SMB) printing. For more information, see *Getting Started*.


TO SET PRINT OPTIONS AND PRINT FROM WINDOWS 9x/ME USING THE ADOBE POSTSCRIPT PRINTER DRIVER

1. Click the Start button, point to Settings, and click Printers.
2. Select the icon for the E-810 and choose Properties from the File menu.
3. Click the Fiery Printing tab.

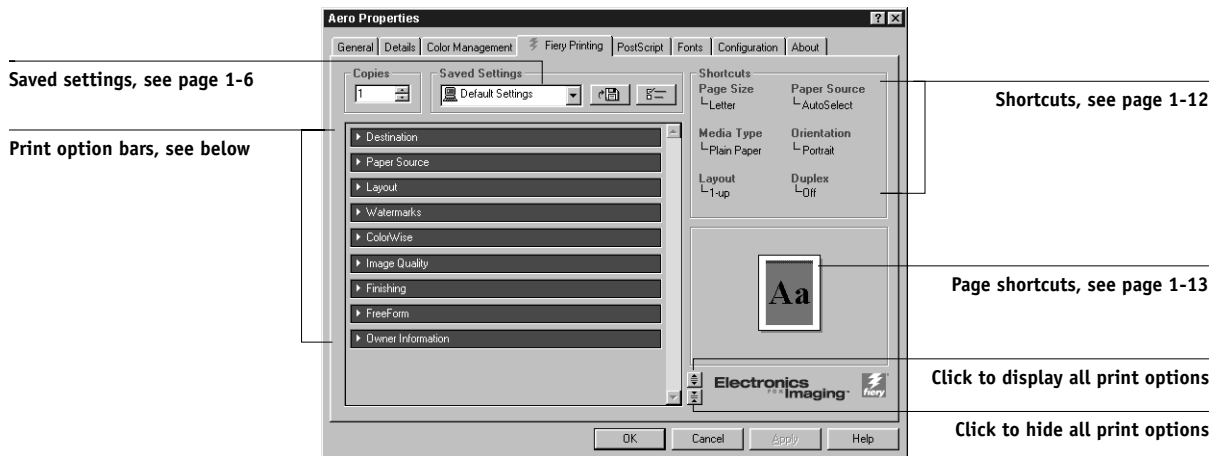


The Fiery Printing tab serves as the control center for all frequently used printing functions.

4. Click the **Paper Source** print option bar, and enter the appropriate settings.

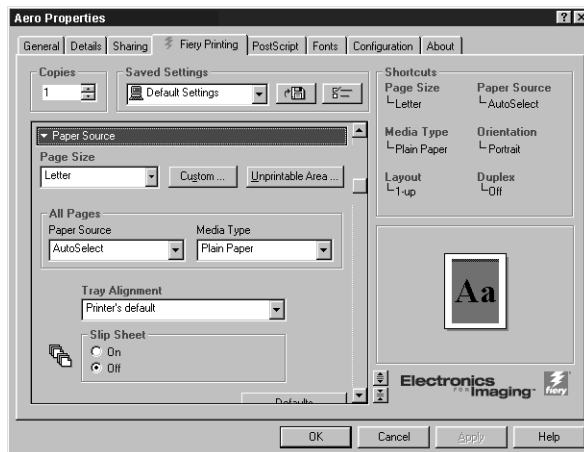


For information on print options, see Appendix A.

To use advanced color management features, such as **Rendering Style**, click the ColorWise bar, click Expert Settings and proceed to step 5; otherwise, skip to step 6.

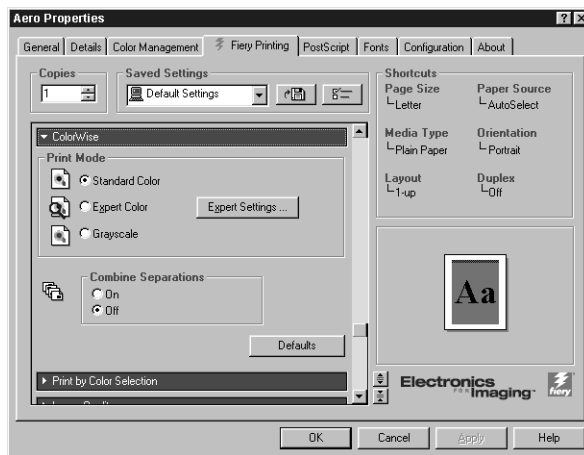

5. In the Expert Color Settings dialog box, click Update to display the current E-810 settings.

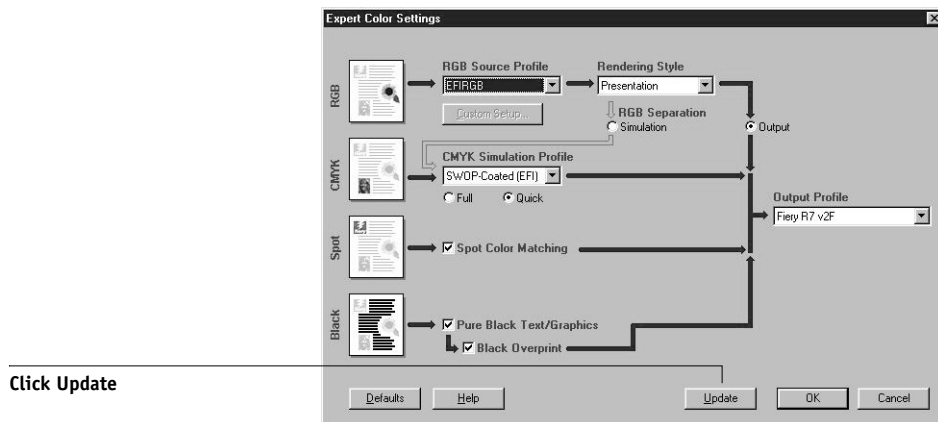

If the Update button does not appear, make sure that two-way communication is set up, as described in *Getting Started*.

6. Click the remaining print option bars to specify the appropriate settings for the print job.

These print options are specific to the E-810 and the copier. They override settings specified in E-810 Printer Setup, but can be overridden from Command WorkStation, Fiery WebSpooler or Fiery Spooler. For information about these options and overrides, see Appendix A.

If you choose **Printer's default**, the job prints according to the settings specified in Setup. See Appendix A for more information.


Some options can also be set from an application (for example, Reverse Page Order or Collation). In these cases, use the driver option to perform the function, rather than setting it from the application. The application may not set up the file properly for printing on the E-810 and may also take longer to process.

NOTE: If you specify incompatible print settings, the Conflict dialog box provides instructions to resolve the conflict.

1

1-5 Printing from applications

7. Click the Owner Information print option bar.

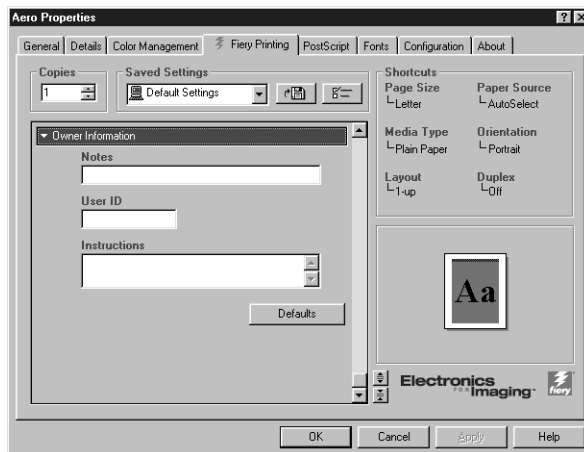

8. Enter text messages in the Notes and User ID areas.

Enter user and job identification information for managing purposes, or whatever information is required at your site.

The information you enter in these areas can be viewed by the operator in Command WorkStation and also appears in the Job Log. It *cannot* be edited or erased by the operator.

9. In the Instructions area, enter instructions to the operator about the job.

These instructions can be displayed in Command WorkStation, but do not appear in the Job Log. These instructions *can* be edited by the operator.

10. Click OK.

11. From your application, choose Print.

Make sure the E-810 is selected as your current printer.


12. Click OK.

Using saved settings

Print option settings can be saved on your hard disk so you can easily load specifically configured settings for a particular job.

TO CREATE SAVED SETTINGS

1. Make sure that **Default Settings** appears in the **Saved Settings** pop-up menu, then configure the options from the print option bars.

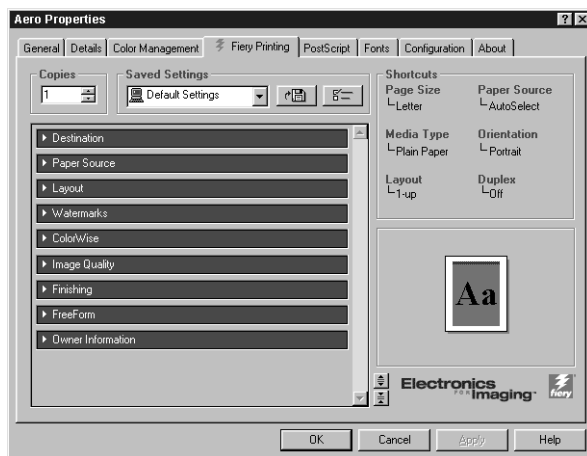


As soon as you change any settings, the Saved Settings menu displays **Untitled** instead of **Default Settings**.

1


1-7 Printing from applications

2. Click the Disk button.

Click the Disk button

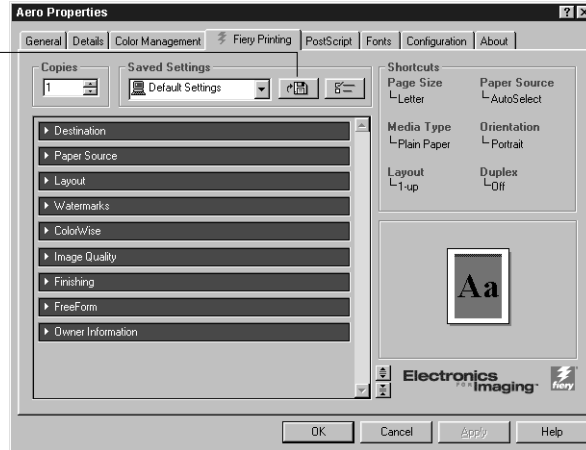

3. Enter a Settings Name and click OK.

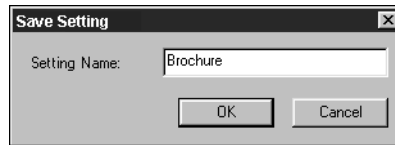

The name appears in the Saved Settings pop-up menu.

TO LOAD SAVED SETTINGS


1. From the Fiery Printing tab, click the Saved Settings pop-up menu.
2. Choose the settings you want to use.

The options are automatically configured with the saved settings.

TO DELETE SAVED SETTINGS

1. From the Fiery Printing tab, click the Settings button.

Click the Settings button

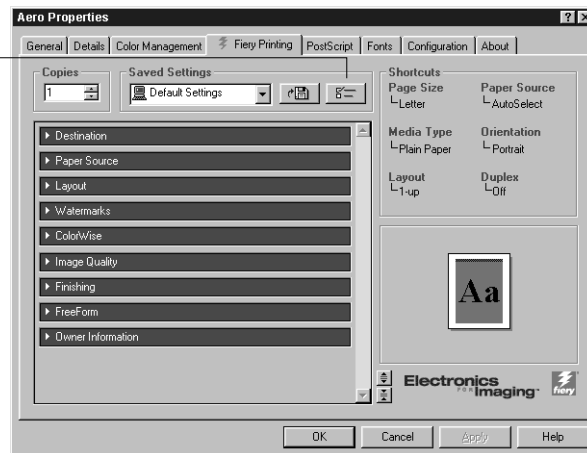


2. Select the settings you want to delete and click Delete.
3. Click Yes to confirm deletion, and then click OK.

TO MODIFY SAVED SETTINGS

1. From the Fiery Printing tab, click the Saved Settings pop-up menu.
2. Choose the settings you want to modify.
The options are automatically configured with the saved settings.
3. Configure your new settings from the print option bars, then click the Disk button.

Click the Disk button

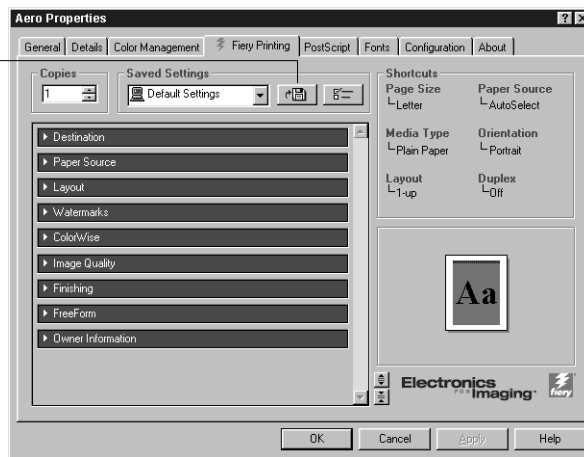


4. Click OK to save the modified settings.

To EXPORT SAVED SETTINGS

1. From the Fiery Printing tab, click the Settings button.
2. Select the Saved Settings you want to export, and then click Export.



3. Browse to the location where you want to save the file, enter a file name, and then click OK.

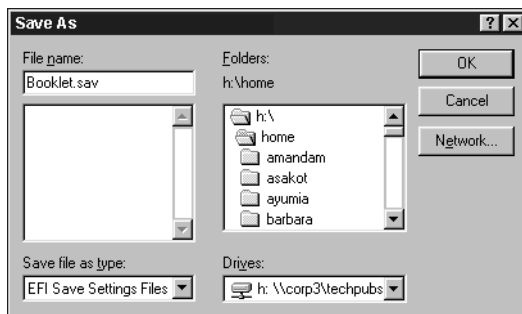


NOTE: The file name must include the .sav extension and can be up to eight characters long (not including the extension). The file name does not have to match the Settings Name.

4. Click OK in the Settings dialog box.

TO IMPORT SAVED SETTINGS

1. From the Fiery Printing tab, click the Settings button.
2. Click the Import button.
3. Browse to the location of the saved settings file you want to import.
4. Select the file, and then click OK.

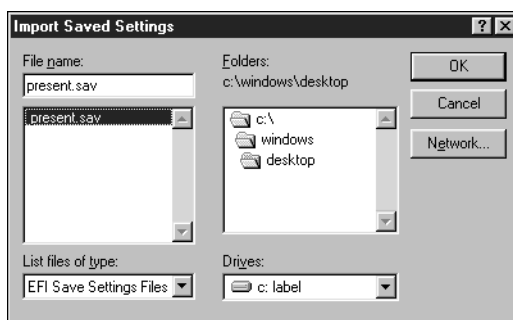

5. Click OK in the Settings dialog box.



NOTE: When you import saved settings, they appear in the Saved Settings menu under their Settings Name, not the file name. In the example above, the file present.sav (file name) was imported, but it appears in the Saved Settings menu as Presentation (Settings Name).


Using Shortcuts

The Shortcuts section of the driver interface displays the current settings for some of the most common print options. You can access and change these settings quickly and easily using the Shortcuts. You can also access some page layout and finishing options by right-clicking the image of the page directly below Shortcuts.

TO SET PRINT OPTIONS USING SHORTCUTS

1. From the Fiery Printing tab, place your cursor over the print option you want to set.

When your cursor is directly over the print option name, the cursor turns into a hand and the option name is underlined; see the Orientation print option in the example below.

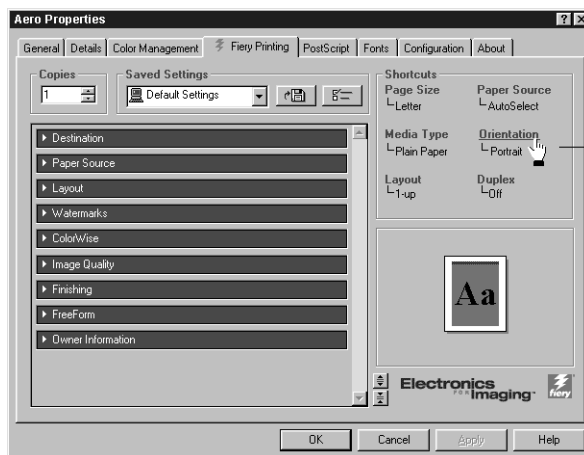

Selected print option


2. Click the selected print option and specify the appropriate settings.

Alternatively, you can right-click the print option and specify the settings directly.

3. Click Apply to make the new settings the default.
4. Click OK.

TO SET PRINT OPTIONS USING THE PAGE SHORTCUTS

1. From the Fiery Printing tab, click the page icon, then place your cursor over the page image and right-click.

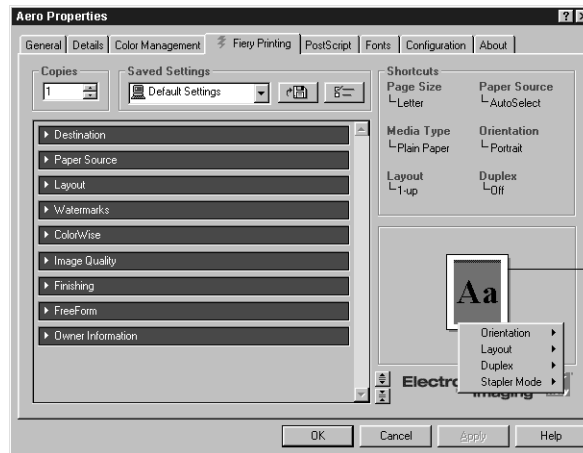

Right-click the page image

2. Specify the appropriate settings for the print options.
3. Click Apply to make the new settings the default.
4. Click OK.

TO MODIFY THE SHORTCUTS PRINT OPTION DISPLAY

1. From the Fiery driver, place your cursor over Shortcuts.
When your cursor is directly over Shortcuts, the cursor will turn into a hand and the option is underlined.
2. Click Shortcuts to open the Modify Shortcuts box.
3. To add a print option, click the selected print option in Available Shortcuts and Add to move to Current shortcuts.

To remove a print option, click a print option in Current Settings and Remove.

NOTE: You can add up to 6 shortcuts.

4. Use the Move Up or Move Down buttons to rearrange the current shortcuts in a specific order.
5. Click OK.


Working with custom page sizes in Windows 9x/Me

With custom page sizes, you define the page dimensions and the unprintable area of the page. You can save three different custom page sizes for easy use any time you print.

TO DEFINE A CUSTOM PAGE SIZE


1. Click the Start button, point to Settings, and choose Printers.
2. Right-click the E-810 icon, then choose Properties.
3. Click the Fiery Printing tab, then click the Paper Source print option bar.
4. Click the Custom button.

Click Custom

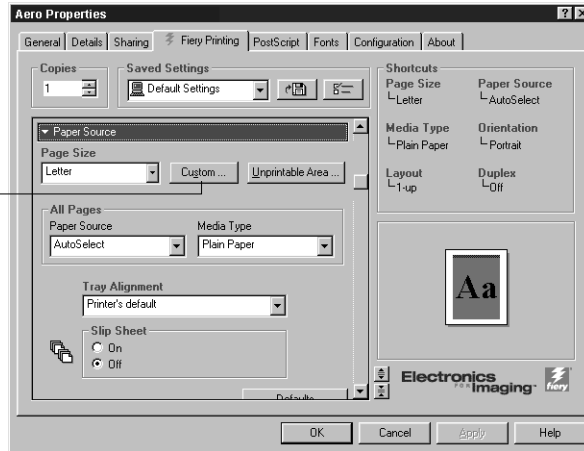

5. Enter the name and dimensions of the page, and then click OK.

Check Transverse to swap the width and height dimensions according to the paper feed direction.

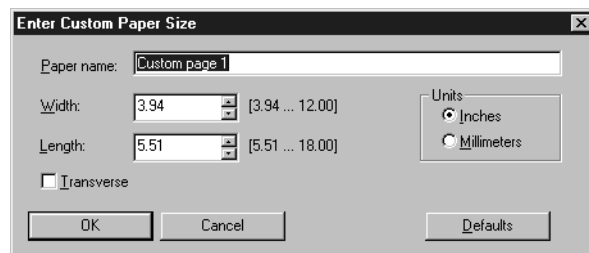

The new custom page name appears in the **Page Size** pop-up menu.

6. To define the unprintable area of the custom page, click the Unprintable Area button, enter the desired information, then click OK.
7. Click Apply and then OK.

After you define a custom page size, you can use it from within an application, without having redefine it each time you print.

TO PRINT A CUSTOM PAGE SIZE

1. Choose Print from your application.
2. Make sure the E-810 is selected as the printer, then click Properties.
3. Click the Fiery Printing tab, then click the Paper Source print option bar.
4. Select the custom page size from the Page Size pop-up menu.
5. Click OK and then click OK again to print the job.

Setting options and printing from Windows NT 4.0


You can print from Windows NT 4.0 using the Adobe PostScript printer driver included on the User Software CD.

Once you have installed the Adobe PostScript printer driver and the PPD file, you can specify print options.


With the Fiery PS printer driver, you can set options on a job-by-job basis (see below), or establish default settings for all jobs printed from your computer to the E-810 (see page 1-23).

TO SET PRINT OPTIONS FOR A SPECIFIC WINDOWS NT 4.0 PRINT JOB USING THE POSTSCRIPT PRINTER DRIVER

1. Choose **Print** in your application.
2. Make sure the **E-810** is selected as your printer, and click **Properties**.
3. Click the **Fiery Printing** tab.

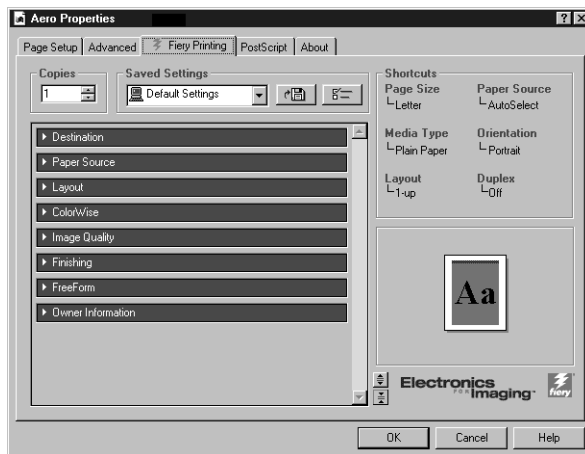


4. Click the ColorWise print option bar.

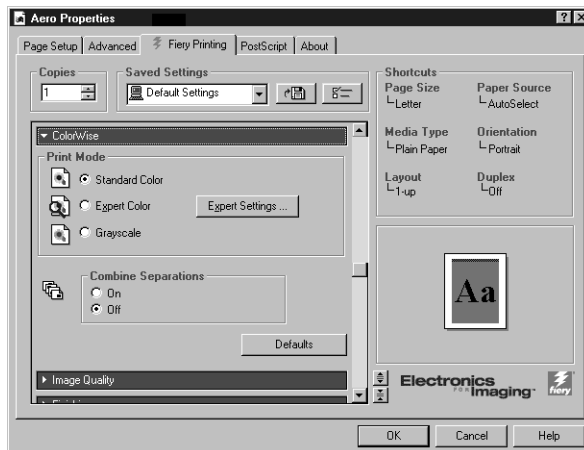

In the **Print Mode** area, specify the color mode for the job. If you want to use any advanced color management features, such as **Rendering Style**, click Expert Settings and proceed to step 5; otherwise, skip to step 6.

5. Specify the color settings for the print job, and then click OK.

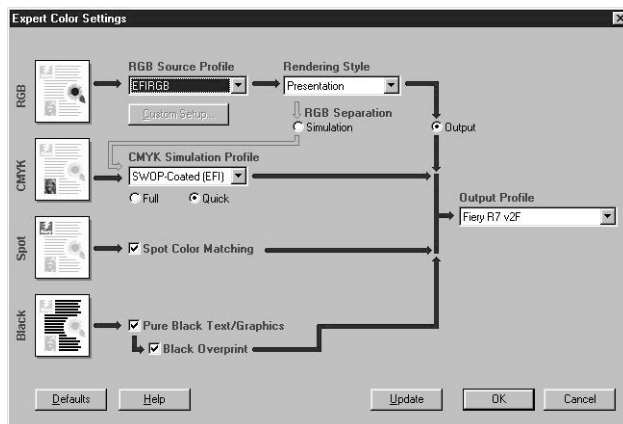

6. Click the remaining print option bars to specify the appropriate settings for the print job.


These print options are specific to the E-810 and the copier. They override settings in E-810 Printer Setup, but can be changed from Command WorkStation, Fiery WebSpooler, or Fiery Spooler. For information about these options and overrides, see Appendix A.

If you choose Printer's default, the job prints according to the settings specified in Setup. See Appendix A for more information.

NOTE: Some options listed in the printer driver can also be set from an application (for example, collation). In these cases, use the driver option to perform the function, rather than setting it from the application. The application may not set up the file properly for printing on the E-810 and may also take longer to process.

NOTE: If you specify incompatible print settings, the Conflict dialog box provides instructions to resolve the conflict.

7. Click the Owner Information print option bar.

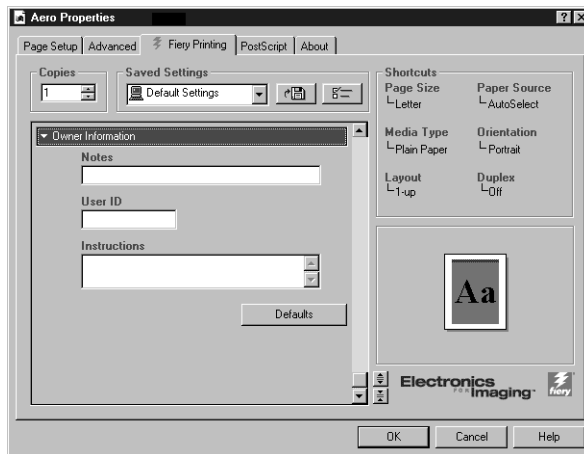

8. Enter text messages in the Notes and User ID areas.

Enter user and job identification information for managing purposes, or whatever information is required at your site.

The information you enter in these areas can be viewed by the operator in Command WorkStation and also appears in the Job Log. It *cannot* be edited or erased by the operator.


9. In the Instructions area, enter instructions to the operator about the job.

These instructions can be displayed in Command WorkStation, Fiery Spooler, and Fiery Web Spooler, but do not appear in the Job Log. These instructions *can* be edited by the operator.

10. Click OK, and then click OK in the Print dialog box.

TO SET DEFAULT PRINT OPTIONS FOR ALL WINDOWS NT 4.0 JOBS USING THE POSTSCRIPT PRINTER DRIVER

1. Click the Start button, point to Settings, and choose Printers.
2. Right-click to select the E-810, and choose Document Defaults.
3. Click the Fiery Printing tab.

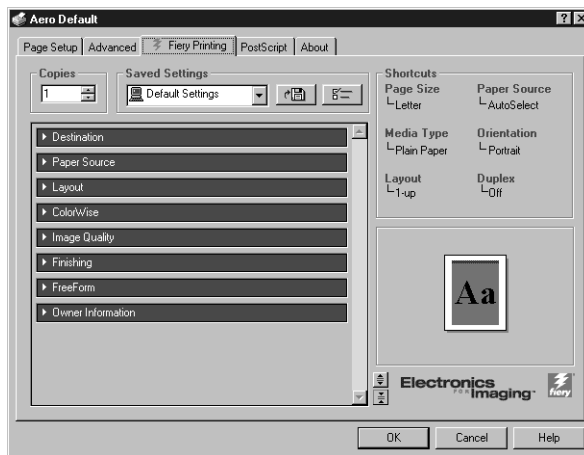


4. Specify the default settings for your print job, as described on page 1-17.

Working with custom page sizes in Windows NT 4.0


With custom page sizes, you define the page dimensions and the unprintable area of the page.

TO DEFINE A CUSTOM PAGE SIZE

1. Click the Start button, point to Settings, and choose Printers.
2. Right-click the E-810 icon and choose Document Defaults.
3. Click the Fieri Printing tab, and click the Paper Source print option bar.
4. Select Manual Feed from the Paper Source menu.
5. Click the Page Setup tab, and click the Paper Size menu.

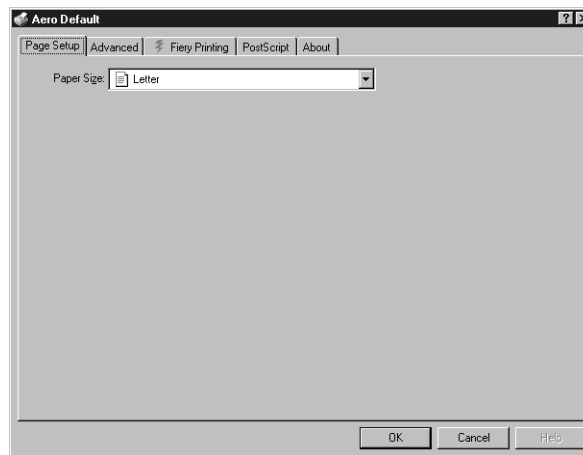

6. Select PostScript Custom Page Size.
7. Enter the dimensions of the page and click OK.

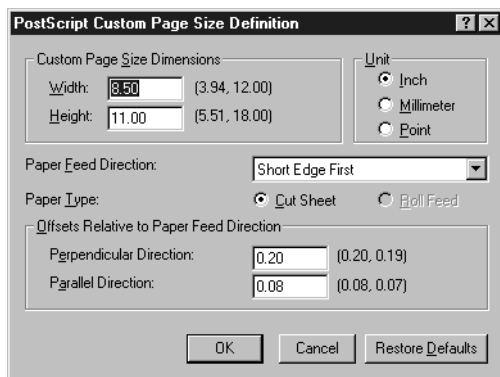


8. Click OK.

After you define a custom page size, you can use it from within an application without having redefine it each time you print.

TO EDIT A CUSTOM PAGE SIZE

1. Click the Start button, point to Settings, and choose Printers.
2. Right-click the E-810 icon and choose Document Defaults.

3. Click the Advanced tab and select Paper Size.

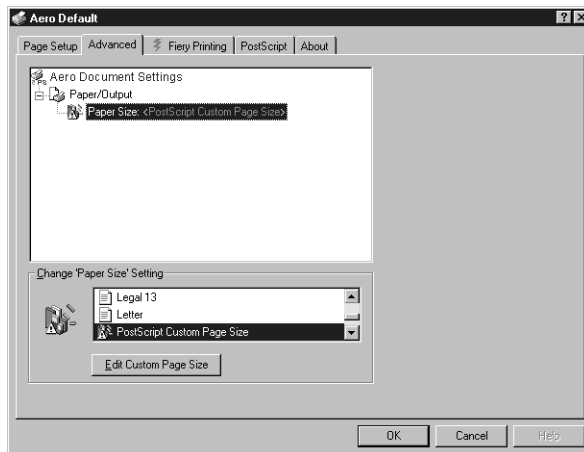

4. Select PostScript Custom Page Size.
5. Click the Edit Custom Page Size button.
6. Edit the dimensions of the page and click OK.

TO PRINT A CUSTOM PAGE SIZE

1. **Choose Print from your application.**
2. **Make sure the E-810 is selected as the printer and click Properties.**
3. **Click the Fiery Printing tab.**
4. **In the Paper Source tab, click Paper Source and select Manual Feed.**
5. **Click the Page Setup tab.**
From the Page Size menu, select PostScript Custom Page Size.
6. **Click OK and then click OK again to print the job.**

Setting options and printing from Windows 2000

You can print from Windows 2000 using the Microsoft printer driver included with your Windows 2000 system, and the PostScript PPD included on the User Software CD.

Once you have installed the printer driver and the PPD file, you can specify print options.

To print from Windows 2000 applications by connecting your computer to a print server via the network, one of the following is required: a NetWare server, a Windows NT server, or a UNIX server. For more information, see the *Configuration Guide*.


To print from Windows 2000 applications without connecting to a print server, you can use SMB printing. For more information, see *Getting Started*.

TO SET PRINT OPTIONS FOR A WINDOWS 2000 PRINT JOB USING THE MICROSOFT POSTSCRIPT PRINTER DRIVER


1. Choose Print in your application.

NOTE: The dialog box that appears may vary, depending on the application you are printing from.


2. Make sure the E-810 is selected as your printer.

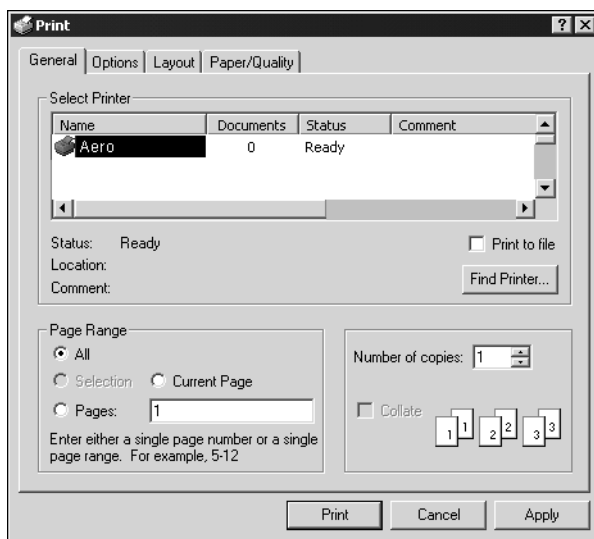

3. Select print options from the Layout and Paper/Quality tabs.

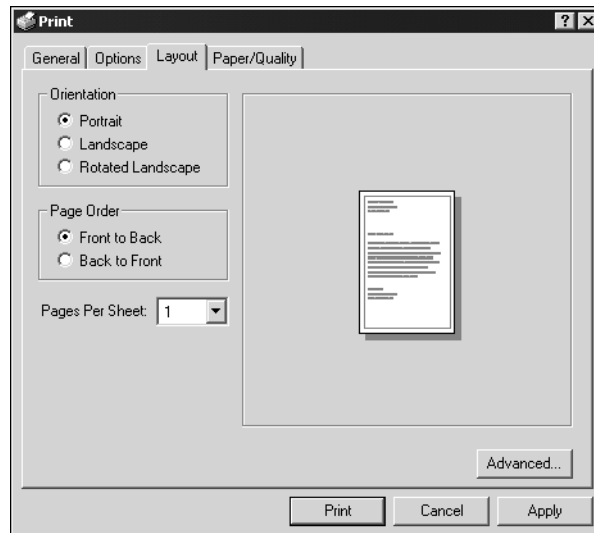


4. Click the Advanced button.

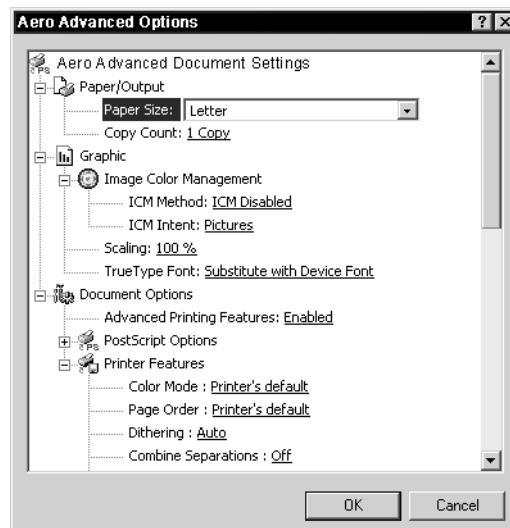

Select a setting from the **Paper Size** pop-up menu.

5. Scroll down to **Printer Features** and select the appropriate settings for the print job.

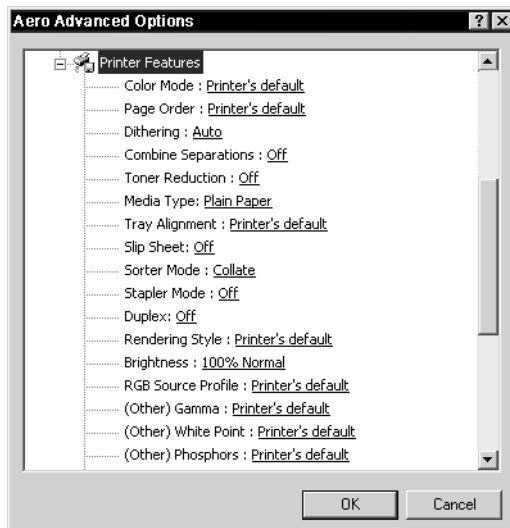

These print options are specific to the E-810 and the copier. They override settings in E-810 Printer Setup, but can be changed from Command WorkStation, Fiery WebSpooler, or Fiery Spooler. For information about these options and overrides, see Appendix A.

If you choose **Printer's default**, the job prints according to the settings specified in Setup.

NOTE: As you select print options, incompatible print settings display a caution icon next to their names. If you specify incompatible print settings, the Incompatible Print Settings dialog box provides instructions to resolve the conflict.

6. Click **OK** to close the **Advanced Options** dialog box.
7. Click **OK** to close the **Document Properties** dialog box.
8. Click **OK** to print.


The job prints with the specified settings.

Working with custom page sizes in Windows 2000

With a custom page size, you define the page dimensions and the unprintable area of the page. You can save a custom page size for easy use any time you print.


TO DEFINE A CUSTOM PAGE SIZE

1. Click the Start button, point to Settings, and choose Printers.
2. Right-click the E-810 icon, and choose Printing Preferences.

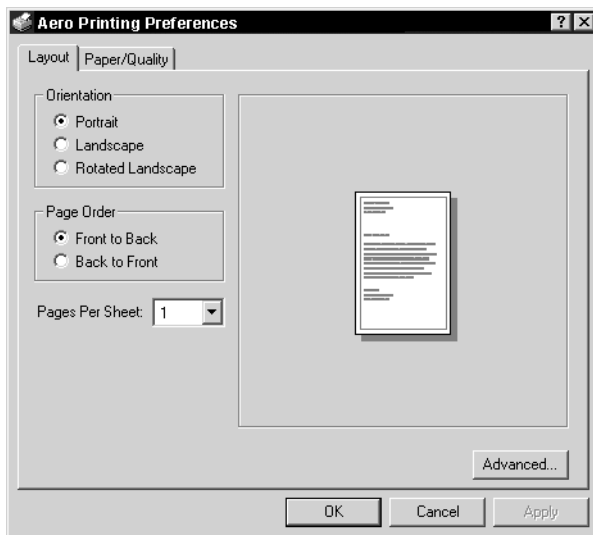


3. Click the Advanced button.

4. Select PostScript Custom Page Size from the Paper Size pop-up menu.

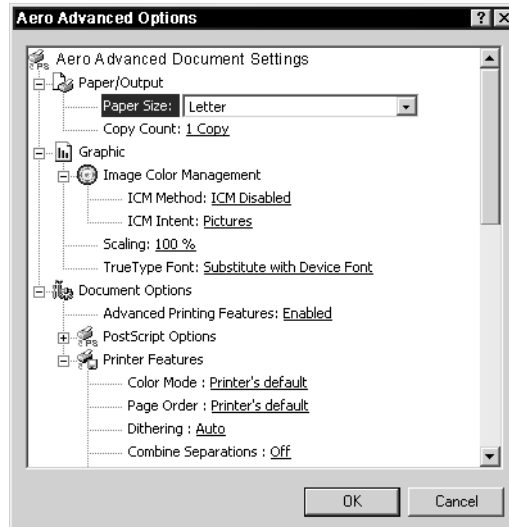

5. In the PostScript Custom Page Size Definition dialog box, specify options to define the custom page size.

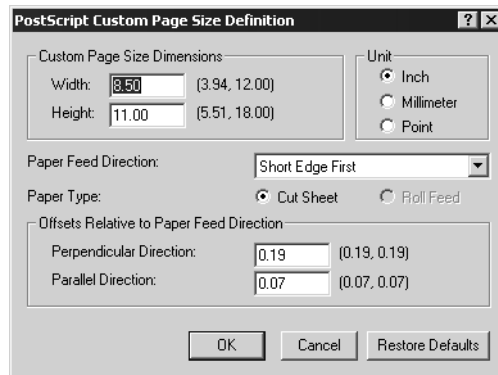

Custom Page Size Dimensions—Specify the width and height of the print job.

Unit—Specify the unit of measurement for the print job.

Paper Feed Direction—Specify the paper feed direction of the print job.

Paper Type—Specify the type of paper for the print job.

Offsets Relative to Paper Feed Direction—Specify the offsets (margins) of the print job relative to the paper feed direction.

6. Click OK to close the Advanced Options dialog box.
7. Click OK to close the Printing Preferences dialog box.

After you define a custom page size, you can specify it from within an application, without having to redefine it each time you print.

TO PRINT A CUSTOM PAGE SIZE

1. Choose Print from your application.
2. Right-click the E-810 icon, and choose Printing Preferences.
3. Click the Advanced button.
4. Select PostScript Custom Page Size from the Paper Size pop-up menu.
5. Verify the custom page size settings and click OK.
6. Click OK to close the Advanced Options dialog box.
7. Click OK to close the Printing Preferences dialog box.
8. Click Print.

Saving files to print at a remote location

If you do not have the E-810, and are preparing files to take to a service bureau or other location, print the final files to the File port (as opposed to one of the local ports). You can also print to the File port to create a file to download using Fiery Downloader. For instructions on printing to the File port, see your Windows documentation.

Printing with Fiery Downloader or Fiery WebDownloader

Downloading files with Fiery Downloader or Fiery WebDownloader is generally faster than printing from application software. You can use Fiery Downloader or Fiery WebDownloader to print PostScript, EPS, or PDF files.

TO PRINT USING FIERY DOWNLOADER

- 1. Create a PostScript, EPS, or PDF file.**

Specify the appropriate print options, and include (embed) any necessary fonts that are not resident on the E-810. For a list of fonts resident on the E-810, see Appendix B.

- 2. Launch Fiery Downloader and connect to the E-810.**

For instructions on setting up Fiery Downloader, see *Getting Started*.

- 3. Select the file(s) you want to download, and specify any necessary options.**

- 4. Click Download File(s).**

For details, see Chapter 5.

TO PRINT USING FIERY WEBDOWNLOADER**1. Create a PostScript, EPS, or PDF file.**

Specify the appropriate print options, and include (embed) any necessary fonts that are not resident on the E-810. For a list of fonts resident on the E-810, see Appendix B.

2. Launch Fiery WebTools and click Fiery WebDownloader.

See “Fiery WebTools” on page 6-1 for information on how to access Fiery WebDownloader.

3. Select the print connection and the file you want to download.**4. Click Download.**

Chapter 2: Printing from Mac OS Computers

You can print to the E-810 just as you would print to any other printer from any application software. First, select the E-810 as the current printer in the Chooser, and then print the file from within the application.

Another way to print from a Mac OS computer is to download PostScript (PS), Encapsulated PostScript (EPS), or Portable Document Format (PDF) files using Fiery Downloader or Fiery WebDownloader. Basic instructions are provided at the end of this chapter; for details on using Fiery Downloader and Fiery WebDownloader, see Chapter 5.

Printing from applications

Before you can print to the E-810 from applications, you must select the E-810 in the Chooser. Then, using the Adobe PostScript printer driver and the correct PostScript Printer Description file (PPD), you can control many E-810 printing features by specifying job settings from print dialog boxes.

For information on achieving the best printing results from specific applications, see the *Color Guide*.

Selecting the E-810 in the Chooser

Before you print a job, make sure the E-810 is the currently selected printer.

NOTE: For information about setting up the E-810 in the Chooser, see *Getting Started*.


TO SELECT THE E-810 AS THE CURRENT PRINTER

1. **Make sure the E-810 is connected to the network and is turned on.**
2. **Choose Chooser from the Apple menu.**
3. **Click the AdobePS icon to select it.**

NOTE: Make sure AppleTalk is set to Active.

4. If your network is divided into zones, select the zone in which the E-810 is located.
5. Select the E-810 by <Server Name>_<Device Name>_<Queue Name> from the “Select a PostScript Printer” list.

The names of all supported printers in the zone are displayed in the list on the right.

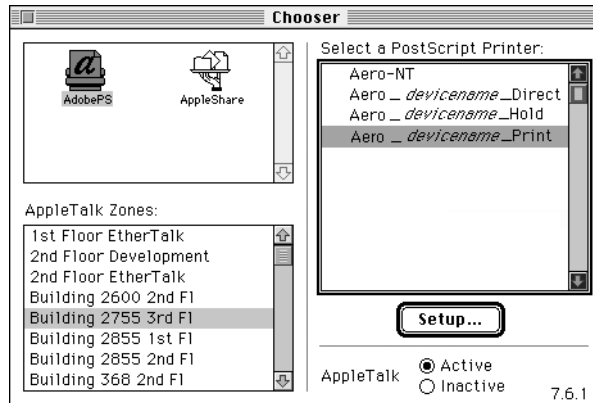

NOTE: If your system administrator has not enabled the connection to the Print queue or the Direct connection, the corresponding names will *not* appear in this list. For example, if your site has an operator who controls the flow of print jobs from Command WorkStation, you may be able to print only to the Hold queue. See the *Configuration Guide* for more information on enabling print connections.

6. Close the Chooser window.

The E-810 remains selected as the current printer until you choose a new printer in the Chooser.

Setting options and printing from Mac OS computers


In Mac OS applications, print options are set from both the Page Setup dialog box and the Print dialog box. For details on specific print options, see Appendix A.

NOTE: Some default print options are set by the administrator during Setup. Contact the administrator or the operator for information on the current server default settings.

TO SET PRINT OPTIONS AND PRINT WITH THE ADOBEPS PRINTER DRIVER

1. Open a file, and choose **Page Setup** from the application's **File** menu.
2. In the dialog box that appears, specify the **Page Attributes** settings for your print job.

Make sure to select the E-810 as your printer.

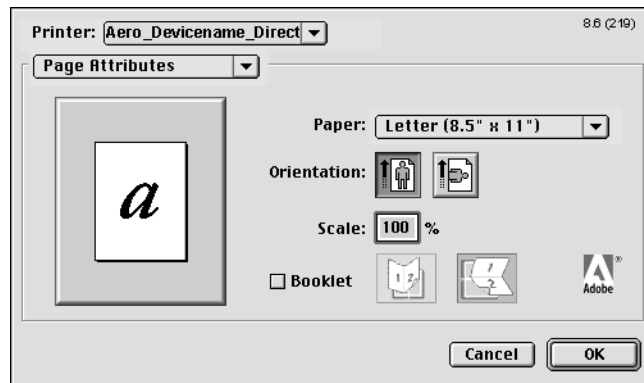

NOTE: Page Setup dialog boxes vary across applications.

3. Click **OK**.

4. Choose Print from the application's File menu.

Make sure the E-810 is selected as your printer, and specify settings for the print options displayed.


NOTE: Print dialog boxes vary across applications.

From the **Paper Source** pop-up menu, choose the paper tray for the job. For example, you can specify that the job should be printed on pages in Tray 1. The Paper Source selection is valid for the current job only.

NOTE: If paper loaded in the selected tray is a different size, orientation, and/or media type than that of the job you are sending, the E-810 displays an error message and the job will not print. You should then load the correct paper in the selected tray or cancel the job.

5. Go to Job Notes.

Choose Job Notes from the pop-up menu

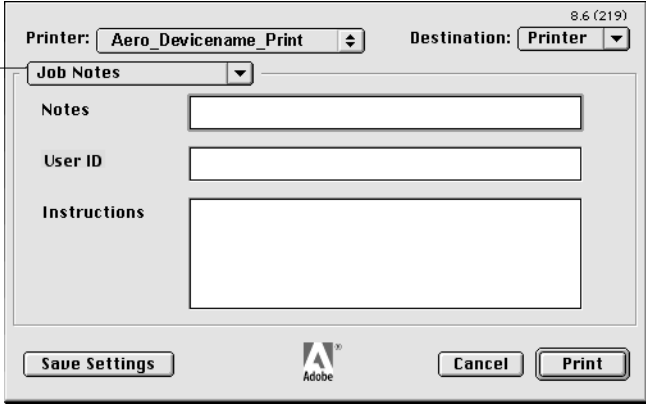

The screenshot shows a print dialog box with the following elements:


- Printer:** Aero_Devicename_Print
- Destination:** Printer
- Job Notes** (selected in a pop-up menu)
- Notes:** A text input field.
- User ID:** A text input field.
- Instructions:** A larger text input area.
- Buttons:** Save Settings, Cancel, and Print.
- Adobe logo** is visible at the bottom center.

In the Notes and User ID areas, enter user and job identification information for managing purposes, or whatever information is required at your site. These notes will appear in the Job Log; they can also be viewed by the operator in Command WorkStation. These notes *cannot* be edited or erased by the operator.

In the **Instructions** area, enter instructions to the operator about the job. These instructions can be displayed in Command WorkStation, but do not appear in the Job Log. These instructions can be edited by the operator.

6. Go to Printer Specific Options and specify the appropriate settings for your print job.

Choose Printer Specific Options from the pop-up menu

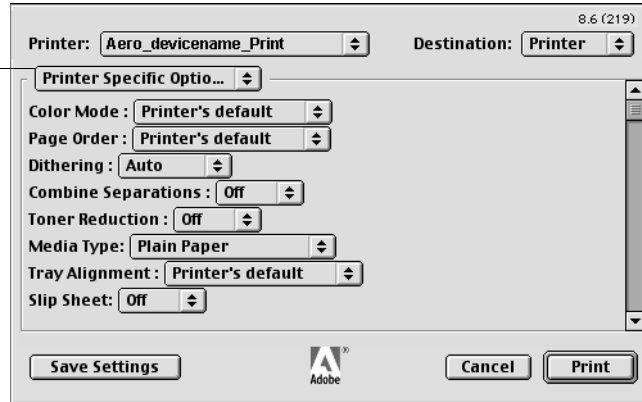

These print options are specific to the E-810 and the copier; you may need to scroll to see all the options. They override settings in E-810 Printer Setup, but can be changed from Command WorkStation, Fiery WebSpooler, or Fiery Spooler.

If you choose **Printer's default**, the job prints according to the settings specified in Setup.

For information about these options and overrides, see Appendix A.

Some PPD options can also be set from an application (for example, Reverse Order printing or Collation). In these cases, use the PPD option to perform the function, rather than setting it from the application. The application may not set up the file properly for printing on the E-810 and may also take longer to process.

NOTE: If you specify incompatible print settings, a dialog box may appear. Follow the on-screen instructions to resolve the conflict.


7. To make the new settings the default settings, click **Save Settings**.
8. Click **Print**.

Defining custom page sizes

With custom page sizes, you define the page dimensions and margins. After you define a custom page size, you can use it from within an application, without having to redefine it each time you print.

TO DEFINE A CUSTOM PAGE SIZE

1. Choose Page Setup from the application's File menu.
2. For Paper, choose Custom.
3. From the pull-down menu, choose Custom Page Default.

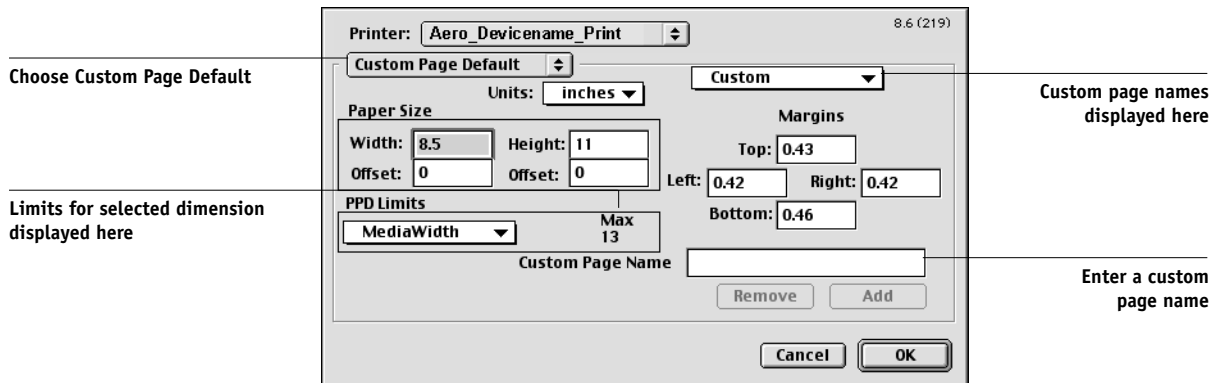

4. Enter the page dimensions and margins.

You can view the minimum and maximum sizes by using the pull-down menu under PPD Limits.

If you enter invalid sizes, an error message appears. Click Cancel and enter sizes specified within the PPD Limits.

5. **To save this custom page size, enter a name for it and click Add.**

Saved custom page sizes appear in the menu of page sizes at the top right of the dialog box. To remove a saved custom page size, select it from the menu and click Remove.

6. **Click OK.**

TO PRINT A CUSTOM PAGE SIZE

1. **Choose Page Setup from the application's File menu.**
2. **For Paper, choose Custom.**
3. **Click OK.**
4. **Choose Print from your application's file menu.**

Specify your printing options.
5. **Click Print.**

Printing with Fiery Downloader or Fiery WebDownloader

Downloading files with Fiery Downloader or Fiery WebDownloader is generally faster than printing from an application. You can use Fiery Downloader or Fiery WebDownloader to print PostScript, EPS, or PDF files.

TO PRINT USING FIERY DOWNLOADER

1. **Create a PostScript, EPS, or PDF file. Specify the appropriate print options, and include (embed) any necessary fonts that are not resident on the E-810.**

For a list of fonts resident on the E-810, see Appendix B.
2. **Launch Fiery Downloader and connect to the E-810.**

For instructions on setting up Fiery Downloader, see *Getting Started*.
3. **Select the file(s) you want to download, and specify any necessary options.**
4. **Click Download.**

For details, see Chapter 5.

TO PRINT USING FIERY WEBDOWNLOADER**1. Create a PostScript, EPS, or PDF file.**

Specify the appropriate print options, and include (embed) any necessary fonts that are not resident on the E-810. For a list of fonts resident on the E-810, see Appendix B.

2. Launch Fiery WebTools and click Fiery WebDownloader.

See “Fiery WebTools” on page 6-1 for information on accessing Fiery WebDownloader.

3. Select the queue and the file you want to download.**4. Click Download.**

Chapter 3: Printing from UNIX Workstations

You can print to the E-810 directly from UNIX workstations. Jobs printed to the E-810 are sent to the Print or Hold queue and can be manipulated from Command WorkStation or from Windows and Mac OS computers on the network using Fiery WebSpooler or Fiery Spooler.

NOTE: If you print to the Hold queue, an operator must intervene from Command WorkStation, Fiery Spooler, or Fiery WebSpooler for the job to print; jobs sent to the Hold queue are spooled to disk and held.

The queue name and E-810 printer name are determined by your system administrator. Contact your system administrator for the names of your queues.

For information about setting up printing from TCP/IP, see your UNIX system documentation.

Printing to the E-810

You can use UNIX commands to print PostScript and text files to the E-810. In general, use basic print commands (`lpr`, `lpq`, `lprm`) to send print jobs to the E-810. See the UNIX manual pages or other documentation for information about UNIX commands.

NOTE: Only PostScript text files can be printed from UNIX.

TO PRINT FROM UNIX

- **On a system running SunOS 4.1.x or another BSD-based variant, use the `lpr` command to send a job to the E-810, as follows:**

```
lpr <-Pprinter> <-#copies> <filename>
```

For example, if the Print queue of your E-810 is named `print_Server`, your file is named `Sample`, and you want to print two copies, type:

```
lpr -Pprint_Server -#2 Sample
```

- **On a system running Solaris 2.x or any System V implementation of UNIX, use the `lp` command to send a job to the E-810, as follows:**

```
lp -d <printername> {-n <copies>} <filename>
```

For example, if the Print queue of your E-810 is named `print_Server`, your file is named `Sample`, and you want to print two copies, type:

```
lp -d print_Server -n 2 Sample
```

TO DISPLAY A LIST OF JOBS IN THE QUEUE

- **On a system running SunOS 4.1.x or another BSD-based variant, use the `lpq` command to see printer jobs in the queue, as follows:**

`lpq <-Pprinter>`

For example, if the Print queue of your E-810 is named `print_Server`, type:

`lpq -Pprint_Server`

Your workstation displays the contents of the queue.

- **On a system running Solaris 2.x or any System V implementation of UNIX, use the `lpstat` command to see printer jobs in the queue, as follows:**

`lpstat -o <printrname>`

For example, if the Print queue of your E-810 is named `print_Server`, type:

`lpstat -o print_Server`

Your workstation displays the contents of the queue.

TO REMOVE JOBS FROM THE QUEUE

NOTE: Unless you log in as the root user, you can remove only your own jobs.

- **On a system running SunOS 4.1.x or another BSD-based variant, use the `lprm` command to remove jobs from the queue, as follows:**

```
lprm <-Pprinter> <job #...>
```

You can use the `lpq` command to check the job number.

For example, to remove job number 123 from the Print queue of your E-810 named `print_Server`, type:

```
lprm -Pprint_Server 123
```

The `lprm` command reports the names of any files it removes.

- **On a system running Solaris 2.x or any System V implementation of UNIX, use the `cancel` command to remove jobs from the queue.**

```
cancel <printrname> <job ID>
```

For example, to remove job number 123 from the Print queue of your E-810 named `print_Server`, type:

```
cancel print_Server 123
```

Chapter 4: Special Features

This chapter describes some of the special features supported by the E-810, including:

- Printing variable data documents using FreeForm™
- Printing simulations
- Printing duplex pages
- Scanning images from the copier using Fiery Scan
- Scanning images from the copier to the HDD with Scan to HDD

Printing variable data documents with FreeForm

Variable data printing is typically used for direct-mail advertising or other targeted mailings. It involves combining a set of master elements that are common across copies of a document with a set of variable elements that change from copy to copy. An example is a brochure that greets customers by name and may include other personal information about the customer obtained from a marketing database. Background elements, illustrations, and text blocks that do not change across copies of the brochure comprise the master elements. The customer's name and other customer-specific information comprise the variable elements.

How FreeForm works


The basic premise of FreeForm variable data printing is that the master-element data for the job can be sent to the E-810 and rasterized separately from the variable-element data. The master-element data is stored on the E-810 in prerasterized form as a FreeForm Master, and can be used as often as needed with multiple sets of variable-element data. Because the FreeForm Master job is preRIPped and stored on the E-810, the only RIP time required for variable data print jobs is the time needed to RIP the variable-element data. In fact, FreeForm Masters can be used for any fixed-element data that you might combine with different data from day to day. For example, a letterhead template can be stored as a FreeForm Master and used repeatedly as the background for different letter content (the variable-element data).

FreeForm allows you to create the master-element and variable-element documents using any application you wish. The two documents can be created using different applications, or even different computer platforms. To create the master-elements document, you can use a page layout or graphics application. To create the variable-elements document, you can use a word processing application that has a mail merge feature, a page layout application that supports scripting, or a database application.

FreeForm functions are controlled with two print options: Create Master and Use Master. You can set these options in the printer driver when you send a job, or you can instruct the operator to set them with job overrides from Command WorkStation, Fiery Spooler, or Fiery WebSpooler.

Creating the master-elements document

Before you can use FreeForm, you must create a master-elements document and a variable-elements document. This includes creating the layout for the combined document, as well as the elements themselves. In a page layout or graphics program, you arrange the master elements (text and graphics that do not change) on one or more pages, leaving space for the variable elements.

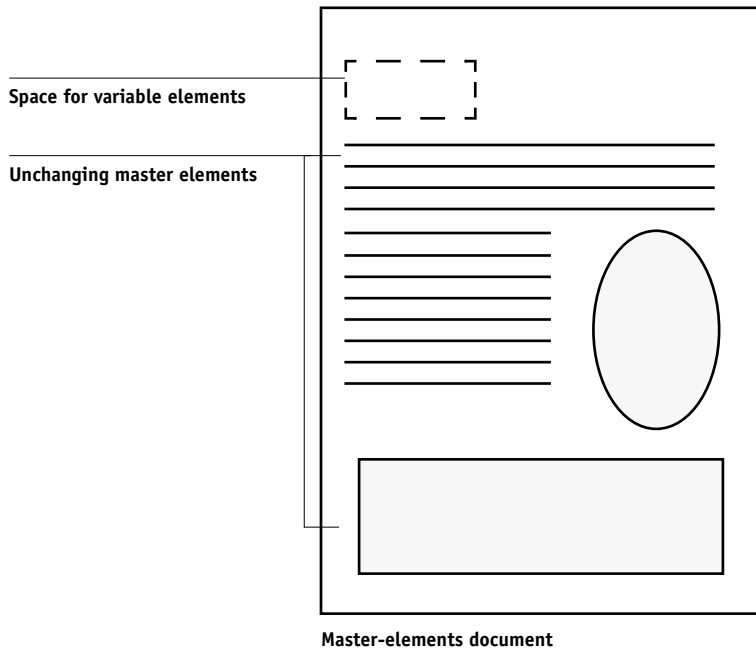


When you have finalized the design of the master-elements document, print it to the E-810 and specify that a FreeForm Master is to be created from the job (see page 4-6).

NOTE: Although the E-810 can store up to 100 FreeForm Masters, the printer driver interface, Fiery WebSpooler, and Fiery Spooler allow you to select numbers 1 through 15 only. To create a FreeForm Master with a number greater than 15, the operator must set the Create Master and Use Master options and RIP the job from Command WorkStation.

Creating the variable-elements document


You can create the variable-elements document with a word processing application that provides a mail merge function, a database application, or a page layout application that supports scripting. In all cases, information is taken from a list or database and merged into an existing document that is set up to accept the information. Each application has different controls for this function; see the application documentation for detailed instructions. Before the variable elements can be added to the master-elements document, they must be formatted to conform to the layout of the master-elements document. This is done by creating a document with the correct formatting and then adding the variable information in the appropriate places.

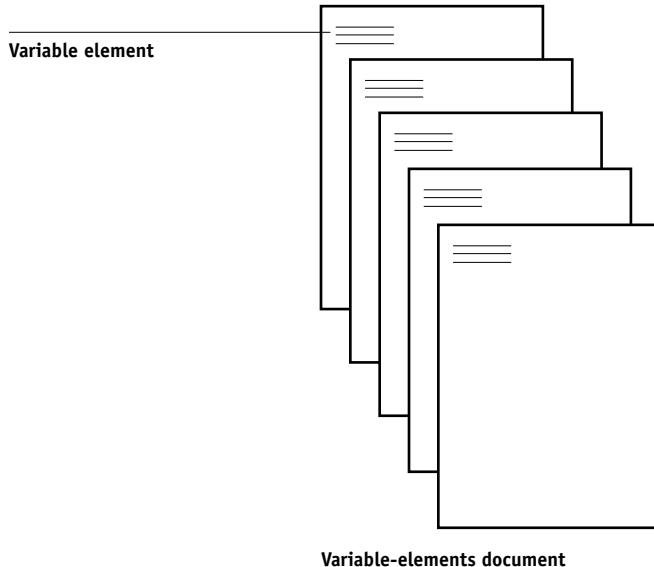

When you have created the variable-elements document, print it to the E-810 and specify that it should be combined with the corresponding FreeForm Master.

Combining the FreeForm Master with the variable-elements document

When you print the variable-elements document to the E-810, you specify the FreeForm Master created from your master-elements document with the Use Master print option. The E-810 combines the raster data of the variable-elements document with the preRIPped FreeForm Master, creating a new raster data file. The merged raster file can be soft-proofed (before it is printed) in the thumbnail windows of Command WorkStation, Fiery Spooler, or Fiery WebSpooler.

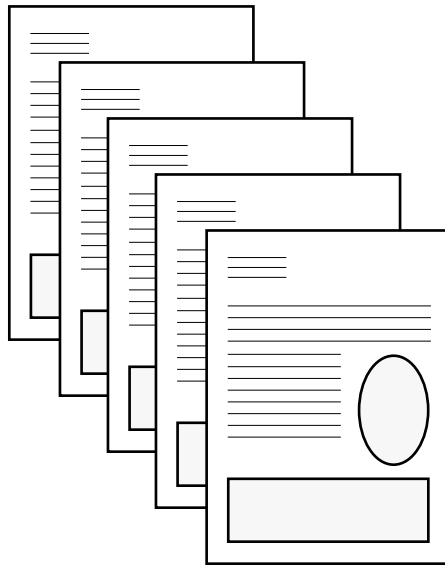

Combined document

Using FreeForm

This section provides some suggestions to help you print variable data jobs correctly.

- Consult your administrator or operator on how FreeForm Master numbers are assigned at your site.

If FreeForm printing is used by a large number of users at your site, FreeForm Master numbers, or ranges of numbers, may be assigned to specific users or groups. Users can select only numbers 1 through 15 as print option settings. The operator can override FreeForm Master numbers and reassign them to numbers greater than 15 from Command WorkStation. You may want the operator to assign all FreeForm Master numbers to avoid potential conflicts in the use of FreeForm Master numbers.

- Use the Job Notes and Instructions fields to communicate instructions about your job to the operator.

If you want to create or use a FreeForm Master number greater than 15, these fields can be used to tell the operator to override the appropriate job setting (Create Master or Use Master) and RIP the job from Command WorkStation.

- Give your jobs unique and descriptive names.

Both you and the operator need to be able to easily identify your jobs if there are many jobs in the queues, the FreeForm Master numbers are reassigned, or you want to refer to another job in the Job Notes or Instructions fields.

- See Appendix A for restrictions on print option settings when using FreeForm.

The following settings for the master-elements document and variable-elements document must match:

Color Mode

Combine Separations

Duplex

Page Size

Page Order

The following settings for the variable-elements document override the corresponding settings in the master-elements document:


- Media Type
- Paper Source
- Save Fast Reprint
- Slip Sheet
- Sorter Mode
- Stapler Mode

TO PRINT VARIABLE DATA DOCUMENTS

1. Create a master-elements document.

The master-elements document can comprise multiple pages.

The example below shows one page of a master-elements document for a tri-fold brochure that was created with a page layout application.

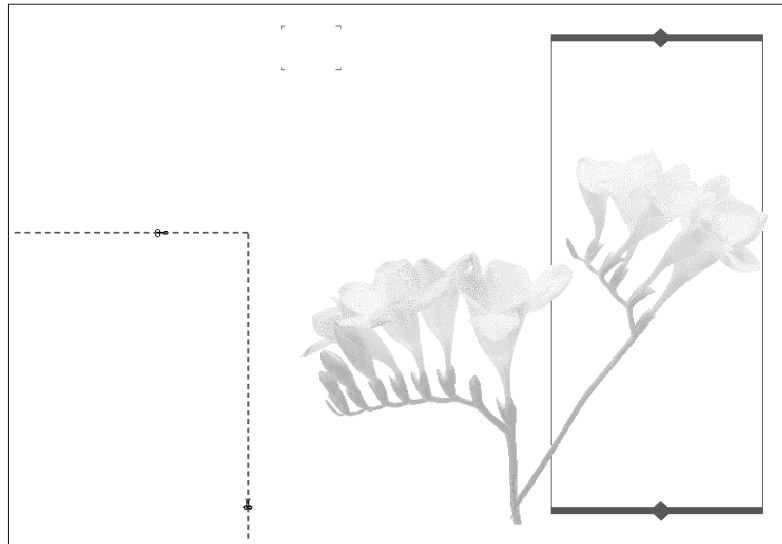


2. Print the master-elements document to the E-810 with the Create Master print option set to one of the FreeForm Master numbers (1 through 15).

Or, set the Create Master option to None and instruct the operator to use overrides to create a FreeForm Master from this job.

3. Create the variable-elements document.

You can create the variable-elements document using a different file, a different application, or a different computer platform than was used to create the master-elements document, but some print options must be the same (see page 4-5 for details).

The example below shows one page of the variable-elements document for the tri-fold brochure. The data in this document can be as simple as a name and address, or as complex as multiple, full-color graphics and photographic elements.

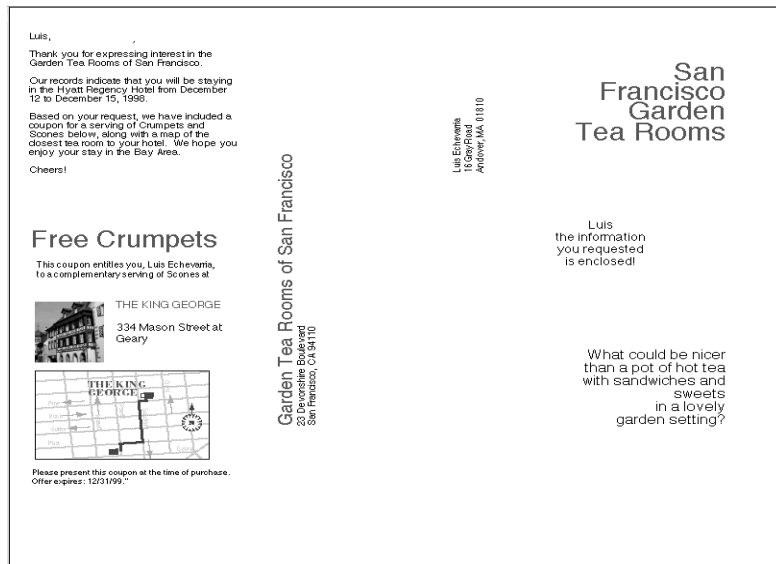


4. Print the variable-elements document to the E-810 with the Use Master print option set to the appropriate FreeForm Master number.

The FreeForm Master number may be one you set yourself when you sent the master-elements document, or it may be one that was assigned by the operator.

FreeForm Master numbers can be overridden from Command WorkStation, Fiery Spooler, or Fiery WebSpooler. Check with the operator to make sure that the FreeForm Master number you specify is the correct one for the FreeForm Master you want to use.

If you want to check the job before it prints, instruct the operator to RIP and Hold the job so that you can preview it from Command WorkStation, Fiery Spooler, or Fiery WebSpooler.

The example below shows the FreeForm Master and variable-elements document combined. The variable data is simply overlaid on the master-elements document.

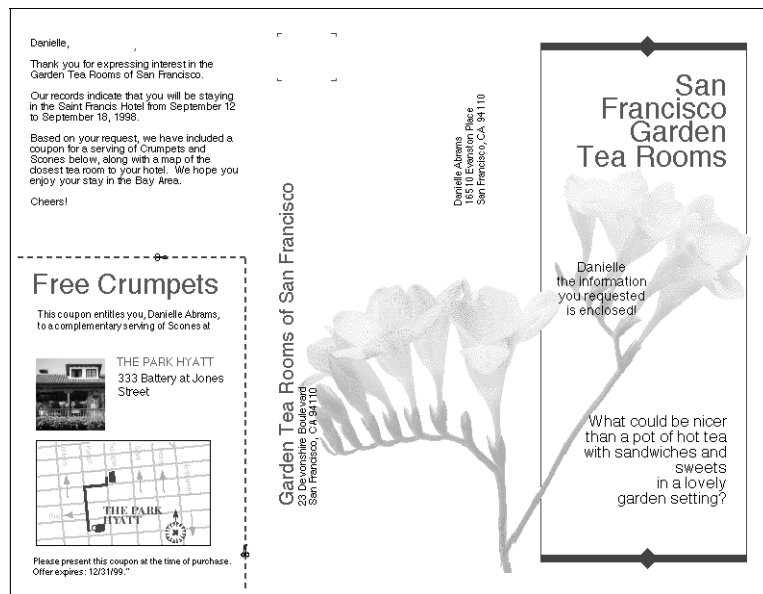

Printing simulations

You can use the E-810 to proof offset press jobs or to simulate the output of other print devices by specifying settings for two print options: CMYK Simulation Profile and CMYK Simulation Method. These options affect CMYK data only.

The E-810 provides CMYK Simulation targets for the major international press standards: SWOP, DIC, and Euroscale. You can also create, save, and import custom simulation profiles using ColorWise Pro Tools (see the *Color Guide*).

- When printing simulations on the E-810, choose the CMYK Simulation Profile corresponding to the press standard for which the CMYK data was prepared, or choose a custom simulation profile.
- To simulate the color of a copy made from the copier glass, choose the Match Copy setting.

Printing duplex pages

You can use the E-810 to print double-sided (duplex) pages.

TO PRINT DUPLEX PAGES

1. **When specifying print options, set Duplex to the desired setting.**

Top Binding prints both sides using the same top edge; **Side Binding** prints the back side upside-down. See “Duplex” on page A-14 for more information.

2. **Set other options, and then click OK.**
3. **Click Print.**

Scanning from the copier

With Fiery Scan, you can scan an image from the copier glass directly into Photoshop on your computer. You can also load pages into the copier's document feeder for scanning. In this case, one page can be fed and scanned at a time during pre-scan. Pre-scanning and scanning are required for each page.

The following requirements and constraints apply:

- Fiery Scan must be installed as described in *Getting Started*.
- Fiery Scan cannot be used over the parallel port; it requires a network connection. For information on supported networking protocols, see *Getting Started*.
- Photoshop 5.0's RGB Setup should be using the EFIRGB ICC (Mac OS) or EFIRGB.icm (Windows) settings. See *Getting Started* for information on loading this file.
- The E-810 is not able to scan and copy documents at the same time. Do not run Fiery Scan in conjunction with the E-810 during copying.

Fiery Scan color conversion settings

Fiery Scan offers two color conversion choices for scanned data:

- **Calibrated RGB** creates an RGB scan optimized for printing with E-810 Rendering Styles (CRDs) or ICC profiles, as well as for viewing on the monitor.
- **Match Copy** converts raw scan data to CMYK data with reference to the CRD or ICC profiles.


Using Fiery Scan


With Fiery Scan, you first create a prescan of the image; then you can select part, or all, of the prescan for final scanning.

NOTE: The Windows and Mac OS versions of Fiery Scan are fundamentally the same; differences are noted in this section. Where both windows or dialog boxes are illustrated, the Windows version comes first, followed by the Mac OS version.

TO PRESCAN A DOCUMENT

1. **Launch Photoshop.**
2. **Place the original you want to scan on the copier glass, or, if you have multiple originals, place them in the document feeder.**
3. **In Photoshop's File menu, point to Import and click Select TWAIN_32 Source (Windows) or Fiery Twain Select (Mac OS).**
4. **Select Fiery Scan in the window that appears and click Select (Windows) or OK (Mac OS).**
5. **In the File menu, point to Import and click TWAIN_32 (Windows) or Fiery Twain Acquire (Mac OS).**
6. **Select the E-810 in the Chooser window and click OK (Windows) or Connect (Mac OS).**
If the E-810 does not appear in the Windows Chooser list, you must configure the Chooser list to communicate with the E-810. For instructions, see *Getting Started*.
7. **Select the appropriate settings in the Fiery Scan dialog box.**

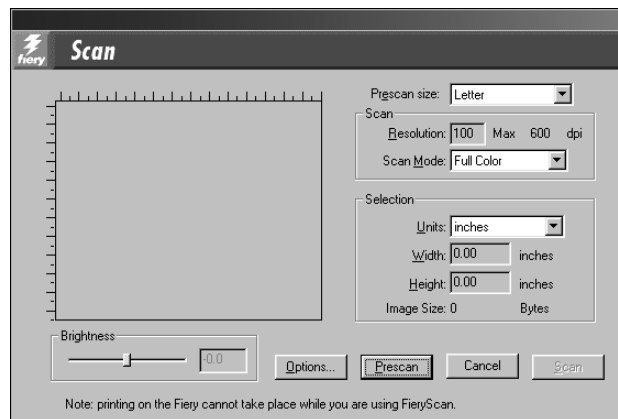

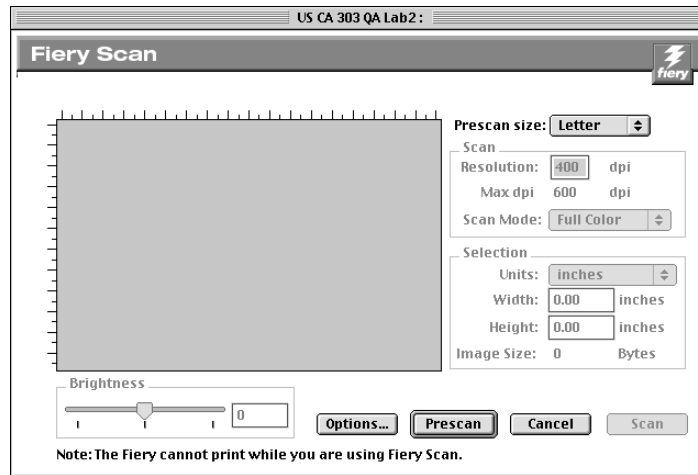

Prescan size—Choose the paper size of the original from the pop-up menu.

Resolution—Specify a value for the resolution. Changing the resolution also changes the image size. The maximum resolution supported by the E-810 appears in the dialog box.

Scan Mode (Full Color, Grayscale, or Black & White)—Specify the type of scan you want.



Brightness—Use the slider, or enter a number from -100 to 100 in the text box, to lighten or darken the image. This option is only available if Full Color or Grayscale is selected.

8. Click Prescan.

The progress bar displays how much of the image has been processed.

The prescan image appears on the left side of the dialog box.

If you are using the document feeder, the E-810 advances and scans one page for each Prescan request.

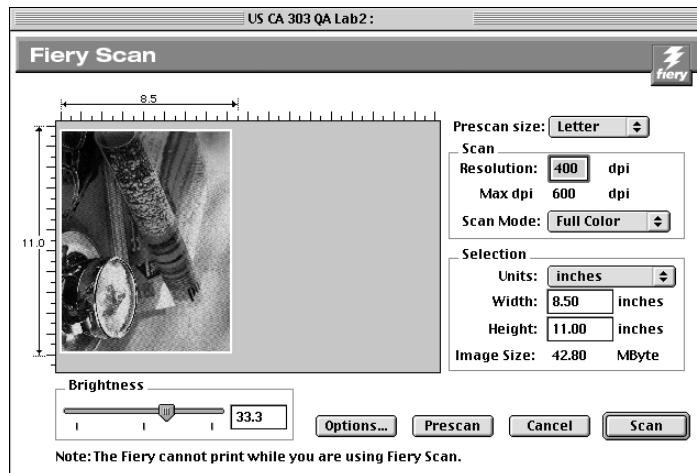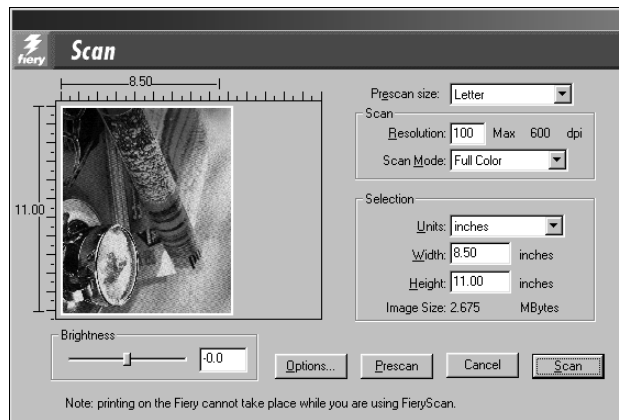

In the Selection area, you can specify:



Units (inches, centimeters, picas, points, ciccros, or pixels)—Specify the ruler units that appear around the preview image.

Width and Height—Enter the width and height of the area to scan; or, select an area of the page with the selection marquee. If you use the marquee to select the scan area, the dimensions appear in these text boxes. If you do not specify a scan area, the default is to acquire the entire scan.

To select a portion of the image using the marquee, you can move the selection marquee around by positioning the Hand tool inside the marquee and dragging the marquee to a new location. You can change the size of the frame by clicking and dragging one of the handles on the corners of the selection frame. If you want to deselect the area you have selected, double-click anywhere.

The E-810 scans at a maximum resolution that is dependent on the size of the selected area. When you select an area to be scanned, Fiery Scan displays the maximum resolution possible for that area. You can enter a dpi value which is less than the maximum resolution.

9. Click **Options** to display the **Fiery Options** dialog box (Windows) or **Scan Options** dialog box (Mac OS).

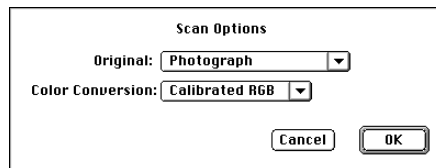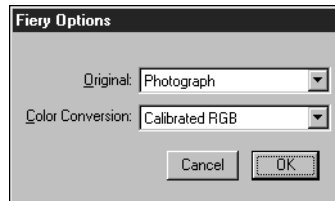

Original—Select the resampling interpolation method to use. In general, you should choose **Photograph** if you are scanning a continuous tone photographic image and **Offset Print or Copy** if you are scanning a printed document. The **Offset Print or Copy** mode takes slightly more time but reduces moiré patterns in scans.

Color Conversion—Select the color conversion to use: **Calibrated RGB** or **Match Copy**. Use **Calibrated RGB** if you will print the image using the E-810 Rendering Style (CRD). Use **Match Copy** to match the colors in a copy made by the copier as closely as possible, assuming that you are going to print the image to the same copier and you do not want to use a Rendering Style. Also see “Fiery Scan color conversion settings” on page 4-11.

10. **Select the appropriate settings and click OK.**
11. **Click Scan in the main window to acquire the scan.**

The progress bar displays how much of the image has been processed. You can click **Esc** (Windows) or **Command-.** (Mac OS) to cancel acquiring the scan.

When the scan is acquired, the scanned image is displayed in Photoshop.

Scan to HDD

With Fiery Scan’s Scan to HDD feature, you can scan an image with the Control Panel of the E-810 from the copier glass (Platen) or Automatic Document Feeder (ADF) into the Fiery’s memory. You can then open the image with Fiery WebScan.

Additionally, you can scan a job directly to the Hold Queue so that you can use the many features of Command WorkStation’s DocBuilder™ Pro option. For more information on DocBuilder Pro, see the *Job Management Guide*.

NOTE: DocBuilder Pro is an option that must be purchased separately.

The following steps describe scanning to the HDD using the E-810 Control Panel. For information on how to use the Control Panel menu, see Chapter 3 of the *Configuration Guide*.

NOTE: Images scanned lengthwise appear rotated 90 degrees in Command WorkStation’s Thumbnail A window, and will be printed in landscape (lengthwise) orientation.

TO SCAN A JOB TO THE HDD WITH THE E-810 CONTROL PANEL

1. **Place the original face down on the copier glass or face up in the ADF.**

2. **Make sure the information screen on the Control Panel reads Idle.**

If Printing or RIPping appears, the E-810 is processing, and you must wait until the system finishes and reaches the Idle state.

3. **Press the Menu button on the Control Panel to go to the Functions menu.**

4. **Scroll with the down arrow and press the line selection button next to Scan Job.**

5. **Press the line selection button next to Source.**

6. **Choose your Document Source.**

Select ADF if you are scanning from the Automatic Document Feeder or choose Platen if you are scanning from the copier's glass.

NOTE: If ADF is selected and no paper is detected, the copier will scan from the glass.

7. **Choose the Original Size of your scan job.**

Select from A3, A4, Letter, and Tabloid.

8. **Press the line selection button next to Image Options.**

9. **Specify your Color Mode.**

Choose either Color or Grayscale.

10. **Specify the Resolution of your scan job.**

Choose 72, 100, 150, 200, 300, 400, 500, or 600.

11. **Press the line selection button next to Destination.**

12. **If you want to send your job to the Hold Queue, choose Send to DocBuilder.**

You are prompted if you want to send your scan to the Hold Queue. Select Yes.

The file is saved as a PDF in the Hold Queue.

If you want to send your scan to a specified mailbox, select Send to Mailbox.

Specify a mailbox number from 0000-9999.

NOTE: If you do not choose a mailbox number, the default is 0000. If you reboot or restart the E-810, mailbox numbers you have assigned are reset to the default 0000.

13. Specify the File Format.

Choose PDF, TIFF, or JPEG.

NOTE: Selecting a particular file format does not affect the output. Multiple JPEG images in a single file are not supported.

14. Press the line selection button next to Exit Destination.

15. Press the line selection button next to Start Scan.

16. Specify a name for your job.

The default name provided, MMDDHHMM, contains 8 characters. Up to 20 characters are permitted in job names.

The job is scanned and the file is sent to the Fiery hard disk drive. To retrieve the file with WebScan, see “Accessing scanned jobs with WebScan” on page 6-4. For information on how to retrieve jobs sent to the Hold Queue, see the *Job Management Guide*. To manage scan jobs in HDD, refer to the *Configuration Guide*.

TO DELETE A DESTINATION

1. **Make sure the information screen on the Control Panel reads Idle.**

If Printing or RIPping appears, the E-810 is processing, and you must wait until the system finishes and reaches the Idle state.

2. **Press the Menu button on the Control Panel to go to the Functions menu.**
3. **Scroll with the down arrow and press the line selection button next to Scan Job.**
4. **Choose Destination.**
5. **Choose Delete Destination.**
6. **Choose either Delete DocBuilder or Delete Mailbox.**
7. **Select Yes to confirm the deletion.**

Chapter 5: Downloading Files and Fonts

Fiery Downloader allows you to send PostScript (PS), Encapsulated PostScript (EPS), and Portable Document Format (PDF) files directly to the E-810 without using the application they were created in. It also enables you to manage printer fonts on the E-810.

You can use Fiery Downloader from a remote workstation as well as from Command WorkStation. Fiery Downloader requires a network connection. For information on installing and configuring Fiery Downloader and on supported networking protocols, see *Getting Started*.

NOTE: The Windows and Mac OS versions of Fiery Downloader are fundamentally the same; differences are noted in this section. Where both windows or dialog boxes are illustrated, the Windows version comes first, followed by the Mac OS version.

You can also use Fiery WebDownloader to download a PostScript, EPS, or PDF file. See “Downloading files with Fiery WebDownloader” on page 6-3.

Using Fiery Downloader

You can use Fiery Downloader to:

- Print PostScript, EPS, and PDF files to the E-810.
- Check the status of the E-810.
- Manage the printer fonts stored on the E-810 hard disk (this feature requires that the Direct connection be published on the E-810).

NOTE: Fiery Downloader is designed specifically for the E-810; you cannot use it with any other printer. You can use standard LaserWriter downloaders, such as the Adobe Font Downloader, with the E-810.

TO VIEW INFORMATION WITH FIERY DOWNLOADER

1. Double-click the Fiery Downloader icon or choose Fiery Downloader from the Start>Programs menu.
2. Select the E-810 in the Chooser window and click OK (Windows) or Connect (Mac OS).


The Fiery Downloader Status window appears and you see the Fiery Downloader Toolbar, menus, and status bar at the bottom of the screen.

Displays server status, user, and document name of the job currently printing

Displays server status, user, and document name of the job currently processing

Dynamically displays the progress of the job

Displays the amount of available disk space

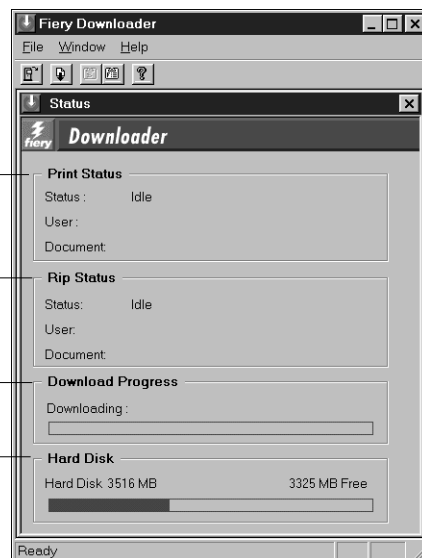

Buttons for some menu functions appear in the Toolbar at the top of the window.



Open

Click to connect to a different E-810.



Download

Click to download a file or font to the E-810.



Status

If you are viewing the font list, click to display the status window for the current E-810.



Font list

If you are viewing the status window, click to display a list of printer fonts on the E-810 hard disk.



About Fiery
Downloader
(Windows only)

Click to view version information about Fiery Downloader.

You can click the font list button or choose Font List from the File menu to view font information in the window.

3. To select a different E-810, choose Open from the File menu or click the Open button.
4. Select the E-810 in the dialog box that appears, and click OK (Windows) or Connect (Mac OS).
5. To close the status window, choose Close from the File menu; to quit Fiery Downloader, choose Exit (Windows) or Quit (Mac OS) from the File menu.

Printing with Fiery Downloader

Printing files with Fiery Downloader is fast—generally faster than printing from within applications. If you regularly print large files, be sure to try printing with Fiery Downloader.

TO DOWNLOAD A FILE OR FONT WITH FIERY DOWNLOADER


1. **Use your application to generate a file.**


You can save a PostScript or PDF file by selecting the appropriate option in the application's Print dialog box. With some applications, you can also save EPSfiles.

If you experience problems printing EPS files with Fiery Downloader, you can print the file directly from the application in which you created it.

2. **Launch Fiery Downloader.**

3. **Choose Download from the File menu, or click the Download button.**

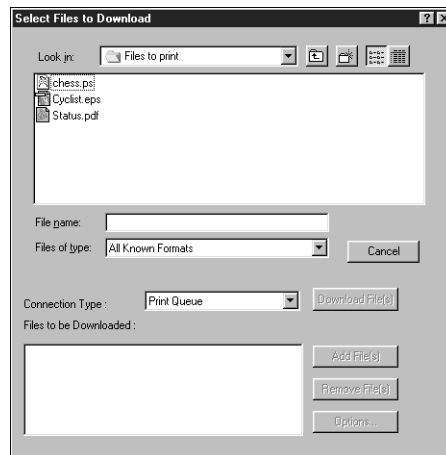

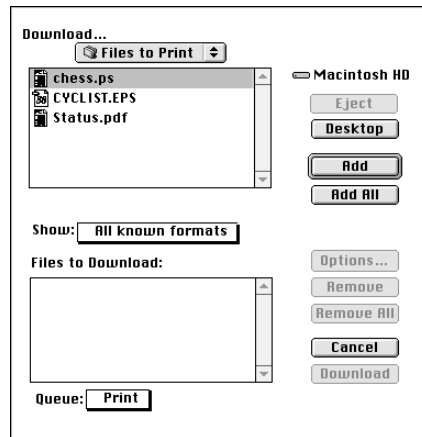

4. **Choose the file type to display from the Files of type (Windows) or Show (Mac OS) menu.**

All Known Formats lists all files in formats supported by Fiery Downloader.

You can download files and fonts in the same batch. If the fonts are used by files in the same batch, the fonts should be downloaded first.

5. **Choose the Connection Type (Windows) or Queue (Mac OS) to which you will download the files.**

The options available to you in this menu depend on the setup at your site. The potential selections are Print Queue (Windows) or Print (Mac OS), Hold Queue (Windows) or Hold (Mac OS), and Direct Connection (Windows) or Direct (Mac OS). If your administrator has not enabled one or more of these connections, you cannot select it.

PDF files cannot be printed with the Direct connection. If you choose the Direct connection, the job is spooled to the Print queue and then printed. If the Print queue is not enabled, the job is spooled to the Hold queue and must be released for printing by the operator.

NOTE: To download fonts, you must use the Direct connection (make sure that the Direct connection is published on the E-810). If you do not have access to the Direct connection, you must embed any special fonts used by the file in the file when you generate it.

6. Select the filename and click Add File(s) (Windows) or Add (Mac OS).

The File name field (Windows) displays the name of the selected file before you click Add.


You can navigate to different drives and directories to select files to download. Click Add All (Mac OS) to add all files in a folder.

To select multiple sequential files (Windows), select the first file and then Shift-click the last file. Control-click to select multiple non-sequential files.


If you change your mind about a file, select the filename in the Files to Download list and click Remove File(s) (Windows) or Remove (Mac OS).

Click Remove All (Mac OS) to remove all files from the Files to Download list.


7. To change the attributes of a file to be downloaded, select it and click Options.

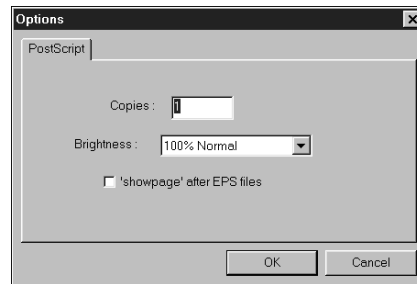


PostScript Options dialog box (Windows)

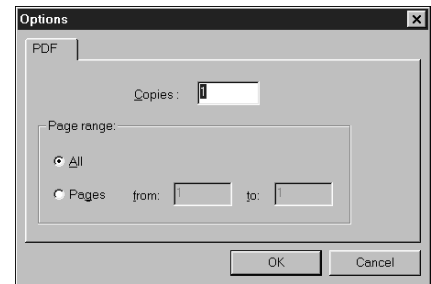

PDF Options dialog box (Windows)

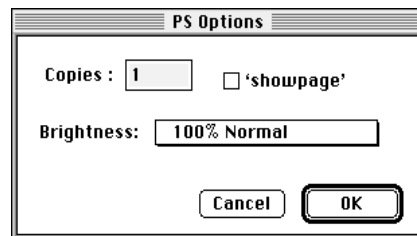

PostScript Options dialog box (Mac OS)

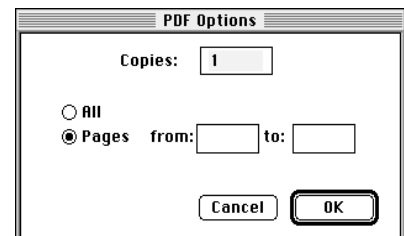

PDF Options dialog box (Mac OS)

8. Specify the following information in the dialog box, and then click OK.

The options you set apply only to the selected file. You can set different options, or leave the default settings, for each file.

Copies—Specify the number of copies.

Brightness (PostScript and EPS files only)—Change the Brightness setting if a file appears to be too dark or too light. Choose 85% for a substantially lighter image, 115% for a substantially darker image, or one of the options in between.

NOTE: Some applications, including Adobe Photoshop, provide transfer functions that let you specify density settings for an image. If the file you are printing includes transfer functions, the Fiery Downloader Brightness option has no effect. For more information on using transfer functions, see the documentation for your application.

‘showpage’ after EPS files (Windows) or **‘showpage’** (Mac OS) (PostScript and EPS files only)—In most cases, you do not need to use this option. Select the ‘showpage’ option only if an EPS file fails to print without it. This option adds a ‘showpage’ PostScript language command at the end of the print job. Some applications omit this necessary PostScript language command when they generate EPS files. Select this option when printing EPS files generated by these applications. If you select this option unnecessarily, extra blank pages may print.

If you experience problems printing EPS files with Fiery Downloader, you can print the file directly from the application in which you created it.

Page range (PDF files only)—Specify the page range you want to print.

9. Click Download File(s) (Windows) or Download (Mac OS).

10. To cancel downloading, press Escape (Windows) or Command- (Mac OS).

Downloading and managing printer fonts

The E-810 includes 136 PostScript fonts; for a complete list, see Appendix B. In addition, two Adobe Multiple Master fonts are included and are used for font substitution in PDF files.

Before downloading a file that uses fonts not resident on the E-810, you must download the fonts (unless the fonts are embedded in the file). To see what fonts are resident on the E-810, choose Font List from the File menu or click the Font List button (see page 5-10).

You can download fonts only via the Direct connection. If you do not have access to the Direct connection, you must embed any special fonts used by the file in the file when you generate it.

The screen fonts that correspond to the printer fonts installed on the E-810 are not automatically installed on your Windows system.

NOTE: Fiery Downloader cannot download Truetype fonts. If you use TrueType fonts in Windows, convert them to Adobe Type 1 before printing. To convert to Adobe Type 1 fonts for Windows 9x/Me, click the Fonts tab in the Adobe PS printer driver and setup the Font Substitution Table. For Windows NT 4.0, click the Postscript tab of the E-810 Document Defaults dialog box and select TrueType Font Setting> Download as Softfont.

Printer fonts and Mac OS screen fonts

Like all PostScript fonts, the fonts included with the E-810 come in two forms: printer fonts and screen fonts. The printer fonts are installed permanently on the E-810 hard disk. The screen fonts, which are included with the E-810 user software, should be installed on your Mac OS computer. If you are using these fonts in documents you print on a LaserWriter, they are probably already installed. If not, you will need to install them yourself. For instructions, see *Getting Started*.

Occasionally, you may want to use Adobe Type 1 (Windows) or PostScript (Mac OS) fonts that are not included with the E-810. If so, you will need to install both the screen fonts and the printer fonts on your computer. To do this, follow the instructions from the font manufacturer.

Downloading printer fonts to the E-810

In general, each time you print from within a Mac OS application, the application automatically downloads any fonts used in your document that are not already installed on the E-810, as long as the printer fonts are installed in your System Folder. These fonts remain in the E-810 only until your document has printed. If you print the same document again, your application must download the fonts again.

If you regularly use one or more fonts from Windows or Mac OS applications that are not already installed in the E-810, you can save time by downloading them to the E-810 hard disk with Fiery Downloader. Fonts you download to the E-810 hard disk remain installed until you remove them using Fiery Downloader, no matter how many times the E-810 is turned off and on. You'll probably want to download fonts you use on a regular basis to the E-810 hard disk.

Before you download PostScript, or EPS files with Fiery Downloader, make sure that all fonts included in your file are installed on the E-810 or embedded in your file; otherwise the text in these fonts will not print correctly and may not print at all. For PDF files, font substitution occurs automatically for fonts not installed on the E-810. Two multiple master fonts (a serif font and a sans serif font) stored on the E-810 are used exclusively for substitution with PDF files.

TO VIEW FONT INFORMATION, UPDATE, PRINT, AND DELETE FONTS

- **Choose Font List from the File menu, or click the Font List button.**

NOTE: If the Direct connection is not published, you cannot view the font list or perform any of the tasks described in this procedure. See the *Configuration Guide* or talk to your administrator for information on how to publish the Direct connection.

The Font List window appears with Update, Print, and Delete buttons in the title bar. The printer fonts included with the E-810 (resident fonts) are locked. Locked fonts appear with a lock icon next to the name and cannot be deleted.

Click to print the font list to the Print queue

Click to update the information
in the font list window

Lock icon

Select a font and click to delete it



Chapter 6: Tracking and Managing Print Jobs

E-810 user software includes a variety of tools that allow you to track and manage print jobs. Access to some tools is controlled by your site administrator, but other tools are available to all users.

- Command WorkStation, Fiery WebSpooler, and Fiery Spooler all provide the capability to view and control the flow of print jobs to the E-810. If the administrator has set Administrator and Operator passwords in Setup, you need one of these passwords to perform most Command WorkStation, Fiery WebSpooler, and Fiery Spooler functions. For information on these tools and the access privileges needed to use them, see the *Job Management Guide*.
- The Status, WebLink, WebScan, and Fiery WebDownloader WebTools do not require any special access privileges. As long as the administrator has enabled Web Services in Setup and provided users with the IP address of the E-810, anyone can use these WebTools.
- Fiery Link, a utility designed to give you up-to-date status on print jobs and connected E-810 servers, is also available to all users.

Fiery WebTools

Fiery WebTools reside on the E-810's hard disk drive but can be accessed over the network from a variety of platforms. The E-810 has a home page that lets you view server functions and manipulate jobs remotely. This chapter describes only the Status, WebLink, WebScan, and Fiery WebDownloader WebTools. For information on Fiery WebSpooler, see the *Job Management Guide*. For information on the Installer WebTool, see *Getting Started*.

TO ACCESS FIERY WEBTOOLS

1. **Start up your Internet browser application.**

See *Getting Started* for information about supported platforms and browsers.

2. **Enter the IP address or the DNS name of the E-810.**

Check with the operator or administrator for this information.

3. If a Log In dialog box appears, select Guest and click OK.

The Log In dialog box appears only if the administrator has set a password. Guest access is sufficient to use the Status, WebLink, WebScan, and Fiery WebDownloader WebTools as described in this chapter.

4. When the E-810 home page appears, click to select one of the Fiery WebTools.

Move the cursor over the buttons to display information about the selections.

Checking E-810 status with the Status WebTool

You can use the Status WebTool to see what jobs are currently processing and printing. To access the Status WebTool, point your browser to the E-810 home page and click the Status button. The current RIP Status and Printer Status appear in the window.



To open a new browser window for the Status display, click Float. You can then close other browser windows and leave the Status window open to continue checking the status of the E-810. As long as you keep the Status window open, it is dynamically updated.

To obtain more information about the status of jobs, use Fiery WebSpooler, Fiery Spooler, or Command WorkStation, as described in the *Job Management Guide*. You can also use Fiery Link, as described on page 6-6.

Accessing information with WebLink

The WebLink button on the E-810 home page provides a link to another web page or to multiple web pages, provided you have a valid Internet connection. The administrator at your site can set the WebLink destination. Check your E-810 WebLink for any information available there.

Downloading files with Fiery WebDownloader

Using Fiery WebDownloader, you can send PostScript, Encapsulated PostScript (EPS), and Portable Document Format (PDF) files to the printer without first opening the file in an application.

TO DOWNLOAD A FILE WITH FIERY WEBDOWNLOADER

- 1. Click the WebDownloader WebTool.**
- 2. Select the destination.**

A file can be downloaded to the Direct, Print, or Hold queues. Files sent to the Print queue are spooled in the printer's memory. Files sent to the Hold queue remain in memory until they are moved to the Print queue or are deleted.

- 3. Click Browse to search for the file, then select the file and click Open.**
- 4. Click Download.**

Accessing scanned jobs with WebScan


Once you have scanned a document to the Fiery hard drive with Fiery Scan's Scan to HDD feature, you can then access the documents with the WebScan WebTool.

For information on how to scan a job to the E-810 hard disk with the Scan to HDD feature, see page 4-16.

UPLOADING SCANNED IMAGES WITH THE WEBSCAN WEBTOOL

1. Click the WebScan WebTool.

The WebScan window appears.

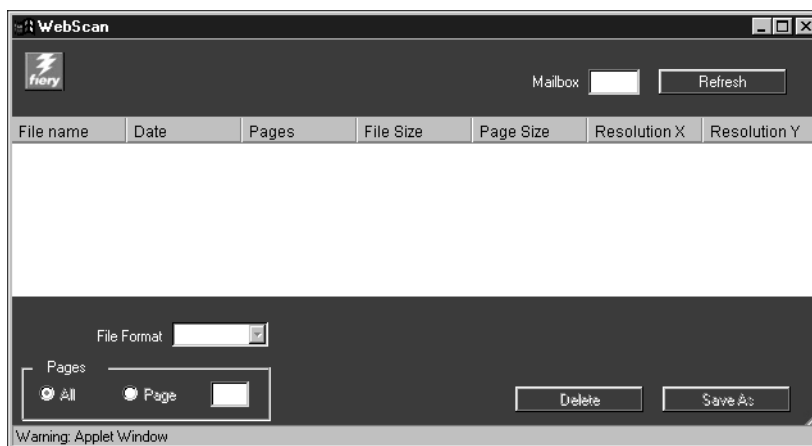

2. In the Mailbox field, enter the mailbox number.

NOTE: The mailbox number is the directory that you specified with the Scan to HDD feature. For more information, see page 4-16.


3. Click Refresh.

All documents scanned to that mailbox are displayed.

WebScan lists the following information about each scanned job: File name, Date, Pages, File size, Page Size, Resolution X, and Resolution Y.

4. Choose the file that you want to open by clicking it.

The default name provided, MMDDHHMM, contains 8 characters. Up to 20 characters are permitted in job names.

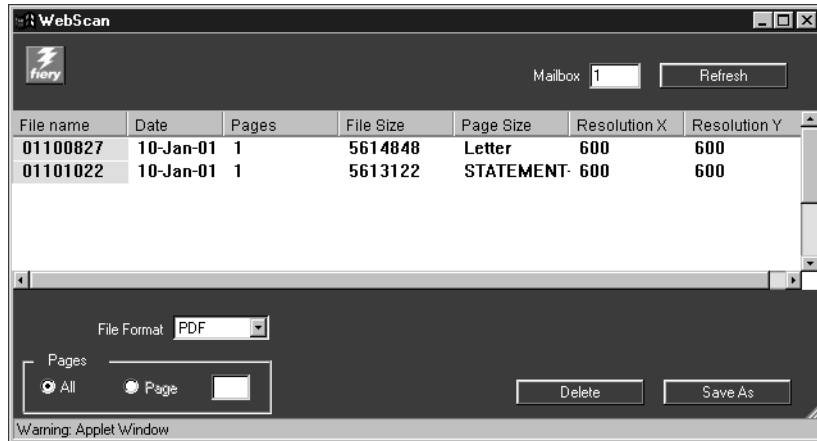

5. Choose a file format from the File Format menu.

Select from PDF, TIFF, or JPEG.

6. Click Save As.

NOTE: Depending on the browser you are using, you may be asked to choose if you would like to open the file from its current location or save the file to disk.

The scanned image is displayed in your web browser.

NOTE: You must have Adobe Acrobat installed to view the scanned PDF.

7. To print this job, choose print from the file menu.

To delete a scanned image from the E-810 hard drive, select the file that you want to delete from the WebScan window and click Delete.

Fiery Link

Fiery Link is designed to provide you with up-to-date status on print jobs and connected servers. It tracks the status of your print jobs and alerts you to errors. For example, you can see how many print jobs are ahead of your job in the queue. Fiery Link also provides information about paper and toner levels. For example, you can check paper size and levels in all trays before sending a job.

NOTE: The information in the Fiery Link window is updated every 20-30 seconds. Double-click the Fiery Link window to see updated information immediately.


For information on installing and configuring Fiery Link and on supported networking protocols, see *Getting Started*.

NOTE: The Windows and Mac OS versions of Fiery Link are fundamentally the same; differences are noted in this section. Where both windows or dialog boxes are illustrated, the Windows version comes first, followed by the Mac OS version.

TO BEGIN USING FIERY LINK


1. Double-click the Fiery Link icon, or choose Fiery Link from the Start>Programs menu.

The main Fiery Link window appears:

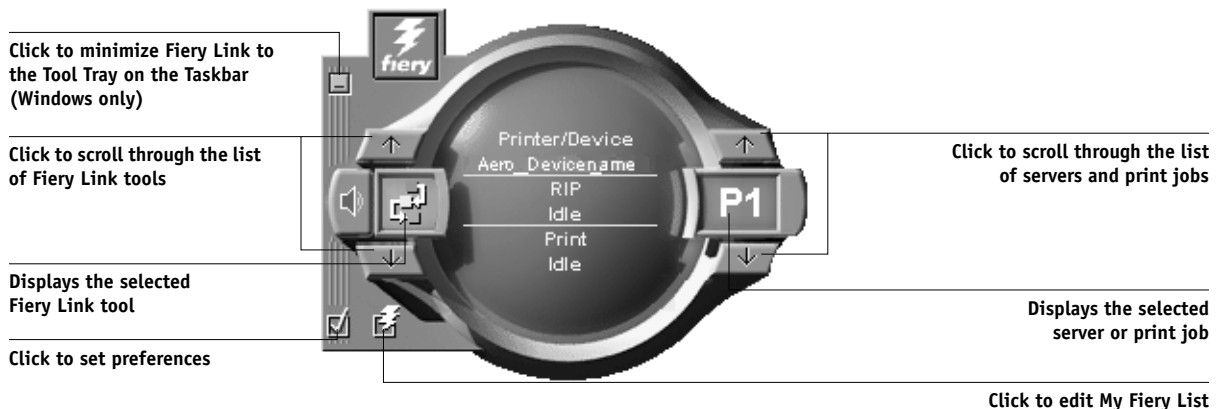


NOTE: To exit Fiery Link, press the Alt and F4 keys (Windows) or the Command and Q keys (Mac OS).

2. Click the currently selected server or print job to display the list of all connected servers or print jobs.

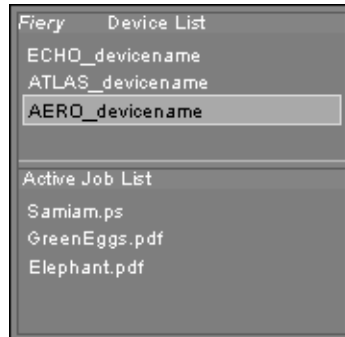
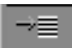




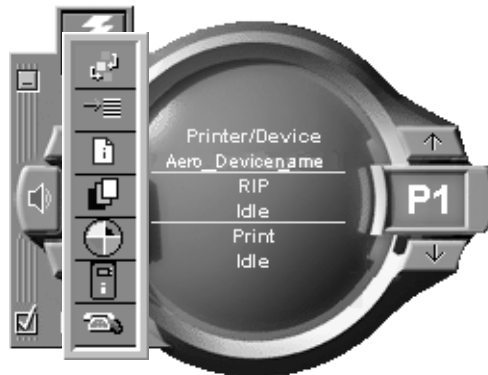


3. From this list, select the E-810 or the job about which you want information.
4. Click the currently selected Fiery Link tool to display a list of all the tools (as shown below), and select a tool.



Fiery Link tools

Fiery Link includes the following tools that can be used to monitor a print job or a connected E-810. Clicking the up and down arrows scrolls through the Tool List and opens each tool in turn in the Fiery Link window.

Icon	Tool	If a print job is selected	If a server is selected
	Status	Shows the job status and number of pages processed.	Shows the status of the server, including any error messages. You can make an error message disappear by clicking the Fiery Link window.
	Queue Position	Shows the number of jobs ahead of the selected job in the queue.	Shows the total number of active jobs queued to print on the server.
	File Info	Displays the file name, when it was sent to the server, the target server, the number of pages, and number of copies.	Displays the server name and connected device, total number of queued jobs, and the number of those jobs sent by the user.
	Input Trays (see below)	Shows paper levels in all trays of the output device to which the job was printed.	Shows paper levels in all trays of the output device to which the server is connected.
	Toner (see below)	Shows the toner levels of the output device to which the job was printed.	Shows the toner levels of the output device to which the server is connected.
	Fiery Info	Shows the model name, amount of memory, processor, and software version of the target server.	Shows the model name, amount of memory, processor, and software version of the server.
	Support	Lists the contact names and information for the target server and the output device.	Lists the contact names and information for the server and the output device.

Input Trays


Icons represent the paper level in each tray. A red icon indicates the paper tray is empty, a yellow icon indicates the paper tray is less than half full, and a green icon indicates the paper tray is more than half full. Up and down arrows allow you to scroll through the available paper trays.

Toner

You can see how much toner your copier has by clicking the Toner tool. A warning is displayed if the copier is getting low on toner.


Preferences

Click the preferences checkbox in the main window to view the Preferences dialog box.

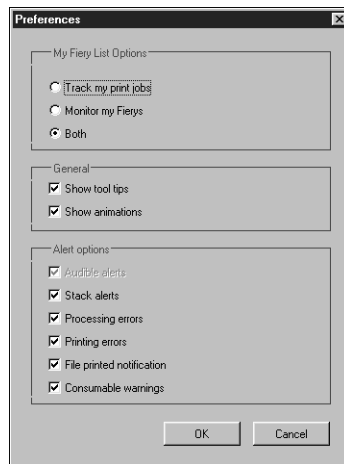

Setting the My Fiery List Options preferences

You can track print jobs, monitor E-810 servers, or both. If you select Track my print jobs, then click the currently selected print job, the Active Job List window is displayed.

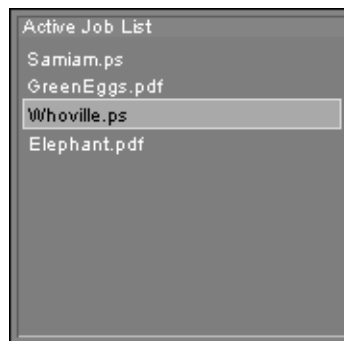

If you select Monitor my Fierys, then click the currently selected E-810 server, the Device List is displayed.




If you select Both, then click the currently selected print job or E-810 server, both the Active Job List and Device List are displayed.

Setting the General and Alert option preferences

You can set the following options for tracking print jobs, monitoring servers, or both:

- Show/hide tool tips
- Show/hide animations
- Enable/disable audible alerts
- Enable/disable stack alerts
- Enable/disable processing error notification
- Enable/disable printing error notification
- Enable/disable file printed notification
- Enable/disable consumable warnings notification


My Fiery List

Click the Fiery checkbox  in the main window to access the My Fiery List. You can use My Fiery List to specify the E-810 servers you want to monitor using Fiery Link. For information on setting up and changing the My Fiery List, see *Getting Started*.

Windows taskbar menu

You can access a menu from the Windows taskbar status area to get information about Fiery Link, set some Fiery Link options, or exit the application.

TO ACCESS AND USE THE TASKBAR MENU

1. Right-click the Fiery Link icon  in the Windows taskbar status area.
2. Choose one of the options from the pop-up menu.



Options with checkmarks are enabled.

3. Choose **About Fiery Link** for version information.
4. Choose **Always on Top** to enable or disable the option.

If this option is enabled, the Fiery Link window always appears on top of other open windows. If this option is disabled, the Fiery Link window may be hidden by other open windows.

NOTE: Fiery Link's default setting is to have Always on Top enabled.

5. Choose **Dock Fiery Link** to enable or disable the option.

If this option is enabled, the Fiery Link window is automatically repositioned to either the far left or the far right side of your screen. If this option is disabled, you can position the Fiery Link window anywhere on the screen.

6. Choose **Exit** to exit Fiery Link.

Appendix A: Print Options

Print options give you access to all the special features of your copier and E-810. Print options can be specified in several places—in E-810 Setup, from the printing application, from Fiery Downloader, ColorWise Pro Tools, Command WorkStation, Fiery WebSpooler, and Fiery Spooler. The table in this appendix briefly describes each print option, gives its default setting, and provides information on any constraints or requirements in effect.

Where to set print options

- During Setup

Some settings are specified during Setup by the administrator. For information on the current default server settings, check with the administrator or the operator.

- From applications

With the Adobe PostScript printer drivers, you can specify job settings when you print a job. See Chapters 1 and 2 for information about specifying job settings from applications.

- From Fiery Downloader

Only a few settings—Copies, Page Range (for PDF files only), and Brightness (for PostScript and EPS files only)—can be specified when printing jobs with Fiery Downloader. To change options in Fiery Downloader, select a job in the Files to be Downloaded (Windows) or Files to Download (Mac OS) list and click Options. For more information, see Chapter 5.

- From ColorWise Pro Tools

You can set the default CMYK Simulation Profile, CMYK Simulation Method, RGB Source Profile, RGB Separation, Output Profile, Rendering Style, Spot Color Matching, Pure Black Text/Graphics, and Black Overprint settings. See the *Color Guide* for more information on using ColorWise Pro Tools.

- Overrides from Command WorkStation, Fiery WebSpooler, and Fiery Spooler

To change job settings from Command WorkStation, double-click a job to display the Properties dialog box. To change job settings from Fiery WebSpooler and from Fiery Spooler, double-click a job to display the Override Print Settings dialog box. For more information, see the *Job Management Guide*.

Print option override hierarchy

The override hierarchy is as follows:


- A user's printer driver settings override the E-810 Setup and ColorWise Pro Tools settings.
- Settings made from Command WorkStation, Fiery WebSpooler, or Fiery Spooler override the user's printer driver settings.

Default settings

In the following table, underlined settings in the “Option and settings” column indicate default printer driver settings (PPD defaults). In other words, if you do not use the printer driver interface to configure a particular option, the E-810 prints the job with the underlined setting.

For options that can be configured during Setup from the Control Panel, Command WorkStation, or ColorWise Pro Tools choosing Printer's default results in the E-810 printing the job with the Setup setting specified. For options that cannot be configured during Setup, the E-810 prints the job with a pre-configured “Printer's default” setting. For more information, see the “Requirements, constraints, and information” column.

To find out about the current Setup defaults, print the Configuration page from Command WorkStation or from the E-810 Control Panel.

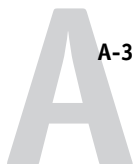

Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Black Overprint <u>Printer's default</u> /Off/On	Select Off to print black text with knockouts. Select On to overprint black text.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option. If this option is set to On, the Combine Separations option must be set to Off. Setting this option to On automatically sets the Pure Black Text/Graphics option to On. For more information, see page A-9 and the <i>Color Guide</i> .
Brightness 85% Lightest/90% Lighter/95% Light/ <u>100% Normal</u> /105% Dark/ 110% Darker/115% Darkest	Select 85% for a substantially lighter image, 115% for a substantially darker image, or use one of the settings in between.	
CMYK Simulation Profile <u>Printer's default</u> /SWOP-Coated/ DIC/Euroscale/Simulation-1/ Simulation-2/Simulation-3/ Simulation-4/Simulation-5/ Simulation-6/Simulation-7/ Simulation-8/Simulation-9/ Simulation-10/None/Match Copy	Specify the simulation goal to be used for the current print job.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option. For more information, see page A-10 and the <i>Color Guide</i> .
CMYK Simulation Method <u>Printer's default</u> /Quick/Full	Select Quick to utilize one-dimensional transfer curves to adjust density output of individual color channels. Select Full to utilize four-dimensional transfer curves, which adjust for hue as well as density of individual color channels.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option. For more information, see the <i>Color Guide</i> .



Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Color Mode Printer's default/ <u>CMYK</u> /Grayscale (from the Mac OS, and Windows 2000 drivers) OR Print Mode <u>Standard Color</u> /Expert Color/Grayscale (from the Windows 9x/Me or NT driver)	Specify the color mode for the current print job. Select CMYK, Standard Color, or Expert Color for a full-color document. Select Grayscale for a grayscale or black-and-white document.	The Printer's default setting reflects the setting specified in E-810 Setup. The options differ depending on which driver you use. For Windows, you must choose Expert Color to set other color print options, including Pure Black Text/Graphics.
Combine Separations On/Off	When printing separations from a desktop publishing application: Select On to combine separations on a single page. Select Off to view separations as four individual black-and-white pages each representing one color plate.	For more information, see page A-11.
Copies <u>1</u> -999	Specify the number of copies of the job to print.	Do not enter a value greater than 999.
Create Master <u>None</u> /1-15	To create a FreeForm master from this job, specify a number to assign to the FreeForm master file.	See page 4-2 for more information.
Dithering Letter/Photo /Auto	Select Letter if the file contains detailed drawings and small text. Select Photo if the file is a photograph. Select Auto if the file is a combination of text and photographs.	
Duplex <u>Off</u> /Side Binding/Top Binding	Select Off for simplex (single-sided) printing. Select Side Binding for duplex (double-sided) printing with both sides using the same top edge. Select Top Binding for duplex printing with the back side upside down.	For more information, see page A-11. If the Suspend Print command is used during printing of a duplex job, printing cannot be resumed—the job must be resent.
Instructions	Enter instructions to the operator about the job.	

Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Media Type (Paper Type) <u>Plain Paper</u> /Transparency/ Thick Paper/Extra Thick Paper	Select Transparency if you will be printing on transparencies.	For more information, see page A-12. The Transparency setting is only supported with the Manual Feed tray.
Slip Sheet <u>On/Off</u>	Specify whether to insert a slip sheet between copies of multiple-copy jobs.	To use this option, your Media Type must be set to Transparency and Paper Source must be set to Manual Feed.
Notes	Enter special information about the job.	The Notes field has a 31-character limit.
Orientation <u>Portrait</u> /Landscape	Specify the orientation of the document. Select Rotated if you want to rotate the pages of your job 180 degrees.	
(Other) Gamma <u>Printer's default</u> /1.0/1.2/1.4/1.6/ 1.8/2.0/2.2/2.4/2.6/2.8/3.0	Specify a source gamma value for printing RGB images, objects, and text.	Setting this option to Printer's default produces the same result as the 2.2 setting. To enable this option, RGB Source Profile must be set to Other. For more information, see the <i>Color Guide</i> .
(Other) Phosphors <u>Printer's default</u> /Hitachi EBU/ Hitachi-Ikegami/NTSC/ Radius Pivot/SMPTE/Trinitron	Specify a source phosphors value for printing RGB images, objects, and text.	Setting this option to Printer's default produces the same result as the SMPTE setting. To enable this option, RGB Source Profile must be set to Other. For more information, see the <i>Color Guide</i> .
(Other) White Point <u>Printer's default</u> /5000 K (D50)/ 5500 K/6500 K (D65)/7500 K/9300 K	Specify a source white point value for printing RGB images, objects, and text.	Setting this option to Printer's default produces the same result as the 5000 K (D50) setting. To enable this option, RGB Source Profile must be set to Other. For more information, see the <i>Color Guide</i> .



Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Output Profile <u>Printer's default</u> /Output-1/Output-2/ Output-3/Output-4/Output-5/ Output-6/Output-7/Output-8/ Output-9/Output-10	Specify the output profile to be used for the current print job.	The Printer's default setting reflects the setting specified in ColorWise Pro Tools. For Windows, choose Expert Color as the Color Mode to access this option. See page A-13 and the <i>Color Guide</i> for more information.
Page Order <u>Printer's default</u> /Forward/Reverse	Select Forward to print the pages of your job from first to last. Select Reverse to print the pages of your job from last to first.	The Printer's default setting reflects the setting specified in E-810 Setup. NOTE: If you set Page Order to Reverse and print a job with more than 1000 pages, or a job that is too large to be saved to the E-810's memory and disk (based on currently available space), then the job may print in sections that have to be manually rearranged after printing. For example, if you print a 1500-page document in reverse order, the E-810 might divide the job into two portions, first printing page 1000 to page 1, and then page 1500 to page 1001.
Paper Size <u>Letter</u> /A4/Legal/11x17/A3/A5/ A5 SEF/A6 SEF/Legal 13/Letter SEF/ A4 SEF/B4/B5/B5 SEF/B6 SEF/ Postcard/Double Postcard/12x18/ 13x19/8.5x5.5/5.5x8.5/ Custom page 1/Custom page 2/ Custom page 3	Specify the size of the paper on which to print the document.	
Paper Source <u>AutoSelect</u> /Tray 1/Tray 2/Tray 3/ Manual Feed/Manual Duplex/LCT	Specify the paper tray to use for your job.	The AutoSelect setting automatically selects the tray containing the paper size specified for the job. See page A-13 for more information. If you select Manual Feed or Manual Duplex, you must load the appropriate paper in the Manual Feed tray and select the correct paper size for the print job. Otherwise a paper jam might occur.



Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Pure Black Text/Graphics <u>Printer's default</u> /Off/On	Select Off to print black text and graphics as a four color black using C, M, Y, and K toner, and to use normal PostScript rendering. Select On to print black text and graphics as a one color black, using 100% black toner only.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Print Mode to access this option. This option is automatically set to On if the Black Overprint option is set to On. For more information, see the Color Guide.
Remove White PPT Background <u>No</u> /Yes	Select Yes when using PowerPoint to create variable data in conjunction with FreeForm.	
Rendering Style <u>Printer's default</u> /Photographic/ Presentation/Relative Colorimetric/ Absolute Colorimetric	Specify a default color rendering dictionary (CRD) to be used when you print RGB images, objects, and text.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option. For more information, see page A-13.
RGB Separation <u>Printer's default</u> /Output/Simulation	Select Output for RGB jobs which you are printing to the final output device. Select Simulation for RGB jobs for which you want to simulate an output device that is not the device to which you are printing.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option.
RGB Source Profile <u>Printer's default</u> /EFIRGB/sRGB (PC)/ Apple Standard/Other/Source-1/ Source-2/Source-3/Source-4/Source-5/ Source-6/Source-7/Source-8/Source-9/ Source-10/None	Specify a source color space definition for printing RGB images, objects, and text.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option. See page A-14 and the Color Guide for more information.

Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Rotate 180 <u>Yes/No</u>	Specify if you want to rotate the pages of your job 180 degrees.	This option is only available from Mac OS, Windows NT 4.0 and Windows 2000. For Windows 9x/Me, use the Orientation option. Depending on the application you are using, your landscape job may print with the incorrect orientation; if this occurs, or if you select a Stapler Mode (other than Off) and the staple is inserted in the wrong place, select Yes.
Save Fast Reprint <u>Off/On</u>	Specify whether or not to save a job's raster data to disk after printing, so the data will be available later for reprinting (without reRIPping).	With Save Fast Reprint set to On, all print option settings remain with the saved raster data each time the job is reprinted. To print the job with new print option settings, you must remove raster and reRIP the job.
Sorter Mode <u>Off/Collate/Sort/Stack</u>	Specify how to output multiple-page/multiple-copy jobs.	For more information, see page A-14.
Spot Color Matching <u>Printer's default/Off/On</u>	Select Off to print specified PANTONE colors in your job using the current CMYK Simulation and CMYK Simulation Method. Select On to activate the PANTONE Lookup Table. The E-810 prints specified PANTONE colors in your job by matching the CMYK print blend to the same color from the PANTONE library.	The Printer's default setting reflects the setting specified in E-810 Setup. For Windows, choose Expert Color as the Color Mode to access this option. For more information, see the <i>Color Guide</i> .
Stapler Mode <u>Off/Top Right/Top Left/Two Centers</u>	Specify whether or not and how to staple the job.	
Toner Reduction <u>Off/On</u>	Specify whether or not to print the current job with a maximum toner value.	For more information, see page A-15.

Option and settings (Default setting is underlined)	Description	Requirements, constraints, and information
Tray Alignment <u>Printer's default</u> /Enable/Disable	Specify whether or not to enable or disable Tray Alignment. Tray Alignment allows you to adjust the placement of text and images on the page so that they are correctly aligned on the sheet of paper or so that both sides of a duplex sheet have the exact same alignment.	See the <i>Job Management Guide</i> for more information.
Use Master <u>None</u> /1-15	For variable data print jobs, specify a FreeForm master number to be used for the job.	See page 4-2 for more information.
User ID	Enter a user ID for the job.	The User ID field has an 8-character limit.

More about print options

The following sections provide additional information about print options. See the table above for information on the settings, requirements, and constraints in effect for these options.

Black Overprint

When printing black text in combination with a color background or graphics, the text can be printed in one of two ways: either as part of the color background, or on top of the color background. Black Overprint allows you to choose a specific way to print the black text for such a job.

Off—Prints the black text with knockouts. The E-810 first prints the color background with the black text areas 'knocked out' (no color is printed in the text areas); the black text is then printed in the knocked out area, filling in the areas not printed in color. The result is a flatter appearance for the black text.

On—Overprint the black text. Used in combination with the Pure Black Text/Graphics option, the E-810 first prints the full color background, then lays the black text on top of the color background as 100% K toner. The result is a darker and glossier appearance for the black text. Overprinting also minimizes misregistration and 'haloing' problems.

CMYK Simulation Profile

CMYK Simulation Profile allows you to change the simulation goal for the current print job. As the job begins processing, the simulation goal selected in CMYK Simulation Profile is applied before printing.

NOTE: Choosing Printer's default results in the job being printed with the simulation goal currently set on the E-810.

SWOP-Coated—Uses the United States press standard.

DIC—Uses the Japanese press standard.

Euroscale—Uses the European press standard.

Simulation-1 (2,3,4,5...10)—Uses a custom simulation goal. Before selecting this setting, you are required to create a new simulation goal with ColorWise Pro Tools and link the new simulation to one of the custom simulation names, for example, Simulation-1.

NOTE: If two-way communication is enabled, Simulation-1 through Simulation-10 do not appear in the Windows 9x/Me or Windows NT 4.0 drivers. These drivers display all the custom simulations saved on the E-810 by name. See *Getting Started* for information on setting up two-way communication.

None—Uses no simulation goal. Select this setting when the CMYK data for your job has already been separated for your specific printer (for example, when using the Color Management System built into your computer to convert the CMYK data to the printer's color space).

Match Copy—Uses no calibration or simulation goal. Select this setting when printing images imported with Fiery Scan (with the Color Conversion option set to Match Copy), or when you want to bypass E-810 calibration and simulation.

For more information about simulation and calibration, see the *Color Guide*.

Combine Separations

The Combine Separations option specifies whether to combine color separations (created in desktop publishing applications such as QuarkXPress or Adobe PageMaker) on a single page to simulate printing on a press from film separations. It allows you to proof overprinting, trapping, and other four-color printing effects before having film separations created. It also enables you to combine Desktop Color Separations (DCS) format files to print them at full resolution instead of printing the low-resolution master file. Selecting the appropriate color rendering dictionary (CRD) setting for the type of image you are printing ensures optimal color output on the E-810.

Your job must have been printed as color separations or DCS format when you printed it from your application. If you did not print the job in this manner, the Combine Separations option has no effect.

Duplex

All duplex printing features are available only with plain paper media type.

TO PRINT DUPLEX PAGES

1. **Choose Print in your application, and locate the Duplex print option.**





The location of E-810 print options varies, depending on the printer driver you are using.

2. **Choose one of the Duplex settings:**

Side Binding—Prints the top of the image on side 1 on the same edge of the page as the top of the image on side 2.

Top Binding—Prints the top of the image on side 1 on the opposite edge of the page from the top of the image on side 2.

The following table shows how the Duplex settings correspond to printed output:

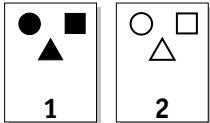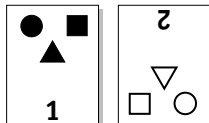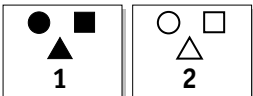	Side Binding	Top Binding
Portrait		
Landscape		

Media Type

The Media Type option allows you to select the type of media for loading into the selected tray.

Plain Paper—Standard bond paper

Transparency—Transparency sheets

Thick Paper—Heavy paper

Extra Thick Paper—Very heavy and cover paper)

NOTE: For detailed paper information, please refer to the copier's User Manual.

Output Profile

Output-1 through Output-10—Uses a custom output profile. Before selecting this setting, you are required to download or create the output profile with ColorWise Pro Tools, then link it with one of the custom output profile names, for example, Output-1.

For information on output color space and color management, see the *Color Guide*.

Paper Source

If you choose the Auto Select setting, the copier prints from any tray containing the paper size needed for the job. This setting also allows the copier to automatically switch between trays, if the current tray becomes empty, while continuing to print.

Rendering Style

Use this option to select a default color rendering dictionary (CRD) to be used when you print RGB images, objects, and text.

Photographic—Optimizes the range of colors on the E-810 to produce the best results for photographic or bitmapped images.

Presentation—Optimizes the output of pure, saturated colors such as those used in business presentations.

Relative Colorimetric—Provides a close match to the CMYK device being simulated, regardless of the media being used.

Absolute Colorimetric—Provides the closest match to the CMYK device being simulated, including rendering the paper color as the background.

RGB Source Profile

This option is used to specify a source color space for RGB data.

EFIRGB—Optimal source space for printing to the E-810. This setting provides consistent output across platforms.

sRGB (PC)—Specifies the source space of a generic Windows computer monitor.

Apple Standard—Specifies the source space of a Mac OS computer monitor.

Other—Allows you to specify a custom RGB source setting using the **(Other) Gamma**, **(Other) Phosphors**, and **(Other) White Point** print options.

Source-1 through Source-10—Uses a custom source profile. Before selecting this setting, you are required to download the source profile to the E-810 with ColorWise Pro Tools, then link it with one of the custom source profile names, for example, Source-1.

NOTE: If two-way communication is enabled, Source-1 through Source-10 do not appear in the Windows 9x/Me and Windows NT 4.0 drivers. These drivers display all the source profiles saved on the E-810 by name. See *Getting Started* for information on setting up two-way communication.

For information on source color space and color management, see the *Color Guide*.

Sorter Mode

Sorting is supported on color copiers with a sorter/stapler unit attached.

Off—Copies of a complete job are output, uncollated, into the top tray.

Collate—Copies of a complete job are collated and output into the top tray.

Sort—Copies of a complete job are sorted and output into one of 20 bins, arranged in page order.

NOTE: The sorter has 20 bins. If you send more than 20 sets of copies to the sorter, the excess sets of copies (copies 21 and up) will not print. In order to print more than 20 sets of copies sets of copies to the sorter, remove the paper from the output bin and resend the job.

Stack—Copies of a complete job are output into one of 20 bins, with all copies of the same page grouped together in each separate bin.

Toner Reduction

Color mixtures with high toner values can cause a blasting effect on the printed page. Blasting occurs when excess amounts of toner, combined with certain types of paper stock, results in a printed image “blasting” beyond its boundaries as defined on your computer screen.

The Toner Reduction option minimizes this effect by reducing high toner values to a maximum of 210%. For example, if a color image in your job calls for toner values of C 100%, M 50%, Y 100%, and K 10% (for a total toner value of 260%), setting Toner Reduction to On automatically adjusts those CMYK values to create the same color with a maximum toner value of 210%. When set to Off, the E-810 prints with the amount of toner specified.

Appendix B:
Font List

This appendix lists the built-in printer fonts included with your E-810.

PostScript printer fonts

Listed below are the 136 built-in PostScript printer fonts on the E-810. In addition to the fonts listed below, two Adobe Multiple Master fonts are included and are used for font substitution in PDF files.

NOTE: For Mac OS computers, install the corresponding screen fonts from the User Software CD. For instructions, see *Getting Started*.

Adobe Type 1 fonts

The E-810 includes 126 Adobe Type 1 fonts:

- The Mac OS column lists the name as it appears on the Font menu on a Mac OS computer. For example, in most applications, to use “Bodoni-Bold,” choose Bodoni Bold from the Font menu.
- The Windows menu name is the name as it appears on the Font menu on a Windows computer. The style refers to the style that must be selected in the application to access the particular PostScript font. For example, to use “Bodoni-Bold,” choose Bodoni from the Font menu and Bold from the Style menu.

PostScript name	Mac OS menu name	Windows menu name, style
AlbertusMT-Light	Albertus MT Lt	Albertus MT Lt
AlbertusMT	Albertus MT	Albertus MT
AlbertusMT-Italic	Albertus MT It	Albertus MT, Italic
AntiqueOlive-Roman	Antique Olive Roman	Antique Olive Roman
AntiqueOlive-Bold	Antique Olive Bold	Antique Olive Roman, Bold
AntiqueOlive-Italic	Antique Olive Italic	Antique Olive Roman, Italic
AntiqueOlive-Compact	Antique Olive Compact	Antique Olive Compact
Arial-BoldItalicMT	Arial Bold Italic	Arial, Bold Italic
Arial-BoldMT	Arial Bold	Arial, Bold
Arial-ItalicMT	Arial Italic	Arial, Italic
ArialMT	Arial	Arial

PostScript name	Mac OS menu name	Windows menu name, style
AvantGarde-Book	Avant Garde	AvantGarde
AvantGarde-Demi	Avant Garde Demi	AvantGarde, Bold
AvantGarde-BookOblique	Avant Garde BookOblique	AvantGarde, Italic
AvantGarde-DemiOblique	Avant Garde DemiOblique	AvantGarde, Bold Italic
Bodoni	Bodoni	Bodoni
Bodoni-Bold	Bodoni Bold	Bodoni, Bold
Bodoni-Italic	Bodoni Italic	Bodoni, Italic
Bodoni-BoldItalic	Bodoni BoldItalic	Bodoni, Bold Italic
Bodoni-Poster	Bodoni Poster	Bodoni Poster
Bodoni-PosterCompressed	Bodoni PosterCompressed	Bodoni PosterCompressed
Bookman-Light	Bookman	Bookman
Bookman-Demi	Bookman Demi	Bookman, Bold
Bookman-LightItalic	Bookman LightItalic	Bookman, Italic
Bookman-DemiItalic	Bookman DemiItalic	Bookman, Bold Italic
Carta	Carta	Carta
Clarendon-Light	Clarendon Light	Clarendon Light
Clarendon	Clarendon	Clarendon
Clarendon-Bold	Clarendon Bold	Clarendon, Bold
CooperBlack	Cooper Black	Cooper Black
CooperBlack-Italic	Cooper Black Italic	Cooper Black, Italic
Copperplate-ThirtyThreeBC	Copperplate33bc	Copperplate33bc
Copperplate-ThirtyTwoBC	Copperplate32bc	Copperplate32bc
Coronet	Coronet	Coronet
Courier	Courier	Courier
Courier-Bold	Courier Bold	Courier, Bold
Courier-Oblique	Courier Oblique	Courier, Italic
Courier-BoldOblique	Courier BoldOblique	Courier, Bold Italic
Eurostile	Eurostile	Eurostile
Eurostile-Bold	Eurostile Bold	Eurostile Bold
Eurostile-ExtendedTwo	Eurostile ExtendedTwo	Eurostile ExtendedTwo
Eurostile-BoldExtendedTwo	Eurostile BoldExtendedTwo	Eurostile ExtendedTwo, Bold
GillSans	GillSans	GillSans
GillSans-Bold	GillSans Bold	GillSans, Bold
GillSans-Italic	GillSans Italic	GillSans, Italic

PostScript name	Mac OS menu name	Windows menu name, style
GillSans-BoldItalic	GillSans BoldItalic	GillSans, Bold Italic
GillSans-Light	GillSans Light	GillSans Light
GillSans-LightItalic	GillSans LightItalic	GillSans Light, Italic
GillSans-Condensed	GillSans Condensed	GillSans Condensed
GillSans-BoldCondensed	GillSans BoldCondensed	GillSans Condensed, Bold
GillSans-ExtraBold	GillSans ExtraBold	GillSans ExtraBold
Goudy	Goudy	Goudy
Goudy-Bold	Goudy Bold	Goudy, Bold
Goudy-Italic	Goudy Italic	Goudy, Italic
Goudy-BoldItalic	Goudy BoldItalic	Goudy, Bold Italic
Goudy-ExtraBold	Goudy ExtraBold	Goudy ExtraBold
Helvetica	Helvetica	Helvetica
Helvetica-Bold	Helvetica Bold	Helvetica, Bold
Helvetica-Oblique	Helvetica Oblique	Helvetica, Italic
Helvetica-BoldOblique	Helvetica BoldOblique	Helvetica, Bold Italic
Helvetica-Narrow	Helvetica Narrow	Helvetica-Narrow
Helvetica-Narrow-Bold	Helvetica Narrow Bold	Helvetica-Narrow, Bold
Helvetica-Narrow-Oblique	Helvetica Narrow Oblique	Helvetica-Narrow, Italic
Helvetica-Narrow-BoldOblique	Helvetica Narrow BoldObl	Helvetica-Narrow, Bold Italic
Helvetica-Condensed	Helvetica Condensed	Helvetica Condensed
Helvetica-Condensed-Bold	Helvetica CondensedBold	Helvetica Condensed, Bold
Helvetica-Condensed-Oblique	Helvetica CondensedOblique	Helvetica Condensed, Italic
Helvetica-Condensed-BoldObl	Helvetica CondensedBoldObl	Helvetica Condensed, Bold Italic
HoeflerText-Ornaments	Hoefler Text Ornaments	Hoefler Text Ornaments
JoannaMT	Joanna MT	Joanna MT
JoannaMT-Bold	Joanna MT Bd	Joanna MT, Bold
JoannaMT-Italic	Joanna MT It	Joanna MT, Italic
JoannaMT-BoldItalic	Joanna MT Bd It	Joanna MT, Bold Italic
LetterGothic	Letter Gothic	Letter Gothic
LetterGothic-Bold	Letter Gothic Bold	Letter Gothic, Bold
LetterGothic-Slanted	Letter Gothic Slanted	Letter Gothic, Italic
LetterGothic-BoldSlanted	Letter Gothic BoldSlanted	Letter Gothic, Bold Italic
LubalinGraph-Book	Lubalin Graph	LubalinGraph
LubalinGraph-Demi	Lubalin Graph Demi	LubalinGraph, Bold

PostScript name	Mac OS menu name	Windows menu name, style
LubalinGraph-BookOblique	Lubalin Graph BookOblique	LubalinGraph, Italic
LubalinGraph-DemiOblique	Lubalin Graph DemiOblique	LubalinGraph, Bold Italic
Marigold	Marigold	Marigold
MonaLisa-Recut	Mona Lisa Recut	Mona Lisa Recut
NewCenturySchlbk-Roman	New Century Schlbk	NewCenturySchlbk
NewCenturySchlbk-Bold	New Century Schlbk Bold	NewCenturySchlbk, Bold
NewCenturySchlbk-Italic	New Century Schlbk Italic	NewCenturySchlbk, Italic
NewCenturySchlbk-BoldItalic	New Century Schlbk BoldIt	NewCenturySchlbk, Bold Italic
Optima	Optima	Optima
Optima-Bold	Optima Bold	Optima, Bold
Optima-Italic	Optima Italic	Optima, Italic
Optima-BoldItalic	Optima BoldItalic	Optima, Bold Italic
Oxford	Oxford	Oxford
Palatino-Roman	Palatino	Palatino
Palatino-Bold	Palatino Bold	Palatino, Bold
Palatino-Italic	Palatino Italic	Palatino, Italic
Palatino-BoldItalic	Palatino BoldItalic	Palatino, Bold Italic
StempelGaramond-Roman	StempelGaramond Roman	StempelGaramond Roman
StempelGaramond-Bold	StempelGaramond Bold	StempelGaramond Roman, Bold
StempelGaramond-Italic	StempelGaramond Italic	StempelGaramond Roman, Italic
StempelGaramond-BoldItalic	StempelGaramond BoldItalic	StempelGaramond Roman, Bold Italic
Symbol	Symbol	Symbol
Tekton	Tekton	Tekton
Times-Roman	Times	Times
Times-Bold	Times Bold	Times, Bold
Times-Italic	Times Italic	Times, Italic
Times-BoldItalic	Times BoldItalic	Times, Bold Italic
TimesNewRomanPS-BoldMT	Times New Roman Bold	Times New Roman, Bold
TimesNewRomanPS-BoldItalicMT	Times New Roman Bold Italic	Times New Roman, Bold Italic
TimesNewRomanPS-ItalicMT	Times New Roman Italic	Times New Roman, Italic
TimesNewRomanPSMT	Times New Roman	Times New Roman
Univers-Extended	Univers Extended	Univers Extended

PostScript name	Mac OS menu name	Windows menu name, style
Univers-BoldExt	Univers BoldExt	Univers Extended, Bold
Univers-ExtendedObl	Univers ExtendedObl	Univers Extended, Italic
Univers-BoldExtObl	Univers BoldExtObl	Univers Extended, Bold Italic
Univers-Light	Univers 45 Light	Univers 45 Light
Univers-Bold	Univers 65 Bold	Univers 45 Light, Bold
Univers-LightOblique	Univers 45 LightOblique	Univers 45 Light, Italic
Univers-BoldOblique	Univers 65 BoldOblique	Univers 45 Light, Bold Italic
Univers	Univers 55	Univers 55
Univers-Oblique	Univers 55 Oblique	Univers 55, Italic
Univers-CondensedBold	Univers 67 CondensedBold	Univers 47 CondensedLight, Bold
Univers-CondensedBoldOblique	Univers 67 CondensedBoldObl	Univers 47 CondensedLight, Bold Italic
Univers-Condensed	Univers 57 Condensed	Univers 57 Condensed
Univers-CondensedOblique	Univers 57 CondensedOblique	Univers 57 Condensed, Italic
ZapfChancery-MediumItalic	Zapf Chancery	ZapfChancery
ZapfDingbats	Zapf Dingbats	ZapfDingbats

TrueType fonts

The E-810 includes 10 TrueType fonts:

PostScript name	Mac OS menu name	Windows menu name, style
Apple-Chancery	Apple Chancery	Apple Chancery
Chicago	Chicago	Chicago
Geneva	Geneva	Geneva
HoeferText-Black	Hoefer Text Black	Hoefer Text Black
HoeferText-BlackItalic	Hoefer Text Black	Hoefer Text Black, Italic
HoeferText-Italic	Hoefer Text	Hoefer Text, Italic
HoeferText-Regular	Hoefer Text	Hoefer Text
Monaco	Monaco	Monaco
New York	New York	New York
Wingdings-Regular	Wingdings	Wingdings



Appendix C: Troubleshooting

This appendix provides troubleshooting tips.

Maintaining optimal system performance

The E-810 does not require maintenance. Beyond the routine requirements of servicing and maintaining the copier and replenishing consumables, there are a few things you can do to improve the overall performance of your system:

- Schedule the printing workload by checking job ticket information before printing.

Print jobs with the same output and paper specifications together to minimize paper changes. Also, print routine jobs while you prepare to print jobs with special instructions or special media.

- Reduce unnecessary server connections to Command WorkStation.

If you use a second or third E-810 on an occasional basis, performance will be improved if you log off when you are not using it.

- Avoid printing with the E-810 “Disk full” warning.

If you see this warning, delete jobs that are not likely to be needed. Avoid this condition by deleting old jobs on a regular basis. The date associated with a job is the original date it was sent.



Troubleshooting

In case of problems, and before you call for service, check the guidelines in this section. If you are unable to resolve the problem, make a note of the error condition and contact your authorized service/support center.

This section provides some troubleshooting guidelines should a problem arise. If you are unable to resolve a problem after referring to this section, contact your site operator or administrator. Also, make sure there are no applications installed on the E-810, with the exception of the E-810 utilities from the User Software CD. Applications other than the E-810 utilities are not supported and can cause system problems.

General printing problems

If this happens	Try this
You cannot connect to a E-810.	<ul style="list-style-type: none">• Make sure the E-810 is not being calibrated from the Control Panel. If the E-810 is being calibrated from the Control Panel, you can select it in the Chooser, but you cannot connect to it. This ensures that only one person is calibrating the server at any time and that print jobs do not use unexpected calibration.
You cannot select or view one of the queues.	<ul style="list-style-type: none">• Have your system administrator enable the queue in Setup.
You cannot connect to the E-810 from a Windows computer with Command WorkStation or Fiery utilities.	<ul style="list-style-type: none">• Make sure the connection is configured correctly. For instructions, see <i>Getting Started</i>.
Printing seems to take too long.	<ul style="list-style-type: none">• Print to a queue instead of to the Direct connection. When you print to a queue, the job is stored on the E-810 until it can be processed and printed; when you print to the Direct connection, the job cannot be sent to the E-810 until the previous job is finished processing, so you must wait longer to use your computer.



If this happens	Try this
One or more Media Type options are dimmed.	<ul style="list-style-type: none">• Select a Paper Source that supports the Media Type you are using. For information on requirements and constraints pertaining to special papers and transparencies, see Appendix A.
E-810 does not respond to a Print command.	<ul style="list-style-type: none">• Has someone disconnected the copier by selecting Suspend Printing from the Functions menu? If the administrator or operator has selected Suspend Printing on the E-810 Control Panel or Command WorkStation to interrupt printing, your print job will not resume until someone selects Resume Printing from the Functions menu on the Control Panel or clicks the function key in Command WorkStation.• Did you select the E-810 as the current copier? Before printing, you must select the E-810 as the current printer from your Windows computer, Mac OS computer, or UNIX workstation.• Make sure the copier is switched on. Someone may have turned the copier off, or the Automatic Power-Off or Power Saver mode function may have engaged. Even with the copier off, the E-810 appears in the Chooser as long as the E-810 itself is turned on.• If you are printing over an IPX (Novell) network, verify through the PCONSOLE utility that the job was sent to the Novell queue and that the queue is being used by the E-810.• Make sure the job does not contain a PostScript error. Check with the operator, or use Fiery WebSpooler or Fiery Spooler to check the job's status. In Fiery WebSpooler or Fiery Spooler, a job containing a PostScript error appears in red. To obtain information on the PostScript error, make sure the Print to PS Error option is set to Yes in E-810 Setup. See the <i>Configuration Guide</i> for more information.
You cannot print with QuarkXPress 3.32 using the PSPrinter 8.5.1 driver on a Mac OS computer.	<ul style="list-style-type: none">• Remove the file called Balloon Help from your QuarkXPress application folder and relaunch QuarkXPress.



Problems with print quality

For information about printing with specific applications and optimizing color output, see the *Color Guide*.

If this happens	Try this
Print settings for your job output do not match the settings you gave.	<ul style="list-style-type: none">• Make sure you did not override the settings for the job in another place. For information about options and overrides, see Appendix A.
You get poor printing results.	<ul style="list-style-type: none">• Does your application require one of E-810's printer description files? If you print from Adobe PageMaker, make sure the E-810 PPD is installed correctly. For information about installing this file, see <i>Getting Started</i>.• Make sure the system has been calibrated. For instructions, see the <i>Color Guide</i>.
The registration or colors of an image are not what you expected.	<ul style="list-style-type: none">• Ask the operator to print a test page with the copier. The problem may be with the copier. If your test page shows that the copier is working properly, correct the problem within your application software. If the test page is wrong, your copier may need to be adjusted.
Your printed file appears too dark.	<ul style="list-style-type: none">• Adjust the Brightness option. You can use the Brightness option when printing from an application or from Fiery Downloader to lighten your image whenever you print a PostScript or Encapsulated PostScript (EPS) file.
Color file prints in black and white.	<ul style="list-style-type: none">• In the Color Matching dialog box, make sure that Color/Grayscale, or ColorSync Color Matching or PostScript Color Matching is selected (not Black and White).• Make sure the Color Mode print option is set to an option other than Grayscale.
Desktop Color Separations (DCS) format images print incorrectly.	<ul style="list-style-type: none">• Make sure you selected the correct options to send separations in the application's Print dialog box.• Make sure you have the file for every layer of separation that you are printing.• Set the Combine Separations option to On. This combines the high-resolution files for an image and prints them. With Combine Separations Off, the low-resolution master file will print.
QuickDraw fill patterns print as solids.	<ul style="list-style-type: none">• Use the Adobe PostScript Printer driver (or the Apple LaserWriter 8.3 or later printer driver).



Problems with Fiery Downloader

If this happens	Try this
General problems.	<ul style="list-style-type: none">• Make sure you are using the latest version. If you are updating your E-810 to new system software, delete the previous version of Fiery Downloader from your Windows or Mac OS computer and install the latest version to insure full compatibility.• Make sure the connection is configured correctly. For instructions, see <i>Getting Started</i>.
You cannot print an EPS file using Fiery Downloader.	<ul style="list-style-type: none">• Try printing using the 'showpage' after EPS files (Windows) or 'showpage' (Mac OS) option in the Download PostScript File dialog box. This option adds a showpage PostScript language command at the end of the print job. Certain applications omit this necessary command when they generate EPS files. You need to select the Append Showpage option when printing EPS files generated by these applications. If you continue having difficulties printing an EPS file with Fiery Downloader, try printing the file from the application in which it was created.• Make sure the EPS file was saved <i>without</i> a preview image header. Preview image headers are useful when images are placed in documents with page layout applications, but they cause problems when images are downloaded directly.• Make sure the job does not contain a PostScript error. Check with the operator, or use Command WorkStation, Fiery WebSpooler, or Fiery Spooler to check the job's status. Jobs with a PostScript error appear with an Error icon.
You have problems downloading a font with Fiery Downloader.	<ul style="list-style-type: none">• Check with the administrator to make sure that the Direct connection is enabled. The Direct connection must be used to download fonts.
An extra blank page prints after a Fiery Downloader job.	<ul style="list-style-type: none">• Turn off the 'showpage' after EPS files (Windows) or 'showpage' (Mac OS) option. This option adds a special PostScript command that will cause an extra blank page to print if it is not needed.



Problems with Fiery Scan

If this happens	Try this
Fiery Scan main window does not appear after launching.	<ul style="list-style-type: none">• Check to see if the TWAIN module(s) installed by Adobe Photoshop are located in the correct folder. If not, reinstall Adobe Photoshop software.

Problems with Fiery WebTools

If this happens	Try this
General problems.	<ul style="list-style-type: none">• Clear the cache (Netscape Communicator) or history (Microsoft Internet Explorer).

Index

Numerics

2-sided printing, *see* Duplex option

A

Absolute Colorimetric rendering style

option A-13

Active Job List 6-9

Adobe Font Downloader, *see* Font

Downloader

Adobe Photoshop

scanning with 4-10

transfer functions 5-7

Adobe Type 1 fonts B-1

Always on Top 6-11

B

Black Overprint option A-3, A-9

Brightness option A-1, A-3

BSD 3-3

C

Calibrated RGB option 4-16

canceling scanning 4-16

CMYK Simulation Method option 4-9, A-3

CMYK Simulation Profile option 4-9, A-3,
A-10

Color Conversion option in Fiery Scan 4-16

Color Mode option A-4

ColorWise Pro Tools 4-9

job overrides A-1

Combine Separations option A-4, A-11

Command WorkStation

managing print jobs 6-1

overriding Printer Setup settings 1-4

using Fiery Downloader from 5-1

Control Panel, overriding printer

settings 1-18, 1-26

Create Master option 4-2

Custom Paper Sizes

defining for Mac OS 2-6

defining for Windows 2000

computers 1-27

defining for Windows computers 1-14,

1-20, 1-27

Cyan-Magenta-Yellow-Black (color model),
see CMYK

D

DCS (Desktop Color Separations) C-4

default settings, *see* printer default settings

Device List 6-10

DIC simulation goal 4-9, A-10

Direct connection

access xiv

downloading fonts 5-8

not in Chooser, Mac OS 2-2

required to download fonts C-5

Dock Fiery Link 6-11

Downloader, *see* Fiery Downloader

downloaders, LaserWriter 5-1

Duplex option 4-9, A-11

E

EFIRGB ICC file 4-10

EFIRGB.icm file 4-10

EPS (Encapsulated PostScript) files

downloading 5-1, 6-3

downloading from Mac OS 2-7

downloading from Windows 1-1, 1-30

problems downloading C-5

Euroscale simulation 4-9

Euroscale simulation goal A-10

Extra Heavy Paper option A-12

F

Fiery Downloader

- Brightness option 5-7
- choosing a printer 5-3
- Command WorkStation 5-1
- Connection Type 5-5
- downloading file or font 5-4 to 5-7
- Download Progress bar 5-2
- Hard Disk area 5-2
- installing printer fonts 5-9
- job overrides A-1
- Mac OS 2-7
- PDF files 1-1
- printing from 5-4
- Print Status area 5-2
- problems with C-5
- Queue 5-5
- RIP Status area 5-2
- Toolbar 5-3
- using 5-1
- Windows 1-30

Fiery Link 6-6

- Active Job List 6-9
- Always on Top 6-11
- Device List 6-10
- Dock Fiery Link 6-11
- File Info tool 6-8
- Input Trays tool 6-8
- My Fiery List 6-6, 6-11
- preferences 6-6, 6-9
- Queue Position tool 6-8
- selecting a print job 6-7
- selecting a server 6-7
- Status tool 6-8
- Support tool 6-8
- Toner tool 6-8, 6-9

Fiery Scan

- problems with C-6

Fiery Spooler, overriding Printer Setup 1-4

Fiery WebTools

- accessing xiv, 6-1, 6-2
- home page 6-2
- overview 6-3
- problems with C-6
- Status 6-2
- WebDownloader 1-30, 2-7
- WebLink 6-3
- WebSpooler 1-4

File Info tool 6-8

File name entry field 5-6

File port, saving files to 1-30

Files of type menu (Windows) 5-5

Font Downloader 5-1

font list

- Adobe Type 1 B-1
- displaying 5-3, 5-10
- PostScript B-1 to B-5
- printing 5-3, 5-10
- TrueType B-5

Font List button 5-3

fonts

- Adobe Type 1 5-9, B-1
- downloading and managing 5-1, 5-5, 5-8
- installing 5-9
- PostScript 5-9
- printer fonts 5-8
- printer fonts on server 5-10
- screen fonts 5-8
- substitution with PDF files 5-9
- TrueType B-5

FreeForm

- printing variable data documents 4-1

G

Gamma option A-5

H

Hold queue xiv, 2-2

I

Input Trays tool 6-8
 installing printer fonts 5-9
 Instructions field 1-5, 1-19, 2-4

J

job overrides
 (Other) Gamma option A-5
 (Other) Phosphors option A-5
 (Other) White Point option A-5
 Black Overprint option A-3, A-9
 Brightness option A-3
 CMYK Simulation Method option A-3
 CMYK Simulation Profile option A-3, A-10
 Color Mode option A-4
 Combine Separations option A-4, A-11
 Duplex option A-11
 Media Type option A-5, A-12
 Page Order option A-6
 print settings A-2
 Pure Black Text Graphics option A-7
 Rendering Style option A-7, A-13
 RGB Source option A-7
 Save Fast Reprint option A-8
 Slip Sheet option A-5
 Sorter Mode option A-8, A-14
 Spot Color Matching option A-8
 Stapler Mode option A-8
 Toner Reduction option A-8, A-15

L

LaserWriter printer, fonts installed on 5-8
 lp command 3-2
 lpq command 3-1, 3-3, 3-4
 lpr command 3-1, 3-2
 lprm command 3-1, 3-4
 lpstat command 3-3

M

Mac OS
 Paper Source menu 2-4
 PostScript printer setup 2-3 to 2-5
 Printer Specific Options menu 2-5
 printing 2-1
 screen fonts 5-8
 tray selection 2-4
 Mac OS 2-5
 Master documents (FreeForm) 4-1
 Match Copy
 CMYK Simulation option 4-9, A-10
 Fiery Scan option 4-16
 Media Type option A-5, A-12
 My Fiery List 6-6, 6-11

N

None, CMYK Simulation option A-10
 Notes field
 Windows 98/Me 1-5
 Notes fields
 Mac OS 2-4
 Windows 98/Me 1-5
 Windows NT 4.0 1-18

O

Orientation option A-5
 Original option, in Fiery Scan 4-16
 (Other) Gamma option A-5, A-14
 (Other) Phosphors option A-5, A-14
 (Other) White Point option A-5, A-14
 Output Profile A-13
 Output Profile option A-6
 overrides, of job settings A-2
 Owner Information 1-5

P

Page Order option A-6
 Page Range option A-1

- Paper Source menu
 - Mac OS 2-4
 - Paper Source option A-13
 - PCL files, downloading 5-1
 - PDF files
 - downloading 5-1, 6-3
 - downloading from Mac OS 2-7
 - downloading from Windows 1-1
 - downloading from Windows,
 - downloading 1-30
 - font substitution 5-9
 - performance, optimizing C-1
 - Phosphors option A-5
 - Photographic rendering style option A-13
 - Plain Paper option A-12
 - Portable Document Format, *see* PDF files
 - PostScript
 - downloading files 5-1, 6-3
 - downloading files from Mac OS 2-7
 - downloading files from Windows 1-30
 - font list B-1 to B-5
 - PostScript printer description files, *see* PPDs
 - PostScript printer drivers
 - explained xiii
 - Mac OS 2-1
 - Windows 2000 1-23
 - Windows 98/Me 1-1
 - Windows NT 4.0 1-16
 - PPDs
 - defined xiii
 - PPDs (PostScript printer description files)
 - options A-2
 - setting print options with Mac OS 2-1
 - setting print options with Windows
 - 2000 1-23
 - prescan 4-11
 - Presentation rendering style option A-13
 - press simulations 4-9
 - Print command (Windows) 1-1
 - printer default settings 2-5
 - Mac OS 2-5
 - specified by administrator in Setup xiv
 - where to set A-1
 - Windows 98/Me 1-4
 - Windows NT 4.0 1-18
 - printer setup
 - Mac OS 2-3 to 2-5
 - settings 1-18, 1-26
 - Windows 2000 1-24 to 1-26
 - Windows 2000 1-23 to 1-26
 - Windows 98/Me 1-2 to 1-16
 - Windows NT 4.0 1-16 to 1-30
 - Printer Specific Options menu 2-5
 - printing
 - duplex pages 4-9, A-11
 - font list 5-3
 - from Fiery Downloader 5-4
 - from WebDownloader 6-3
 - Mac OS 2-1
 - on the network xiv
 - to File port 1-30
 - troubleshooting C-2 to C-3
 - variable data documents 4-1
 - Windows 2000 1-23
 - Windows 98/Me 1-1
 - Windows NT 4.0 1-16
 - print options
 - Mac OS 2-3 to 2-5
 - Windows 2000 1-23 to 1-26
 - Windows 98/Me 1-2 to 1-16
 - Windows NT 4.0 1-16 to 1-30
 - print quality, problems with C-4
 - Print queue xiv
 - Pure Black Text Graphics option A-7
- Q**
- Queue Position Info tool 6-8
 - queues, access to xiv

R

Relative Colorimetric rendering style
 option A-13
 remote users xi
 Rendering Style option A-7, A-13
 RGB Separation option A-7
 RGB Source option A-7, A-14
 RIPping xiii
 Rotate 180 option A-8

S

Saved Settings 1-6
 Save Fast Reprint option A-8
 scanning 4-16
 canceling 4-16
 from the copier glass 4-10
 from the document feeder 4-10
 Scan to HDD 4-16
 setting print options
 Windows 2000 1-24 to 1-26
 Shortcuts 1-12
 Show menu (Mac OS) 5-5
 showpage after EPS files option 5-7
 simulations 4-9
 Slip Sheet option A-5
 SMB printing 1-2, 1-24
 Solaris 2.x 3-3
 Sorter Mode option A-8, A-14
 Spooler, *see* Fiery Spooler
 Spot Color Matching option A-8
 Stapler Mode option A-8
 Status tool 6-8
 Status WebTool, *see* Fiery WebTools
 SunOS 4.1.x 3-3
 Support tool 6-8
 SWOP-Coated simulation A-10
 SWOP-Coated simulation goal 4-9

T

TCP/IP printing 3-1
 Thick Paper option A-12
 Toner Reduction option A-8, A-15
 Toner tool 6-8, 6-9
 Transparency option A-12
 trays, printer A-13
 tray selection
 Mac OS 2-4
 troubleshooting
 EPS files C-5
 Fiery Downloader C-5
 Fiery Scan C-6
 Fiery WebTools C-6
 general printing problems C-2 to C-3
 print quality C-4
 TrueType fonts B-5
 two-sided printing, *see* Duplex option

U

UNIX
 BSD (Berkeley Software Distribution)
 variant of 3-4
 displaying jobs in queue 3-3
 printing with 3-1
 removing jobs from queue 3-4
 System V 3-3
 Use Master option 4-2
 User ID field
 Windows 98/Me 1-5

V

variable data printing 4-1

W

WebDownloader, *see* Fiery WebTools
 WebLink, *see* Fiery WebTools
 WebSpooler, *see* Fiery WebTools
 WebTools, *see* Fiery WebTools

- White Point option A-5
- Windows 2000 1-26
 - printer default settings 1-26
 - printing with 1-23
 - setting print options 1-24 to 1-26
- Windows 98/Me
 - Notes field 1-5
 - Notes fields 1-5
 - PostScript printer driver 1-1
 - printer default settings 1-4
 - printing with 1-1
 - setting print options 1-2 to 1-16
 - User ID 1-5
- Windows NT 4.0
 - Notes fields 1-18
 - printer default settings 1-18
 - printing with 1-16
 - print options 1-16 to 1-30

303 Velocity Way
Foster City, California 94404 USA

www.efi.com

26 Cunningham Street
North Sydney NSW 2060, Australia

Alameda Santos, 234 Suites 603 to 605
01418-000 São Paulo SP, Brasil

Kaiser swerther Straße 115
D-40880 Ratingen, Duesseldorf, Deutschland

Eastern Europe and Central Asia
Luegallee 18, D-40545 Duesseldorf, Deutschland

Parque Empresarial San Fernando, Edificio Francia
28830 Madrid, España

Immeuble Atria—5, Place des Marseillais
94227 Charenton-Le-Pont, Cedex, France

28/F, Soundwill Plaza, 38 Russell Street
Causeway Bay, Hong Kong

Centro Direzionale Milanofiori, Strada 6, Palazzo EI
20090 Assago (Milano), Italia

Shinjuku I-Land Wing 13F, 3-1 Nishi Shinjuku 6-chome,
Shinjuku-ku, Tokyo 160-0023, Japan

Boeing Avenue 201 - 207
1119 PD Schiphol-Rijk, Nederland

60-B Peck Seah Street
Singapore 079323

Frösundavägs Allé 15 4tr
169 70 Solna, Sverige

Stonebridge House, Padbury Oaks, Old Bath Road
Longford, Middlesex UB7 0EW, UK

プリンター機能の操作方法に関するお問い合わせは、
「リコープリンターコールセンター、imagico ダイヤル」にご連絡ください。



コールはイマジコ

0120-056-140

Electronics
FOR **Imaging™**

●受付時間：9～12時、13～17時（土、日、祝祭日、リコーの休業日を除く）

Color Controller E-810

COLOR GUIDE

For use with the following color copiers:

Ricoh Aficio Color 6513

Gestetner CS213d

RexRotary CS813d

nashuatec CS513d

infotec 7513

Savin SDC413



Copyright © 2001 Electronics For Imaging, Inc. All rights reserved.

This publication is protected by copyright, and all rights are reserved. No part of it may be reproduced or transmitted in any form or by any means for any purpose without express prior written consent from Electronics For Imaging, Inc., except as expressly permitted herein. Information in this document is subject to change without notice and does not represent a commitment on the part of Electronics For Imaging, Inc.

The software described in this publication is furnished under license and may only be used or copied in accordance with the terms of such license.

This product may be covered by one or more of the following U.S. Patents: 4,500,919; 4,837,722; 5,212,546; 5,343,311; 5,424,754; 5,467,446; 5,506,946; 5,517,334; 5,537,516; 5,543,940; 5,553,200; 5,615,314; 5,619,624; 5,625,712; 5,666,436; 5,760,913; 5,818,645; 5,835,788; 5,866,856; 5,867,179; 5,959,867; 5,970,174; 5,982,937; 5,995,724; 6,002,795; 6,025,922; 6,041,200; 6,046,420; 6,065,041; 6,067,080; 6,112,665; 6,116,707; 6,118,205; 6,122,407; 6,134,018; 6,141,120; 6,151,014; 6,166,821; 6,184,873; 6,185,335; 6,201,614; 6,215,562; 6,219,659; 6,222,641; 6,225,974; 6,226,419; 6,238,105; 6,239,895; D406,117; D416,550; D417,864; D419,185; D426,206; D430,206; RE36,947

Trademarks

Fiery, the Fiery logo, Fiery Driven, Freedom of Press, ColorWise, EDOX, EFICOLOR, and RIP-While-Print are registered trademarks of Electronics For Imaging, Inc. in the U.S. Patent and Trademark Office and certain other foreign jurisdictions.

EFI, the Electronics For Imaging logo, eBeam, the Fiery Driven logo, Fiery LX, Fiery Si, Fiery X2, Fiery X2e, Fiery X3e, Fiery X4, Fiery XJ, Fiery XJe, Fiery XJ-W, Fiery Z4, Fiery ZX, Fiery X4, Fiery Z5, Fiery Z18, Fiery Z16, AutoCal, ColorCal, Command WorkStation, Continuous Print, DocBuilder, DocBuilder Pro, EFI Densitometer, Fiery Downloader, Fiery Driver, Fiery Link, Fiery Prints, Fiery Print Calibrator, Fiery Scan, Fiery ScanBuilder, Fiery Spark, Fiery Spooler, FreeForm, Harmony, Memory Multiplier, NetWise, PowerWise, RIPChips, ScanBuilder, Splash, the Splash logo, STARR Compression, Velocity, Velocity Balance, Velocity Build, Velocity Estimate, Velocity Scan, VisualCal, WebTools, WebSpooler, WebInstaller, and WebStatus are trademarks of Electronics For Imaging, Inc.

All other terms and product names may be trademarks or registered trademarks of their respective owners, and are hereby acknowledged.

Legal Notices

APPLE COMPUTER, INC. ("APPLE") MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE. APPLE DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE APPLE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE APPLE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL APPLE, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE APPLE SOFTWARE EVEN IF APPLE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. Apple's liability to you for actual damages from any cause whatsoever, and regardless of the form of the action (whether in contract, tort [including negligence], product liability or otherwise), will be limited to \$50.

Part Number: 45022703

FCC Information

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Class B Declaration of Conformity

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Industry Canada Class B Notice

This Class B digital apparatus complies with Canadian ICES-003.

Avis de Conformation Classe B de l'Industrie Canada

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

RFI Compliance Notice

This equipment has been tested concerning compliance with the relevant RFI protection requirements both individually and on system level (to simulate normal operation conditions). However, it is possible that these RFI Requirements are not met under certain unfavorable conditions in other installations. It is the user who is responsible for compliance of his particular installation.

Dieses Gerät wurde sowohl einzeln als auch in einer Anlage, die einen normalen Anwendungsfall nachbildet, auf die Einhaltung der Funkentstörbestimmungen geprüft. Es ist jedoch möglich, dass die Funkentstörbestimmungen unter ungünstigen Umständen bei anderen Gerätekombinationen nicht eingehalten werden. Für die Einhaltung der Funkentstörbestimmungen einer gesamten Anlage, in der dieses Gerät betrieben wird, ist der Betreiber verantwortlich.

Compliance with applicable regulations depends on the use of shielded cables. It is the user who is responsible for procuring the appropriate cables.

Die Einhaltung zutreffender Bestimmungen hängt davon ab, dass geschirmte Ausführungen benutzt werden. Für die Beschaffung richtiger Ausführungen ist der Betreiber verantwortlich.

Software License Agreement

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS SOFTWARE. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE. INSTALLING OR USING THE SOFTWARE INDICATES THAT YOU AGREE TO AND ACCEPT THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS AGREEMENT YOU MAY RETURN THE UNUSED SOFTWARE FOR A FULL REFUND TO THE PLACE OF PURCHASE.

License

Electronics For Imaging, Inc. ("EFI") grants you a non-exclusive license to use the software ("Software") and accompanying documentation ("Documentation") included with the Product. The Software is licensed, not sold. You may use the Software solely for your own customary business or personal purposes. You may not rent, lease, sublicense or lend the Software. You may, however, permanently transfer all of your rights under this Agreement to another person or legal entity provided that: (1) you transfer to the person or entity all of the Software and Documentation (including all copies, updates, upgrades, prior versions, component parts, the media and printed materials, and this Agreement); (2) you retain no copies of the Software and Documentation, including copies stored on a computer; and (3) the recipient agrees to the terms and conditions of this Agreement.

You may not make or have made, or permit to be made, any copies of the Software or portions thereof, except as necessary for backup or archive purposes in support of your use of the Software as permitted hereunder. However, under no circumstances may you make or have made, any copies of any Software included on the ROM, the hard disk drive or any other component of the controller board or hardware. You may not copy the Documentation. You may not attempt to alter, disassemble, decompile, decrypt or reverse engineer the Software.

Proprietary Rights

You acknowledge that the Software is proprietary to EFI and its suppliers and that title and other intellectual property rights therein remain with EFI and its suppliers. Except as stated above, this Agreement does not grant you any right to patents, copyrights, trade secrets, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software. You may not adopt or use any trademark or trade name which is likely to be similar to or confusing with that of EFI or any of its suppliers or take any other action which impairs or reduces the trademark rights of EFI or its suppliers.

Confidentiality

You agree to hold the Software in confidence, disclosing the Software only to authorized users having a need to use the Software as permitted by this Agreement and to take all reasonable precautions to prevent disclosure to other parties.

Remedies And Termination

Unauthorized use, copying or disclosure of the Software, or any breach of this Agreement will result in automatic termination of this license and will make available to EFI other legal remedies. In the event of termination, you must destroy all copies of the Software and all of its component parts. All provisions of this Agreement relating to disclaimers of warranties, limitation of liability, remedies, or damages, and EFI's proprietary rights shall survive termination.

Limited Warranty And Disclaimer

EFI warrants to the original purchaser ("Customer") for thirty (30) days from the date of original purchase from EFI or its authorized retailer that the Software will perform in substantial conformance to the Documentation. EFI warrants the media containing the Software against failure during the above warranty period. EFI makes no warranty or representation that the Software will meet your specific requirements, that the operation of the Software will be uninterrupted or error free, or that all defects in the Software will be corrected.

EXCEPT FOR THE ABOVE EXPRESS LIMITED WARRANTY, EFI MAKES AND YOU RECEIVE NO WARRANTIES OR CONDITIONS ON THE SOFTWARE, EXPRESS, IMPLIED, STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND EFI SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limitation Of Liability

IN NO EVENT WILL EFI OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST PROFITS, COST OF COVER OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING FROM THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE OR FAILURE OF THE SOFTWARE, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF EFI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. YOU ACKNOWLEDGE THAT THE PRICE OF THE PRODUCT REFLECTS THIS ALLOCATION OF RISK. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. EFI DOES NOT EXCLUDE LIABILITY IN RESPECT OF PERSONAL INJURY, DEATH, WILLFUL MISCONDUCT OR GROSS NEGLIGENCE, EXCEPT TO THE MAXIMUM EXTENT THAT IT CAN BE EXCLUDED OR LIMITED BY LAW.

Export Controls

You agree that you will not export or re-export the Software in any form in violation of any applicable laws or regulations of the United States or the country in which you obtained them.

U.S. Government Restricted Rights

Software provided with this Product is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.

General

The laws of the State of California govern this Agreement. You agree that this Agreement shall not be subject to the United Nations Convention on Contracts for the International Sale of Goods (1980). This Agreement is the entire agreement held between us and supersedes any other communications or advertising with respect to the Software. If any provision of this Agreement is held invalid, the remainder of this Agreement shall continue in full force and effect.

If you have any questions, please see EFI's web site at www.efi.com.

Contents

Introduction

About the documentation	xiii
Key features of ColorWise	xiv

Chapter 1: E-810 Color Management

Managing color on the E-810	1-1
Rendering styles	1-4
RGB Source Profile	1-5
RGB Separation	1-7
CMYK Simulation Profile	1-8
CMYK Simulation Method	1-9
Output profile	1-9
Pure Black Text/Graphics	1-10
Spot Color Matching	1-11
Printer drivers and print options	1-12
What a printer driver does	1-12
PostScript printer driver for Windows 9X/Me, Windows NT 4.0, and Windows 2000	1-13
Adobe PostScript printer driver for Mac OS	1-17

Chapter 2: Simple and Advanced Workflows

Workflow concepts	2-1
Short-run printing versus color proofing	2-1
RGB, CMYK, and PANTONE colors	2-2
Desktop versus E-810 color management	2-2
Simple workflows	2-3
Select your colors wisely	2-3
Select a short workflow	2-4
Advanced workflows	2-8
Short-run printing examples	2-8
Color proofing examples	2-14

Chapter 3: Color Calibration

Introduction	3-1
Understanding calibration	3-2
How calibration works	3-3
Scheduling calibration	3-4
Checking calibration status	3-5
Using a spectrophotometer	3-5
Setting up the spectrophotometer	3-5
Calibrating the spectrophotometer	3-10
Calibrating with ColorWise Pro Tools and DTP41	3-15
Using a densitometer	3-23
Setting up the densitometer	3-23
Calibrating the densitometer	3-26
Calibrating with ColorWise Pro Tools	3-27
Expert Mode	3-32
Calibrating from the Control Panel using AutoCal2	3-34

Chapter 4: ColorWise Pro Tools

Profile Manager	4-1
Setting the default profiles	4-3
Downloading profiles	4-5
Editing profiles	4-6
Managing profiles	4-7
Defining profiles	4-8
Color Editor	4-11
Editing profiles	4-11
Undoing simulation edits	4-18
Checking edited profiles	4-20
Color Setup	4-21
Setting default ColorWise options	4-21

Chapter 5: Working with Color in Applications

Working with color	5-1
Color reference pages	5-2
Office applications	5-3
Choosing colors in office applications	5-4
PostScript applications	5-5
Choosing colors in PostScript applications	5-5
Default output profile	5-7
CMYK simulation	5-7

Chapter 6: Office Applications

Working with office applications	6-1
Defining colors	6-1
Working with imported files	6-1
Selecting options when printing	6-2
Output profiles	6-2

Chapter 7: Adobe Photoshop

Photoshop 5.x	7-1
Photoshop 5.x color settings	7-1
ColorSync defaults	7-6
Defining colors	7-7
Saving files for importing into other documents	7-7
Advanced tips for using PostScript color management	7-8
Selecting options when printing	7-9
Advanced tips for printing with Photoshop PostScript color management	7-11
Photoshop 4.x	7-13
Defining colors	7-13
Saving files for importing into other documents	7-13
Selecting options when printing	7-15

Chapter 8: Page Layout Applications

Working with page layout applications	8-1
Defining colors	8-1
Importing images	8-2
CMYK simulation	8-3
Adobe PageMaker 6.5 for Mac OS and Windows	8-3
Importing images	8-4
Selecting options when printing	8-4
Optional Color Management from PageMaker	8-6
QuarkXPress 4.x for Mac OS and Windows	8-6
Importing images	8-6
Selecting options when printing	8-7
Optional Color Management from QuarkXPress	8-8
QuarkXPress 3.32 for Mac OS and Windows	8-8
Windows version requirement	8-8
Importing images	8-8
Selecting options when printing	8-8

Chapter 9: Illustration Applications

Working with illustration applications	9-1
Defining colors	9-1
Importing images	9-2
CMYK simulation	9-2
Adobe Illustrator 8.x for Windows and Mac OS	9-3
Defining colors	9-3
Importing images	9-3
Optional Color Management in Illustrator	9-3
Selecting options when printing	9-4
Saving files for importing into other documents	9-5

FreeHand 8.x for Windows and Mac OS	9-5
Defining colors	9-6
Importing images	9-6
Selecting options when printing from FreeHand	9-7
Saving files for importing into other documents	9-8
Optional Color Management in FreeHand	9-9
CorelDRAW for Windows and Mac OS	9-9
Defining colors	9-9
Importing images	9-9
Selecting options when printing	9-10
Saving files for importing into other documents	9-11
Optional Color Management in CorelDRAW	9-11

Appendix A: Desktop Color Primer

The properties of color	A-1
The physics of color	A-1
CIE color model	A-2
Hue, saturation, and brightness	A-3
Printing techniques	A-5
Halftone and continuous tone devices	A-6
Using color effectively	A-6
A few rules of thumb	A-7
Color wheel	A-7
Color and text	A-8
Raster images and vector images	A-9
Optimizing files for processing and printing	A-10
Resolution of raster images	A-10
Scaling	A-12

Appendix B: Color Management

Controlling printed color	B-1
Maintaining copier consistency	B-2
Print device gamut	B-2
Basics of color management	B-3
Color conversion	B-4

Appendix C: Importing Densitometer Measurements

Simple ASCII Import File Format (SAIFF)	C-1
Example of 1D Status T density for EFI 34 patch page	C-2
Example of 1D Status T density for EFI 21 patch page	C-2
Example of 1D Status T density for an arbitrary page	C-3

Glossary

Bibliography

Index

Introduction

This manual introduces the concepts and issues associated with printing to the Color Controller E-810™. It outlines key workflow scenarios, provides information on calibration and color profiles, and contains application notes that explain how to print to the Color Controller E-810 from popular Microsoft Windows and Apple Mac OS applications.

This manual is part of a set of documentation that includes manuals for users and system administrators. The other manuals should be available at your site—refer to them for a complete description of your Color Controller E-810.

NOTE: The term “copier” is used in this manual to refer to these supported devices.

About the documentation

The *Color Guide* is organized to supply you with key information about managing the color output of your E-810. Chapter 1 describes the E-810 print options and how to get the best color results, and Chapter 2 describes several effective workflows. Calibration is discussed in the next two chapters. Chapter 3 covers ColorWise Pro Tools™ and other methods of calibrating the copier, and Chapter 4 takes you through the features of Profile Manager™, used to manage color profiles on the E-810, and Color Editor™, which lets you customize simulation and output profiles. Succeeding chapters provide tips for printing from business and graphics applications. Finally, the appendixes offer information about color theory and color management.

Words in bold, for example, **output profile**, are terms that appear in the glossary. The bibliography at the end of this manual provides sources for further investigation of color printing issues.

Color terms and concepts such as “RGB data,” “color space,” “spot color,” “gamut,” and “source profile” are used throughout this manual. If you are new to desktop color, or if any terms are unfamiliar, read Appendixes A and B or check the glossary.

This manual is part of a set of E-810 documentation that also includes the following manuals for users and system administrators:

- The *Configuration Guide* explains basic configuration and administration of the E-810 for the supported platforms and network environments. It also includes guidelines for setting up UNIX, Windows NT, and Novell NetWare servers to provide Adobe PostScript printing services to clients.
- *Getting Started* describes the process of installing the software that enables users to print to the E-810. Specifically, it describes installation of PostScript printer drivers, printer description files, and other user software provided on the User Software CD. It also explains how to connect each user to the network.
- The *Printing Guide* describes the printing features of the E-810 for users who send jobs via remote workstations on the network.
- The *Job Management Guide* explains the functions of the E-810 client utilities, including the Command WorkStation™, and how you use them to manage jobs. This book is intended for an operator or administrator, or a user with the necessary access privileges, who needs to monitor and manage job flow and troubleshoot problems that may arise.
- *Release Notes* provide last-minute product information and workarounds for some of the problems you may encounter.

Key features of ColorWise

ColorWise® is the **color management system (CMS)** built into the E-810 and designed to provide both casual and expert users the best color output for a variety of purposes. The ColorWise default settings provide great out-of-box color from many Windows and Mac OS applications. This allows casual users to get quality output without knowing about or changing any color settings on the E-810.

For consistent color make sure the E-810 is calibrated on a regular basis. ColorWise Pro Tools include a simple-to-use calibrator, which allows you to calibrate using either the scanner that comes with the copier or a **densitometer** (see Chapter 3).

You can modify printing results using ColorWise features. Depending on your particular needs, you can:

- Set the behavior of **CMYK** printing to emulate **DIC**, **Euroscale**, and **SWOP** offset press standards
- Match PANTONE colors for the best match when printing using four-color press conditions or when printing using presses with extra, custom plates
- Select a **color rendering dictionary (CRD)**, also called a rendering style, for **RGB** printing. CRDs allow for rich, saturated printing of presentation graphics; smooth, accurate printing of photographs; and relative or absolute colorimetric rendering for specialized needs
- Define the source of incoming RGB color data for better screen matching and better color conversion of RGB data with no source information
- Define whether RGB data is converted into the full gamut of the copier or whether it is first converted into the gamut of another device, such as a press standard. This feature is very helpful for making one device behave like another. It is also useful for evaluating the appearance of the RGB file under different printing conditions without having to reprocess the RGB data each time

ColorWise offers an open color architecture, letting users customize the E-810 to meet new printing needs as they arise. ColorWise supports **ICC profiles**, which are industry standard color profiles that define the color behavior of a device. Downloading ICC profiles to the E-810 enables it to simulate a custom press (or another copier), as well as accurately print colors from a particular monitor or a scanner. In addition, you can create customized ICC profiles for the copier. ColorWise also lets you use any **Status T** densitometer by importing data in a standard file format (see Appendix C). In this case, it is important to note that the quality of the instrument used will determine the quality of the calibration.

Chapter 1: E-810 Color Management

The first part of this chapter describes the options available from the **ColorWise** color management system and explains how to customize the color settings for your particular needs. It provides descriptions of the preset ColorWise default settings and covers additional options for users who need to customize ColorWise.

Beginning on page 1-12, there is a detailed explanation of what a **PostScript** Level 2 or PostScript 3 printer driver does, as well as information on the capabilities of various printer drivers and instructions for setting color options with the PostScript drivers for Windows NT 4.0, Windows 2000, Windows 9X/Me, and Mac OS.

Managing color on the E-810

You can modify the E-810's printing behavior in several ways:

- Select ColorWise options for an individual print job using menus that appear from the printer driver.
- Select most ColorWise options as server defaults from the Color Setup application in ColorWise Pro Tools (see page 4-21). Defaults can also be set from E-810 Setup or from the Control Panel, as described in the *Configuration Guide*. These defaults apply to all subsequent print jobs unless you override them.
- Select some ColorWise options, particularly default **ICC profile** settings and calibration options, from ColorWise Pro Tools. These options include default Simulation Profile (see page 1-8), Simulation Method (see page 1-9), Appear in Driver as (see page 4-8), default Source Profile (see page 1-5), RGB Separation (see page 1-7), and associated calibration set (see page 3-4).

Applications can generate color data for the E-810 in many different **color spaces**. The most common type of color data produced from office applications is RGB, while prepress applications generally produce CMYK data. Desktop applications can also generate spot colors, such as PANTONE colors. To complicate matters, a single page may contain a mix of RGB, CMYK, and spot colors. The E-810 lets users control the printing of these mixed-color documents with features that apply specifically to RGB, CMYK, or spot color data.

E-810 color management generates CMYK data to be sent to the copier; additional processing may then be performed before printing begins.

The table below illustrates the print options in the E-810 color management process that affect color data conversions. You access these print options when you send a print job to the E-810. Most of these options and settings are described in subsequent sections of this chapter.

RGB Source Profile is the only color option that applies strictly to RGB color data. The other options that affect RGB color also affect the more rarely used Lab, XYZ, and other calibrated color spaces.

NOTE: For users who are familiar with PostScript 3.0 color, RGB Source Profile affects all CIEBasedABC color spaces (if the source space is RGB). If you send CMYK data to the E-810 in CIEBasedDEFG format, for example, by choosing PostScript Color Management in Adobe Photoshop, the E-810 Rendering Style selection—which normally affects only RGB data—will also affect this CMYK data.

You can specify settings for the following options via print options when you send a job to the E-810. The administrator can also set some settings as defaults during E-810 Setup. Settings specified via print options override the defaults.

E-810 color print option	What it does
Rendering Style Photographic/Presentation/Relative Colorimetric/Absolute Colorimetric (Default set at Setup)	Applies a E-810 color rendering style (CRD) to RGB data (see page 1-4), or to any incoming data with a PostScript source color space definition, including CMYK.
RGB Source Profile EFIRGB/sRGB (PC)/Apple Standard/Other/ Source 1–10/None (Default set at Setup or with ColorWise Pro Tools)	Applies an RGB source space definition to RGB data (see page 1-5). If you choose the Other setting, you can specify particular settings for Gamma, Phosphors, and White Point. See the corresponding options in this table. This option, along with Gamma, Phosphors, and White Point, the only ColorWise options that affects <i>only</i> DeviceRGB or calibrated RGB color spaces.
(Other) Gamma 1.0/1.2/1.4/1.6/1.8/2.0/2.2/2.4/2.6/2.8/3.0	Applies the specified gamma value to the RGB source space definition (see page 1-5). To use this print option, you must choose Other as the RGB Source setting.

E-810 color print option	What it does
(Other) Phosphors Hitachi EBU/Hitachi-Ikegami/NTSC/ Radius Pivot/SMPTE/Trinitron	Applies the specified phosphor (monitor type) information to the RGB source space definition (see page 1-5). To use this print option, you must choose Other as the RGB Source setting.
(Other) White Point 5000 K (D50)/5500 K/6500 K (D65)/ 7500 K/9300 K	Applies the specified white point value to the RGB source color space definition (see page 1-5). To use this print option, you must choose Other as the RGB Source setting.
RGB Separation Output/Simulation	Determines which CMYK color space your original RGB data will be separated into—CMYK for the copier (Output) or CMYK for a specified simulation (Simulation) (see page 1-7). It is important to note that when RGB Separation is set to Simulation, RGB colors are affected by CMYK Simulation Profile and CMYK Simulation Method.
CMYK Simulation Profile SWOP-Coated/DIC/Euroscale/Simulation 1–10/Match Copy/None (Default set at Setup or in ColorWise Pro Tools)	Adjusts CMYK color data to simulate an offset press standard or a custom color gamut defined at your site. The Match Copy setting bypasses E-810 calibration to match a copy made from the copier glass. Choosing None bypasses simulation (see page 1-8). NOTE: Some of the Simulation settings have slightly different names depending on the model of copier.
CMYK Simulation Method Quick/Full (Default set at Setup or in ColorWise Pro Tools)	Quick simulation applies one-dimensional transfer curves that adjust output density only. Full simulation applies colorimetric transformations that adjust hue as well as output density (see page 1-9).
Output Profile Default output profile/Output 1–10 (Default set at Setup or in ColorWise Pro Tools)	The Output Profile is applied to all data in the print job (see page 1-9). User-defined output profiles can be downloaded to the E-810 using ColorWise Pro Tools (see Chapter 4).
Pure Black Text/Graphics On/Off (Default set at Setup)	The On setting optimizes the quality of black text and line art output. (see page 1-10).
Spot Color Matching On/Off (Default set at Setup or with ColorWise Pro Tools)	The On setting enables E-810 matching of PANTONE colors; Off instructs the E-810 to match color output to a PANTONE-specified CMYK combination (see page 1-11).
Black Print Enhancement On/Off	The On setting reduces maximum black overprint to 100%. The Off setting reduces maximum black overprint to 95%. To use this print option, you must set the Pure Black Text/Graphics option On.

E-810 color print option	What it does
Color Text/Graphics Enhancement Off/1/2/3/4	Settings 1 through 4 enhances the quality of color by adding color subpixels when printing on a white background only. Settings 1 through 4 correspond to the pixel density—1 is the minimum; 4 is the maximum.
Image Smoothing (Not selectable)	Smoothing is activated automatically when you select Text dither and Grayscale for printing. The On setting enhances the print quality of low resolution images.

Detailed explanations of how these and other settings affect your print jobs are provided in subsequent sections of this chapter.

Rendering styles

The Rendering Style option specifies a CRD for color conversions. You can modify the Rendering Style option to control the appearance of images, such as prints from office applications or RGB photographs from Photoshop. The E-810 lets you select from the four rendering styles currently found in industry standard ICC profiles.

E-810 rendering style	Best used for	Equivalent ICC rendering style
Photographic —Typically results in less saturated output than presentation rendering when printing out-of-gamut colors. It preserves tonal relationships in images.	Photographs, including scans and images from stock photography CDs.	Image, Contrast, and Perceptual
Presentation —Creates saturated colors but does not match printed colors precisely to displayed colors. In-gamut colors such as flesh tones are rendered well, similar to the Photographic rendering style.	Artwork and graphs in presentations. In many cases it can be used for mixed pages that contain both presentation graphics and photographs.	Saturation, Graphics

E-810 rendering style	Best used for	Equivalent ICC rendering style
Relative Colorimetric —Provides white-point transformation between the source and destination white points. For example, the bluish gray of a monitor will map to neutral gray. You may prefer this style to avoid visible borders when <i>not</i> printing full-bleed.	Advanced use when color matching is important but you prefer white colors in the document to print as paper white. It may also be used with PostScript color management to affect CMYK data for simulation purposes.	Relative Colorimetric
Absolute Colorimetric —Provides <i>no</i> white point transformation between the source and destination white points. For example, the bluish gray of a monitor will map to a bluish gray.	Situations when exact colors are needed and visible borders are not distracting. It may also be used with PostScript color management to affect CMYK data for simulation purposes.	Absolute Colorimetric

RGB Source Profile

The RGB **Source Profile** setting allows you to define the characteristics of the RGB data in your document so the appropriate color conversion can occur on the E-810. Commonly used monitor color spaces are available from the driver and from the ColorWise Pro Tools Profile Manager. For special needs, you can use ColorWise Pro Tools to download custom monitor or scanner profiles.

When you specify a setting other than None for the RGB Source Profile, the E-810 overrides source color space definitions or profiles that other color management systems may have specified. For example, if you specified a ColorSync System Profile on your Mac OS computer, the RGB Source Profile setting overrides it. In cases where you do *not* want this setting to override another specified source color space, choose None.

When you specify a setting other than None for the RGB Source Profile—since the color space definitions are overridden—the prints from the E-810 will be consistent across platforms. Below are the E-810 RGB Source Profile options:

- **EFIRGB** specifies an EFI-defined color space recommended for users who have no detailed information about their RGB data.
- **sRGB (PC)** specifies the industry standard definition for a generic Windows PC monitor.
- **Apple Standard** specifies the definition of all standard Mac OS computer monitors.
- **Other** allows you to specify custom RGB source settings. If you choose Other as the RGB Source setting, you can choose settings for the Gamma, Phosphors, and White Point options.
- **Sources 1–10** specify the definitions you download as RGB source profiles. For more information about downloading RGB source profiles, see Chapter 4.

If you are printing with the PostScript driver for Windows 9X/Me and have two-way communication enabled, the name of each downloaded profile is represented in the RGB Source Profile setting pop-up menu. If you are printing with the AdobePS driver from a Mac OS or Windows NT computer, or the Microsoft PostScript driver from a Windows 2000 computer, downloaded profiles appear as Source-1 through Source-10. For more information on two-way communication, see *Getting Started*.

- **None** instructs the E-810 to allow the RGB sources you defined elsewhere, such as in the application, to be used. When you set RGB Source to None, the appearance of colors will *not* be independent of the file type. For example, RGB EPS files will look different from RGB TIFF files.

With RGB Source set to None, PostScript RGB data that contains a source color space definition is converted using the CRD specified by the Rendering Style option (see page 1-4). Non-PostScript RGB data and PostScript RGB data that does not contain a source color space definition is converted using a general **undercolor removal** conversion method.

RGB Separation

The RGB Separation option determines how RGB colors (as well as Lab and XYZ colors) are converted to CMYK. The name of this option is meant to be descriptive, since the option defines the color spaces that will be used by the E-810 to “separate” the RGB data into CMYK values.

The two choices available for this option determine whether RGB data is converted into the full gamut of the copier (**Output**) or is first converted into the gamut of another digital printer or press standard (**Simulation**). This feature is helpful for making one device behave like another for RGB data. For example, if a high-quality ICC profile is available for another print device, the copier can simulate the behavior of that device.

RGB Separation is also useful for prepress applications. For example, it lets you experiment with the appearance of an RGB scan under different press printing conditions, without having to convert the RGB data to CMYK data for each condition. When the desired printing condition is found, you can then convert the file to CMYK, if using the same CMYK simulation profile you used during the experimentation.

NOTE: Use the RGB Separation print option in conjunction with the Output Profile or CMYK Simulation Profile print options.

- **Output** converts all RGB colors into the CMYK color space of your copier (when set to the printer’s default), or a customized CMYK color space for your copier (when set to Output 1-10).
- **Simulation** converts all RGB colors into the CMYK color space for a specified simulation (make sure to select the desired simulation with the CMYK Simulation Profile print option).

CMYK Simulation Profile

The CMYK Simulation Profile print option allows you to print press proofs or simulations. This option specifies the offset press standard or other color printing device you want to simulate. This option affects CMYK data only.

From the printer driver, you can view up to 10 custom Full simulations created using ColorWise Pro Tools. The number of custom simulations is limited by the disk space on the E-810.

If you are printing with the PostScript driver for Windows 9X/Me and have two-way communication enabled, the name of each downloaded or custom profile is represented in the CMYK Simulation Profile setting pop-up menu. If you are printing with the AdobePS driver from a Mac OS or Windows NT computer, or the Microsoft PostScript driver from a Windows 2000 computer, downloaded or custom profiles appear as Simulation-1 through Simulation-10. For more information on two-way communication, see *Getting Started*.

The CMYK Simulation Profile setting you specify depends on the press standard for which the CMYK data was separated.

- For images separated using a custom separation (such as a separation produced with an ICC profile), choose the corresponding profile on the E-810 with the CMYK Simulation Profile setting.
- For images separated for **SWOP**, choose SWOP as the CMYK Simulation Profile setting.

NOTE: To properly simulate a printed image that was separated through the use of an ICC profile, the same profile must be present on the E-810. For more information about downloading ICC profiles to the E-810, see “Downloading profiles” on page 4-5.

- The Match Copy setting bypasses E-810 calibration to simulate the color of a copy produced by the copier. Use this setting when you print images scanned with the Fiery Scan plug-in set to Match Copy.

CMYK Simulation Method

The CMYK Simulation Method setting specifies the quality of simulation to perform.

- **Quick** applies one-dimensional transfer curves that adjust output density only.
- **Full** provides a more complete and accurate simulation by applying colorimetric transformations that adjust hue as well as output density. The Full Simulation option also maintains the integrity of the black channel by adjusting it independently. This is especially important for images separated using an optimized black generation (UCR/GCR) setting, either from a scan or from within an application such as Photoshop.

Output profile

The output profile is applied to all data in the print job, so make sure the selected profile is the right one for your job. The default output profile consists of both a profile for your copier, describing its color characteristics, and a calibration target that describes the expected behavior of the copier.

In certain cases, you may want to customize the default output profile using the ColorWise Pro Tools Color Editor to achieve particular color effects (see page 4-11). If you do so, the new customized output profile is applied to all data in the print job. Changing the output profile only does not affect its associated calibration target (since the target is based on a copier model). You can edit D-Max values of the calibration target separately (see page 4-6).

You can use the ColorWise Pro Tools Profile Manager to download your own output profile to the E-810 (see page 4-5). Downloaded output profiles are at first associated with the calibration target tied to the default output profile. You can edit calibration target D-Max values separately.

If you are printing with the PostScript driver for Windows 9X/Me and have two-way communication enabled, the name of each downloaded or custom profile is represented in the Output Profile setting pop-up menu. If you are printing with the AdobePS driver from a Mac OS or Windows NT computer, or the Microsoft PostScript driver from a Windows 2000 computer, downloaded or custom profiles appear as Output-1 through Output-10. For more information on two-way communication, see *Getting Started*.

Pure Black Text/Graphics

The Pure Black Text/Graphics option affects the printout for black text and vector graphics on a page. Under most circumstances, you can leave this option set to On. When Pure Black Text/Graphics is on, black colors generated by applications are printed using 100 percent black-only toner (for example, RGB = 0, 0, 0; CMYK = 0%, 0%, 0%, 100%; or K = 100%). This means the black text and line art will not exhibit halftone artifacts and will not be misregistered, since there is only one toner used. In addition, this setting eliminates **blasting**. This option is automatically set to On when the Black Overprint option is set to On

For some jobs you may want to turn this option Off, for example, if the page includes gradient fills that use black. The table below describes the behavior of the Pure Black Text/Graphics option with black data defined in different color spaces.

NOTE: The Pure Black Text/Graphics option can be used only when printing composites, not when printing separations.

Input black color	Pure Black Text/Graphics	
	On	Off
RGB	Prints 100% black	With the default profile, prints a rich black using all toners.
CMYK		Prints only with black toner, because CMYK simulations preserve the black channel. The actual amount of toner used depends on the current simulation and the calibration state of the copier.
Spot		Prints only with black toner, because spot color simulations preserve the black channel. The actual amount of toner used depends on the current simulation and the calibration state of the copier.

NOTE: PostScript applications, such as QuarkXPress, may convert elements defined as RGB = 0, 0, 0 to four-color CMYK black before sending the job to the E-810. These elements are not affected by the Pure Black Text/Graphics option. See the application notes for details. Also, black text and line art defined as RGB = 0, 0, 0 in office applications (such as Microsoft Word) are converted to single-color black (CMYK = 0%, 0%, 0%, 100%) by the Microsoft PostScript Level 3 driver for Windows 2000. To print this single-color black at the maximum toner density of the copier, set the Pure Black Text/Graphics option to On.

Spot Color Matching

The Spot Color Matching option provides automatic matching of PANTONE colors with their best CMYK equivalents.

- **On**—The E-810 uses a built-in table to generate the closest CMYK matches of PANTONE colors your copier can produce. (New tables are generated when you add new output profiles.)

NOTE: Spot colors not included in the built-in table are treated as CMYK.

- **Off**—The E-810 uses the CMYK equivalents defined by your application to print PANTONE colors.

For jobs that include PANTONE spot colors, set Spot Color Matching to On unless you are printing press simulations. In that case, set Spot Color Matching to Off and choose the appropriate CMYK Simulation setting (see page 1-8).

NOTE: You can use the Spot Color Matching option only when printing composites, not when printing separations.

Spot Color Matching and the PANTONE Coated Color Reference

The PANTONE Coated Color Reference (described on page 5-6) prints differently depending on the Spot Color Matching setting.

- **On**—The E-810 uses a built-in table to generate the best matches of the PANTONE colors that your copier can produce. The PANTONE number is printed below each swatch.
- **Off**—The E-810 prints swatches using the CMYK values recommended by PANTONE (and used by applications that provide PANTONE color libraries). The CMYK values used to generate the color, as well as the PANTONE number of the color, are printed below each swatch. These CMYK values are printed through the selected CMYK Simulation and Output Profile settings.

Printer drivers and print options

This section describes the role of the printer driver and explains how to use Windows and Mac OS printer drivers for E-810 printing.

NOTE: The term “PostScript” by itself is used to refer to Adobe PostScript Level 2 or later.

What a printer driver does

To take full advantage of the features of the E-810, your print jobs must be sent as PostScript data. Since most applications cannot generate PostScript data directly, it is the function of a printer driver to interpret instructions from the application and convert them to PostScript data.

A PostScript printer driver also allows you to select print options specific to your copier. To do this, the printer driver must be matched with a **PostScript printer description file PPD** for your E-810. The PPD contains information about the particular features supported by the E-810 and the copier. You can think of the PPD as the lines of PostScript code in the file that are device-specific. When you print a job, the printer driver lets you choose among features by displaying print options.

A few PostScript applications can send PostScript data directly to the copier and present print options within the application interface. Even these applications, however, require that you use a PostScript printer driver.

The E-810 user software includes Adobe PostScript printer drivers for Windows 9X/Me, Windows NT 4.0, and Mac OS and the Microsoft PostScript printer driver for Windows 2000. These are the recommended printer drivers for printing to the E-810. (See *Getting Started* for information on installing printer drivers.)

We recommend you set the print options initially in E-810 Setup (see the *Configuration Guide*). This provides you with a default configuration that is appropriate for most E-810 print jobs.

PostScript printer driver for Windows 9X/Me, Windows NT 4.0, and Windows 2000

You can access the printer driver options described in this section by clicking Start\Settings\Printers, right-clicking the appropriate PPD name, and selecting Properties (Windows 9X/Me), Document Defaults (Windows NT), or Printing Preferences (Windows 2000) from the pop-up menu. These settings are also accessible from the Print Setup or Page Setup dialog boxes of most applications.

For Window 9X/Me, the E-810 driver interface enables you to save combinations of settings that you can later access. In addition, you can choose different settings for individual jobs from the applications you use.

The printer driver writes a PostScript file containing the instructions generated by your application and the E-810 print options you selected. The printer driver sends the PostScript file to the E-810. The E-810 then performs PostScript processing and color conversions and sends raster color data to the print device.

NOTE: The following illustrations and instructions do not apply to all applications. Many applications, such as Adobe PageMaker, Adobe Photoshop, Adobe Illustrator, QuarkXPress, and CorelDRAW, have other color management options in addition to those presented in the printer driver. For information on specific applications, see Chapters 6 through 9.


Setting color management print options for Windows 9X/Me and Windows NT


This section explains how to set E-810 color print options with the Adobe PostScript printer driver version 4.3.x for Windows 9X/Me and version 5.1 for Windows NT, PostScript 3 printer drivers that take full advantage of the color features of the E-810. Before you proceed, make sure you have completed the following procedures described in *Getting Started*.

- Install the Adobe PostScript Printer Driver version 4.3.x (Windows 9X/Me) or 5.1 (Windows NT) and the E-810 PPD.
- Set up the E-810 for printing.


To set print options, open the PPD as described on page 1-13. Under the Fiery Printing tab, click the ColorWise menu to select settings for the print options described on page 1-2.

Click the ColorWise menu

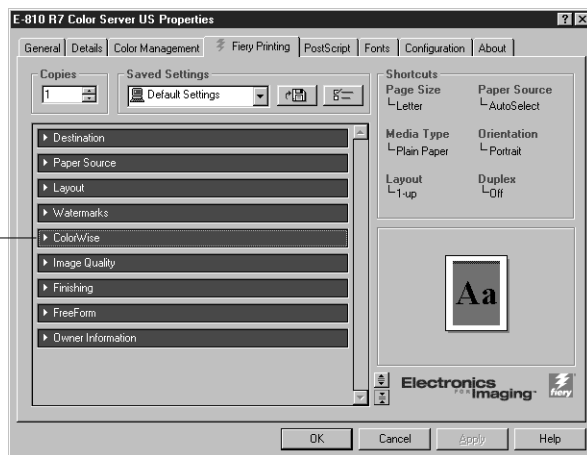

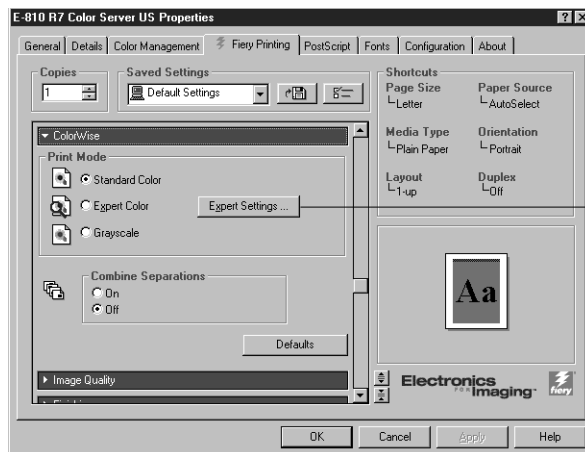


Click the Expert Settings button to access additional ColorWise options

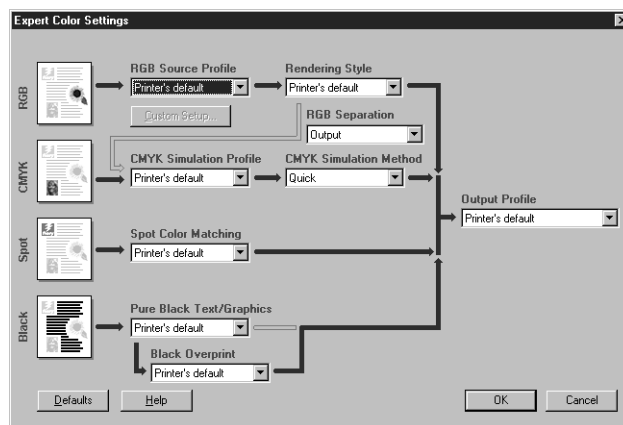

Click on the Expert Settings button on the ColorWise window (above) and click Update to display the current E-810 settings. If the Update button does not appear, make sure that two-way communication is set up as described in *Getting Started*. This brings up the Expert Color Settings flowchart window (below), which displays additional color settings for the E-810. Each option includes a pop-up menu from which you can select settings for your specific job.

Selecting Other for RGB Source Profile brings up the following window for specifying custom RGB source settings (see page 1-5).

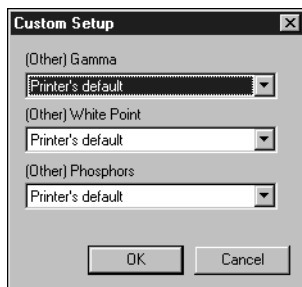


For most users, the default settings provide the right level of color control. For more information about individual print options, see page 1-2.

Setting color management print options for Windows 2000

This section explains E-810 color print options with the Microsoft PostScript Printer Driver for Windows 2000. This PostScript driver takes full advantage of the color features of the E-810. Before you proceed, make sure you have completed the following procedures described in *Getting Started*:

- Install the Microsoft PostScript Printer Driver and E-810 PPD.
- Set up the E-810 for printing.

To set print options, open the PPD as described on page 1-13. Click the Advanced tab in the Printing Preferences dialog box, and then choose settings for the print options described on page 1-2.

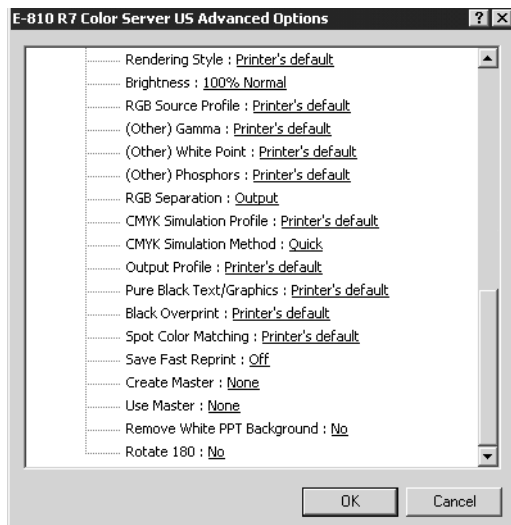

Adobe PostScript printer driver for Mac OS

This section explains how to set color management print options with the AdobePS 8.6 printer driver for Mac OS, a PostScript 3 driver that takes full advantage of the color features of the E-810 and lets you save a set of print option settings.

Before you continue, make sure you have completed the following:

- Install the AdobePS printer driver and the E-810 PPD, as described in *Getting Started*.
- Select the E-810 in the Chooser and set it up with the E-810 PPD.

NOTE: The following illustrations and instructions do not apply to all applications. Many applications, such as PageMaker, Photoshop, Illustrator, QuarkXPress, and CorelDRAW have other color management options in addition to those presented in the printer driver. For information on specific applications, see Chapters 6 through 9.

Setting color management print options

You can choose print options from the various panes of the AdobePS driver dialog box. To access the initial AdobePS dialog box, choose Print from the File menu of your application.

NOTE: The word “pane” is used to describe the different pages that appear in the driver dialog box when you make selections from the pull-down menu at the upper left. Each pane presents a particular set of print options.

The AdobePS driver includes the following Color Matching options.


- **Color/Grayscale**—When this setting is used to print to the E-810, ColorWise provides all color conversions on the E-810. Typically, you should use this option when printing to the E-810.
- **PostScript Color Matching**—Can be used with PostScript devices such as the E-810. It provides for color conversion using a color rendering dictionary (CRD) that is downloaded with the print job. This method requires that the file be saved as an EPS with PostScript Color Management selected.

NOTE: If you use the PostScript Color Matching option, the driver may, depending on the application in use, attach a CMYK source definition to the CMYK data in your document. In this case, the CMYK data in the document is re-separated using a E-810 CRD. The destination color space for the CRD is determined by the RGB Separation print option. When RGB Separation is set to Simulation, CMYK data is printed according to all specified CMYK Simulation Profile and CMYK Simulation Method settings. When RGB Separation is set to Output, CMYK data is converted to the selected output profile’s CMYK color space.


- **ColorSync Color Matching**—Provides for color conversion *on the host computer*. This option can be used with PostScript devices such as the E-810, but it is intended for use with PostScript Level 1 devices. If you use this option, be sure to specify the E-810 ICC profile as the Printer Profile. ColorSync Color Matching is not a suggested color matching method, because it does not work in conjunction with all applications and requires that you disable features of ColorWise on the E-810.

Setting E-810 color management options


In the AdobePS Print dialog box, choose Color Matching from the pull-down menu.

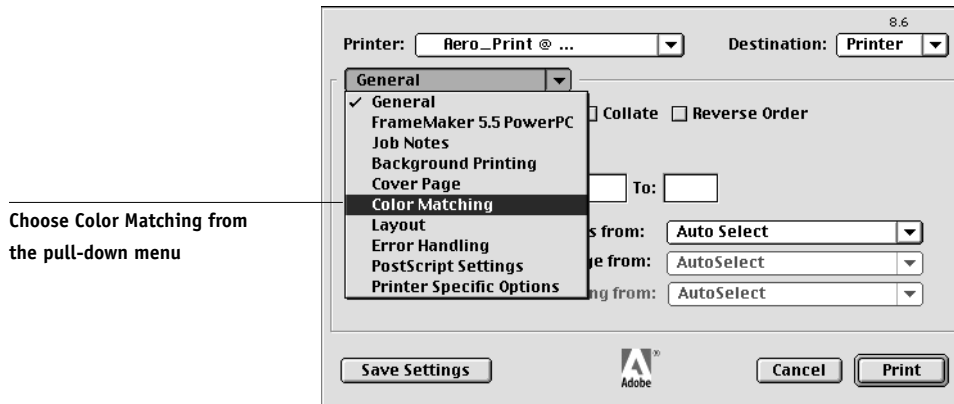

In the Color Matching pane, choose Color/Grayscale from the Print Color pull-down menu.

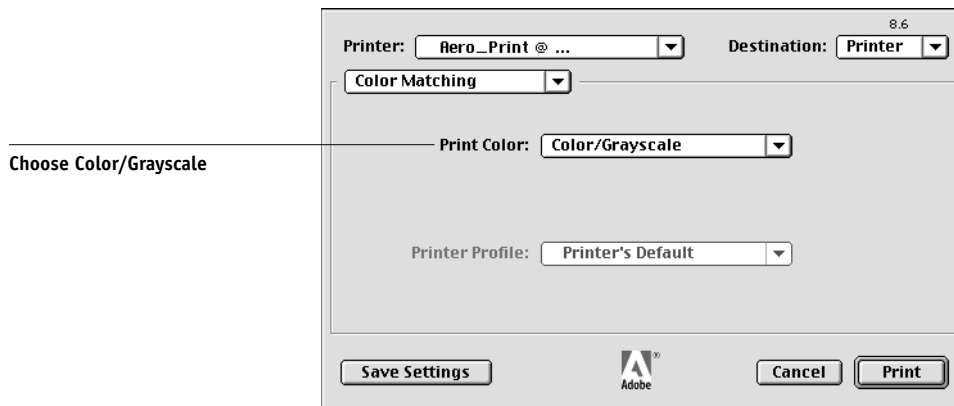

In the Printer Specific Options pane, choose settings for the print options described on page 1-2.

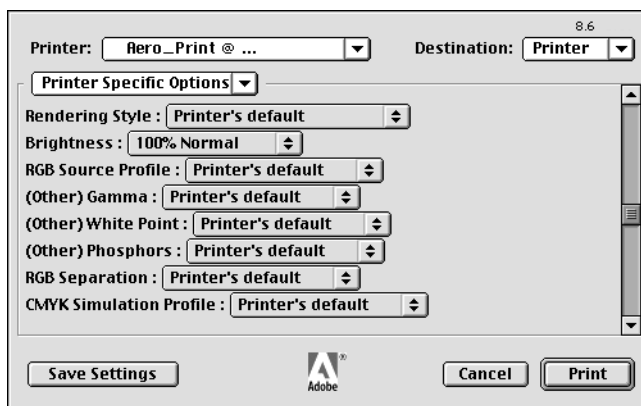

If these settings are ones you use regularly, click Save Settings to save them for subsequent jobs.

Chapter 2: Simple and Advanced Workflows

This chapter discusses color management workflows used in short-run color printing, as well as color proofing on the E-810. It also gives examples of color management in specific desktop applications and discusses the interaction between those applications and ColorWise color management.

Workflow concepts

The term “**workflow**” is used to describe the path a job follows from its creation in a desktop application to final printed output. It is helpful to think of the following categories when describing workflows:

- Short-run printing versus color proofing for eventual output on an offset press
- RGB, CMYK, and PANTONE color systems
- Desktop color management within an application versus color management on the E-810, along with the notion that different versions of desktop applications handle color management differently. It is important to pay close attention to the version of a particular application when considering the workflows in this chapter.

Short-run printing versus color proofing

Short-run color printing refers to those jobs for which the E-810 is the final print device. Printing jobs to the E-810 in preparation for printing on an offset press is referred to as color proofing. Both types of E-810 print jobs use RGB, CMYK, and PANTONE colors.

- For short-run jobs, bright, saturated colors are often desirable. These are achieved by using the full range of colors available, referred to as the full gamut of the copier or, more simply, copier CMYK. See “Advanced Workflows” on page 2-8 for short-run printing examples.
- Offset jobs proofed on the E-810 require the printed colors to match those from another set of CMYK printing conditions. Colors specified for an offset press require CMYK simulation optimized for proofing on the copier. See “Advanced Workflows” on page 2-8 for color proofing examples that simulate the gamut of another digital printer or press standard.

RGB, CMYK, and PANTONE colors

Colors can be defined in several different color models, the most common being RGB, CMYK, and the PANTONE color matching system. Each model requires a different color conversion at the E-810. These different color conversion workflows are explained below.

- RGB source profiles and color rendering dictionaries are used to map RGB colors through a device-independent color space to a destination space, either the full copier gamut in a short-run printing workflow or CMYK simulation in a color proofing workflow.
- CMYK colors are device-dependent. In a proofing scenario, colors specified in prepress applications are adjusted so the gamut of the E-810 copier can simulate that of the press. In a short-run printing workflow, specifying CMYK colors according to the calibrated copier output eliminates the need for simulation during printing.
- PANTONE spot colors are special inks manufactured to run on an offset printing press. Spot colors can be simulated using CMYK copier toners or process color inks. Two basic workflows exist for printing PANTONE colors to the E-810:

Spot Color Matching On instructs the E-810 to match the output of the copier to the PANTONE spot color.

Spot Color Matching Off instructs the E-810 to match the copier output to a PANTONE-specified process simulation. This CMYK combination is then printed with the CMYK Simulation setting you choose, such as SWOP or DIC, and CMYK Simulation Method set to Full.

Desktop versus E-810 color management

A desktop color management system uses ICC profiles to convert colors from one device gamut to the next (see Appendix B). The color data is converted when it is passed from one application to another or when the job is sent to the copier, so the processing occurs on your computer, as opposed to the E-810.

One advantage of using ColorWise color management over desktop color management is that your computer is spared added processing. Delaying color conversions until the color data reaches the E-810 frees your computer so you can continue working, and color conversions on the E-810 are, in most cases, much faster than similar conversions on a host computer.

Managing most or all of your color on the E-810 can also eliminate the potential for undesirable color management-related conflicts, such as iterative color conversions and inconsistent color. The E-810 applies global corrections to specific groups of RGB, CMYK, and PANTONE colors to avoid such conflicts.

Finally, by sending RGB files instead of larger CMYK files from applications to the E-810, network traffic is minimized and jobs generally print faster.

ColorWise uses ICC profiles to convert colors to the copier gamut or simulate other devices, such as an offset printing press. ColorWise manages color conversions for all users printing to the E-810 from Windows and Mac OS computers. It lets users follow a simple workflow with minimal intervention using robust default settings, while giving advanced users the control and precision they need.

The E-810 can intelligently manage the printed appearance of RGB, CMYK, and PANTONE colors. You can let the E-810 manage color for most short-run color printing jobs without adjusting any settings.

Simple workflows

Every time you print a document containing colors that were not chosen for your specific copier, those colors need to be converted, which requires color management. You can define or modify colors at any stage in the workflow. Since ColorWise is compatible with most other color management systems, you can use the workflow most familiar to you.

This section provides examples of color workflows that should meet the needs of most E-810 users. For information on specific desktop applications, see Chapters 6 through 9.

Select your colors wisely

For the colors you see on your monitor to match those on your printed output, they must go through color management, including precise calibration of your monitor and copier. If you are not equipped or inclined to maintain accurate monitor color management, you may opt for an easier approach. First, determine which is more important you—printed colors or monitor displayed colors.

If displayed colors are more important, trust your eyes and your monitor. Visually select colors on your monitor, but be aware that colors will be optimized only for your monitor. When the document is opened on other monitors, the colors may look different. And even though printed colors may not match those displayed on your monitor, they will still print on the E-810 with good results.

If printed colors are your priority, choose colors from printed samples. By using these sample colors, your printed output will remain consistent regardless of how the colors appear on different monitors. Print the palette of available colors from business applications and then select colors from the printed samples. E-810 Color reference files are included on the User Software CD (see page 5-2). You can also print color charts from the Control Panel and select colors by number or name from the printed samples. Advanced applications let you define colors in the easier-to-control PANTONE and CMYK color spaces. See Chapter 5 for more advice on color selection.

No matter which workflow most closely matches your own, you should calibrate your copier regularly (see Chapter 3).

Select a short workflow


Every time colors are converted, performance and color accuracy are affected. Therefore, a workflow with fewer steps minimizes the risk of error.

Workflow 1 using ColorWise calibration—minimal workflow

A minimal color workflow requires that you calibrate the copier. Select from printed colors as described above, and set the CMYK Simulation option to None, since simulation is not needed when colors are already defined using CMYK values optimized for your calibrated copier.

NOTE: CMYK Simulation set to None is also useful when you want to prepare an output profile of your calibrated copier or when you use less efficient color management from the desktop (such as ColorSync or ICM).

In this workflow, colors are modified only at the calibration stage. This is indicated by the black box in the diagram below.

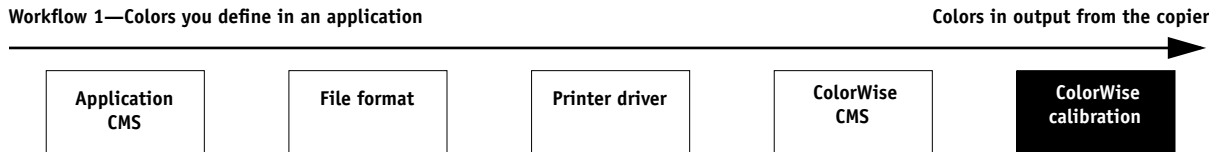


While this workflow lends some control over the color quality produced by the copier, you should consider additional ColorWise color management, as described in the next section.

Workflow 2 using ColorWise color management—standard workflow

E-810 servers are highly optimized for the specific copier they drive, and ColorWise addresses many issues unique to your copier, including screens, individual toner response, interactions among toners, natural smoothness of blends, and the capability to render PANTONE and custom colors. The E-810 distinguishes text and graphic from image elements, so the black channel information is preserved while parameters used for CMYK color separations are maintained.

Conventional color management systems typically address only color conversions, and they occupy your computer processor. When you use ColorWise, jobs leave your computer faster to be processed more quickly on the E-810.

The recommended standard color workflow (indicated by the black boxes in the diagram below) uses ColorWise calibration and color management.

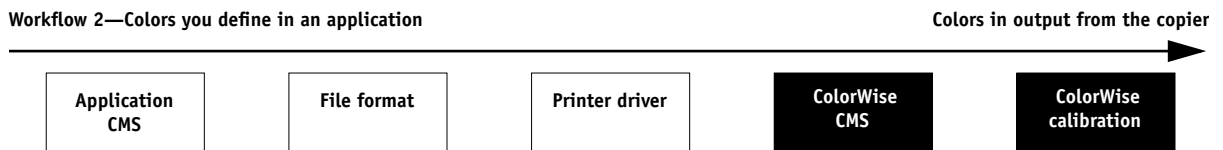

The E-810 comes into play near the end of the color workflow. To ensure the colors you selected reach the E-810 and ColorWise in a usable form, you should bypass any color management from applications and printer drivers. Keep in mind, however, that color management from applications and printer drivers is fully supported by ColorWise (see “Advanced workflows” on page 2-8).

You must print with the CMYK Simulation print option set to match the CMYK color space in your application when you selected the colors. Any CMYK Simulation setting (except Match Copy) applies calibration, so the response of the copier will appear to be stable.

The recommended values for CMYK Simulation are SWOP in the US, Euroscale in Europe, and DIC in Japan—choices that respect the color standard for each region. If colors have been selected specifically for your calibrated copier, set CMYK Simulation to None.

See the table on page 1-2 for a list and descriptions of ColorWise print options that affect CMYK, RGB, PANTONE, and other colors.


Workflow 3 bypassing ColorWise—*not* recommended

Bypassing ColorWise color management, while an option, is not a recommended workflow. When you bypass ColorWise, you must choose colors using only CMYK formulas designed specifically for your copier, and you must print with the CMYK Simulation option set to Match Copy. The E-810 still prints pages using your PostScript files, and drives the copier and its accessories, but it does not perform CMYK color transformation, nor does it consider the calibration of the copier. Calibration is needed in order to get consistent output, since the color response from your copier varies significantly depending on wear, heat, humidity, and service.

The diagram below indicates that no modifications are made to colors in this workflow.

Workflow 3—Colors you define in an application

 Colors in output from the copier



Turn off color management in your application

Generally, when printing to the E-810, you should disable color management in the application to ensure the E-810 receives color data properly and prints it accurately.

Save your files using color-safe settings

You can take several additional steps to ensure color accuracy.

- When saving EPS files, do not include PostScript Color Management information. This minimizes the risk conflicting data and multiple color conversions. PostScript Color Management causes your CMYK and RGB colors to be interpreted by the E-810 as though they were supplied in the Lab color space and, as a result, to be processed by CRDs rather than your simulation settings.
- Include ICC color information in files. ColorWise does not conflict with this information, and such data is useful for identifying the specific color space used by your files.
- Do not include halftone and transfer functions.
- Turn off color management in the printer driver.

On Windows computers, if the printer driver offers Image Color Matching options, select Printer Image Color Matching.

On Mac OS computers, set the printer driver to include *no* color management commands at print time (see page 1-17).

Advanced workflows

The following sections present advanced color management workflow examples for three short-run printing and three color proofing situations. Each workflow example consists of a brief description, steps for creating and manipulating the files, a list of the ColorWise settings used in the example, and a table that summarizes the workflow.

NOTE: These examples reference specific software applications to illustrate image-editing, illustration, page layout, and business/office applications; they are Adobe Photoshop, Adobe Illustrator, QuarkXPress, and Microsoft PowerPoint, respectively.

Short-run printing examples

The following examples illustrate short-run printing on the E-810.

Photoshop RGB workflow

This short-run workflow of printing an RGB image from Photoshop is one of the simplest E-810 color workflows. RGB data is sent from the application, through the printer driver, to the E-810, and the RGB-to-CMYK conversion takes place on the E-810 using a CRD rather than the application. Use the settings illustrated in this workflow for printing photographs and artwork.

This document could be created as follows:

- Create an RGB image in Photoshop.
- Print the file directly to the E-810.

See Chapter 7 for recommended print settings from Photoshop.


- Use ColorWise to convert the RGB image to copier CMYK, or the full copier gamut.

The ColorWise settings used in this example are:

- RGB Source Profile set to EFIRGB or another RGB source definition
- Rendering Style set to Photographic
- RGB Separation set to Output

The diagram below indicates the steps for this particular workflow in black.

Photoshop RGB workflow

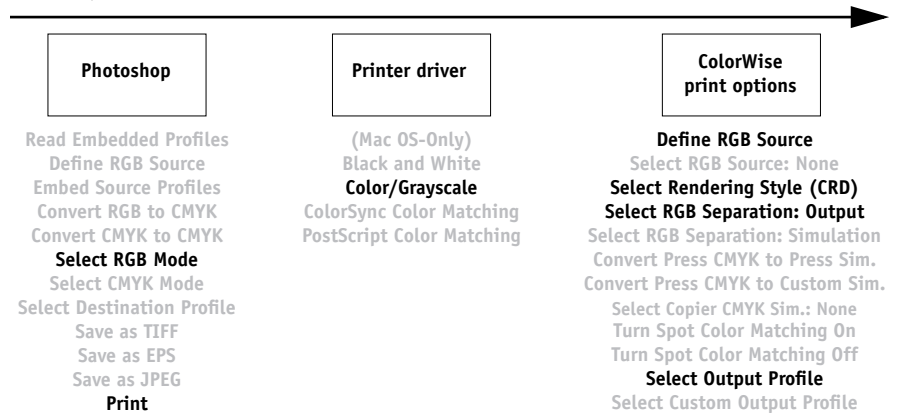

Photoshop RGB with Illustrator and QuarkXPress CMYK and PANTONE colors

This workflow involves short-run printing of a complex page layout with images saved in Photoshop, illustrations created in Illustrator, and PANTONE spot colors. A Photoshop image is saved in an RGB color space using the EPS file format. Illustrator artwork contains objects defined as CMYK and as PANTONE spot colors selected from printed output, and they are saved using the Illustrator EPS file format. After all of these individual objects are imported into QuarkXPress, additional design elements in QuarkXPress are colored using CMYK process colors or PANTONE spot colors. Use the settings illustrated in this workflow for printing brochures, newsletters, and other layouts.

NOTE: Anytime you place CMYK colors in a document, select them from printed output (see page 2-3).

This document could be created as follows:


- Create an RGB image in Photoshop and save it as Photoshop EPS.
- Create a graphic in Illustrator using CMYK and PANTONE colors and save as Illustrator EPS.
- Use CMYK colors and a PANTONE color in a QuarkXPress document.
- Import the Illustrator EPS into QuarkXPress and place the Photoshop EPS image.
- Print the QuarkXPress document to the E-810.
- Use ColorWise to convert the RGB image to copier CMYK, to adjust the process colors for short-run printing, and to match the PANTONE spot colors using the full copier gamut.

The ColorWise settings used in this example are:

- RGB Source Profile set to EFIRGB or another RGB source definition
- Rendering Style set to Photographic
- RGB Separation set to Output
- CMYK Simulation set to None
- Spot Color Matching set to On

The diagram below indicates the steps for this particular workflow in black.

Photoshop RGB workflow with Illustrator, QuarkXPress CMYK, and PANTONE colors

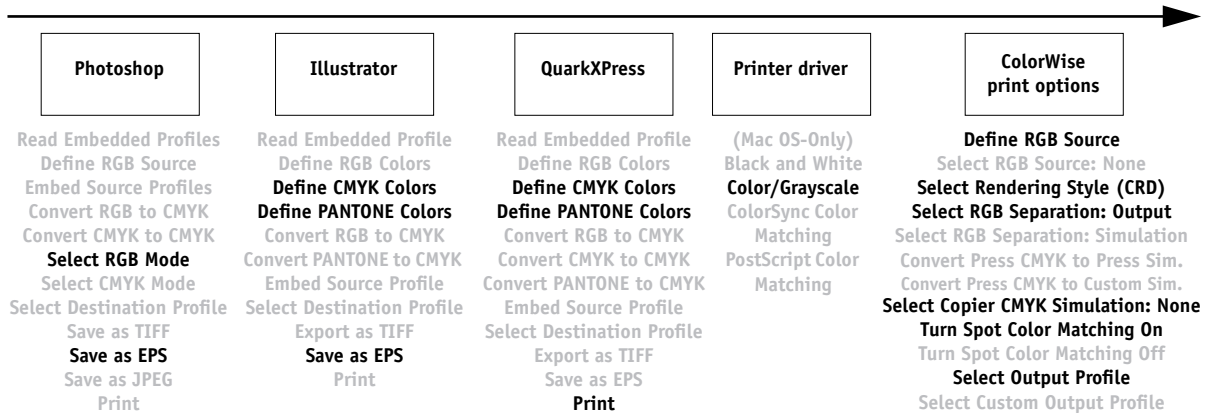

Photoshop RGB with Illustrator CMYK and PANTONE and PowerPoint RGB

This workflow involves short-run printing of a complex presentation document with images saved in Photoshop, illustrations created in Illustrator, and PANTONE spot colors. All elements are imported into PowerPoint for output.

This document could be created as follows:


- Create an RGB image in Photoshop and save it as Photoshop EPS.
- Create a graphic in Illustrator using CMYK colors and a PANTONE spot color and save as Illustrator EPS.
- Create a presentation in PowerPoint using RGB colors.
- Import the Illustrator EPS graphic into the PowerPoint presentation and place the Photoshop EPS image.
- Print the PowerPoint document to the E-810.
- Use ColorWise to convert the PowerPoint RGB colors and Photoshop RGB image to copier CMYK, to adjust the process colors for more saturated short-run printing, and to match the PANTONE spot colors using the full copier gamut.

The ColorWise settings used in this example are:

- RGB Source Profile set to EFIRGB or another RGB source definition
- Rendering Style set to Presentation
- RGB Separation set to Output
- CMYK Simulation set to None
- Spot Color Matching set to On

The diagram below indicates the steps for this particular workflow in black.

Photoshop RGB and Illustrator CMYK and PANTONE in PowerPoint RGB workflow

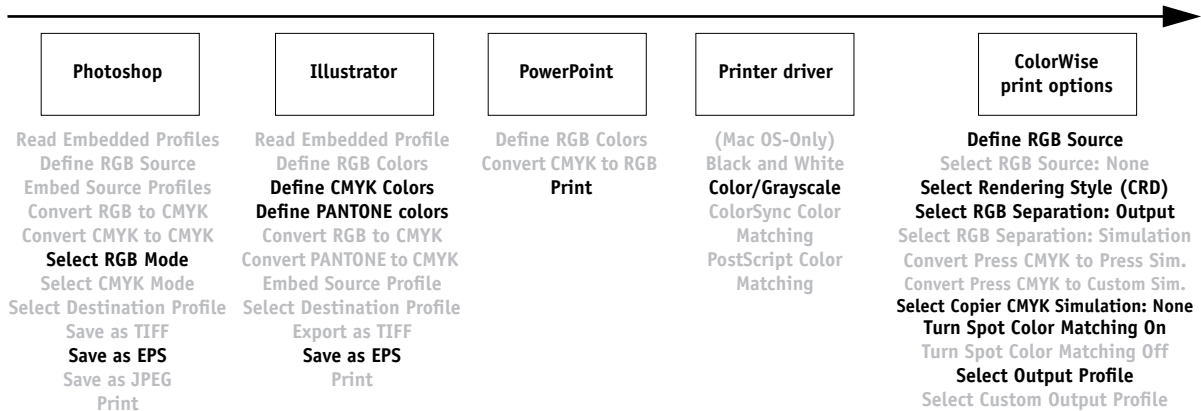

Color proofing examples

The following examples illustrate methods for simulating the output from another printing system, such as an offset press. Each of the proofing examples uses an ICC profile to describe the destination color space. While some examples use simulation profiles built into the E-810, others use ColorWise Pro Tools (see Chapter 4) to download custom ICC output profiles to the E-810 for use as simulation profiles.

Photoshop 5.x RGB-to-CMYK conversion using a custom ICC profile

This workflow is useful for prepress environments that have integrated ICC color management and have profiles for the presses they use. In this example, an image in Photoshop 5.x is converted from RGB to CMYK using the Photoshop ICC color conversion features in the CMYK Setup option. (For more information on CMYK Setup, see your Photoshop 5.x documentation.) Using the Simulation settings available in ColorWise, the CMYK image is printed to the E-810, and the output is made to appear as if it were printed on an offset press.

This document could be created as follows:


- In Photoshop 5.x, set CMYK Model in CMYK Setup to ICC.
- In the Profile menu, select an ICC profile for the desired offset press. Click OK.
- Open an RGB image. From the Image pull-down menu select Mode>CMYK Color.
- Save the image in any file format.
- Print directly to the E-810.
- Use ColorWise Pro Tools to select a simulation profile or download a custom ICC profile to the E-810 for use as a CMYK Simulation Profile.

The ColorWise settings used in this example are:

- CMYK Simulation Profile set to the desired press standard or to the corresponding custom simulation (Simulation 1-10) if you downloaded your profile with ColorWise Pro Tools
- CMYK Simulation Method set to Full

The diagram below indicates the steps for this particular workflow in black.

Photoshop RGB-to-CMYK workflow using ICC profile

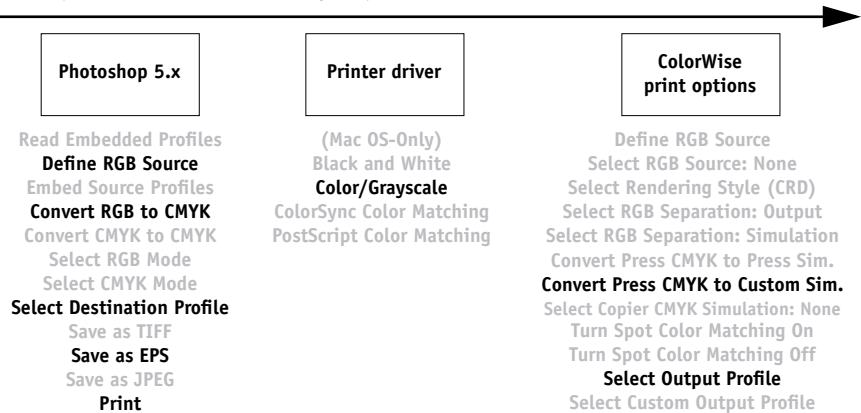

Photoshop 5.x Built-in RGB-to-CMYK workflow

This workflow is useful for prepress environments that have *not* integrated ICC color management and do not have profiles for the presses they use. In this example, an image is converted from RGB to CMYK using the Photoshop 5.x Built-in color conversion features in the CMYK Setup option. (For more information on CMYK Setup, see your Photoshop 5.x documentation.) Using the Simulation settings available in ColorWise, the CMYK image is printed to the E-810, and the output is made to appear as if it were printed on an offset press.

This document could be created as follows:

- Select the Built-in option from CMYK Setup in Photoshop 5.x Color Settings.
- Adjust the Ink Options and Separation Options to match your offset press.
- Select the Tables option in CMYK Setup and click Save.

This saves your settings as a CMYK ICC profile that you will later download to the E-810 as a custom simulation profile.

- Select the Built-in option in CMYK Setup again and click OK.
- Launch ColorWise Pro Tools and download your new CMYK ICC profile to the E-810 as a custom Simulation profile.

For the Appear in Driver as option in Profile Settings, select Simulation-1. (For more information on downloading profiles, see page 4-5.)


- Open an RGB image in Photoshop 5.x. From the Image menu, select Mode>CMYK Color. Save the image as Photoshop EPS.
- Print the image directly to the E-810 and choose Simulation-1 as the CMYK Simulation Profile setting.

The ColorWise settings used in this example are:

- CMYK Simulation Profile set to Simulation-1
- CMYK Simulation Method set to Full

The diagram below indicates the steps for this particular workflow in black.

Photoshop5.x RGB-to-CMYK workflow

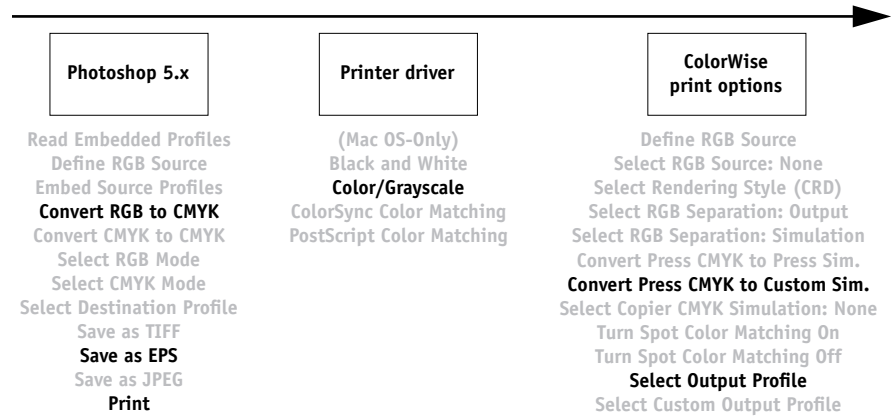

Photoshop RGB and QuarkXPress CMYK

This workflow exemplifies the use of the RGB Separation feature of ColorWise. An RGB image, originally saved in Photoshop, is printed to the E-810 from QuarkXPress. To simulate how the RGB image would print on an offset press, the RGB Separation feature of ColorWise is set to Simulation. This workflow—useful for proofing brochures, newsletters, and other layouts—lets you maintain consistency by using the source RGB file for multiple purposes.

This document could be created as follows:


- Create an RGB image in Photoshop and save it as Photoshop EPS.
- Place the EPS image in a QuarkXPress document.
- Create several process-colored page elements alongside the image and print.
- Use ColorWise to convert the RGB image to simulated press CMYK and to adjust the process colors for proofing to the copier.

The ColorWise settings used in this example are:

- RGB Source Profile set to EFIRGB or another RGB source definition
- Rendering Style set to Photographic
- RGB Separation set to Simulation
- CMYK Simulation Profile set to SWOP
- CMYK Simulation Method set to Full

The diagram below indicates the steps for this particular workflow in black.

Photoshop RGB and QuarkXPress CMYK workflow

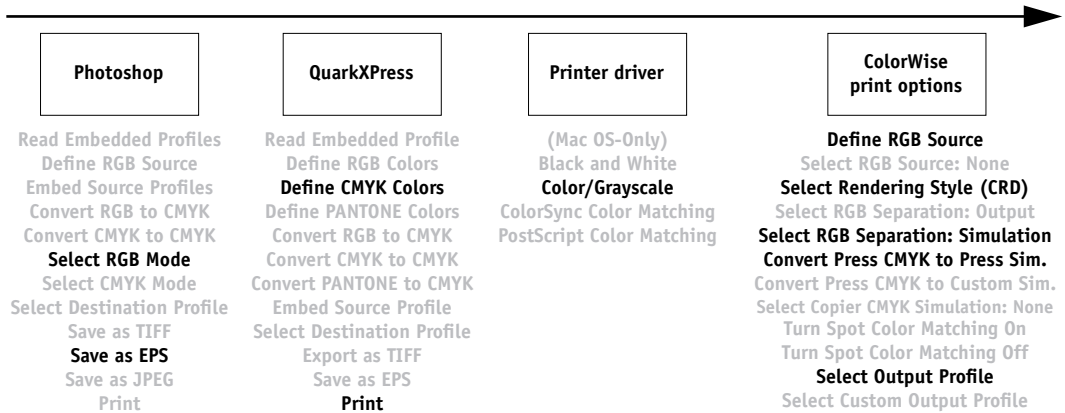

Chapter 3: Color Calibration

Calibrating the E-810 ensures consistent, reliable color output. You can calibrate the E-810 with ColorWise Pro Tools using an X-Rite DTP41 automatic scanning spectrophotometer (page 3-5) or an X-Rite DTP32 automatic scanning densitometer (page 3-23). Each of these must be purchased separately. By connecting the spectrophotometer or densitometer to the serial port on your computer, you can quickly measure color patches and download measurements to the E-810. You can also obtain measurements from the copier's built-in scanner and calibrate using AutoCal2, which does not require the use of a densitometer and can be run from ColorWise Pro Tools or from the Control Panel.

This chapter explains how **calibration** works and provides instructions for all calibration procedures. Calibrating with ColorWise Pro Tools is described on page 3-27; calibrating from the E-810 Control Panel with AutoCal2 is described on page 3-34.

For information on advanced calibration and simulation features available with ColorWise Pro Tools, such as editing profiles and creating custom profiles, see Chapter 4. A format for inputting color measurements from other densitometers is described in Appendix C.

The procedures described in Chapters 3 and 4 are fundamentally the same for Windows 9X/Me, Windows NT 4.0, Windows 2000, and Mac OS computers, including those running Command WorkStation software. The main differences are the interface cable and the port used to connect to the densitometer.

NOTE: The term “computer” is used to refer to any computer using ColorWise Pro Tools.

Introduction

Calibration generates curves that adjust for the difference between the actual toner densities (measurements) and the response expected by the output profile.

- Measurements represent the actual color behavior of the copier.
- Calibration sets are sets of measurements.

- A calibration target that describes the expected behavior of the copier is contained in each output profile.

Once you have calibrated the E-810 with ColorWise Pro Tools or with AutoCal2 from the E-810 Control Panel, a calibration set is stored on the E-810. This calibration set is used when it is associated with an output profile. Every output profile has an associated calibration set. If you have not specified one, the calibration set associated with the default output profile is used.

NOTE: Changing calibration has the potential to affect *all* jobs for *all* users, so you may want to limit the number of people authorized to perform calibration. You can set an Administrator password from the E-810 Control Panel or in Setup from Command WorkStation to control access to calibration.

Understanding calibration

Although most users' needs are met by the default calibration set, the E-810 allows you to choose a calibration set to customize calibration for specialized jobs.

Calibration allows you to:

- Maximize the color reproduction capabilities of the E-810.
- Ensure consistent color quality over time.
- Produce consistent output across E-810 servers that are connected to the same print engine.
- Achieve better color matches when reproducing spot colors such as PANTONE colors or other named color systems.
- Optimize the E-810 for using ColorWise rendering styles (CRDs), CMYK simulations, and ICC profiles.

How calibration works

Success in obtaining satisfactory print quality from a color server, such as a E-810, connected to a copier depends on many factors. Among the most important are establishing and maintaining optimal toner densities. Density is a measure of the light absorbed by a surface. By carefully regulating toner densities, you can obtain consistent printed color.

Even with a calibrated system, toner density is affected by service settings, humidity, and temperature; it also tends to drift over time. Regular measurement detects day-to-day variations in densities, and calibration corrects for them.

Calibration works by creating calibration curves on the E-810 that compensate for the difference between actual (measured) and desired (target) density values.

Calibration curves are the graphic equivalent of transfer functions, which are mathematical descriptions of changes that will be made to the data you start with. Transfer functions are often graphed as input or output curves.

The E-810 generates calibration curves after comparing measured values to the final target values for each of the four toner colors. The target values are based on the output profile specified.

Measurements

Measurement files contain numerical values that correspond to the toner density produced by the copier when it prints solid cyan, magenta, yellow, and black, and graduated tints of those colors.

To create a measurement file, first print a page of color patches from ColorWise Pro Tools. Then you measure the patches using either the X-Rite DTP41 spectrophotometer or an X-Rite DTP32 densitometer connected to a computer on the network or the copier's scanner. The new measurements are automatically downloaded to the E-810.

Output profiles and calibration sets

Output profiles and calibration sets define desired calibration results. One or more output profiles and one or more calibration sets are provided with the E-810. When you calibrate the E-810, you can select the calibration set that corresponds to the typical printing jobs at your site. This same calibration set can be associated with one or more output profiles. (For more information on output profiles, see page 1-9.)

Scheduling calibration

In general, you should calibrate the E-810 at least once a day, depending on the volume of print jobs. If it is very important to maintain consistent color, or if the copier is subject to wide fluctuations in temperature or humidity, calibrate every few hours. To get the best performance, calibrate whenever there is a noticeable change in print quality.

If you need to split a print job into two or more batches to be printed at different times, it is especially important to calibrate before printing each batch. You should also calibrate the E-810 after copier maintenance. However, because the copier may be less stable immediately after maintenance, wait until you have printed approximately 50 pages before you calibrate.

NOTE: Since printed output from the copier is very sensitive to changes in temperature and humidity, the copier should *not* be installed near a window, in direct sunlight, or near a heater or air conditioner. Paper is sensitive to climate changes as well. It should be stored in a cool, dry, stable environment, and reams should remain sealed until they are needed.

Print color reference pages, such as the Color Charts (from the Control Panel or Command WorkStation) and the color reference pages included with the user software (see *Getting Started*). All of these pages include fully saturated color patches and pale tints of cyan, magenta, yellow, and black. Images with skin tones offer a very good basis for comparison. You can save and compare pages you printed at different times. If there is a noticeable change in appearance, you should calibrate the E-810.

When you examine the Test Page, keep in mind that all color patches should be visible, even though they may be very faint in the five percent and two percent range, and each color's patch set should show uniform gradation from patch to patch as the color lightens from 100 percent to zero percent.

If the solid density patches (100% cyan, magenta, yellow, or black) look less saturated with time, show the pages to your copier service technician to find out whether adjusting the copier can improve output.

Checking calibration status

You can check whether the E-810 is calibrated, which calibration set and output profile were used, and when the copier was last calibrated:

- Print a Configuration page or Test Page from the Control Panel or the Command WorkStation.
- When you select a calibration set in Calibrator, the last calibration and the user who performed it are displayed.

Using a spectrophotometer


ColorWise Pro Tools Calibrator is designed to work with the X-Rite DTP41 spectrophotometer, a device that measures density and color data. The DTP41 communicates directly with the Calibrator application in ColorWise Pro Tools, sending measurements to the E-810 automatically.

Setting up the spectrophotometer

Before you calibrate the E-810, you need to connect, configure, and calibrate the spectrophotometer to prepare for measuring the printed patches (see “Calibrating the densitometer” on page 3-26). For additional information about setting up and using the DTP41, see the *Instrument Operator's Manual* that came with it.


TO CONNECT THE X-RITE DTP41 TO THE COMPUTER

1. Turn off the computer.
2. Unpack the X-Rite DTP41, and remove the spacer from the measurement page slot.
3. Plug the square end of the interface cable (looks like a modular phone plug) into the serial interface connection on the side of the X-Rite DTP41.

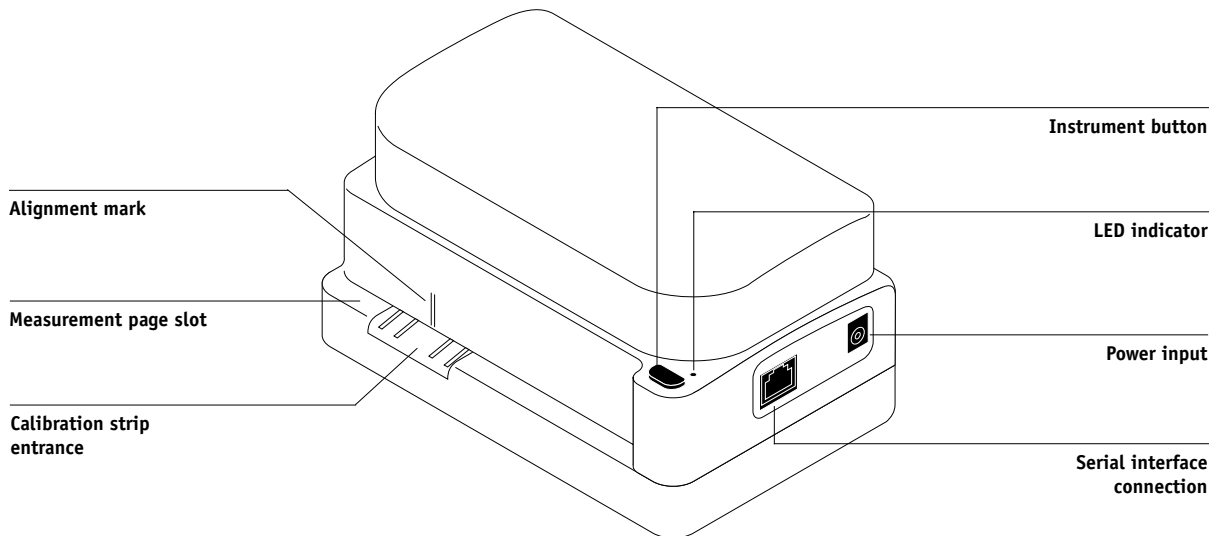


4. Attach the connector to the computer.

For a Windows computer, insert the 8-pin mini-DIN end of the interface cable into the 9-pin DB9 Connector cable adapter. Insert the 9-pin end into the COM1 or COM2 port on the computer and tighten the screws. If the available port on your computer is 25-pin, you must use the 8-pin-to-25-pin adapter.

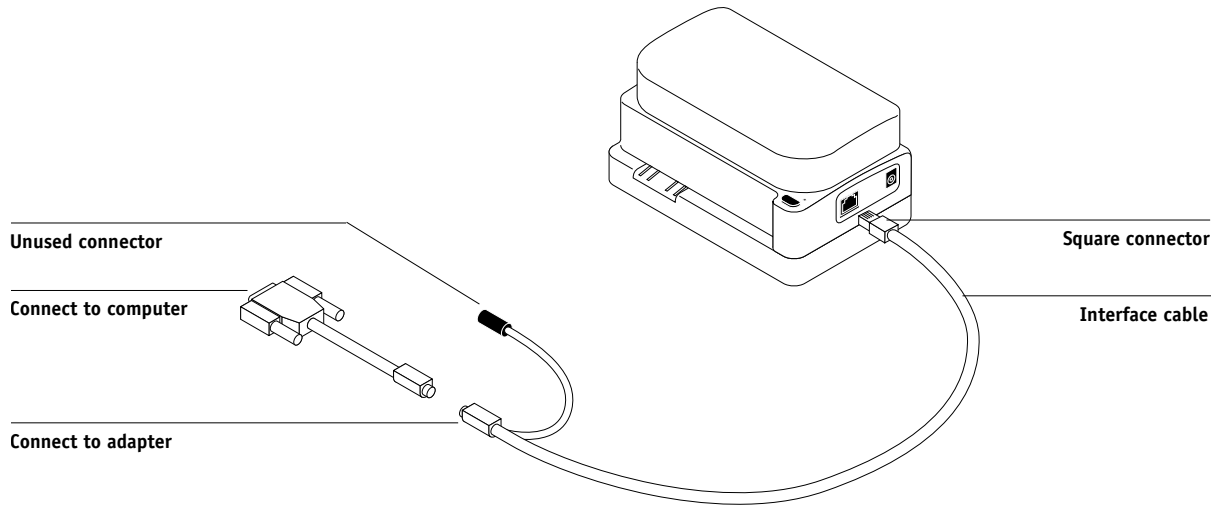


For a Mac OS computer, connect the 8-pin mini-DIN plug directly into the serial port of the computer.

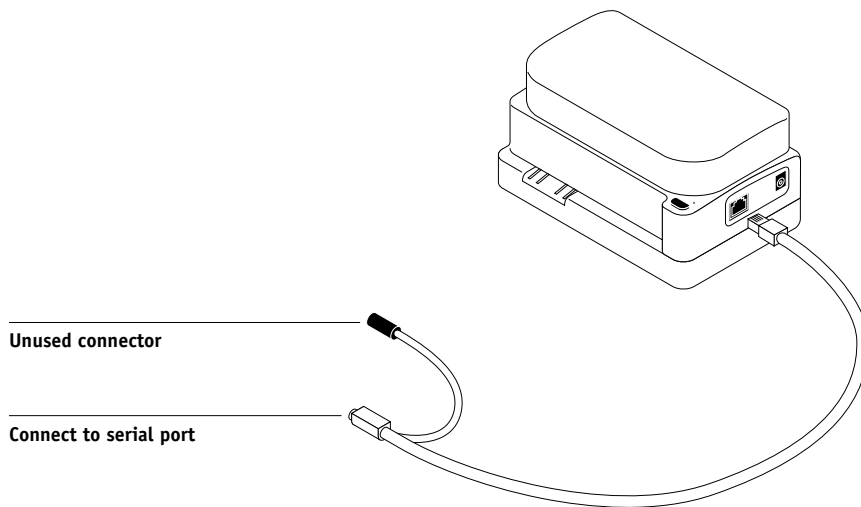

NOTE: For Macintosh computers with a USB port (for example, an iMac) you need an adapter to connect the DTP41 to your computer. See the X-Rite, Inc. web site (www.x-rite.com) for information on supported adapters.

5. Use the AC adapter to provide power.

Plug the small connector on the adapter cable into the power input of the X-Rite DTP41 and plug the AC adapter into the power cord. Plug the power cord into a wall outlet.

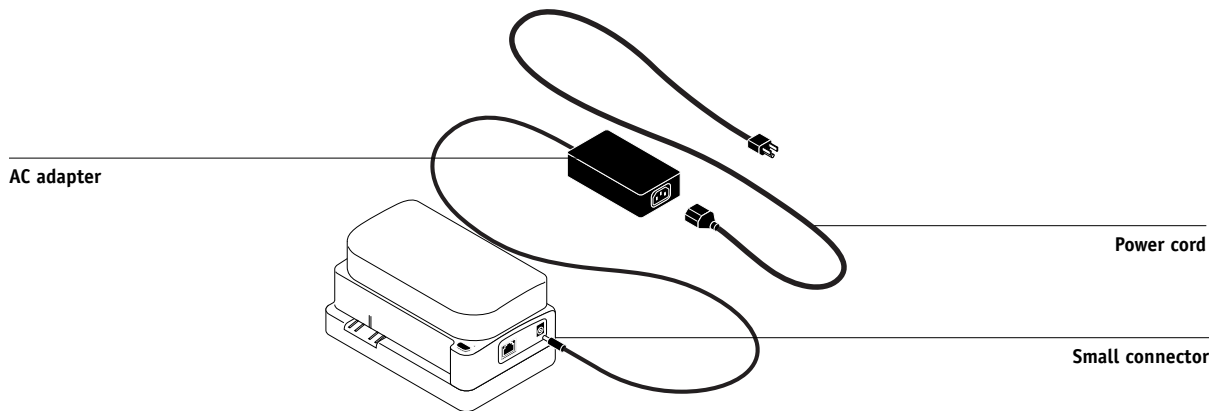**6. Turn on the computer.****7. Use ColorWise Pro Tools to calibrate the X-Rite DTP41 (see page 3-26).****8. Use ColorWise Pro Tools and the DTP41 to calibrate the E-810 (see page 3-15).**

Calibrating the spectrophotometer

For the best color accuracy, you should calibrate the X-Rite DTP41 spectrophotometer every time you calibrate the E-810. You can initiate the calibration sequence in ColorWise Pro Tools Calibrator as part of the process of E-810 calibration. The computer may also prompt you that it is necessary to calibrate the spectrophotometer.

Alternatively, you can initiate the DTP41 calibration process using the Instrument button on the DTP41. See the *Instrument Operator's Manual* that came with the X-Rite DTP41 for more information on this method.


Multiple users connect to one E-810 server with ColorWise Pro Tools, but only one user at a time can use the Calibrator module. An error message appears if you try to calibrate when another user is already using ColorWise Pro Tools to calibrate.

NOTE: ColorWise Pro Tools for Windows and Mac OS computers are fundamentally the same; differences are noted in this chapter. The screens and dialog boxes you see illustrated here are the Windows version.

You will need the Color Reflection Reference strip included with the spectrophotometer. Remove the strip from its protective envelope, handling it only by the edges. Keep the strip free of dust and smudges, and always store it in the protective envelope.

TO CALIBRATE THE X-RITE DTP41

1. Connect the spectrophotometer to the computer and turn on power (see page 3-6).
2. Launch ColorWise Pro Tools and connect to the E-810.

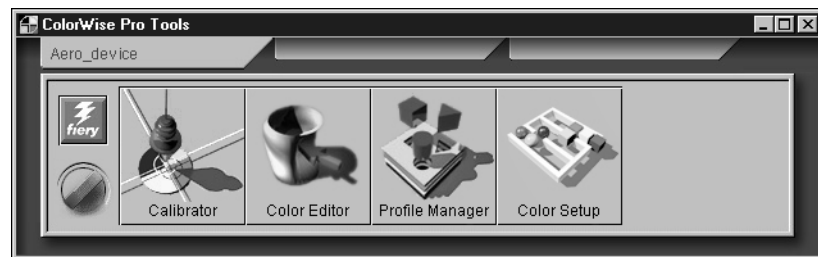


For instructions on configuring the connection to the E-810, see *Getting Started*.

NOTE: If the connection to the E-810 from Command WorkStation that also allows for access to ColorWise Pro Tools is not established, you can directly launch ColorWise Pro Tools independently of Command WorkStation.


3. **Click Calibrator.**
4. **Select DTP41 as the measurement method.**

X-Rite DTP41 should appear as a measurement method. This information is provided to Calibrator by the E-810. If this option does not appear, make sure you are connected to the E-810.

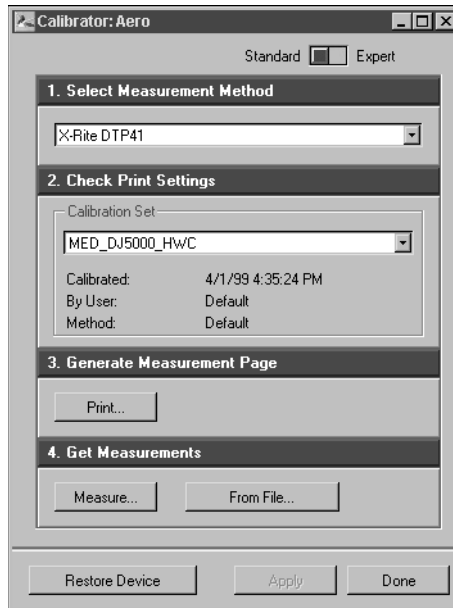


5. **Under Get Measurements, click Measure.**

6. In the Measurement Options dialog box, click Measure.

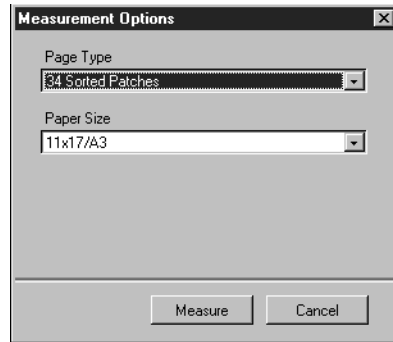


7. Select the appropriate COM port for the DTP41 from the Available Ports menu.


The Instructions field displays instructions for selecting the port.

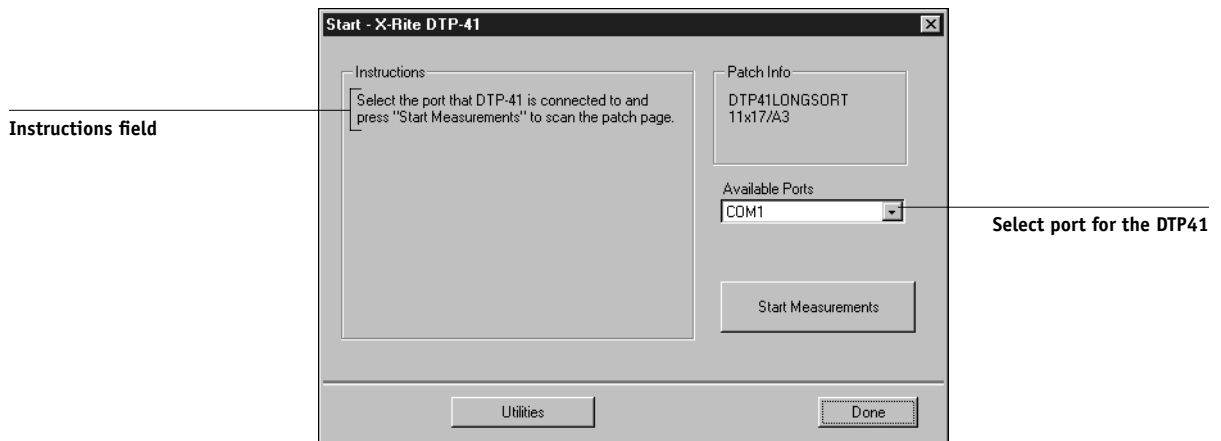

8. Click **Utilities**.
9. Click **Calibrate DTP-41**.

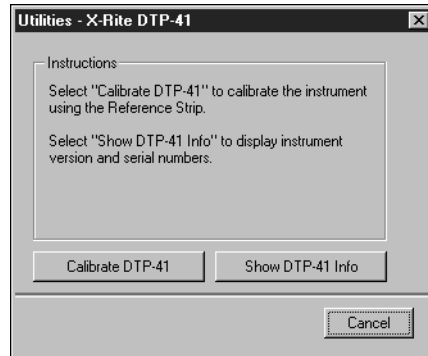

NOTE: To view version and serial number information, click Show DTP-41 Info. When finished, click Done.

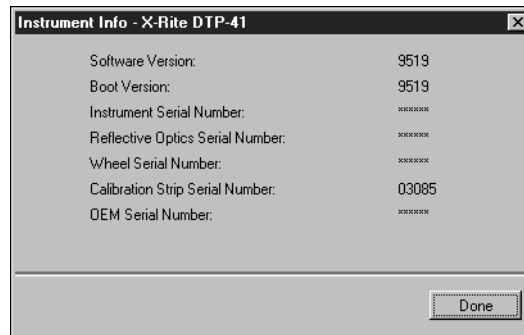


10. Remove the shipping spacer from the measurement page slot, if you have not already done so.
11. Insert the end of the Color Reflection Reference strip with the arrow into the calibration strip entrance on the DTP41, centering it below the alignment mark (see the diagram on page 3-6).


Insert the strip about 3 inches, past the front idler rollers, until it rests against the rear drive rollers.

12. Click Read Reference.

The DTP41 will pull the calibration strip through automatically.

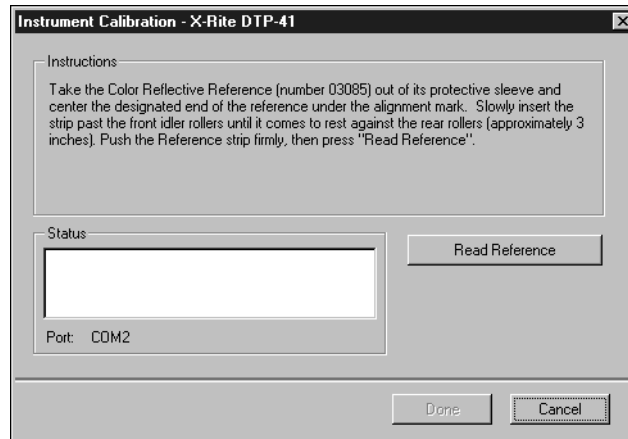**13. Click Done.**

Status field indicates DTP41 was calibrated successfully

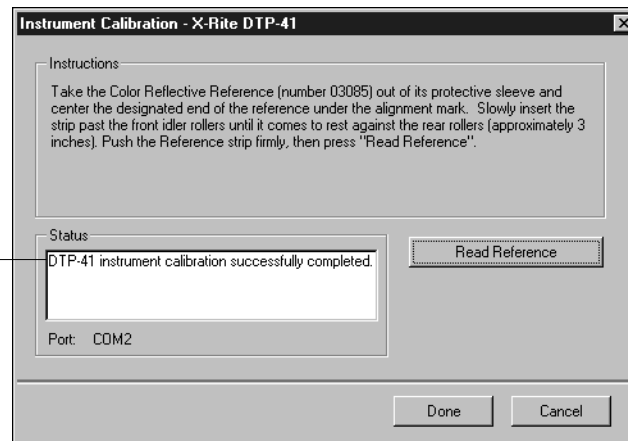**14. Close the Utilities window.**

This completes DTP41 calibration.

When the DTP41 requires calibration, your computer prompts you.



When this dialog box appears, click Calibrate Now and follow the instructions, starting with step 9 on page 3-13.

After calibrating the DTP41, calibrate the E-810 (see page 3-15).

Calibrating with ColorWise Pro Tools and DTP41

Using the ColorWise Pro Tools Calibrator application and the DTP41 spectrophotometer, you can quickly measure color patches generated by the copier and automatically download these measurements to the E-810.

Changing the calibration has the potential to affect *all* jobs for *all* users, so you may want to limit the number of people authorized to perform calibration. You can set an Administrator password from the E-810 Control Panel to control access to calibration.

Multiple users can connect to one E-810 server with ColorWise Pro Tools, but only one user at a time can use the Calibrator module. An error message appears if you try to calibrate when another user is already using ColorWise Pro Tools to calibrate.

NOTE: Before using ColorWise Pro Tools and the DTP41 to calibrate the E-810, follow the instructions on page 3-26 for calibrating the DTP41 spectrophotometer.

TO CALIBRATE THE E-810 USING THE DTP41

1. **Launch ColorWise Pro Tools and connect to the E-810.**




For instructions on configuring the connection to the E-810, see *Getting Started*.

NOTE: If the connection to the E-810 from Command WorkStation that also allows for access to ColorWise Pro Tools is not established, you can directly launch ColorWise Pro Tools independently of Command WorkStation.

2. **Click Calibrator.**
3. **Select DTP41 as the measurement method.**

X-Rite DTP41 should appear as a measurement method. This information is provided to Calibrator by the E-810. If this option does not appear, make sure you are connected to the E-810.

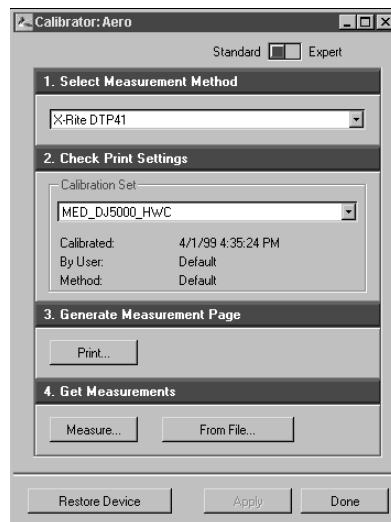

4. Under Check Print Settings, choose the desired calibration set.

Choose the appropriate calibration set for the type of media you will use most often.

NOTE: For this calibration to take effect, the calibration set must be associated with one or more output profiles. The default calibration set is already associated with the default output profile, so there is no need to make any new associations.

5. Under Generate Measurement Page, click Print.

6. In the Print Options dialog box, choose the Page Type, Paper Size, and Input Tray to use for the measurement page, and then click Print.

In the Page Type pop-up menu, select either 34 or 21 Sorted Patches.

In the Paper Size pop-up menu, the menu will automatically select LTR/A4 for 21 Sorted Patches or 11x17/A3 for 34 Sorted Patches.

In the Input Tray pop-up menu, specify the paper source.

**Print Options window for
DTP41 calibration
method**




7. Retrieve the measurement page from the copier.

8. Under Get Measurements, click Measure.

The selected Page Type and Paper Size options appear.


9. Click Measure.

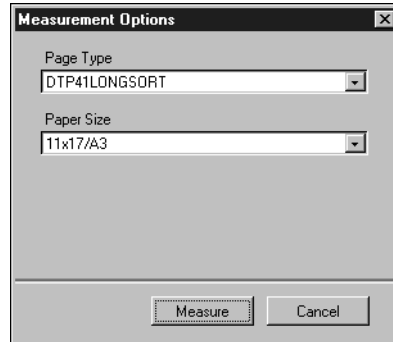

10. If necessary, select the appropriate COM port for the DTP41 from the Available Ports pop-up menu.

The Instructions field displays instructions for selecting the port.

Instructions field

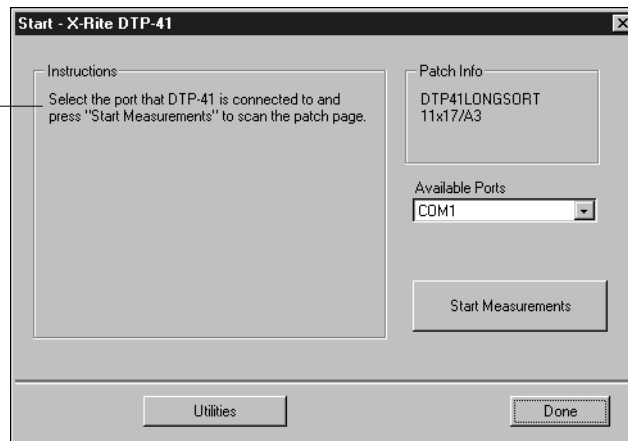


11. Feed the measurement page into the DTP41, starting with the cyan strip.


Align the page in the measurement page slot of the DTP41, so the appropriate color column is centered below the alignment mark (see the diagram on page 3-6). Insert the page about 3 inches, past the front idler rollers, until it rests against the rear drive rollers.

12. Click Read Strip.

The DTP41 pulls the measurement page through automatically.

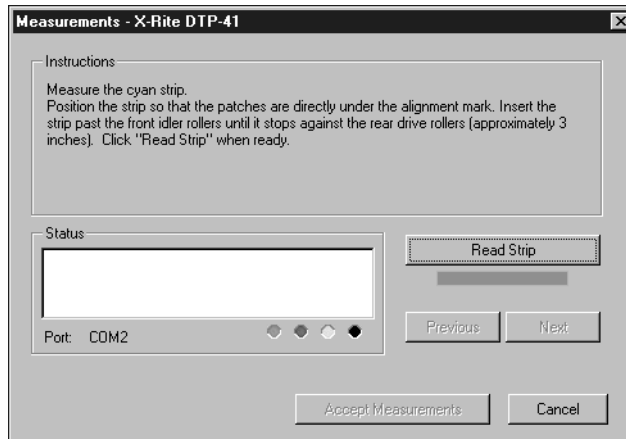**13. Once the measurement page is read, Calibrator instructs you to insert and align the page again for the next color. Repeat the measurement process for the magenta, yellow, and black strips.**

Status field indicates color was measured successfully

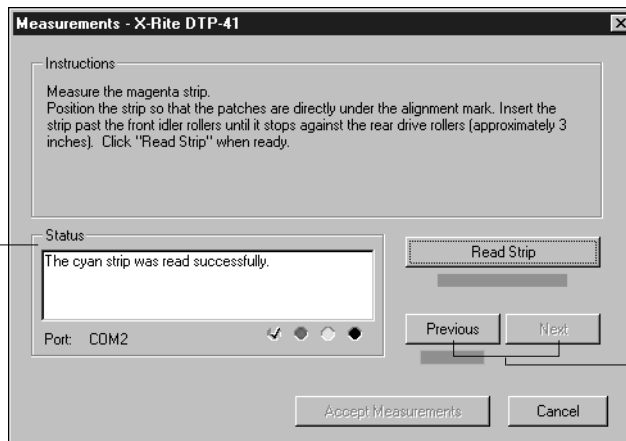


Previous and Next buttons let you advance or reverse to repeat a measurement


A check mark appears on the circle of the color just read, and the Status field indicates that color was measured successfully.

You can use the Previous and Next buttons on the Measurements window to reverse or advance to another step in the measurement sequence to repeat a measurement.


14. When the Status field indicates that all four color strips have been read successfully, click Accept Measurements.

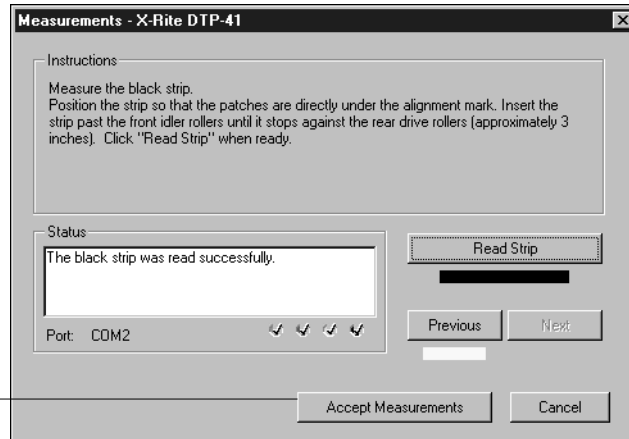

15. In the Measure dialog box, click OK.

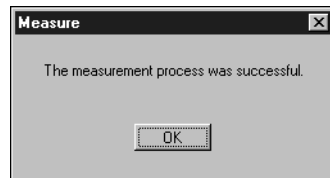


16. In the Calibrator dialog box, click Apply to implement the new calibration set.

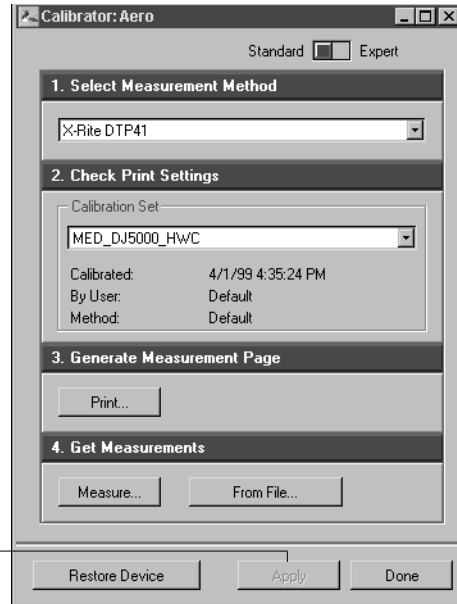

Click Apply


17. In the Information dialog box, click OK.

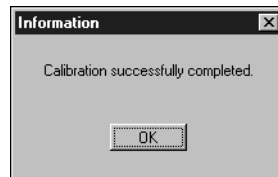

This completes the E-810 calibration process.


TO RESTORE DEFAULT CALIBRATION MEASUREMENTS

1. Launch ColorWise Pro Tools and click **Calibrator**.

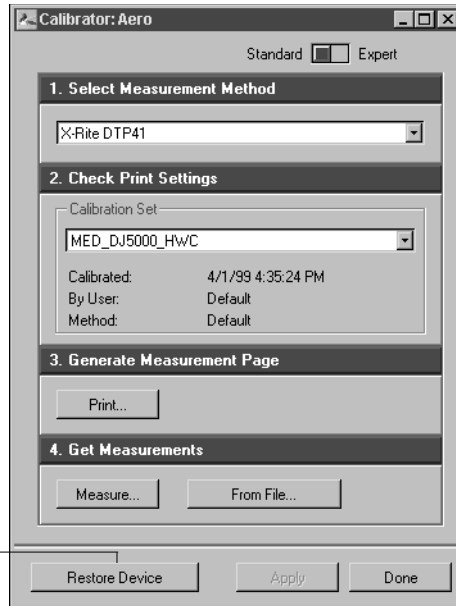

Click Restore Device

2. Click **Restore Device**.

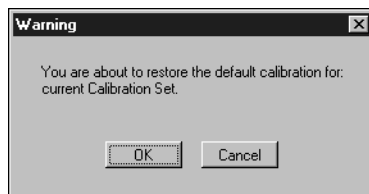

3. Click **OK** to restore the preset default calibration set.

NOTE: Restore device applies only to the currently selected calibration set.

Using a densitometer

ColorWise Pro Tools are designed to work with the X-Rite DTP32 reflection densitometer which feeds color measurements to the E-810 automatically.


NOTE: Measurements from other densitometers can be input using a simple ASCII file format (see page C-1).

Setting up the densitometer

Before you calibrate the E-810 using the X-Rite DTP32, you need to connect, configure, and calibrate the densitometer to prepare for measuring the printed patches (see “Calibrating the densitometer” on page 3-26). For additional information about setting up and using the DTP32, see the documentation included with it.

TO CONNECT THE X-RITE DTP32 TO THE COMPUTER


1. Turn off the computer.
2. Plug the square end of the interface cable (looks like a modular phone plug) into the I/O port on the side of the X-Rite DTP32.

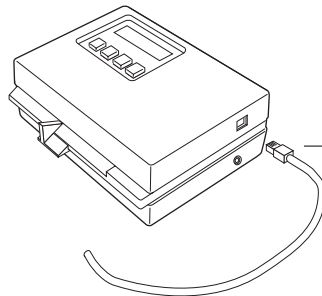


Square connector

3. Attach the connector to the computer.

For a Windows computer, insert the 8-pin mini-DIN end of the interface cable into the 9-pin DB9 Connector cable adapter. Insert the 9-pin end into the COM1 or COM2 port on the computer and tighten the screws. If the available port on your computer is 25-pin, you must use the 8-pin-to-25-pin adapter.

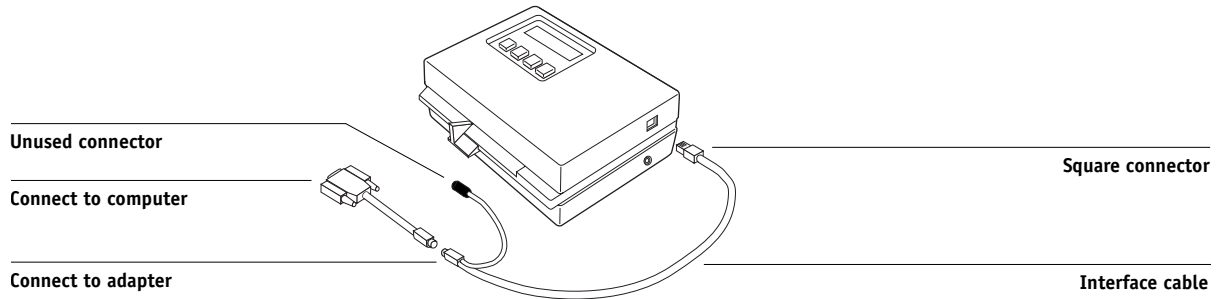


For a Mac OS computer, connect the 8-pin mini-DIN plug directly into the serial port of the computer.

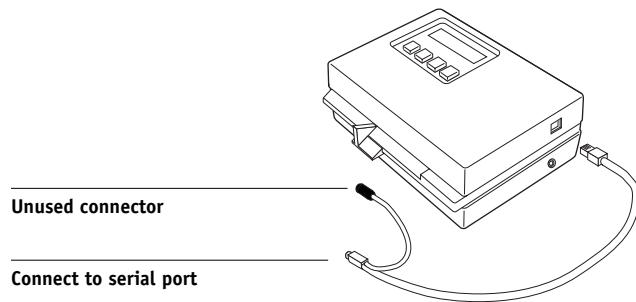

NOTE: For Macintosh computers with a USB port (for example, an iMac) you need an adapter to connect the DTP32 to your computer. See the X-Rite, Inc. web site (www.x-rite.com) for information on supported adapters.

4. Use the AC adapter to provide power.

Plug the small connector on the adapter cable into the side of the X-Rite DTP32 and plug the adapter into a wall outlet.

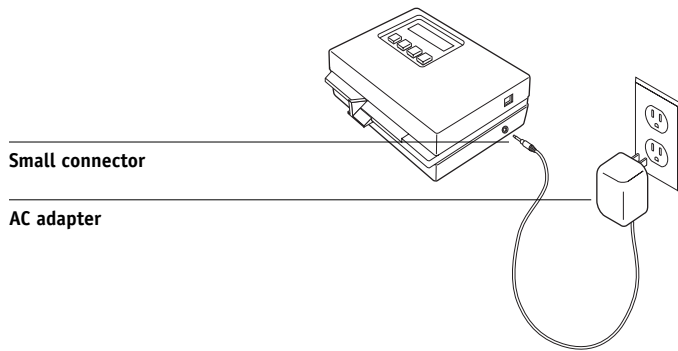

5. Turn on the computer.

6. Calibrate the densitometer (see below).

7. Use ColorWise Pro Tools to calibrate the E-810 (see page 3-27).

Calibrating the densitometer

You will need the black-and-white X-Rite Auto-Cal Strip included with the densitometer. Calibrating the densitometer does not require ColorWise Pro Tools.

TO CALIBRATE THE X-RITE DTP32

1. **Connect the densitometer to the computer and supply power (see page 3-23).**
2. **From the Main Menu on the X-Rite DTP32 display, press the p1 key once to reach p2.**
3. **Press the cal key.**

Calibrating motor speed is displayed, followed by the words INSERT CAL STRIP.

4. **Insert the arrow end of the X-Rite Auto-Cal Strip into the 35mm slot on the front of the X-Rite DTP32 until it stops or the roller starts pulling the strip.**

Reading appears momentarily, followed by the density values and CALIBRATION OK. The densitometer automatically returns to the MAIN MENU.

If UNRECOGNIZABLE STRIP appears, repeat the process or try cleaning the strip (see the X-Rite DTP32 Operating Manual).

5. **Start ColorWise Pro Tools and proceed to calibrate the E-810 (see the next section).**

Recalibrate the densitometer at least once per month. For critical color, calibrate the densitometer every time you calibrate the E-810. The densitometer may also warn periodically that it requires calibration.

Calibrating with ColorWise Pro Tools

Using the densitometer or AutoCal2, you can quickly measure color patches and download these measurements to the E-810 using ColorWise Pro Tools Calibrator.


NOTE: Multiple users can connect to one server with ColorWise Pro Tools, but only one user at a time can use Calibrator. An error message appears if you try to calibrate when another user is already using ColorWise Pro Tools to calibrate.

ColorWise Pro Tools for Windows and Mac OS computers are fundamentally the same; differences are noted in this chapter. The windows and dialog boxes you see illustrated are the Windows version.

NOTE: Changing the calibration has the potential to affect *all* jobs for *all* users, so you may want to limit the number of people authorized to perform calibration. An Administrator password can be set from the E-810 Control Panel to control access to calibration.

TO CALIBRATE THE COPIER USING CALIBRATOR

1. Launch ColorWise Pro Tools and connect to the E-810.

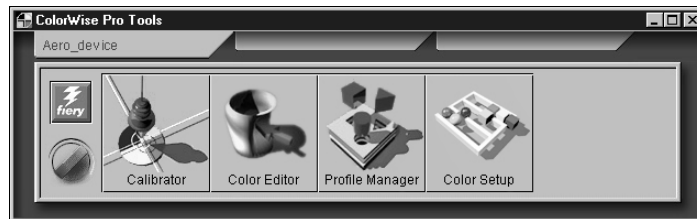


For instructions on configuring the connection to the E-810, see *Getting Started*.

NOTE: If the connection to the E-810 from Command WorkStation that also allows for access to ColorWise Pro Tools is not established, you can directly launch ColorWise Pro Tools independently of Command WorkStation.

2. Click **Calibrator**.
3. Select a measurement method.

AutoCal2, X-Rite DTP32, and X-Rite DTP41 should appear as the measurement methods. This information is provided to Calibrator by the E-810. If none of these options appear, make sure you are connected to the E-810.

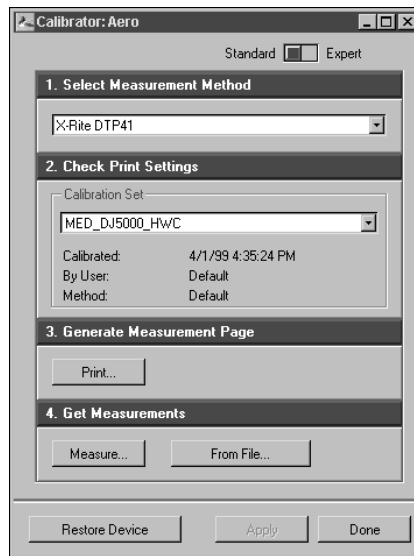

4. Under **Check Print Settings**, choose the desired calibration set.

If there is more than one option, choose the appropriate calibration set for the type of media you use most often.


NOTE: For this calibration to take effect, the calibration set must be associated with one or more output profiles. The default calibration set is already associated with the default output profile, so there is no need to make any new associations.

5. Under **Generate Measurement Page**, click **Print**.


6. In the Print Options dialog box, choose the Page Type, Paper Size, and Input Tray to use for the measurement page, and then click Print.

For AutoCal2, the Page Type pop-up menu states AutoCal Page. For the densitometer method, select either 34 or 21 Sorted Patches.


In the Input Tray pop-up menu, specify the paper source.

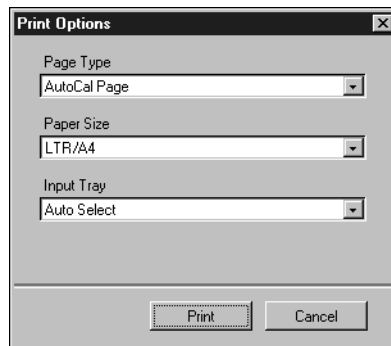


7. Retrieve the Measurement Page and click Cancel.
8. Under Get Measurements, click Measure.
9. If you chose the AutoCal2 method, follow the directions in the dialog box that appears for placing the Gray Scale strip and measurement page on the copier glass.

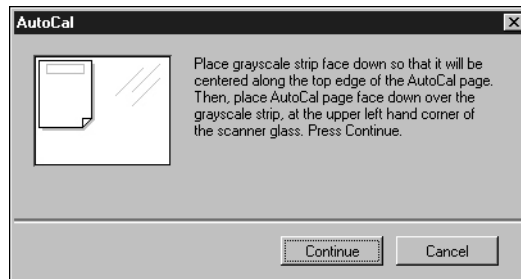

10. If you chose the DTP32 method, select the Page Type and Paper Size options you selected for the measurements page, and click Measure.

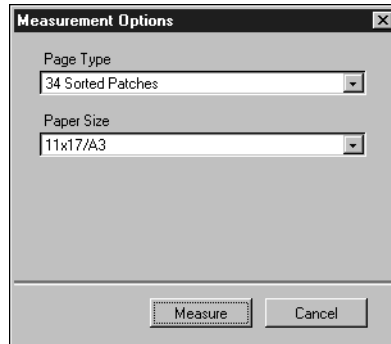

Follow the directions in the dialog box that appears for feeding the measurement page through the X-Rite DTP32.

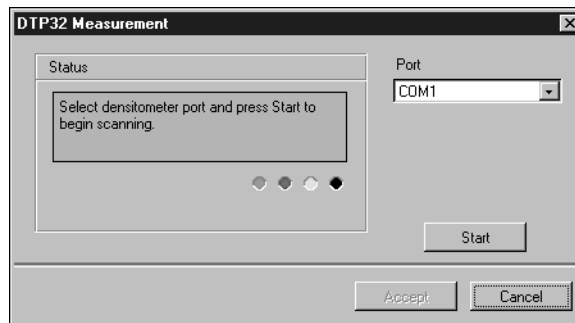


The Status field displays instructions for selecting the port and feeding the measurement page through the DTP32 four times, once for each color strip.

11. When the Status field indicates that the measurements were read successfully, click Accept.
12. In the Measure dialog box, click OK.
13. In the Calibrator window, click Apply to implement the new calibration set.
14. In the Information dialog box, click OK.

This completes the calibration process.

TO RESTORE DEFAULT CALIBRATION MEASUREMENTS

1. Launch ColorWise Pro Tools and click Calibrator.
2. Click Restore Device.

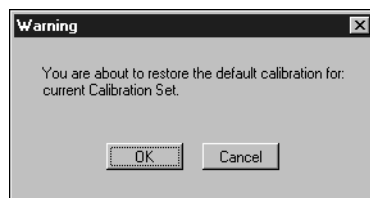


3. Click OK to restore the preset default calibration set.


NOTE: Restore device applies only to the currently selected calibration set.

Expert Mode


Expert Mode offers two additional options: Print Pages and View Measurements.

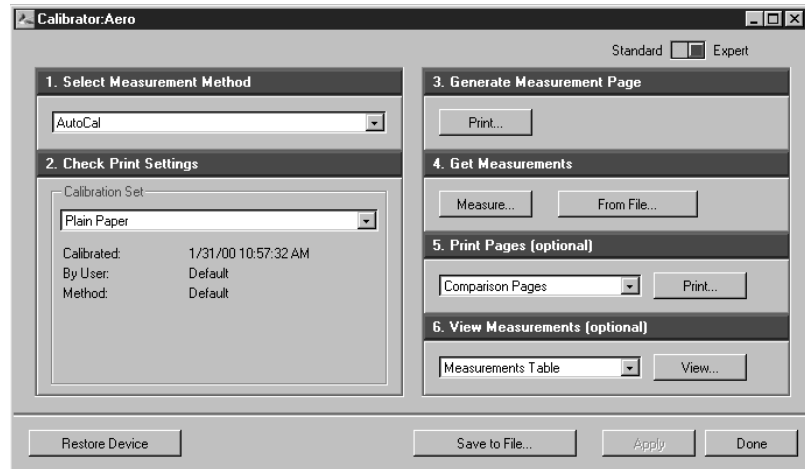

With the Print Pages option, you can print a calibration Comparison Page showing the results of the new measurements with any profile associated with the currently selected calibration set. You can also create a custom comparison page and save it as a PostScript or an Encapsulated PostScript (EPS) file called CALIB.PS. Then you can print the file to the Hold Queue of the E-810 from your application or download it to the Hold Queue with Fiery Downloader. In addition, you can create the CALIB.PS file by renaming any job in the Hold Queue using Command WorkStation.

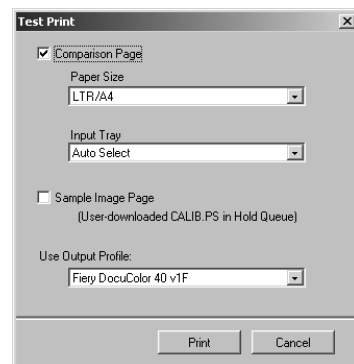

With the View Measurements option, you can view the current set of measurements as a table or as a graph that shows both the measurements and the target curves.

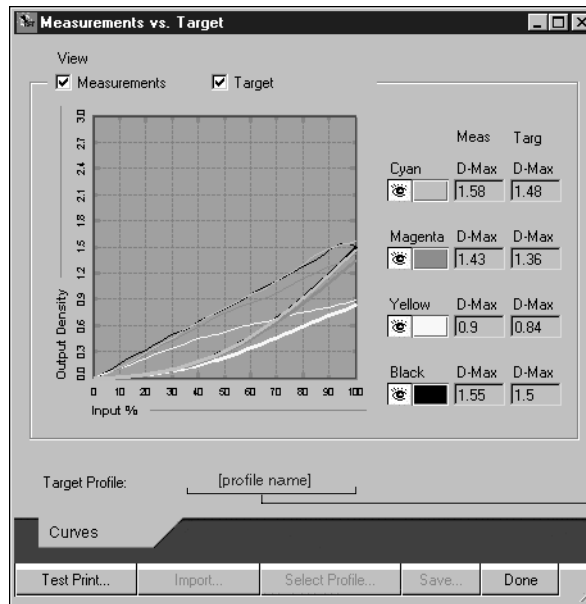

Output profile name
appears here

When more than one profile use the same target, an additional menu called Plot Against appears in the upper right of the window above. It lists all output profiles that use the same calibration set. Selecting an output profile from this menu displays the target curves associated with that profile. If each output profile contains a unique calibration target, when you switch profiles, the curves displayed also change.

Calibrating from the Control Panel using AutoCal2

You can calibrate the E-810 from the Control Panel using AutoCal2, which calibrates the E-810 using the copier's built-in scanner as a densitometer. If an Administrator password has been set, you will need it for calibration.

For instructions on using the E-810 Control Panel, see the *Configuration Guide*.
For troubleshooting during the AutoCal2 procedure, see the *Job Management Guide*.

NOTE: To calibrate using AutoCal2, you will need the Kodak Gray Scale strip included in the customer media pack that came with your E-810.

TO ACCESS AND USE AUTOCAL2

1. **At the Idle screen, press the Menu button to enter the Functions menu.**

2. **Choose Calibration, and choose Set Up Calibration.**

If a password is set on the E-810, enter it and press OK.

3. **For Calibration Mode, select Standard or Expert.**

Expert Mode adds the option to print a Comparison Page (see page 3-32).

4. **For Tray, choose the paper source for the patch page and press OK.**

5. **Choose Calibrate.**

6. **Select the calibration set.**

You can choose from the list of all calibration sets on the E-810. This screen appears only if more than one calibration set is available.


7. **When prompted, select Yes to print the measurement page.**

This page is comprised of swatches of color that will be measured by the copier and then compared to the target color values. After the page is printed, the Measure Page screen is displayed.

8. **Select Yes in the Measure Page screen.**

9. **When prompted on the Control Panel, place the Kodak Gray Scale strip face down along the top of the copier glass.**

Place the strip so that it is centered along the top edge of the AutoCal page.

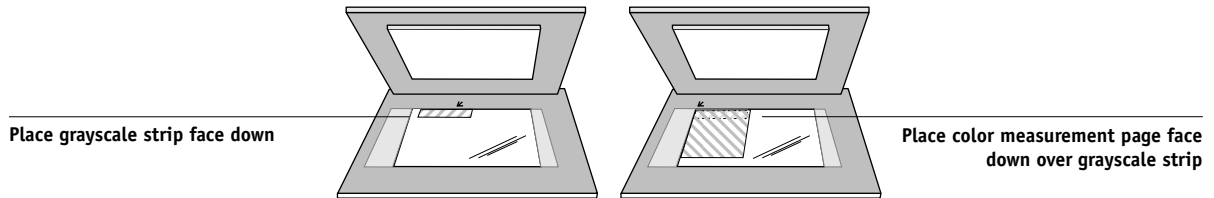

10. **Place the color measurement page face-down over the grayscale strip.**

Place the page at the upper-left corner of the copier glass. Slide the grayscale strip to the top center of the color measurement page. Make sure the patches on the grayscale strip do not overlap the color patches.

11. **Close the platen glass cover, being careful not to move the grayscale strip and color measurement page.**
12. **Click OK.**

Status messages display the progress of scanning and calculating measurements.

13. **When prompted to Print Comparison Page (Expert Mode only), select Yes to print a preview of the selected calibration.**

Select from a list of output profiles that use the same calibration set and press OK. This option appears only in Expert Mode calibration.

14. **When prompted to overwrite calibration, select Yes.**


15. **Select Yes to confirm.**

Status messages display progress information. When calibration is complete, the LCD screen returns to the Functions menu

Chapter 4: ColorWise Pro Tools

ColorWise Pro Tools include the following color management tools that give you flexible control of color printing:

- Calibrator (see Chapter 3)
- Color Editor
- Profile Manager
- Color Setup

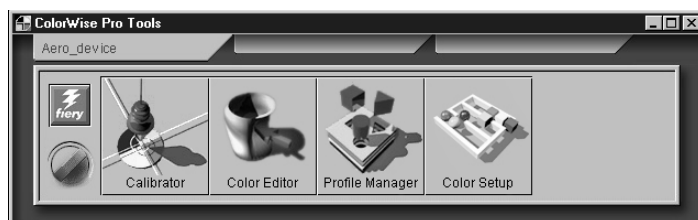

ColorWise Pro Tools for Windows and Mac OS computers are fundamentally the same; differences are noted in this chapter. The windows and dialog boxes illustrated are the Windows version. For information on installing and configuring a connection to ColorWise Pro Tools, see *Getting Started*.

NOTE: If the connection to the E-810 from Command WorkStation that also allows for access to ColorWise Pro Tools is not established, you can directly launch ColorWise Pro Tools independently of Command WorkStation.

Profile Manager

Profile Manager allows you to manage and edit ICC profiles. In the case of the E-810, these profiles are divided into RGB Source, Simulation, and Output profiles.

- **RGB Source** contains all monitor profiles resident on the E-810. RGB Source profiles are used to define the source color space for RGB colors processed by the E-810.

NOTE: If you use Photoshop 5.x, you can upload the profile for your selected working space to the E-810 and choose that as your RGB Source profile.

- **Simulation** contains printer profiles used to simulate another device on the E-810.

- **Output** contains copier profiles that describe the attached copier.

For more information on output profiles, see page 1-9.

NOTE: Changing the E-810 default profiles affects *all* jobs for *all* users, so you might want to limit the number of people authorized to use ColorWise Pro Tools by setting an Administrator password.

Several profiles are provided with the E-810, and you can create additional profiles as needed by modifying the existing ones. You can also download profiles listed below from any workstation to the E-810.

RGB Source:

- **sRGB (PC)**—source color space for a generic Windows computer monitor
- **Apple Standard**—standard source color space for Mac OS computer monitors with older versions of ColorSync
- **EFIRGB**—preset default setting for a E-810

Simulation:

- **SWOP-Coated**—United States press standard
- **Euroscale**—European press standard
- **DIC**—Japanese press standard

Output:

- **Fiery R7**—profile that describes the copier


NOTE: For more information on output profiles, see page 1-9.

Setting the default profiles

The default profiles are applied to all print jobs sent to the E-810, unless you override them using print options. Therefore, the defaults should be the most commonly used profiles.

TO SPECIFY A DEFAULT PROFILE

1. Launch ColorWise Pro Tools and click Profile Manager.

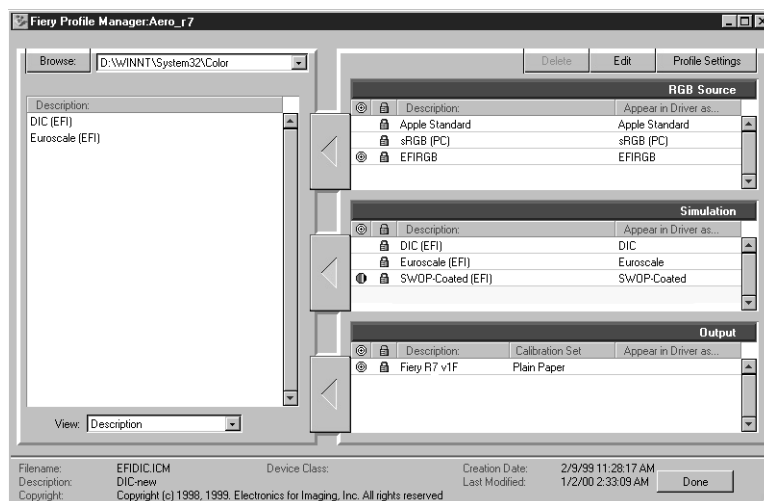


The left side of the screen lists the ICC profiles in the default directory of your computer. The right side lists each of the three types of profiles on the E-810.

The lock icon (🔒) to the left of a profile name indicates that the profiles cannot be deleted and can be edited only if it is saved under a new name. Only Simulation and Output profiles can be edited.

A small icon to the left of a profile name indicates the default profile for each category (RGB Source, Simulation, and Output). If you designate a different profile as the default, the icon appears next to your designated profile. The icon indicating the default RGB Source and Output profiles looks like a target (🎯). The icon indicating the default Simulation profile changes in appearance depending on whether the default RGB Separation setting is set to Simulation (🎯) or Output (🔴).

2. Select the profile you want as the default for a profile type, and click **Profile Settings**.
3. In the **Profile Settings** dialog box, click **Default** and click **Apply**.

Profile Settings dialog box for Simulation (left) and Output (right)

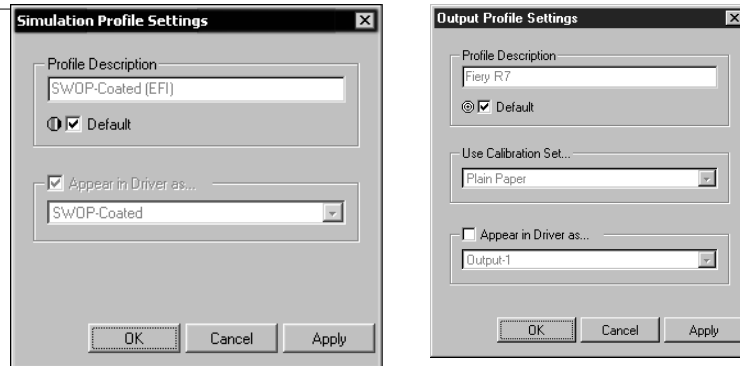

4. Click **OK**.

In the main Profile Manager window, the target icon appears next to the new default profile you specified.

5. Repeat steps 2 through 4 for each type of profile.

If no default is set for RGB Source, the RGB Source print option is set to None. If no default profile is set for Simulation, the CMYK Simulation print option is set to None. For more information on print options, see Chapter 1.

The Output profile always has a default profile. You can change the Output default by selecting a preset profile you want as the default and clicking Profile Settings. Or you can create a new default under a new name by selecting a preset profile and specifying your choice of the calibration set in the Use Calibration Set pop-up menu and a new name in the Profile Description menu.

Downloading profiles

The E-810 comes with default profiles. You can download additional profiles from any computer connected to the E-810.

TO DOWNLOAD A PROFILE

1. Launch ColorWise Pro Tools and click the Profile Manager.

The left side of the main Profile Manager windows lists the ICC profiles in the default directory of your workstation.


For Windows 9X/Me, the default directory is Windows\System:Color.

For Windows NT 4.0 and Windows 2000, the default directory is Winnt\System32:Color.

For Mac OS, the default directory is System Folder:Preferences:ColorSync Profiles for ColorSync 2.0, and System Folder:ColorSync Profiles for ColorSync 2.5 or later.

2. If the profile you want does not appear, click Browse to go to a different directory.

3. Browse to the directory containing the profile you want to download and click OK.

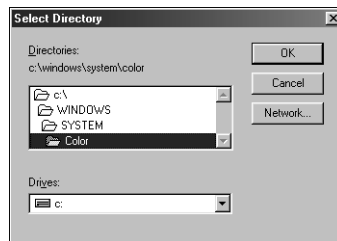

4. When the profile you want to download appears in the list in the main Profile Manager window, select it.

If the profile is compatible with the E-810, a green arrow indicates that the profile is available for download. Only output device profiles are downloadable to Simulation and Output. Only input device profiles are downloadable to RGB Source.



NOTE: On Windows computers, the profiles must have an extension of .icc or .icm to be listed. On Mac OS computers, the profiles must have a file type of profile.

All ICC profiles in the selected directory on your computer are displayed in the list in the main Profile Manager window. However, because a profile is listed does not necessarily mean it can be downloaded to the E-810.

Simulation profiles should be only profiles of devices for which you want the E-810 to match in terms of color output characteristics. Output profiles should be only profiles of the device to which your E-810 is connected. Although CMYK printer profiles can be downloaded as Simulation or Output, consider how they will be used. If you want the E-810 prints to look like another printer, download that profile as a Simulation. If you have a custom profile of the copier your E-810 is connected to, download that profile as an Output profile.

5. Click the arrow to download the profile, and click OK when the download is complete.

The new profile now appears on the list of profiles on the right side of the Profile Manager main window.

For Windows 2000 and Mac OS computers, this profile must be associated with one of the predefined names (Source-1 through Source-10 for RGB Source, Simulation-1 through Simulation-10 for Simulation, or Output-1 through Output-10 for Output) or set as the default before it can be used. For Windows 95/98, Windows NT, and Windows Me, all profiles can appear in the printer driver by their profile descriptions. See “Defining profiles” on page 4-8.

NOTE: When an output profile is downloaded, it inherits the calibration target of the current default output profile.

Editing profiles

You can customize the profiles on the E-810 to meet your specific needs and the characteristics of your copier using Color Editor, either directly or through Profile Manager. See “Color Editor” on page 4-11 for more information on editing profiles.

Managing profiles

Profile Manager lets you back up profiles to ensure that no custom profiles are lost when the E-810 software is updated. You can also upload a copy of a built-in E-810 profile to your workstation in order to use it with an ICC-aware application, such as Photoshop. Profile Manager also lets you delete unwanted profiles.

NOTE: You can back up and delete only those profiles that appear in the main Profile Manager window *without* a lock icon next to them. Locked profiles cannot be deleted, but most can be backed up.

TO BACK UP PROFILES

1. **Launch ColorWise Pro Tools and click Profile Manager.**

2. **Select the profile on the E-810 to upload.**

The arrow in the middle of the Profile Manager window turns green and points to the left, indicating the profile is available for upload.

3. **Click the green arrow, choose a name and location for the profile, and click Save.**

The name will be the file name of the profile, but the profile description will be the original description, or the one you entered in the Profile Settings dialog box.

NOTE: When saving the profile on a Windows computer, be sure to include the extension .icm. If the extension is not included, additional dialog boxes appear.

4. **Click OK when you are notified that the profile was successfully uploaded.**

Delete profiles to make sure no one uses the wrong profile and to free up disk space on the E-810 (although profiles are small and do not take up much space).

TO DELETE PROFILES FROM THE E-810 HARD DISK

1. **Launch ColorWise Pro Tools and click Profile Manager.**

2. **Select the profile you want to delete and click Delete.**

A Warning dialog box asks you to confirm deletion.

NOTE: You cannot delete preset profiles, profiles that are currently set as default, or profiles that are linked to any of the predefined custom names, for example Simulation-1.

3. Click Yes to delete the profile.

If you want to delete a profile currently set as the default or associated with a custom name, click Profile Settings and clear the default option.


Defining profiles

For Windows 2000 and Mac OS computers, before you can apply any downloaded or edited profile to a print job, that profile must be linked to one of the predefined custom names, or you can set the profile as the default for all print jobs (see setting default profiles, page 4-3). There are 10 names available for custom profiles—Source-1 through 10 for RGB Source, Simulation-1 through Simulation-10 for Simulation, or Output-1 through Output-10 for Output. For Windows 95/98, Windows NT, and Windows Me, all profiles appear by their actual names in the printer driver. These fixed names are used in the PPD, so you can select profiles per job even if your driver does not have the capability to obtain an updated list from the server.

NOTE: A custom simulation profile is used to illustrate this procedure. The same steps apply for defining custom or downloaded output profiles.

TO DEFINE A PROFILE

1. Launch ColorWise Pro Tools and click Profile Manager.

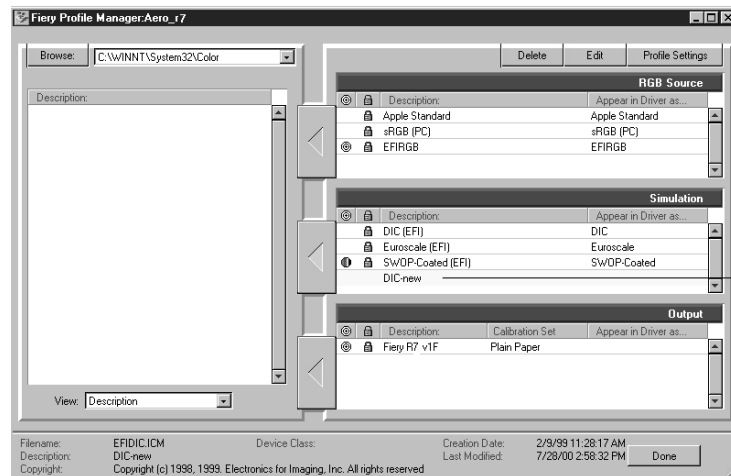

Custom profile
created with
Color Editor


For the purposes of this example, assume DIC-new is a custom simulation profile created with Color Editor. As you can see, no information is displayed for DIC-new under the heading “Appear in Driver as.”

2. **Select DIC-new in the Simulation list, and click Profile Settings or double-click DIC-new.**
3. **Select the “Appear in Driver as” checkbox, choose one of the predefined custom simulation names (Simulation-1 through Simulation-10) from the pop-up menu, and then click Apply.**

Make sure to choose a name that is not already linked with another simulation. If you try to define two profiles with the same name, you will get an error message.

For an output profile, the predefined custom names would be Output-1 through Output-10.


NOTE: While you cannot delete a preset profile, you can use the name of a preset profile name for your edited profile when you select the “Appear in Driver as” option. This replaces the preset profile with your own profile.

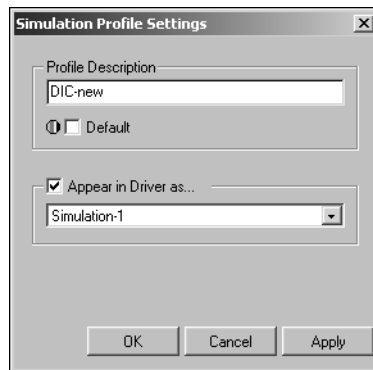

When you choose Profile Settings for an output profile, the Use Calibration Set option also appears. You must calibrate the E-810 with this calibration set before this option has any effect. If you have never measured for this calibration set, default measurements will be used. For more information about calibration sets, see page 3-2.

In Profile Settings, you can also change profile descriptions for all non-locked profiles.

4. Click OK.

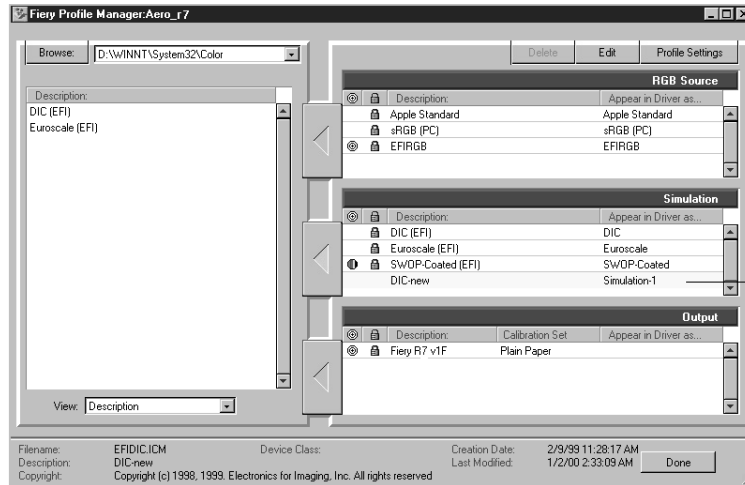

DIC-new will
appear in
driver as
Simulation-1

Simulation-1 now appears under the “Appear in Driver as” column for DIC-new. Choosing Simulation-1 from the CMYK Simulation option of the printer driver applies the DIC-new simulation to the print job.

If you do not define a custom simulation profile, your job will print with CMYK Simulation Profile set to None. If you do not define a custom RGB Source or Output profile, the default profile is used.

Color Editor

Color Editor allows you to customize simulation and output profiles. You can access Color Editor directly by clicking its icon in the ColorWise Pro Tools main window, or indirectly, through the Profile Manager.

Editing profiles

Color Editor allows you to create custom profiles by editing existing simulation or output profiles and saving the changes as a new profile. With Color Editor, you can fine-tune a profile on your E-810 to meet your exact specifications.

NOTE: You cannot edit source profiles; only simulation and output profiles can be customized.

Color Editor has two Edit Modes for editing output profiles.

- **Custom**—Edit output profiles and save customized versions of them.
- **% Density**—View the calibration target, which is one component of the output profile. You cannot make changes to the calibration target in this window, but you can import a new target (see page 3-2).

Color Editor also has three Edit Modes for editing simulations.

- **Master**—Create a custom *master* simulation that affects all print jobs to which it is applied, unless a linked simulation exists for the selected combination of simulation profile, simulation method, and output profile.
- **Quick** or **Full**—Create custom *linked* simulations. Linked simulations affect the print job only if the corresponding simulation profile, simulation method, and output profile are selected. If you choose an output profile and simulation method for which you have created a custom linked simulation, that simulation is applied automatically to the job. If you choose a simulation method or output profile for which there is no custom linked simulation, then the master simulation is automatically applied.


Quick applies one-dimensional transfer curves that adjust output density only, while Full provides a more complete and accurate simulation by applying colorimetric transformations that adjust hue as well as output density (see page 1-9).

NOTE: If you made edits to a master simulation after you created a linked simulation, the edits are not applied to the linked simulation.

TO EDIT A SIMULATION PROFILE IN MASTER MODE OR AN OUTPUT PROFILE IN CUSTOM MODE

1. **Launch ColorWise Pro Tools and click Color Editor.**
2. **Choose Simulation or Output from the View pop-up menu.**

Simulation lists the simulation profiles resident on the E-810, and Output lists the output profiles resident on the E-810.

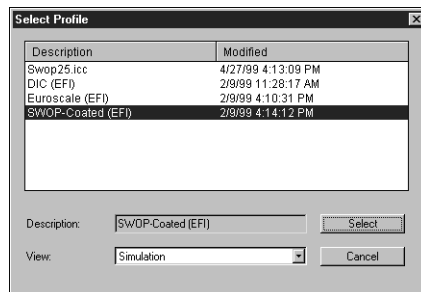


3. **Choose a profile to edit and click Select.**

NOTE: You can also open the Profile Manager, select a profile, and click Edit.

4. For a simulation profile, choose Master from the Edit Mode menu. For an output profile, choose Custom from the Edit Mode menu.

(See page 4-16 for instructions for using Quick or Full mode.)

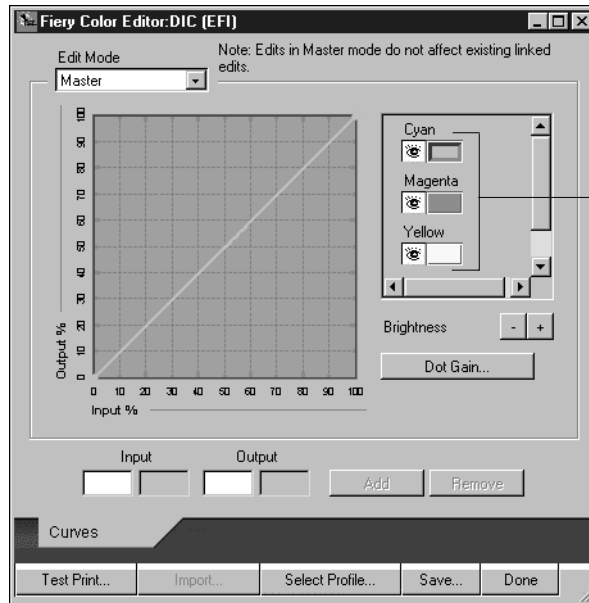

Eye icons indicate cyan, magenta, and yellow are visible and can be edited

You can use this dialog box to view or edit profiles. The graph allows you to view and manipulate color output values.


NOTE: When editing an output profile in Custom mode, the Import button at the bottom of the Color Editor window lets you import a calibration target file (.trg) created on another Fiery using the previous version of ColorWise. The current version of ColorWise does not allow you to save a target separately; rather, it saves the target in conjunction with an output profile.

5. Select the colors you want to edit by turning colors off and on.

The box with the eye icon to the left of each color indicates whether that color is visible on the graph and will be affected by changes to the curves, brightness, and dot gain controls. You can view and edit all four colors (cyan, magenta, yellow, and black) at once, or any combination thereof. Working with only one or two colors at a time helps you fine-tune your adjustments. To turn off a color, click its eye icon. In the example below, cyan and magenta are visible and can be edited.



6. Click Dot Gain to adjust the dot gain value for simulating press output.

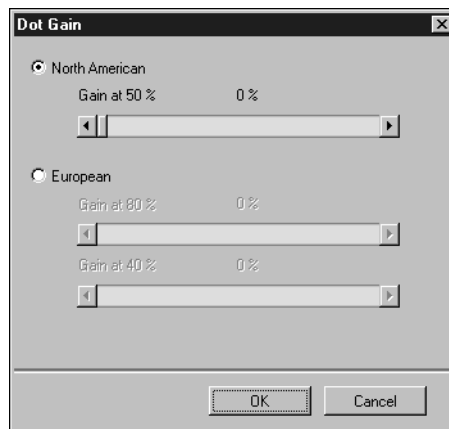

Choose either the North American or European standard. Then use the sliders to select the desired Dot Gain:

- The range of values for North American at 50% input are from 0% to 50% gain on output.
- The range of values for European at 40% input are from 0% to 59% gain on output; the range of values for European at 80% input are from 0% to 20% gain on output.

If you use Dot Gain values, you should apply the settings first so that the curves are deflected from their straight-line positions. Then make edits to the new curves. When you adjust Dot Gain values, all existing points on the curve are removed. A warning dialog box gives you the chance to cancel Dot Gain settings before they are applied.


7. Use the plus and minus buttons to adjust brightness.

Changes to the brightness are reflected in the curve(s).


8. You can adjust the curves directly by clicking and dragging points on the curve or by entering numbers into the input and output boxes.

The graph maps the input percentage to the output percentage. (These percentages refer to the size of the CMYK halftone dots.) The curve you selected appears, and points along the curve are marked so you can adjust them.


A curve with this shape makes a color appear lighter by reducing density in the midtones.

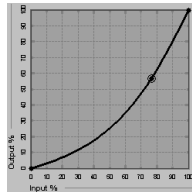

A curve with this shape makes a color appear darker by adding density in the midtones.

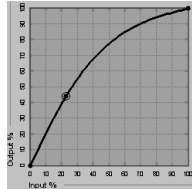

A curve with this shape increases contrast.

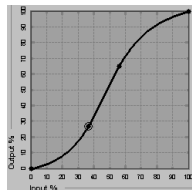

NOTE: You should adjust points in this way *after* you have entered the Dot Gain and Brightness values.

For greater precision, you can key in percentages in the Input and Output boxes or use the arrow keys on the keyboard to adjust the curve. To use the arrow keys, you must first click on the curve to establish an anchor point that serves as a reference.

9. For an output profile, you can set maximum densities of the C, M, Y, and K channels.

You can enter the maximum densities, called D-Max values, of individual colors for profiles that support density settings. D-Max settings are not available when editing Simulation profiles in Master mode.

10. When you are finished, click Save and enter a name for the new profile.

The new custom profile is saved to the E-810 with the new name. If you edit one of the press standard targets (for example, SWOP-Coated, DIC, or Euroscale), you may want to include the original name as part of the new target name (for example, DIC-new) to help you remember the source of the new target.

NOTE: Preset default profiles are locked and *must* be saved with a new name.

For Windows NT 4.0, Windows 2000, and Mac OS computers, custom profiles must be linked to one of the 10 predefined custom profile names (Simulation-1 through Simulation-10 for Simulation or Output-1 through Output-10 for Output) in order to be accessible from the printer driver. You can create as many custom profiles as you want, but a maximum of 10 are available from the printer driver at any one time. See “Defining profiles” on page 4-8 for information on linking custom profiles to the predefined custom profile names. If you are using the printer driver for Windows 95/98, custom profiles will appear in the driver window without being associated with a predefined profile name.

If you set a custom profile as the default, you can access it from the printer driver without linking it to one of the predefined custom names. Simply select “Printer’s default” from the printer driver.


TO EDIT A SIMULATION IN QUICK OR FULL MODE

- 1. Launch ColorWise Pro Tools and click the Color Editor.**
- 2. Choose Simulation from the View pop-up menu, choose the simulation profile to edit, and click Select.**

NOTE: You can also open the Profile Manager, select a simulation profile, and click Edit.

3. **Choose Quick or Full from the Edit Mode menu, and choose an output profile with which your edited simulation will be linked from the Link with menu.**

The edited simulation will be linked with the output profile you select from the “Link with” menu.

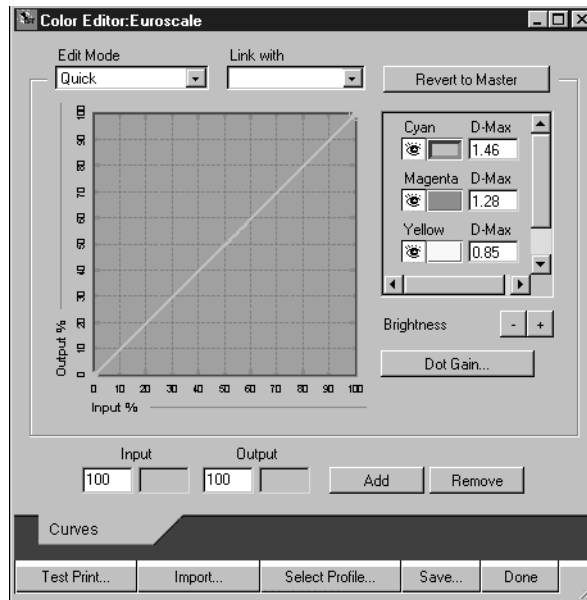

NOTE: When editing a simulation profile in Quick mode, the Import button at the bottom of the Color Editor window lets you import a custom Quick Simulation created on another Fiery using the previous version of ColorWise. The current version of ColorWise does not allow you to save custom Quick or Full Simulations independently; rather, they are saved as components of the same profile.

4. **Edit and save the simulation as described in the procedure (steps 5 through 10) starting on page 4-14.**

For this new simulation to be automatically applied to a print job, the CMYK Simulation, Simulation Method, and Output Profile settings must be the same as those used when you edited the profile. If the Simulation Method is different or a different output profile is selected, then the Master simulation is applied.

NOTE: A Simulation Profile can have a custom Master and one or more custom links—up to two links (Quick and Full) for each output profile on the system. (For the CMYK Simulation Profile option in the printer driver, note that if you select a custom profile for which the output ink percentage is greater than 0 and the input ink percentage is 0, the Use Master print option will have no effect.)

Undoing simulation edits


You can undo the changes you made to simulations (master and linked) in several ways:

- If you have not yet saved your edits, click Done on the Color Editor menu bar, and do not save the changes.
- If you saved your edits under a new simulation name and want to delete all edits (in Master, Quick, and Full modes) to the simulation, see page 4-7.
- If you saved your edits under a new simulation name and want to undo the edits to one or more linked simulation, use the following procedure.

TO UNDO EDITS MADE TO A CUSTOM LINKED SIMULATION

1. **Launch ColorWise Pro Tools and click either Color Editor or Profile Manager.**
2. **Choose Simulation from the View pop-up menu, choose the simulation for which you want to undo edits, and click Select (Color Editor) or Edit (Profile Manager).**


3. Choose Quick or Full from the Edit Mode menu and choose the output profile with which your unwanted edits are linked from the Link with menu.

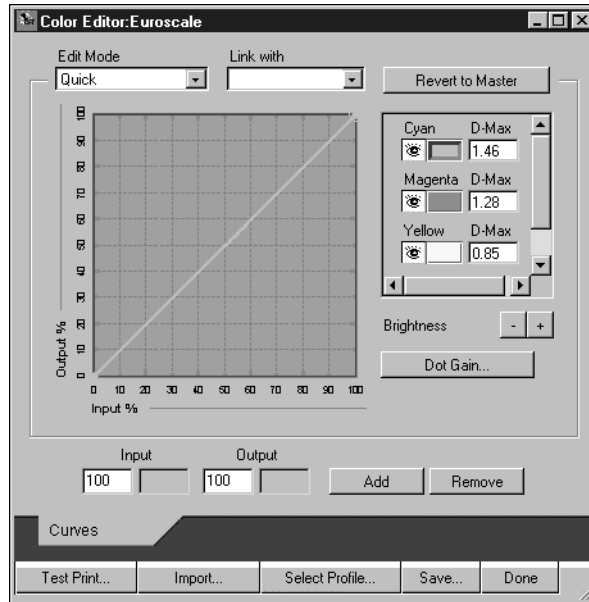


4. Click Revert to Master.

NOTE: Revert to Master makes the curves for one or more linked simulations match the last saved master simulation. If you have edited and saved changes to a master simulation, your linked simulations will revert to the changed master, *not* the original.

5. Indicate whether you want to revert the currently selected linked simulation only, or revert all links of this simulation profile, and click OK.

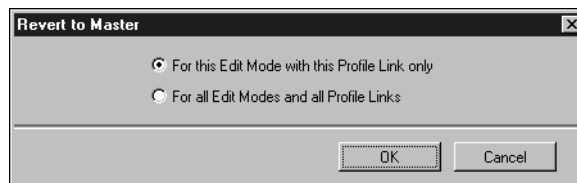

6. If you choose “For all Edit Modes and all Profile Links,” a warning dialog box appears. Click OK.

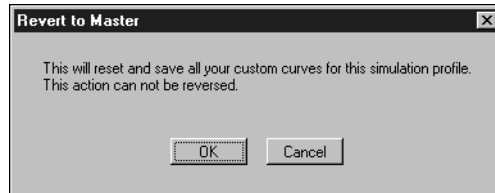

The curves for the linked simulation(s) now match the last saved master simulation exactly.

Checking edited profiles


You can view a printed sample of a profile before you save it to the E-810. To do so, print one of the following:

- Comparison Page provided with ColorWise Pro Tools, which shows a comparison of images and colored patches with and without edits
- User-defined CALIB.PS in the Hold Queue

You can create a custom comparison page and save it as a PostScript or Encapsulated PostScript (EPS) file called CALIB.PS and then print the file to the Hold Queue of the E-810 from your application or download it to the Hold Queue with Fiery Downloader (see page 3-32).

TO CHECK A PROFILE

1. Click **Test Print** from the **Color Editor** window.

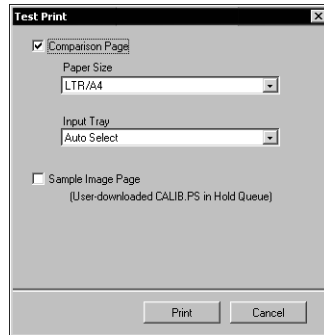

2. Select a page to print, specify the paper size and input tray (**Comparison Page only**), and click **Print**.

For Comparison Page, specify the paper size (LTR/A4 or 11 x 17/A3) in the Paper Size pop-up menu. In the Input Tray pop-up menu, specify the paper source.

Color Setup


Color Setup is used to set the default ColorWise settings for the E-810. To access Color Setup, click its icon in the ColorWise Pro Tools main window.

Setting default ColorWise options

Color Setup allows you to configure the default color management settings for the E-810. These settings are applied to all print jobs sent to the E-810, unless a user overrides them for an individual job by changing settings in the printer driver. These default settings can also be overridden using Command WorkStation or Fiery WebSpooler. Color Setup maintains a connection to the E-810, so changes made in Profile Manager appear automatically. In addition, the defaults set in Color Setup are automatically reflected in other E-810 tools that list default settings.

You can also reset the E-810 to its factory default settings by clicking the Factory Default button in the lower-left corner of the Color Setup window.

The options in Color Setup are arranged in a pattern representing the flow of color processing that takes place on the E-810.

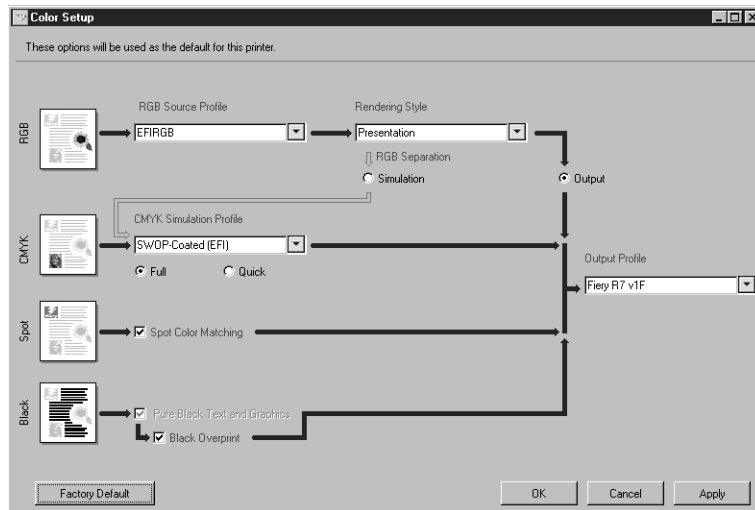

For those color options that offer multiple choices, click the down arrow and make your selection from the pop-up menu that appears. For RGB Separation and CMYK Simulation Method, make your selection by selecting the appropriate radio button. Other options are selected simply by selecting a checkbox next to the option name. Once you have made your changes, you must click OK or Apply for the changes to take effect. Clicking OK sets the new defaults and closes the Color Setup window. Clicking Apply sets the new defaults and keeps the Color Setup window open. Clicking Cancel closes the Color Setup window without applying any changes to the default settings.

For most users, the factory defaults result in optimal color output.

Chapter 5: Working with Color in Applications

This chapter provides guidelines for defining colors in your documents to produce the results you want. The following topics are covered:

- Factors affecting how you work with color
- Choosing colors in applications that rely on **GDI** or **QuickDraw** to communicate data to the printer driver, such as presentation and word processing applications
- Choosing colors in applications that have the ability to write their own PostScript, such as some page-layout, illustration, and pixel-editing applications

Working with color

The two main factors that influence how you work with color in the creation of documents are the application you use and the final print device. Applications vary in the methods they provide for choosing colors and in the way they transmit color data to the print device.

- **Office applications**, such as presentation software, spreadsheets, and word processing programs, use the RGB color model. They typically transmit only RGB data to the print device.
- **Illustration applications** use both the RGB and CMYK color models but typically transmit only CMYK data to the print device.
- **Pixel-editing applications** use both the RGB and CMYK color models. They also transmit both RGB and CMYK data to the print device.

The type of printing you plan for the document—short-run color printing on the E-810 versus color proofing for eventual printing on an offset press—determines the way you define colors in addition to the print option settings you choose.

- For short-run color printing on the E-810, use any application and define colors in either RGB or CMYK. If your application supports it, you can also choose colors from the PANTONE color library. Placed images may be limited to the RGB color space. Choose the appropriate settings for print options affecting color output (see page 1-1).

- For color proofing, use an application that writes its own PostScript and define colors in RGB, CMYK, or choose colors from the PANTONE color library. Placed images can also be defined in RGB or CMYK. Choose the appropriate settings for print options affecting color output (see page 1-1).

NOTE: The E-810 allows you to use RGB or CMYK data when printing proofs for an offset press run. However, sending data to an **imagesetter** most often requires CMYK data.

Color reference pages

E-810 user software includes several types of color reference pages that let you see the range of colors that can be printed on your copier. For predictable color, use the color reference pages when defining the colors in your document.

- RGB Color Reference—a Microsoft Word file and a Microsoft PowerPoint file that let you view the colors available in the standard palettes of office applications and see how those colors print on the E-810 (see page 5-4).
- CMYK Color Reference—an 11-page downloadable PostScript file of CMYK color patches (see page 5-6).
- PANTONE Coated Color Reference—a 19-page downloadable PostScript file of color patches showing CMYK equivalents of PANTONE Coated colors. This file prints differently depending on the setting of the **Spot Color** Matching option (see page 5-6).

In addition, you can print RGB, CMY, and PANTONE color charts from the E-810 Control Panel.

Office applications

The E-810 must receive PostScript instructions to print an image or a document. Many applications do not create these PostScript instructions, relying on the printer driver to create them. Included in this category are most word processors, spreadsheets, and presentation applications. These applications use Windows Graphics Device Interface GDI to display and print when running Windows, and Apple QuickDraw to display and print when running Mac OS. We refer to these GDI and QuickDraw applications as “office applications.”

All office applications handle color similarly, using the same RGB color model used for the color monitor display. Most office applications allow you to choose colors from a palette of preselected colors; some allow you to add new colors to the palette using a color picker. Although some applications allow you to specify color using the CMY, HSL, and HSV color models, these applications always send RGB color data to the E-810. (An exception to this is a CMYK EPS file placed in the document, which is sent as CMYK data.)

When working with color in office applications, keep in mind that:

- The range of colors that can be displayed in RGB on your monitor is much larger than the range of colors that can be printed on your copier. When you print the document, out-of-gamut RGB colors are mapped to colors your copier can produce.
- Office applications send only RGB data to the E-810. You control the rendering style of the color conversion with your selection of a CRD.


Each CRD uses a different color rendering style, and therefore has a different way of mapping unprintable colors to the color gamut of your copier. E-810 color rendering styles are described on page 1-4.

Choosing colors in office applications

Two RGB color reference pages, a Microsoft Word file and a Microsoft PowerPoint file, are provided with your E-810 user software. Print these files using different CRDs to see how the colors appear when printed to the E-810. For best results, print the color reference page using the same print options you plan to use for your final document. Select the colors you want to use from the printed version of the RGB color reference page, and then use those colors in your document.

RGB Color Reference

Print this page to use for reference when designing files for printing.

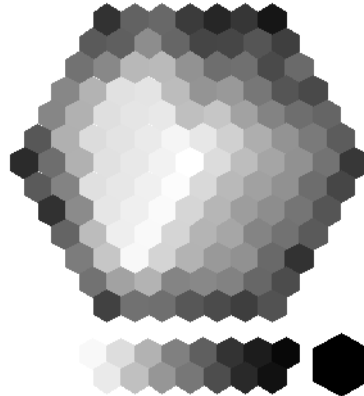

RGB Color Reference (Microsoft PowerPoint)

PostScript applications

Most applications used for illustration, pixel editing, and page layout can create the PostScript information they send to PostScript copier or save in PostScript files. Illustrator, Photoshop, PageMaker, QuarkXPress, and Macromedia FreeHand are all PostScript applications.

PostScript applications work with color in many different ways. Most allow you to choose process colors (by entering percentages for cyan, magenta, yellow, and black), in addition to **named colors** from a custom color system, such as PANTONE. When you print composites, these applications send process-color equivalents for named **spot colors** to the copier. In some applications, you can also choose colors using the RGB, HSB, HSL, or other color models.

Generally, PostScript applications send color information to the E-810 as CMYK data. An exception to this is an RGB image placed in the document, which is sent directly to the E-810 (unless you specify special color management settings in the application.) In addition, some PostScript applications that allow you to define colors in RGB or other color models can also send data to the E-810 in those color spaces.

Color controls in PostScript applications are typically designed for printing on an offset press, and some adjustments are required for printing to the E-810. Displayed versions of colors you choose in these applications may not match E-810 output exactly, and named colors may not print accurately on the E-810, since these colors typically require custom inks.

Choosing colors in PostScript applications

With PostScript applications, you can create colors using any of the color models supported by the application. All PostScript applications support CMYK; some also support RGB and other color models based on monitor display values. PostScript applications also allow you to choose named colors using one or more color libraries, such as PANTONE (see page 5-6).

You should use swatch color matching to ensure predictable color printing results with the E-810 or to match the E-810 color output to colors produced by other print devices.


Swatch color matching

E-810 user software includes several color reference pages (see page 5-2). By choosing colors from these reference pages, you can ensure that you get the same color from your copier. For best results, calibrate the E-810 before printing the reference pages.

NOTE: Swatch color matching does not match *monitor* colors to printed colors. For this, you must use a color management system and calibrate your monitor.

Using the CMYK Color Reference

The CMYK Color Reference included with your E-810 user software lets you see how various cyan, magenta, yellow, and black combinations look when printed on your copier.

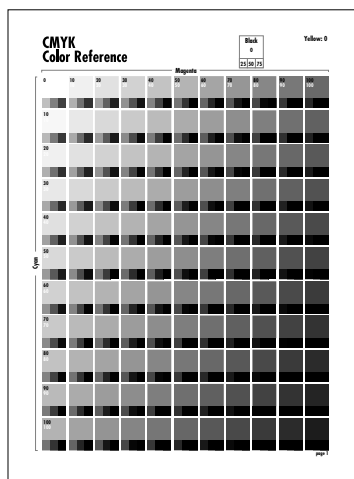

CMYK Color Reference

To print the CMYK Color Reference, download the file to the E-810. The printed pages display groups of color patches in graduated combinations of yellow, magenta, and cyan, and smaller patches that include 25%, 50%, and 75% black. Refer to these pages to pick colors and specify process color values in your application. For the location of the file on the User Software CD, see *Getting Started*.

PANTONE Coated Color Reference

The PANTONE Coated Color Reference included with your E-810 user software can help ensure predictable results with colors chosen from the PANTONE color library.

The information printed by the PANTONE Coated Color Reference depends on the setting of the Spot Color Matching setting.

- **On**—Prints swatches of the closest equivalents of PANTONE colors your copier can produce. The equivalent PANTONE color name/number is printed below each swatch.
- **Off**—Prints swatches of the CMYK equivalents of PANTONE colors as defined by PANTONE. (These are the same CMYK values defined in applications that include PANTONE libraries.) The CMYK values used to produce the color, as well as the PANTONE color name/number, are printed below each swatch.

To print the PANTONE Coated Color Reference, download the file to the E-810. (For the location of the file on the User Software CD, see *Getting Started*.) If the default Spot Color Matching setting on the E-810 is not the setting you want to use for printing the PANTONE colors, download the file to the Hold queue. Then use Fiery WebSpooler, Fiery Spooler, or Command WorkStation to override the Spot Color Matching setting.

Default output profile

The default output profile consists of both a profile for your copier, describing its color characteristics, and a calibration target that describes the expected behavior of the copier. For more information on output profiles, see page 1-9.

In certain cases, you may want to customize the default output profile to achieve particular color effects (see page 4-11). When you do so, the new customized output profile is applied to all data in the print job. You can also use ColorWise Pro Tools to download your own output profile to the E-810 (see page 4-5). Downloaded output profiles are at first associated with the default calibration target.

CMYK simulation

If you use the E-810 to print proofs for an offset press job or simulate another print device, choose the appropriate CMYK Simulation Profile and CMYK Simulation Method print option settings (see page 1-8).

Chapter 6: Office Applications

The E-810 ColorWise color management system provides complete color management for jobs printed from office applications. This chapter provides instructions for printing color documents from **GDI** and **QuickDraw** applications such as presentation, spreadsheet, and word processing programs. You can use these instructions with the Microsoft Office applications.

Working with office applications

Before printing from these applications, make sure the appropriate printer driver and the E-810 PPD are installed on your computer, as described in *Getting Started*.

Defining colors

Office applications use the RGB color model. For instructions on defining colors, see “Choosing colors in office applications” on page 5-4.

The only way to use CMYK or PANTONE colors is to define them in EPS files with an illustration or page layout application, and then place these files into office documents. Colors in EPS files are preserved until they reach the E-810 (assuming no PostScript Color Management information was included.)

Office applications lack finesse when displaying EPS files, so use these files only if RGB colors are not practical in your specific workflow. EPS files are also useful when using large or complex images that need to be printed at full resolution or cannot fit some Microsoft Office configurations with limited memory.

Working with imported files

Although your application may allow you to import a variety of file formats, EPS files are recommended for all raster images you want to import; some applications have printing problems when using file formats such as TIFF and PICT.

NOTE: You may have to perform a “custom install” of your office application if you are unable to import EPS elements.

Although there are no color management options within office applications, color conversions do occur when you import images or page elements that were not defined in RGB. To avoid such conversions with imported files, use the EPS file format for artwork that is to be imported into office applications.

All RGB images placed in a document are affected by RGB Source and Rendering Style settings.

Tip for advanced users

If you place multiple RGB images, mixed non-photographic and photographic, a single CRD may not be suitable for all the images. In this case, you may want the photographic images to bypass the CRD altogether. To accomplish this, save the image in CMYK mode with a pixel-editing application such as Photoshop, and perform color correction. Save the image as a Photoshop EPS and import it into the document.

Selecting options when printing

There are few differences among office applications with regard to E-810 printing. The instructions in this chapter apply to all office applications. Use the instructions in Chapter 1 to specify print options and color management settings. To specify these options, you must use a PostScript Level 2 (or later) printer driver, such as an Adobe PostScript Printer Driver.

Because office applications send RGB data to the E-810, your choices of RGB Source and Rendering Style settings are important. Be sure to specify the appropriate CRD for the color effect you want (see “Rendering styles” on page 1-4).

Output profiles

All color data in the job is affected by the output profile on the E-810. This profile may be the one designed for your copier and shipped with the E-810, or it may be a custom profile created at your site (see page 1-9). If necessary, print the Test Page to see which profile is currently resident on the E-810.

Chapter 7: Adobe Photoshop

This chapter covers features of Adobe Photoshop versions 6.x and 5.x for Windows and Mac OS. The illustrations show only Mac OS dialog boxes, but the information and instructions apply equally to the Windows version of Photoshop.

Photoshop 5.x

Because Photoshop 5.x uses a sophisticated color management system, there are several setup steps you should take before you begin working. These steps include:

- Calibrating your monitor
- Adjusting Photoshop color settings
- Setting ColorSync defaults (Mac OS only)

For information on monitor calibration and color setup in Photoshop (version 5.02 or later), open the Adobe Color Management Assistant (Mac OS) or Adobe Color Management Wizard (Windows) by choosing Help>Color Management. (See your Adobe Photoshop 5.x documentation or the Adobe Technical Guidelines for Photoshop at www.adobe.com.)

Photoshop 5.x color settings

The settings you select in the Photoshop 5.x control panel and three setup dialog boxes control how color is managed when you open and save RGB and CMYK images. You should calibrate your monitor using the Adobe Gamma control panel and specify settings in the Photoshop's Profile Setup, RGB Setup, and CMYK Setup dialog boxes before you begin working with images in Photoshop.


NOTE: The Adobe Gamma control panel performs similar functions on both Windows and Mac OS computers.

Adobe Gamma control panel

You can use the Adobe Gamma control panel to create and customize ICC profiles for your monitor. Photoshop properly displays images on your monitor by compensating between your chosen working space (see the following section on RGB Setup) and the description of your monitor defined by its profile. If you do not create a profile in the Adobe Gamma control panel that corresponds to your monitor, you may encounter poor monitor-to-print matching.


NOTE: If a profile for your particular monitor is not available, use the Adobe Gamma control panel setup Assistant (Wizard on Windows) to customize an available profile that *at least* has the same type of phosphors as your monitor.

Display the Adobe Gamma control panel by double-clicking its icon in either the Windows or Mac OS Control Panel. If you have not yet selected your monitor profile or want to customize your current profile, click the Assistant (Wizard on Windows) button.

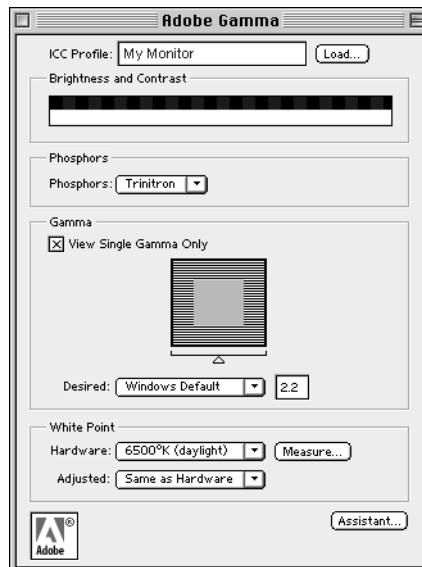

Profile Setup

From the Photoshop 5.x File menu, choose Color Settings>Profile Setup.

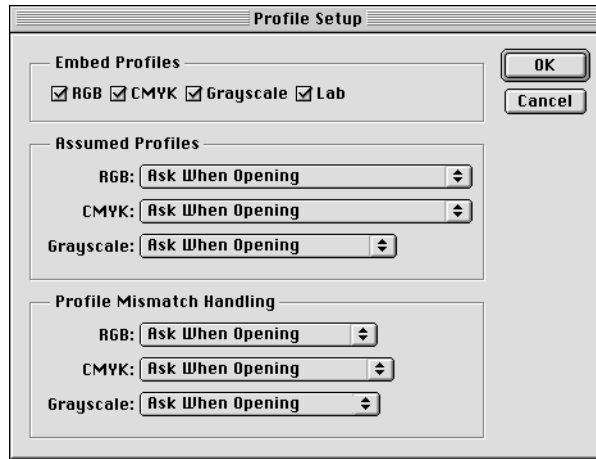

In the Embed Profiles area, select all boxes to embed the appropriate ICC profile when saving a file. By embedding a profile during the saving process, Photoshop can link a color space (working space) definition with that file for future use. When you open an image that already contains a profile, Photoshop can alert you as to which color space the file was saved in. Be aware that you should avoid conversions between color spaces as much as possible (each conversion results in loss of color information).


In the Assumed Profiles area, choose Ask When Opening from the RGB and CMYK menus. When you open files that do not contain an ICC profile, you can convert the file to your current Photoshop working space setting or leave the file unconverted—the preferred choice, but make sure the current Photoshop working space setting matches the intended color space of the image.

In the Profile Mismatch Handling area, choose Ask When Opening from the RGB and CMYK menus. When you open a file containing an ICC profile that does not match your current Photoshop working space setting, you have the choice to convert from the embedded profile or not. If you want to preserve the color integrity of the source image, do not convert. When you open the image, immediately go to RGB or CMYK Setup to specify the working space for the image. If your working space is set to your output device, you may want to convert.

RGB Setup

Photoshop 5.x allows you to simultaneously use two RGB spaces, one for the monitor and one for the Photoshop RGB working space. The monitor RGB space setting does not affect the image data in the file; it affects only the way the image is displayed on the monitor. Even if an RGB image has been prepared with different monitor settings, it is still correctly displayed on your monitor, without changes to the original values in the file.

From the Photoshop 5.x File menu, choose Color Settings>RGB Setup.

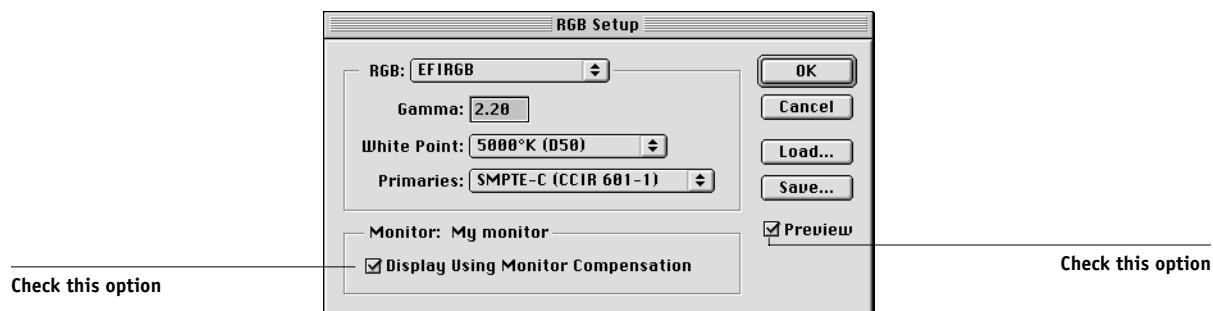

From the RGB menu, choose your current Photoshop RGB color space, which should reflect the color space of most RGB files you will be opening. If you create new RGB files or you want to standardize your RGB files, choose EFIRGB.


Click Load if the file is not visible in the RGB pop-up menu. You can load the Calibrated RGB setup file, EFIRGB ICC ColorSync file, or EFIRGB.ICM file. All describe the same RGB space and automatically set the Gamma, White Point, and Primaries. You may consider sRGB if you usually view images on a generic PC monitor, or if you rely on a Windows operating system to manage color on your monitor. If you choose sRGB as a working space, make sure to print with the E-810 RGB Source option set to sRGB.

NOTE: EFIRGB is set as the default RGB Source color space on the E-810. No matter what RGB space you select, make sure it is available on the E-810. For more information on downloading RGB Source profiles to the E-810, see Chapter 4.

The Monitor area shows the currently selected profile in the Adobe Gamma control panel. Select both the Display Using Monitor Compensation and Preview options.

CMYK Setup

From the Photoshop 5.x File menu, choose Color Settings > CMYK Setup.

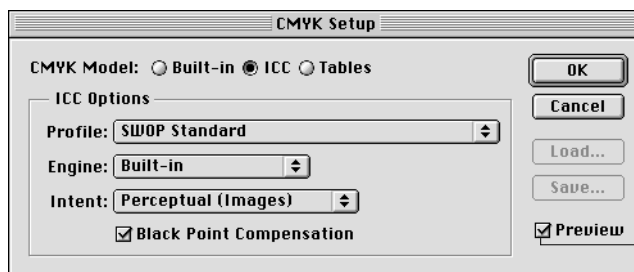

Check this option

Select the Preview option. For CMYK Model, select ICC. Previous versions of Photoshop used Photoshop Separation Tables, and you can load them for Photoshop 5.x. However, you will get better results using ICC profiles and the built-in color management system.

In the ICC Options area, choose from the Profile, Engine, and Intent menus.

- For Profile, choose your final output copier ICC profile. Prepress users should choose an ICC describing their target press, such as SWOP. Office users should choose the ICC profile describing the copier connected to the E-810. In this case, we recommend you leave images in RGB and allow the E-810 to convert them to CMYK. However, if you want to use Photoshop to convert RGB images to the CMYK color space of the E-810, you must first upload one of the output profiles from the E-810 to your computer (see page 4-7), and then select it in Photoshop CMYK Setup. The output profile for the E-810 is also available on the User Software CD (see *Getting Started*).


NOTE: With the RGB Separation feature of the E-810, you can preview (print) your conversions from RGB to any simulated CMYK space by downloading the desired target profile to the E-810. For more information about downloading profiles, see Chapter 4.

- For Engine, choose Built-in so the Photoshop engine will be used.
- From Intent, choose Perceptual (Images), which is appropriate for photographs normally edited in Photoshop. The Intent setting is used only when you convert between color spaces.

It is often better to select the Black Point Compensation option. With many ICC profiles, this check box has no effect. However, when it does, it has a dramatic effect on the dark areas of your image. If you want this effect, leave Black Point Compensation; if not, clear the selection.

ColorSync defaults

You should have ColorSync 2.5.x or later installed on your Mac OS computer. The ICC profiles used by ColorSync are saved in System Folder:ColorSync Profiles. From the Apple menu, choose Control Panel>ColorSync.

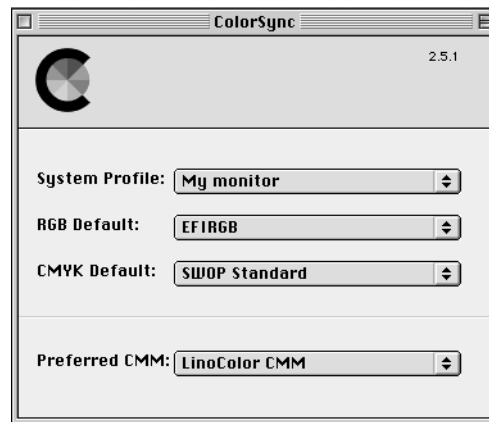

Use the following settings:

- **System Profile**—choose the customized ICC profile for your monitor. Set up the Adobe Gamma profile to ensure that your monitor profile is present (Mac OS only).
- **RGB default**—choose the same RGB working color space you set in Photoshop 5.x.

NOTE: The System Profile is the same one used in your monitor calibration and your Monitors and Sounds control panel.

- **CMYK default**—choose the same CMYK color space you set in Photoshop 5.x.
- **Preferred CMM**—choose LinoColor CMM (both ColorSync 2.0 and Microsoft ICM 2.0 are based on this color management module).

Defining colors


You can choose colors in Photoshop with various color models, including HSB, CIE Lab, RGB, and CMYK. You can also choose named colors from the PANTONE Coated color library. For best results, use the color definition methods described in Chapter 5.

Saving files for importing into other documents

Before saving a file, perform any rotating, cropping, and resizing needed. This speeds processing when printing from the application in which the image is placed.


We recommend you use EPS or TIFF file formats to save RGB images that will be imported into other documents and printed to the E-810. You can import EPS and TIFF files into virtually all page layout applications.

NOTE: Although TIFF files display better when imported into other applications, their color and resolution characteristics may be altered by the application into which they are imported. EPS files are unaffected.

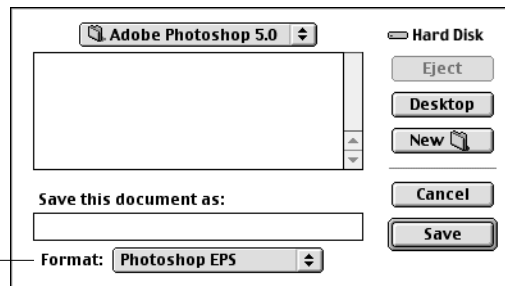

Choose Photoshop EPS or TIFF

In the EPS Options dialog box, choose binary encoding and do *not* select PostScript Color Management (see the following section for more information on PostScript Color Management). Do *not* include transfer functions or halftone screens. A TIFF preview is compatible with both Windows and Mac OS computers.

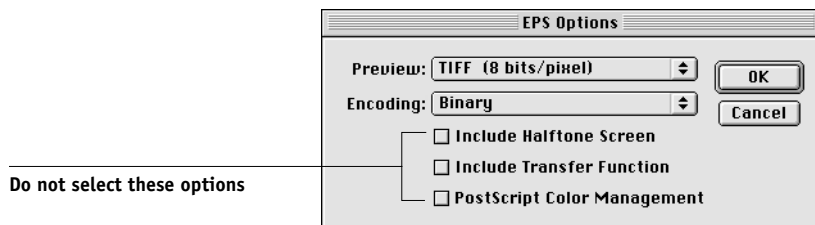

NOTE: If you choose **JPEG** encoding, save a backup of the original image saved with binary encoding until you see the printed results of the JPEG file. Occasionally, the compression used for JPEG encoding produces unwanted artifacts. If you see unexpected results in the printed output of a JPEG file, revert to a binary version.

If you experience problems printing the document in which you place the image, substitute an ASCII version of the same image, and print the document again. Binary encoding is much more compact than ASCII encoding, but occasionally causes printing problems with some system configurations.

Advanced tips for using PostScript color management

Use the following information to implement alternate, more complex, color workflows with Photoshop.

Saving EPS Documents with PostScript Color Management

Selecting the PostScript Color Management option when saving either a CMYK or RGB EPS file prompts Photoshop to embed PostScript color information—which is independent of ICC profiles—in the resulting document. This information is intended for PostScript devices like the E-810.

Printing RGB EPS Files Saved with PostScript Color Management

When you print an RGB EPS file that contains an embedded profile to the E-810, the working space information from the embedded RGB profile can be used as an RGB source definition for E-810 CRDs. To use the source color space information from the embedded profile with E-810 CRDs, choose None as the E-810 RGB Source when you print. This applies when you print directly from Photoshop, or when the same RGB EPS file is output from another application.

To override the embedded profile in an EPS file using an RGB Source definition made available by the E-810, choose anything except None as the E-810 RGB Source Profile.

Printing CMYK EPS files saved with PostScript Color Management

If you select the Photoshop PostScript Color Management option when you save a CMYK EPS image, Photoshop embeds PostScript color information that defines the CMYK source color space of the image. When you print a CMYK EPS file that contains PostScript color information to the E-810, CRDs are used instead of ColorWise CMYK Simulation and Simulation Method settings. Make sure to choose the appropriate setting for the Rendering Style option.

Selecting options when printing


You can print RGB or CMYK images from Photoshop.

- When you print an RGB image, you choose whether the conversion to CMYK is performed by the E-810 (using a CRD), by PostScript (using PostScript Color Management), or by the Photoshop built-in color management engine (by choosing an Output profile from the Space menu).
- When you print a CMYK image, you can print composites or **color separations**.

NOTE: You cannot use the Combine Separations feature of the E-810 to recombine separations printed from Photoshop.

Printing RGB images


Use the following instructions to print RGB images.

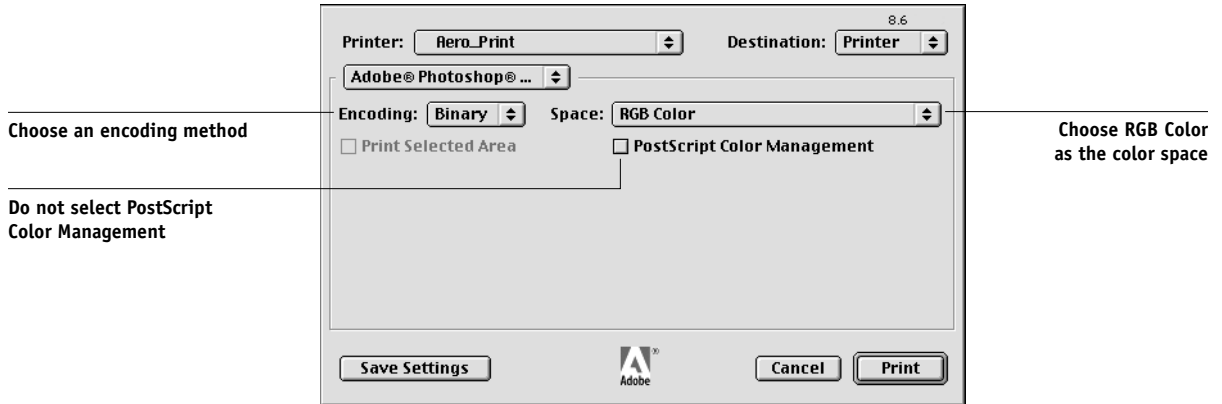

Choose RGB Color from the Space pop-up menu. Any other setting causes Photoshop to convert image data to that color space before sending it to the E-810. With the AdobePS 8.6 printer driver for Mac OS, these options appear in the Adobe Photoshop pane of the Print dialog box.

Printing CMYK images

Use the following instructions to print CMYK images.

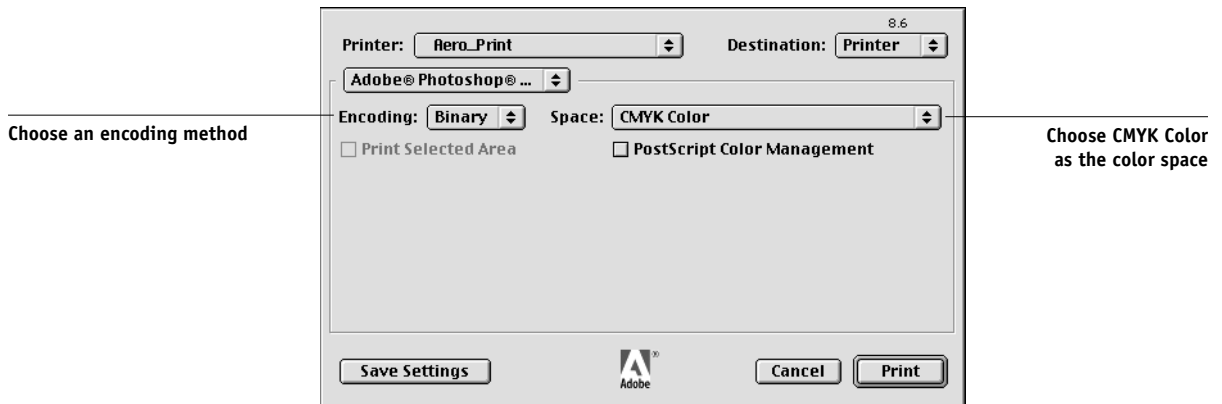

Choose CMYK Color from the Space pop-up menu. Any other setting causes Photoshop to convert image data to that color space before sending it to the E-810. (With the AdobePS 8.6 printer driver for Mac OS, these options appear in the Adobe Photoshop pane of the Print dialog box.)

NOTE: If you choose JPEG encoding, save a backup of the original image with binary encoding until you see the printed results of the JPEG file. Occasionally, the compression used for JPEG encoding produces unwanted artifacts. If you see unexpected results in the printed output of a JPEG file, revert to the binary version.g\Printing tips for advanced users

Advanced tips for printing with Photoshop PostScript color management

Use the following information to implement alternate, more complex, color workflows with Photoshop.

Printing RGB images with Photoshop PostScript Color Management

If you select an RGB color space and decide to use PostScript Color Management from the Photoshop pane of the printer driver, Photoshop sends RGB data to the E-810 along with PostScript color information defining this RGB color space. Remember that when you select PostScript Color Management, a CRD will be used to perform color conversions to CMYK.

NOTE: The included RGB source color space information is overridden by the E-810 RGB Source option unless it is set to None. With Photoshop 5.x, the E-810 Rendering Style option specified will take effect if the E-810 RGB Source Profile option is set to None.

For fastest print times, choose JPEG encoding, but check printed output carefully for unwanted artifacts that can appear as a result of JPEG compression. If you see unexpected results in the printed output, print the job again using Binary or ASCII encoding.

Choose other print options you want to use (see Chapter 1).

Printing CMYK images with Photoshop PostScript Color Management

If you select a CMYK color space and decide to use PostScript Color Management from the Photoshop pane of the printer driver, Photoshop sends CMYK data to the E-810 along with PostScript color information defining this CMYK color space. Remember that when you select PostScript Color Management, a CRD will be used to perform color conversions to the CMYK color space of the E-810.

The destination color space for the CRDs is determined by the RGB Separation print option. If RGB Separation is set to Simulation, the CMYK image is printed according to all specified CMYK Simulation Profile and CMYK Simulation Method settings. If RGB Separation is set to Output, the CMYK image is converted to the CMYK color space of the selected output profile.

The Spot Color Matching setting has no effect because Photoshop converts PANTONE colors to CMYK values when you work in CMYK mode.

- If the image was separated for an offset press standard, apply the corresponding CMYK Simulation setting. For example, if the image is separated for SWOP, choose SWOP as the CMYK Simulation setting.
- If Photoshop is configured for a custom separation using ICC profiles, select the corresponding profile from the CMYK Simulation print option for the E-810.

NOTE: The above custom simulation setting requires that the same profile used for separation in Photoshop also resides on the E-810. For more information on downloading CMYK Simulation profiles to the E-810 with ColorWise Pro Tools, see page 4-5.

Photoshop 4.x

A special feature of Photoshop allows you to save RGB EPS (PostScript) images that include independent source color space information. This feature is sometimes referred to as “PostScript Level 2 tagging” or “RGB tagging.”

You define the source color space to apply to RGB EPS images by specifying a Monitor Setup in Photoshop. However, this Photoshop-specific source color space definition is overridden by the RGB Source print option setting located in the Print dialog box under Printer Specific Options, unless you set the latter to Off (see page 1-5).

Defining colors


You can choose colors in Photoshop with various color models, including HSB, CIE Lab, RGB, and CMYK. You can also choose named colors from the PANTONE color library in Photoshop. For best results, use the color definition methods described in Chapter 5.

Saving files for importing into other documents

Before saving an RGB EPS file, check the Photoshop Monitor Setup. This setting defines the RGB source color space information that will be included in the RGB EPS image. You can override this source color space with the RGB Source setting in the Print dialog box under Printer Specific Options (see page 1-5).

Before saving a file, perform any rotating, cropping, and resizing needed. This speeds processing when printing from the application in which the image is placed.


We recommend you use the EPS or TIFF file formats to save RGB images that will be imported into other documents and printed to the E-810. EPS and TIFF files can be imported into virtually all page layout applications.

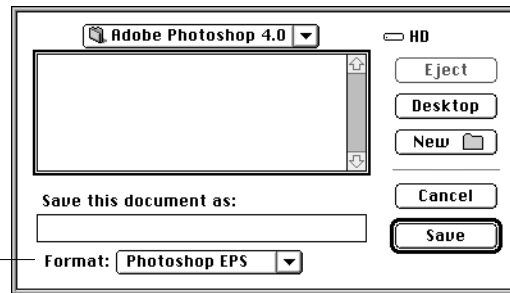

Choose Photoshop EPS or TIFF

In the EPS Format dialog box, choose binary encoding and do *not* include transfer functions or halftone screens. A TIFF preview is compatible with both Mac OS and Windows computers.

NOTE: If you experience problems printing the document in which you place the image, substitute an ASCII-encoded version of the same image, and print the document again. Binary encoding is much more compact than ASCII encoding, but can cause printing problems with some system configurations. If you choose JPEG encoding, save a backup of the original image with binary encoding until you have seen the printed results of the JPEG-encoded file. Although not often, at times the compression used for JPEG encoding may produce unwanted artifacts in the file. If you see unexpected results in the printed output of a JPEG-encoded file, use a binary-encoded version instead.

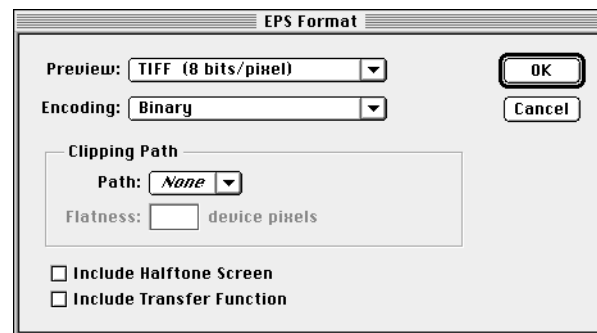

Selecting options when printing


You can print RGB or CMYK images from Photoshop.

- When you print RGB images, you choose whether the conversion to CMYK data is performed by the E-810 (using a CRD), by PostScript (using PS Color Management), or by Photoshop (using Photoshop separation settings).
- When you print RGB images, you can choose whether a color conversion is performed by the E-810 using a CRD or by Photoshop using Photoshop's separation settings.
- When you print CMYK images, you can print **composites** or **color separations**.

NOTE: You can not use the Combine Separations feature of the E-810 to recombine separations printed from Photoshop.

Printing RGB images

Use the following instructions to print RGB images.

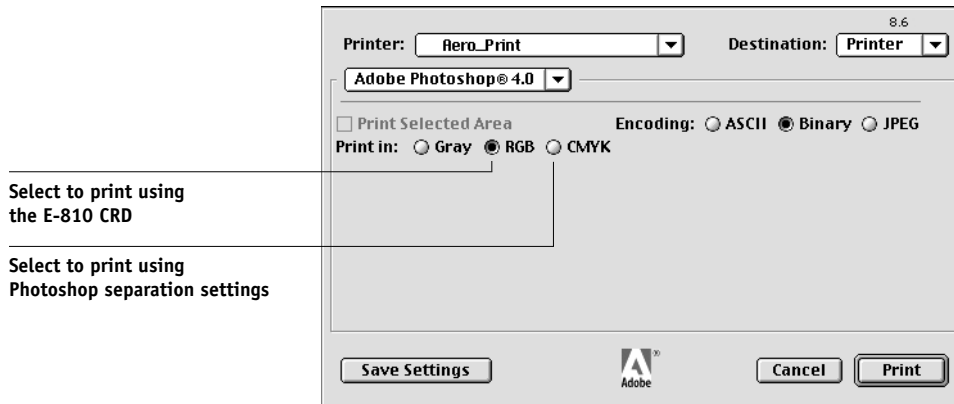

Choose whether to print in RGB or CMYK. (With the AdobePS 8.665.1 printer driver for Mac OS, these options appear in the Adobe Photoshop pane of the Print dialog box.)

- If you select **Print in RGB**, Photoshop sends RGB data to the E-810 and a CRD performs color conversion. Choose the appropriate print option settings for RGB data (see Chapter 1).

NOTE: The E-810 Rendering Style option specified will take effect if the E-810 RGB Source Profile option is set to None.

- If you select **Print in CMYK**, Photoshop performs a color conversion and sends CMYK data to the E-810. With this setting, RGB Source, Rendering Style, and Spot Color Matching settings have no effect.

For printing in CMYK, consider these Photoshop separation settings:

- If Photoshop is configured for separating to an offset press standard, apply the corresponding CMYK Simulation setting. For example, if Photoshop is configured for separating to SWOP, choose SWOP as the CMYK setting. If you apply a CMYK Simulation setting (other than None) to the job, choose Color Proofing (Photo) or Color Proofing (Solid) for the Rendering Style setting (see page 1-4).
- If Photoshop is configured for a custom separation (not a press standard), choose None as the CMYK Simulation setting, or choose the corresponding custom simulation profile on the E-810 if one has been downloaded with the Profile Manager. For more information on the Profile Manager and ColorWise Pro Tools, see Chapter 4.

NOTE: If you choose JPEG encoding, save a backup of the original image with binary encoding until you see the printed results of the JPEG-encoded file. At times, the compression used for JPEG encoding may produce unwanted artifacts in the file. If you see unexpected results in the printed output of a JPEG-encoded file, revert to the a binary-encoded version.

Printing CMYK images

Choose an encoding method. (With the AdobePS 8.665.1 printer driver for Mac OS, these options appear in the Adobe Photoshop pane of the Print dialog box.) For fastest print times, select JPEG encoding.

NOTE: Check the printed output carefully for unwanted artifacts that can appear as a result of JPEG compression. If you see unexpected results in the printed output when printing with JPEG encoding, print the job again using binary encoding.

RGB Source and Rendering Style settings have no effect on CMYK images. The Spot Color Matching setting is also irrelevant because Photoshop converts PANTONE colors to CMYK values when you work in CMYK mode.

- If the image was separated for an offset press standard, apply the corresponding CMYK Simulation setting. For example, if the image is separated for SWOP, choose SWOP as the CMYK Simulation setting. If you apply a CMYK Simulation setting (other than None) to the job, choose Color Proofing (Photo) or Color Proofing (Solid) for the Rendering Style setting (see page 1-4).
- If the image was separated using a custom separation (not a press standard), choose None as the CMYK Simulation setting, or choose the corresponding custom simulation profile on the E-810 if one has been downloaded with the Profile Manager. For more information on the Profile Manager and ColorWise Pro Tools, see Chapter 4.

Chapter 8: Page Layout Applications

This chapter provides instructions for printing color documents from Adobe PageMaker 6.5, QuarkXPress 4.02, and QuarkXPress 3.32.

Before printing from these applications, make sure the appropriate printer driver and the E-810 PPD are installed on your computer, as described in *Getting Started*.

Working with page layout applications

The following sections apply to all page layout applications.

Defining colors

Page layout applications generally use the CMYK color model. Some allow you to define colors with other color models and may be able to send that data to the E-810 in those other color models. However, CRDs (which affect only RGB data) usually do not affect colors defined in page layout applications. For predictable results with CMYK colors, use the CMYK Color Reference when defining colors in page layout applications. See “Choosing colors in PostScript applications” on page 5-5.

NOTE: If the application allows you to define colors in RGB, you should determine whether it converts the RGB data to CMYK before sending it to the E-810. If it does, this will determine which E-810 print options affect your job. For example, if the application converts RGB black (defined in the document as R0%, G0%, B0%) to four-color CMYK black when it sends the job to the E-810, the Pure Black Text/Graphics option will have no effect when you print the job.

You can also choose named colors from the PANTONE color library. See “PANTONE Coated Color Reference” on page 5-6.

Importing images

EPS and TIFF are the recommended formats for images imported into page layout documents. Support for importing other file formats may be provided by individual applications.

All RGB images placed in a document are affected by the RGB Source and Rendering Style settings. The E-810 color management system applies the specified RGB Source setting to all RGB data and then uses the specified Rendering Style (CRD) to perform a color conversion. An exception to this occurs if you assign ICC profiles to RGB images using the application's color management tools (see "Tips for advanced users" below). In this case, the application performs the color conversion of the image and sends CMYK data to the E-810.

NOTE: To take advantage of RGB Source and Rendering Style settings for images imported into QuarkXPress 4.02, either save images in the EPS format, or use the Quark PrintRGB XTension, which outputs RGB TIFF image files without converting them to CMYK.

Tips for advanced users

If you place multiple RGB images, some non-photographic and some photographic, a single CRD may not be suitable for all the images. In this case, you may want the photographic images to bypass the CRD altogether. To accomplish this, separate the image to CMYK data with a pixel-editing application, such as Photoshop, and perform color correction. Save the file as EPS or TIFF and import it into the document.

If your application supports this feature, you can save the RGB image in TIFF format and assign it an ICC profile and rendering intent when you import it into the document.

CMYK simulation

You can specify a CMYK Simulation profile and a CMYK simulation method for the job using the CMYK Simulation Profile and CMYK Simulation Method print options (see page 1-8). The CMYK Simulation setting affects all CMYK color data sent by the page layout application. It can also affect RGB data if RGB Separation is set to Simulation.

- If the document contains CMYK images that were separated for an offset press standard, apply the corresponding CMYK Simulation setting. For example, for images separated for SWOP, choose SWOP as the CMYK Simulation setting.

If you print separations to the E-810 and choose to use the Combine Separations feature in conjunction with Full Simulation, the result may not match that of the same page printed as composite.

- If the document contains CMYK images that were separated according to the color characteristics of a custom ICC profile (not a press standard profile), choose the corresponding profile as the CMYK Simulation Profile print option on the E-810.

NOTE: To achieve the workflow described above, the profile used for the separation of CMYK images in the document should also reside on the E-810. For more information on downloading CMYK Simulation profiles to the E-810 with ColorWise Pro Tools, see Chapter 4.

Adobe PageMaker 6.5 for Mac OS and Windows

The Mac OS and Windows versions of PageMaker 6.5 are essentially the same. The illustrations in this section show only the Windows version, except where differences exist between the two versions.

Windows version requirement

For the Windows version of PageMaker 6.5, make sure a copy of the E-810 PPD file is in the following folders:

- PM65\RSRC\USENGLSH\PPD4
- Windows\System

Importing images


All RGB images placed in a document are affected by your RGB Source and Rendering Style settings. For best results with placed images, use the instructions in “Importing images” on page 8-2 and “CMYK simulation” on page 8-3.

NOTE: We recommend you use ColorWise Color Management rather than the CMS options built into PageMaker. It is important that you do not use both systems for the same print job. To turn off PageMaker 6.5 color management features, choose File>Preferences>General, click the CMS Setup button, and then choose Off from the Color Management pop-up menu. Click OK. Color management can be disabled for a specific bitmapped image by selecting the image and choosing Element > Image > CMS Source, and then choosing None from the This Item Uses pop-up menu.


Selecting options when printing

All print settings are specified from the various Print dialog boxes in PageMaker 6.5. The printer driver interface described in Chapter 1 is not used.


In the Print Document dialog box, choose the E-810 PPD from the PPD menu.

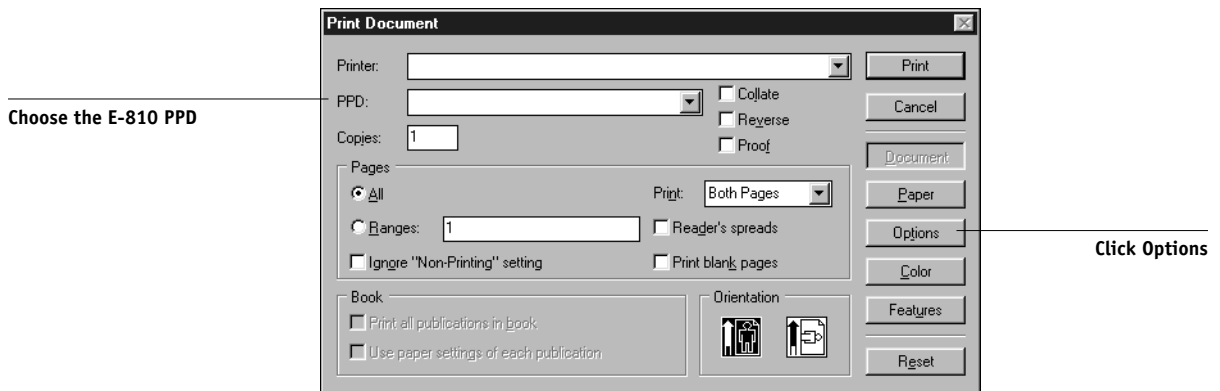

In the Print Options dialog box, choose Normal (not the Optimized Subsampling default) from the “Send image data” menu to ensure that TIFF images print at their full resolution.

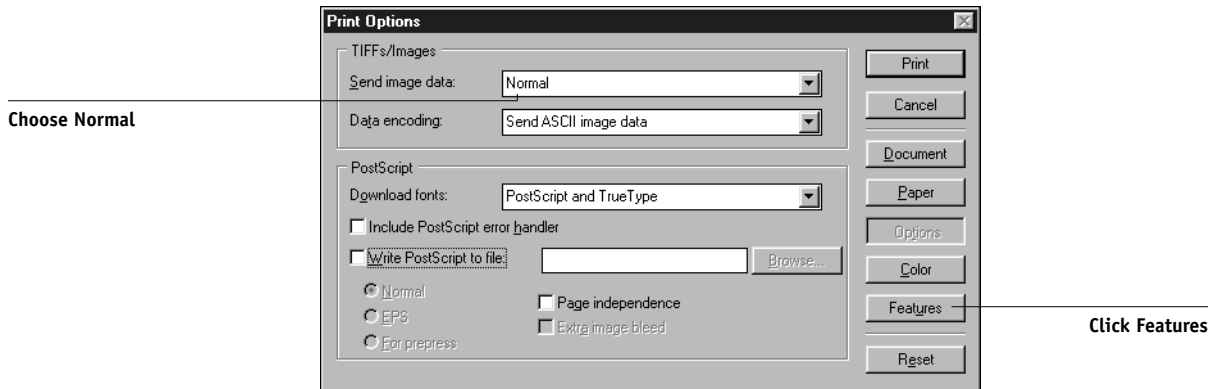

If a document contains RGB placed images or colors defined in RGB that will not be separated to process colors, choose RGB Source and Rendering Style settings in the Print Features dialog box. If the document contains PANTONE colors, choose the appropriate Spot Color Matching setting.

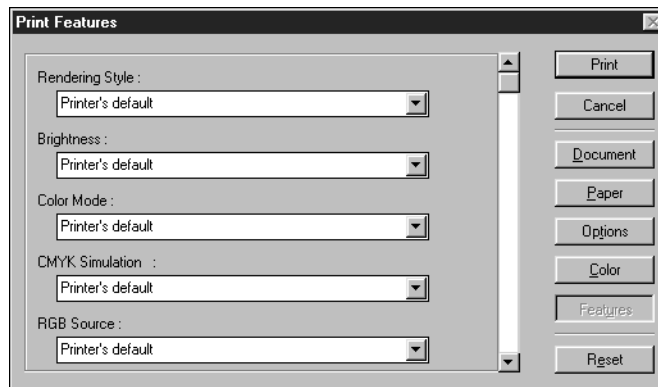

When you click Print from any of the PageMaker 6.5 dialog boxes, the job is sent to the E-810.

NOTE: The printer driver dialog boxes described in Chapter 1 do not appear.

Optional Color Management from PageMaker

If you have additional color management requirements not offered by ColorWise, such as managing color on non-E-810 devices, consider using the PageMaker color management features. For more information, see your PageMaker documentation.

QuarkXPress 4.x for Mac OS and Windows

If you have additional color management requirements not offered by ColorWise, consider using Quark CMS XTension for QuarkXPress 4.02. These features allow advanced users to control RGB to CMYK color conversions. If you plan to use these features, make sure the Quark CMS XTension is installed before starting QuarkXPress. If it is not, use the Quark XTensions Manager to install it. Refer to your QuarkXPress documentation for instructions.

NOTE: Quark CMS converts RGB TIFF, JPEG, and PICT images to CMYK before sending color data to the E-810. RGB Source and Rendering Style settings have no effect on this data unless you use Quark PrintRGB XTension, which outputs RGB TIFF image files without converting them to CMYK.

Importing images

With the exception of RGB images that are saved in EPS format or use Quark PrintRGB XTension, QuarkXPress 4.02 converts all RGB data into CMYK, even when Quark CMS XTension is disabled.


Only RGB images saved in EPS format are affected by RGB Source and Rendering Style settings. For best results with placed images, use the instructions in “Importing images” on page 8-2 and “CMYK simulation” on page 8-3.

Selecting options when printing


You can select different print options depending on your print needs.

Choose the E-810 PPD from the Printer Description menu in the Print dialog box.

Mac OS

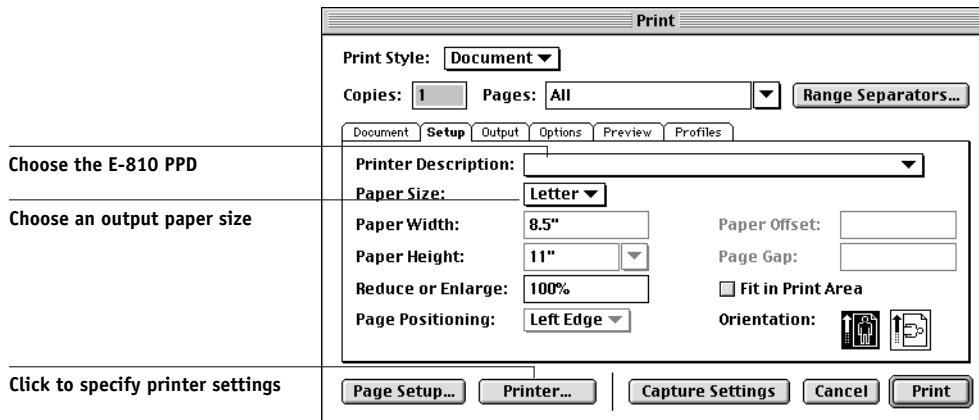

Windows

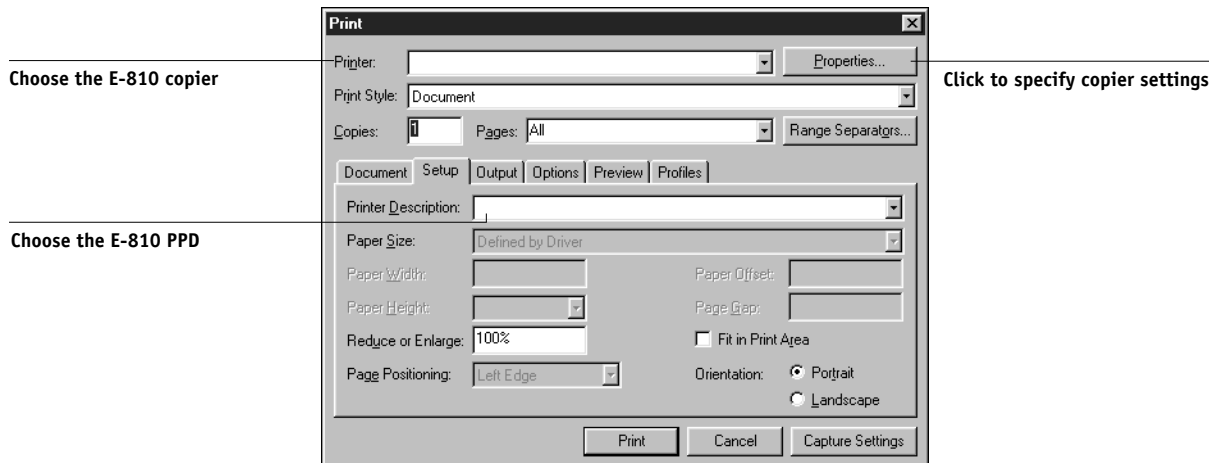

If the document contains PANTONE colors, choose the appropriate Spot Color Matching setting. For instructions on specifying print options, see Chapter 1.

Optional Color Management from QuarkXPress

If you have additional color management requirements not offered by ColorWise, such as managing color on non-E-810 devices, consider using the QuarkXPress color management features. For more information, see your QuarkXPress documentation.

QuarkXPress 3.32 for Mac OS and Windows

Before starting QuarkXPress 3.32, make sure the EfiColor XTension is *not* loaded in the XTensions folder. EFICOLOR profiles are not currently provided with E-810 products. Without the correct EFICOLOR profile, the EfiColor XTension cannot perform color conversions on placed images.

Windows version requirement

For the Windows version of QuarkXPress, make sure a copy of the E-810 PPD file is in the \XPRESS\PDF folder.

Importing images

All RGB images placed in a document are affected by your RGB Source and Rendering Style settings. For best results with placed images, use the instructions in “Importing images” on page 8-2 and “CMYK simulation” on page 8-3.

Selecting options when printing

Select the E-810 PPD from the Printer Type menu in the Page Setup (Mac OS) or Printer Setup (Windows) dialog box.

Mac OS

	Printer: Aero_Hold QuarkXPress™ Printer Type: [PPD name] EfiColor Profile: GCR: Resolution: 600 (dpi) Paper Size: Letter Data Format: Binary Halftone Screen: 60 (lpi)	Paper Offset: Paper Width: Page Gap: Halftoning C: 150.918 lpi, 82.5° M: 150.918 lpi, 52.5° Y: 150.918 lpi, 7.5° K: 150.918 lpi, 112.5° <input checked="" type="checkbox"/> Use EfiColor Screen Values
Choose the E-810 PPD		
Choose an output paper size		
Choose Binary		

Cancel OK

Windows

	Printer Setup Printer: <input type="radio"/> Default Printer [currently] <input checked="" type="radio"/> Specific Printer: [dropdown] Orientation: <input checked="" type="radio"/> Portrait <input type="radio"/> Landscape Paper: Size: Letter Source: AutoSelect Tray Use PDF For: [dropdown] <input type="checkbox"/> Adjusted Screen Values Halftone Freq.: 60 (lpi) Resolution: 400 (dpi) Data: Binary Image: <input type="checkbox"/> Flip Horizontal <input type="checkbox"/> Flip Vertical <input type="checkbox"/> Invert Paper Width: [] Paper Offset: [] Page Gap: []	OK Cancel Options... Network...
Choose the E-810 PPD		
Choose Binary		

Choose an output paper size

If a document contains RGB-placed images or RGB colors that QuarkXPress will print without converting to CMYK, choose RGB Source and Rendering Style settings. If the document contains PANTONE colors, choose the appropriate Spot Color Matching setting. For instructions on specifying print options, see Chapter 1.

Chapter 9: Illustration Applications

This chapter provides instructions for using Illustrator for Windows and Mac OS, FreeHand for Windows and Mac OS, and CorelDRAW for Windows and Mac OS.

Before printing from these applications, make sure the appropriate PostScript printer driver and the E-810 PPD are installed on your computer, as described in *Getting Started*.

Working with illustration applications

You can print directly from an illustration application or use it to create and save files that will be imported into a page layout document. To print from an illustration application, use the printer driver and the print settings recommended in Chapter 1.

NOTE: These application notes provide instructions for printing composites only. For instructions on printing color separations, refer to the documentation for your application.

As a general rule, use the EPS file format when saving files with an illustration application.

Defining colors

All illustration applications use the CMYK color model. While some also allow you to define colors using other color models, they all send CMYK data to the E-810. Consequently, the RGB Source and Rendering Style settings in the PPD do not affect all colors printed from illustration applications. For predictable results with CMYK colors, use the CMYK Color Reference pages when defining colors (see “Choosing colors in PostScript applications” on page 5-5).

NOTE: If you define colors in RGB and print directly from the application, the application converts the RGB data to CMYK before sending it to the E-810. This conversion by the application will determine which E-810 print options affect your job. For example, if the application converts RGB black (defined in your document as R0%, G0%, B0%) to four-color CMYK black when it sends the job to the E-810, the Pure Black Text/Graphics option in the PPD will have no effect when you print the job.

You can also choose named colors from the PANTONE color library. See page 5-6.

Importing images

In general, all images placed into illustration applications should be in EPS file format.

All RGB images placed in a document are affected by the RGB Source and Rendering Style settings in the PPD. The E-810 color management system applies the specified RGB Source setting to all RGB data and then uses the specified Rendering Style (CRD) to perform a color conversion to CMYK. An exception to this occurs if you assign ICC profiles to RGB images using the application's color management tools (see "Tips for advanced users" below). In this case, the application performs the color conversion of the image and sends CMYK data to the E-810.

Tips for advanced users

If you place multiple RGB images, some non-photographic and some photographic, a single CRD may not be suitable for all the images. In this case, you may want the photographic images to bypass the CRD altogether. To accomplish this, separate the image to CMYK data with a pixel-editing application, such as Photoshop, and perform color correction. Save the image as an EPS or TIFF file and import it into the document. Or save the RGB image in TIFF format and assign it an ICC profile and rendering intent when you import it into the document (see the individual application notes in this chapter).

CMYK simulation

You can specify a press simulation target and a press simulation method for the job with print options (see Chapter 1). The CMYK Simulation setting affects all CMYK color data sent by the illustration application.

- If the document contains CMYK images that were separated for an offset press standard, apply the corresponding CMYK Simulation setting. For example, for images separated for SWOP, choose SWOP-Coated as the CMYK Simulation setting.
- If the document contains CMYK images that were separated according to the color characteristics of a custom ICC profile (not a press standard profile), select the corresponding profile from the CMYK Simulation Profile print option on the E-810.

NOTE: The workflow described above requires that the profile used for the separation of CMYK images in the document also resides on the E-810. For more information on downloading CMYK Simulation profiles to the E-810 with ColorWise Pro Tools, see Chapter 4.

Adobe Illustrator 8.x for Windows and Mac OS

If you are using ColorWise color management, disable the Illustrator color management system by removing the Color Conversion and Color Conversion Utilities files from the Adobe Illustrator > Plug-ins > Extensions folder.

Defining colors

Any colors defined in Illustrator are sent to the printer in CMYK—even those defined using other color models. For best results, use the color definition methods described on page 5-5.

Importing images

All RGB images placed in a document are affected by the RGB Source and Rendering Style settings you select in the PPD. For best results with placed images, use the instructions in “Importing images” on page 9-2 and “CMYK simulation” on page 9-2.


Optional Color Management in Illustrator

If you have additional color management requirements not offered by ColorWise, such as managing color on non-E-810 devices, consider using the Illustrator color management features. For more information, see your Illustrator documentation.

Selecting options when printing


For the Windows version of Illustrator, select the appropriate copier from the Name pop-up menu and select PostScript Level 2 or 3.

Windows

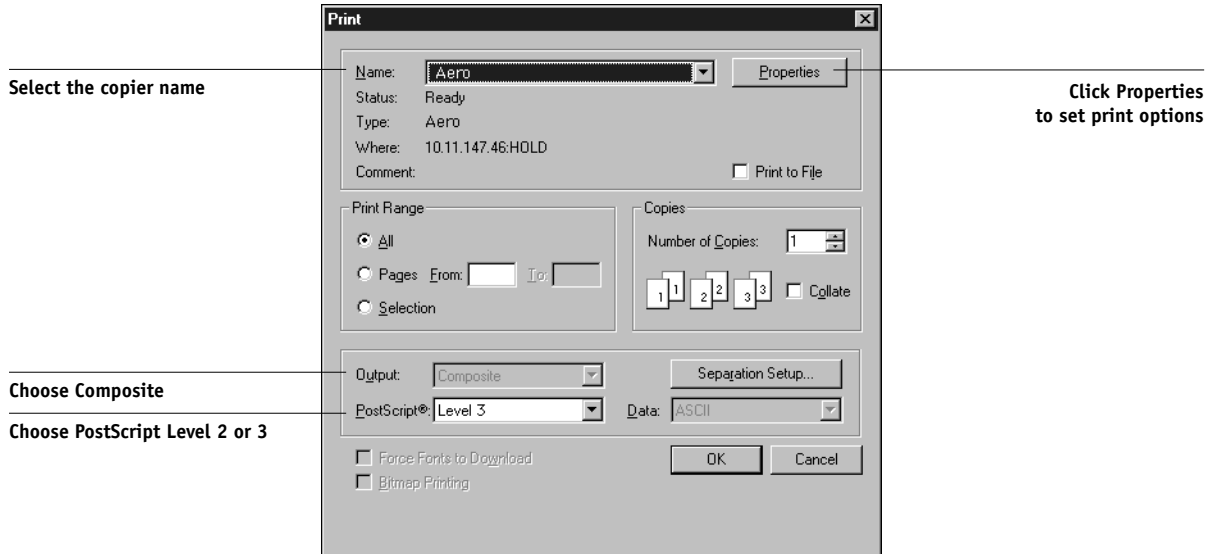

For the Mac OS version of Illustrator, choose Composite output and PostScript Level 3.

Mac OS

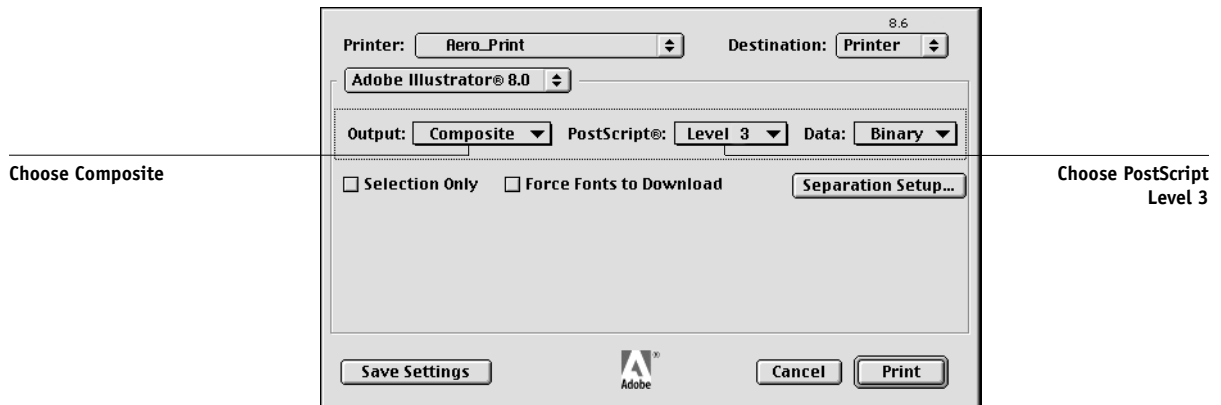

If a document contains placed RGB images, click Properties (Windows) or select Printer Specific Options from the pop-up menu (Mac OS) and choose RGB Source and Rendering Style settings for the E-810. With the exception of placed RGB images, these settings have no effect on colors printed with Illustrator 8.x. If the document contains named PANTONE named colors, choose the appropriate Spot Color Matching setting.

For instructions on setting print options, see Chapter 1.

Saving files for importing into other documents

When saving files in Illustrator 8.x for importing into other types of documents, use the EPS file format. Illustrator can save color information in both RGB and CMYK. The E-810 RGB Source and Rendering Style settings affect color output of RGB artwork saved in Illustrator EPS and imported into other kinds of documents (even when both RGB and CMYK artwork exists in the same file). In the case of Illustrator files imported into Photoshop, however, vector data from the Illustrator file is rasterized into bitmaps in Photoshop, and the final color space of the bitmap data is determined by the color mode you set in Photoshop.

FreeHand 8.x for Windows and Mac OS

The information in this section applies to both the Windows and Mac OS versions of FreeHand 8.x. Only Mac OS dialog boxes are shown, but the information and instructions are identical for the Windows version.


NOTE: If you are using ColorWise color management, turn off FreeHand 8.x color management features by choosing None from the Colors > Color Management > Type pop-up menu.

Defining colors

Any colors defined in FreeHand are sent to the copier in CMYK—even those defined using other color models. For best results, use the color definition methods described on page 5-5.

You can control the conversion of RGB colors defined in FreeHand by specifying settings in the Preferences dialog box under the Colors category, or by clicking the Color Management button in the FreeHand pop-up menu on the Print dialog box.

Click Colors to access the color management settings

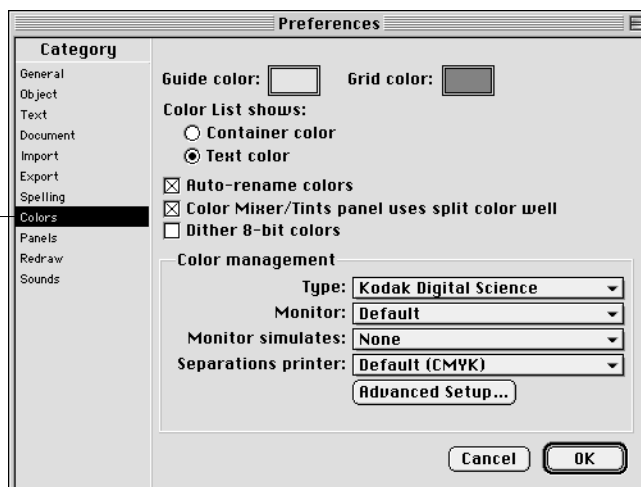

Importing images

A number of file types can be imported into FreeHand 8.x, but once imported, all are treated as either EPS images, TIFF images, or editable paths. For details, see your FreeHand documentation.


When you import an EPS image into your document, FreeHand inserts a link to the image rather than embedding the original file, resulting in a smaller file size. If the image is a CMYK EPS file, the colors print just as they would from the originating application.

NOTE: Before placing a CMYK EPS file, be sure the file was saved with Desktop Color Separation (DCS) set to Off. If the file was saved with DCS activated, FreeHand prints composites of the image at the low resolution used for screen viewing.

All RGB images placed in a document are affected by your RGB Source and Rendering Style settings in the PPD. For best results with placed images, use the instructions in “Importing images” on page 9-2 and “CMYK simulation” on page 9-2.

Selecting options when printing from FreeHand

When printing, refer to the following illustrations to select options.

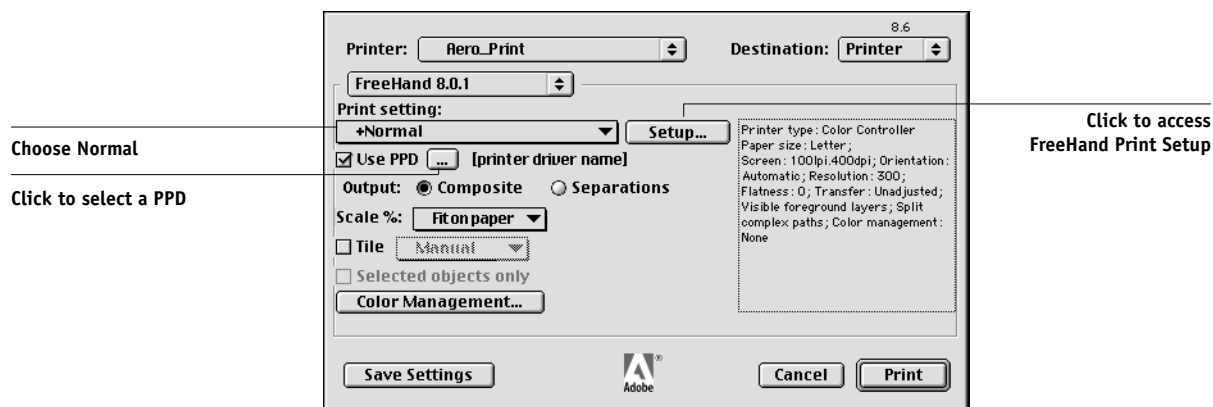


In the Print dialog box, make sure the Use PPD option is selected. From the Print setting menu, choose Normal.

- If the Use PPD option is on, a plus sign (+) appears in front of the word “Normal.”
- If the PPD name for your E-810 is not displayed next to the PPD button, click the button labeled “...” and choose the appropriate PPD from the menu that appears.

To use E-810 color management features, clear the “Convert RGB to process” check box in the File>Output Options dialog box. If this option is selected, FreeHand color management settings are used to convert RGB colors and RGB TIFF, PICT, and JPEG images to CMYK.

Do not select to use E-810 color management

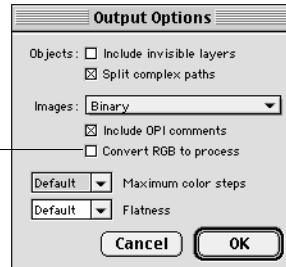

If a document contains placed RGB images, choose RGB Source and Rendering Style settings in the PPD. With the exception of placed RGB images, these settings have no effect on colors printed with FreeHand. If the document contains PANTONE named colors, choose the appropriate Spot Color Matching setting in the PPD.

Refer to your FreeHand documentation for information about other FreeHand print options.

Saving files for importing into other documents

When saving files in FreeHand 8.x for importing into other types of documents, use the EPS file format. FreeHand saves all color information in CMYK. The RGB Source and Rendering Style print options have no effect on the color output of RGB artwork saved in FreeHand 8.x and imported into other kinds of documents. In the case of FreeHand files imported into Photoshop, however, vector data from the FreeHand file is rasterized into bitmaps in Photoshop, and the final color space of the bitmap data is determined by the color mode you set in Photoshop.

Optional Color Management in FreeHand

If you have additional color management requirements not offered by ColorWise, such as managing color on non-E-810 devices, consider using the FreeHand color management features. For more information, see your FreeHand documentation.

CorelDRAW for Windows and Mac OS

Defining colors

Any colors defined in CorelDRAW 9.x for Windows or CorelDRAW 8.x for Mac OS are sent to the copier in CMYK—even those defined using other color models. For the best results, use the color definition methods described in “Choosing colors in PostScript applications” on page 5-5.

You can control the conversion of RGB colors defined in CorelDRAW by specifying settings in the Color Management dialog boxes. On Windows machines, the Color Management dialog boxes are located in Tools>Color Management. On Mac OS computers, the Color Management functions are located in Edit:Preferences:Global.


NOTE: If you do not want to use color management in CorelDraw, do not select options under Color Management and Color Management General, and select None from the Composite Printer pop-up menu under Color Management/Profiles.

Importing images

All RGB images placed in a document are affected by your RGB Source and Rendering Style settings in the PPD. For best results with placed images, use the instructions in “Importing images” on page 9-2 and “CMYK simulation” on page 9-2.

Selecting options when printing


On Windows computers, in the Print dialog box under the General tab, make sure the correct copier and PPD are selected and select the Use PPD check box. Click Properties to specify E-810 print options.

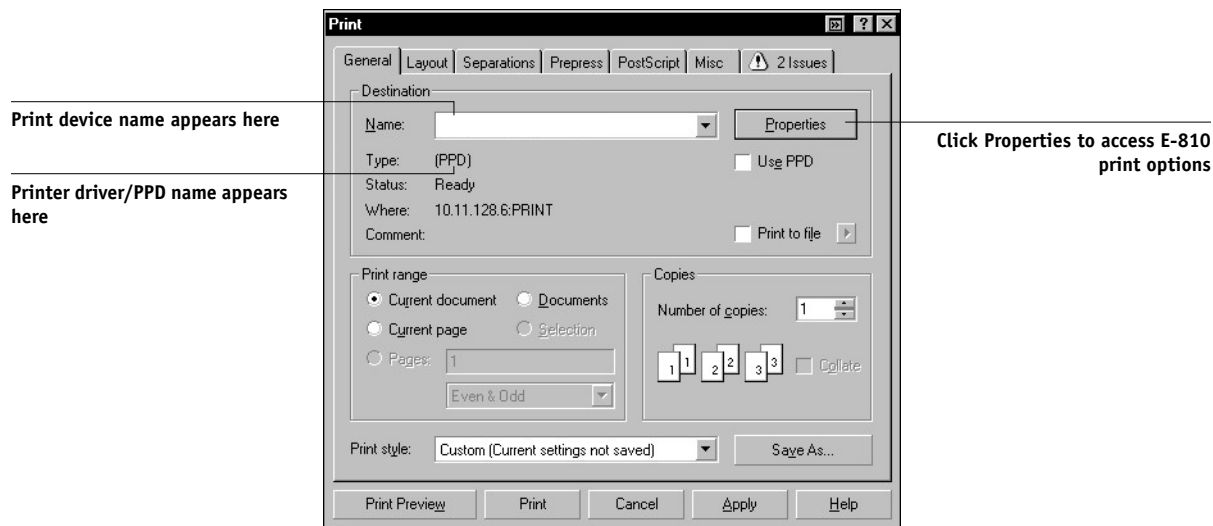

On Mac OS computers, click the Printer button in the General Print dialog box to select the copier and print options.

To use E-810 color management, make sure the “Use color profile” option in the Misc tab of the Print dialog box is *not* selected. If this option is selected, CorelDRAW color management settings are used to convert RGB colors and images to CMYK.

Do not select to use
E-810 Color Management.

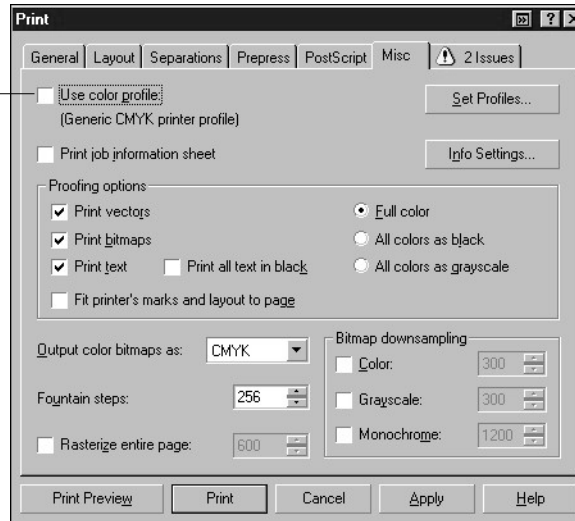

If a document contains placed RGB images, choose RGB Source and Rendering Style settings for your copier. With the exception of placed RGB images, these settings have no effect on colors printed with CorelDRAW. If the document contains PANTONE named colors, choose the appropriate Spot Color Matching setting.

Saving files for importing into other documents

When saving files in CorelDRAW for importing into other types of documents, use the EPS file format. CorelDRAW saves all color information in CMYK, so RGB Source and Rendering Style print options have no effect on color output of artwork saved with CorelDRAW and imported into other kinds of documents. In the case of CorelDRAW files imported into Photoshop, however, vector data from the CorelDRAW file is rasterized into bitmaps in Photoshop, and the final color space of the bitmap data is determined by the color mode you set in Photoshop.

Optional Color Management in CorelDRAW

If you have additional color management requirements not offered by ColorWise, such as managing color on non-E-810 devices, consider using the CorelDRAW color management features. For more information, see your documentation.

Appendix A: Desktop Color Primer

This appendix covers concepts basic to printing in color, including:

- Properties of color
- Printing techniques
- Using color effectively
- Raster images and vector images
- Optimizing files for processing and printing

If you are already familiar with color theory and digital color printing, refer to the last section (“Optimizing files for processing and printing” on page A-10) for tips on optimizing files for printing.

The properties of color

This section introduces concepts that are basic to color theory. You will encounter some of these concepts (such as hue, saturation, and brightness) when you work with color in applications; others provide useful background information. *Color is a complex topic, so consider this a starting point for experimentation and further research.*

The physics of color

The human eye can see electromagnetic radiation at wavelengths between 400 nanometers (purplish blue) and 700 nanometers (red). This range is called the visible spectrum of light. We see pure **spectral light** as intensely saturated or pure colors. Sunlight at midday, which we perceive as white or neutral light, is composed of light from across the visible spectrum in more or less equal proportions. Shining sunlight through a prism separates it into its spectral components, resulting in the familiar rainbow of colors (color example 1).

Like the sun, most light sources we encounter in our daily environment emit a mixture of light wavelengths, although the particular distribution of wavelengths can vary considerably. Light from a tungsten light bulb, for example, contains much less blue light than sunlight. Tungsten light appears white to the human eye, which, up to a point, can adjust to the different light sources. However, color objects appear different under tungsten light than they do in sunlight because of the different spectral makeup of the two light sources.

The mixture of light wavelengths emitted by a light source is reflected selectively by different objects. Different mixtures of reflected light appear as different colors. Some of these mixtures appear as relatively saturated colors, but most appear to us as grays or impure hues of a color.

CIE color model

In the 1930s, the Commission Internationale de l'Eclairage (CIE) defined a standard color space, a way of defining colors in mathematical terms, to help in the communication of color information. This color space is based on research on the nature of color perception. The CIE chromaticity diagram (color example 2) is a two-dimensional model of color vision. The arc around the top of the horseshoe encompasses the pure, or spectral, colors from blue-violet to red. Although the CIE chromaticity diagram is not perceptually uniform—some areas of the diagram seem to compress color differences relative to others—it is a good tool for illustrating some interesting aspects of color vision.

By mixing any two spectral colors in different proportions, we can create all the colors found on the straight line drawn between them in the diagram. It is possible to create the same gray by mixing blue-green and red light or by mixing yellow-green and blue-violet light. This is possible because of a phenomenon peculiar to color vision called **metamerism**. The eye does not distinguish individual wavelengths of light. Therefore, different combinations of spectral light can produce the same perceived color.

Purple colors, which do not exist in the spectrum of pure light, are found at the bottom of the diagram. Purples are mixtures of red and blue light—the opposite ends of the spectrum.

Hue, saturation, and brightness

A color can be described in terms of three varying characteristics, called the **HSB** color model:

- Hue—tint (the qualitative aspect of a color—red, green, or orange)
- Saturation—the purity of the color
- Brightness—relative position between white and black

While the CIE chromaticity diagram (color example 2) conveys hue and saturation, a three-dimensional color model is required to add the brightness component (color example 3).

Many computer applications include dialog boxes in which you choose colors by manipulating hue, saturation, and brightness. For example, some applications use a color picker (color example 4) which can be reconfigured according to your preference. Additive and subtractive color systems

Color devices used in desktop publishing and printing *simulate* the range of visible colors using a set of primary colors that are combined to create other colors. There are two methods for creating a range of colors from a set of primary colors. Computer monitors and scanners are based on the **additive color model**. Printing technologies, including the E-810 and offset presses, are based on the **subtractive color model**.

Additive (RGB) color

Color devices that use the additive color model make a range of colors by combining varying amounts of red, green, and blue light. These colors are called the **additive primaries** (color example 5). White is created by adding the maximum amount of red, green, and blue light available. Black occurs wherever all three colors are absent. Grays are created by adding equal amounts of all three colors together. Combining varying amounts of any two of the additive primaries creates a third, saturated hue.

A familiar device based on this color model is the computer monitor (color example 6). Monitors have red, green, and blue **phosphors** that emit varying amounts of light to display a given color. Scanners create digital representations of colors by measuring their red, green, and blue components through colored filters.

Subtractive (CMY and CMYK) color

The subtractive color model is the basis for color printing and for color photographic prints and transparencies. While the additive color model simulates the visible spectrum of color by adding light of three primary hues, the subtractive color model starts with a “white” or neutral light source containing light of many wavelengths. Inks, toners, or other **colorants** are used to selectively absorb (subtract) certain wavelengths of light that otherwise would be reflected or transmitted by the media in use.


The **subtractive primaries** are cyan, magenta, and yellow; they absorb red, green, and blue light, respectively (color example 7). Combining any two subtractive primaries creates a new color that is relatively pure or saturated. For example, you can make red by combining magenta and yellow, which absorb green and blue light, respectively. White occurs when no colorant is applied. Combining all three subtractive primaries in theory yields black, but due to deficiencies of cyan, magenta, and yellow colorants, combining these three primaries actually yields a muddy brown. Black colorant is added to compensate for the deficiencies of cyan, magenta, and yellow colorants. Consequently, color printing uses four **process colors**: Cyan, Magenta, Yellow, and black (CMYK). The use of black toner helps in producing rich, solid blacks and allows for improved rendering of black text.

The CMYK colorants used in offset printing and by your copier toner are to some degree transparent. When one layer of colorant is applied on top of another, you see the effect of both. To create a range of intermediary colors, a method is required for varying the amount of each colorant that is applied. A technique called **halftoning** is used in offset printing, while color print devices typically use a proprietary system for applying ink or toner colors that is similar to halftoning.

Printing techniques

Until recently, most color printing was done on printing presses using one of several printing techniques—**offset lithography**, **flexography**, and **gravure**, to name a few. All traditional printing techniques require lengthy preparation before a print run can take place. Short-run color printing, including E-810 printing, eliminates most of this preparation. By streamlining the process of color printing, the E-810 makes short print runs economically feasible.

In contemporary offset lithographic printing, digital files from desktop computers are output to an imagesetter, which creates film separations. The film is used to make a **prepress proof**, which is an accurate predictor of the final print job and allows you to make corrections before going to press. Once the proof is approved, the printer makes plates from the film and runs the print job on the press.

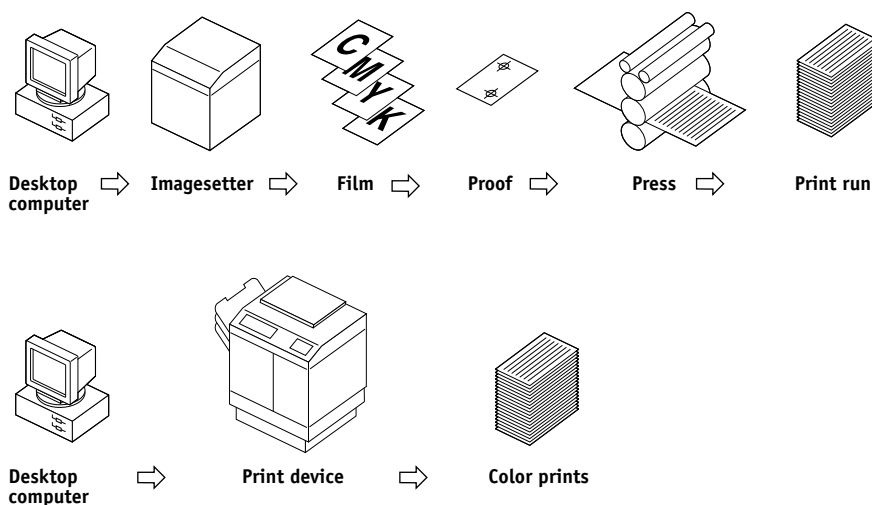

With a E-810, you simply print the file. The E-810 processes the **PostScript** information in the file and sends four **bitmaps** (one each for cyan, magenta, yellow, and black) to the print engine. The ease of E-810 printing makes possible experimentation that would be too costly on press, allowing unlimited fine-tuning of color and design elements.

Halftone and continuous tone devices

Halftoning is used in offset printing to print each process color at a different intensity, allowing millions of different colors to be reproduced using only the four process colors. Depending on the required intensity of a given color, toner is placed on paper in dots of different size. The grid of dots used for each toner color is called a screen. Halftone screens are aligned to unique angles designed to eliminate interference patterns called **moiré** that can arise with halftoning.

Some color print devices are commonly referred to as **continuous tone** (or “contone”) devices. They do not use traditional halftone screen patterns and angles. Contone devices are capable of varying the intensity of individual dots.

Even if your color printing is done exclusively on the E-810, you will encounter concepts from offset printing if you use high-end graphics applications. For example, color controls in illustration applications, such as Illustrator, are geared toward specifying color for offset printing using process and **spot colors**. Many applications allow you to specify the screening used for each printing plate.

Using color effectively

The ability to print in color can greatly increase the effectiveness of your message, whether you are printing a presentation or a newsletter, or proofing an ad concept that will later be printed on press. Some potential benefits of using color include:

- Conveying information rapidly by using color cues
- Making use of the emotive aspects of different colors
- Increasing impact and message retention

Color can also be a source of distraction and discord if it is used poorly. This section outlines some tips and concepts that will prove useful as you approach designing color materials.

A few rules of thumb

Try some of the following strategies for creating successful color materials:

- Rather than applying colors indiscriminately, use color to aid comprehension. In presentations, graphs, and charts, use color to highlight patterns and emphasize differences.
- In general, fewer colors work better than many colors.
- Use red as an accent color. Red is particularly effective when used in otherwise monochromatic materials.
- Consider the tastes of your target audience when choosing colors.
- Keep a file of printed color pieces that appeal to you or strike you as effective. Refer to it for ideas when designing your own documents.

Color wheel

A color wheel (color example 8) is a helpful tool for understanding the interrelation of colors. The colors on one side of the color wheel, from magenta to yellow, appear to most people to be warm colors, while those on the other side, from green to blue, appear to be cool. The distance between two colors on the color wheel can help predict how they will appear when seen side by side.

Colors opposite one another on the wheel are called complements (color example 9a), and create a striking contrast side by side. This can be the basis for a bold graphical design, but it is an effect you should use with discretion since it can be visually fatiguing. Other bold combinations to consider are split complements (a color and the two colors adjacent to its complement; color example 9b) and triads (three colors evenly spaced on the color wheel; color example 9c). Colors adjacent to one another on the color wheel result in subtle harmonies.

The color wheel simplifies color relationships for the purpose of clarity, showing only saturated or pure colors. Adding the myriad variations of each hue to the palette (more or less saturated, darker or lighter) creates a wealth of possibilities. Taking a pair of complements from the color wheel and varying the saturation and brightness of one or both colors produces a very different result from the pure complements. Combining a light tint of a warm color with a darker shade of its cooler complement often gives pleasing results. Combining a darker shade of a warm color with a light tint of its cooler complement produces an unusual effect you may like.

Once you have mastered the concept of the color wheel, you have a good framework for experimenting with color combinations. Many books targeted at graphic designers show groups of preselected color combinations. Some are organized by themes or moods, and some are based on a **custom color system**, such as PANTONE. The more you develop a critical facility for judging color combinations, the more you will be able to trust your own eye for color. The bibliography at the back of this manual includes books on design.

Color and text

It is not a coincidence that the overwhelming majority of text you see is printed in black on white paper. Text in black on white is highly legible and is not fatiguing to read for extended periods. For many color materials, using black text on a white background and confining color to graphic elements and headings is a good choice.

Color text can add flair to documents printed on paper when used skillfully. This technique is widely used in presentations. When using color text, avoid dazzling text and background combinations created from primary complements, especially red and cyan or red and blue; they are visually fatiguing and hard to read. Color text is more legible when distinguished from its background by a difference in lightness—for example, dark blue text on a light beige background. In addition, using many different colors in a string of text makes for a confused appearance and is hard to read. However, using a single highlight color is an effective way to draw the reader's eye to selected words. See color example 10 for color text samples.

When using color text, keep in mind that small font sizes typically do not print in color with the same sharpness as in black. In most applications, black text prints exclusively in black toner, while color text usually prints with two or more toners. Any misregistration between the different toners on paper causes color text to lose definition. You can make test prints to find the smallest point size at which color text prints clearly. When using high-end graphics applications that allow you to specify color as percentages of cyan, magenta, yellow, and black, you can create pure cyan or pure magenta text that prints with the same sharpness as black text. (Pure yellow text is extremely hard to read on anything but a dark or complementary background.)

Raster images and vector images

Two broad categories of artwork can be printed from a personal computer to a color printer: raster and vector images.

A **raster image**, also referred to as a bitmap, is composed of a grid of **pixels**, each assigned a particular color value (color example 11a). The grid, when sufficiently enlarged, resembles a mosaic made from square tiles. Examples of raster images include scans and images created in painting or pixel-editing applications, such as Photoshop and Painter.

The amount of data found in a raster image depends on its **resolution** and **bit depth**. The resolution of a raster describes the compactness of the pixels and is specified in pixels per inch (ppi). The bit depth is the number of bits of information assigned to each pixel. Black and white raster images require only one bit of information per pixel. Grayscale images require 8 bits per pixel. For photographic quality color, 24 bits of RGB color information are required per pixel, yielding 256 levels of red, green, and blue. For CMYK images, 32 bits per pixel are required.

When printing raster artwork, the quality of the output depends on the resolution of the source raster. If the raster resolution is too low, individual pixels become visible in the printed output as small squares. This effect is sometimes called “pixelation.”

In **vector images**, picture objects are defined mathematically as lines or curves between points—hence the term “vector” (color example 11b). Picture elements can have solid, **gradient**, or patterned color fills. Vector artwork is created in illustration and drawing applications, such as Illustrator and CorelDRAW. Page layout applications, such as QuarkXPress, also allow you to create simple vector artwork with their drawing tools. PostScript fonts are vector-based as well.

Vector artwork is resolution-independent; it can be scaled to any size and resolution without danger of pixels becoming visible in printed output.

Optimizing files for processing and printing

The following sections provide tips on how to create image files that produce the highest possible print quality while minimizing the processing time and disk space they require.

Resolution of raster images

While a 72-ppi raster image appears sharp on a monitor, the same image would likely appear pixelated when printed to the E-810. Color print devices are capable of much greater detail than monitors, and require correspondingly higher resolution image files. However, high-resolution files can be large, and therefore cumbersome to transmit over a network, process for printing, store on disk, and edit.

Beyond a certain threshold, a higher image resolution greatly increases file size while having a minimal effect on output quality. The optimal image resolution depends on the resolution of the final print device. Aim for the resolution that optimizes both file size and output quality.


The resolution of a raster image, along with its bit depth and physical dimensions, determine its file size. The following table shows the file sizes of color raster images at different dimensions and resolutions.

Image size (inches)	File size at				
	100 ppi	150 ppi	200 ppi	400 ppi	600 ppi
	RGB/CMYK	RGB/CMYK	RGB/CMYK	RGB/CMYK	RGB/CMYK
3" x 4"	0.4/0.5 MB	0.8/1.0 MB	1.4/1.8 MB	5.5/7.3 MB	12.4/16.5 MB
5" x 7"	1.0/1.3 MB	2.3/3.0 MB	4.0/5.3 MB	16.0/21.4 MB	36.1/48.1 MB
8.5" x 11"	2.7/3.6 MB	6.0/8.0 MB	10.7/14.3 MB	42.8/57.1 MB	96.4/128.5 MB
11" x 17"	5.4/7.1 MB	12.0/16.1 MB	21.4/28.5 MB	85.6/114.1 MB	192.7/256.9 MB

In this table, the shaded areas indicate that 200 ppi is typically the best trade-off between image quality and file size. However, higher resolutions (for example, 250 to 300 ppi) may be needed for offset printing, when quality is of the utmost importance, or for images containing sharp diagonal lines.

To find the best image resolution for your purposes, make test prints of some raster artwork at different resolutions. Start with a high-resolution image (400 ppi) and save versions at progressively lower resolutions, down to 100 ppi, using a pixel-editing application such as Photoshop. Always save a copy of the original high-resolution version in case you need to revert to it. The high-resolution data cannot be recreated from a lower resolution version.

Print the files and examine the output. You will likely begin to see a marked deterioration in output quality at resolutions below 200 ppi, while above 200 ppi the improvement may be very subtle.

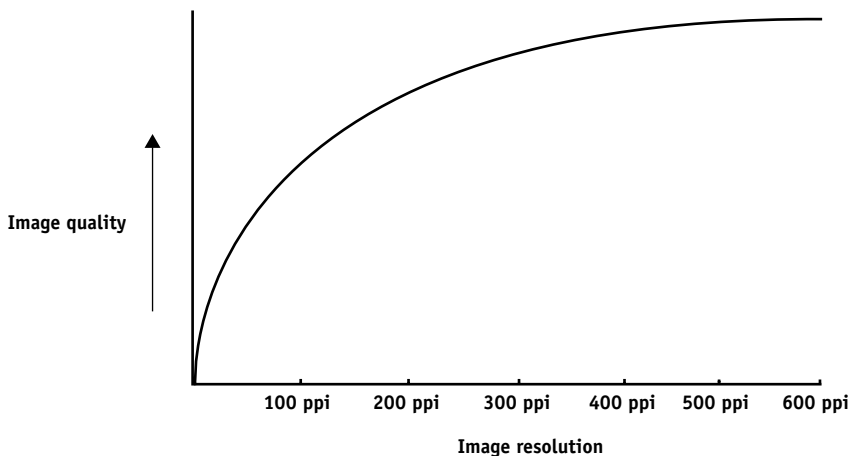

Raster images prepared for offset printing may need to be at higher resolutions than needed for proofing on your E-810.

Scaling

Ideally, each raster image should be saved at the *actual* size, and it will be placed into the document at the *optimal resolution* for the print device. If the image resolution is correct for the print device, there is no quality advantage to be gained by scaling an image down to a percentage of its actual size. If you scale a large image down to a percentage of its actual size, you incur unnecessary file transfer time because the image data for the entire large image is sent to the printer. If an image is placed multiple times at markedly different sizes in a document, save a separate version of the image at the correct size for each placement.

If you need to place an image at greater than 100% in a document, remember that the output image resolution is affected. For example, if you scale a 200 ppi image to 200%, the image is printed at 100 ppi.

Appendix B: Color Management

This appendix provides information on controlling and managing color output in order to achieve predictable color results. It also discusses the basics of color management.

Controlling printed color

When working with color materials, whether they be presentations, illustrations, or complicated page designs, you make aesthetic decisions about the colors you use. Once you have decided on your goal, you then need to realize it in print. Your color printing system becomes an ally in this creative process to the extent that results are *predictable*.

- If you designed a poster to print on the E-810, you want the printed colors to match the design specification.
- If you are printing presentations on the E-810, you want to preserve the vivid colors you see on your monitor.
- If you are working with color that will be printed on an offset press, you want the E-810 output to match other **prepress proofs** or PANTONE color swatch books.

The type of print job and the final print device, E-810 or offset press, determine the methodology you use to achieve the best results.

No matter what your goals are, two factors always impact color print output: print device consistency and the range of colors the device can print, known as its gamut. These concepts are covered briefly in this chapter. Creating successful color documents and presentations also requires an understanding of color management software as it is implemented by the E-810 and on your desktop computer. Most of this chapter is devoted to discussing the various elements of color management that contribute to predictable color results.

Maintaining copier consistency

The factors described below affect print device consistency, as well as color fidelity and overall output quality.

Paper stock and toner


The paper and toner used by your copier can affect printed color. For best results, use the supplies recommended by the manufacturer of the copier.

Maintenance

Problems, such as streaking and insufficient or excessive amounts of one or more toners, arise when a copier does not receive periodic maintenance or needs major repairs. In addition to having it serviced regularly, monitor the condition of your copier by making standard test prints at regular intervals. You can do this easily by printing the E-810 Test Page. Save the prints and show them to the service technician whenever output densities vary from the norm or other problems appear.

Print device gamut

Different color reproduction techniques have different color capabilities or **gamuts**. Color transparency films have comparatively large gamuts, as do color monitors. The color gamut that can be produced using process inks or CMYK toners on paper is smaller. This is why some colors that can be displayed on a color monitor, especially bright saturated colors, cannot be reproduced exactly by your E-810 copier, nor can they be reproduced on a press using process colors. Moreover, different print devices have different gamuts—some colors your copier can produce cannot be reproduced on an offset press, and vice versa. The following illustration provides a graphical representation of this concept.

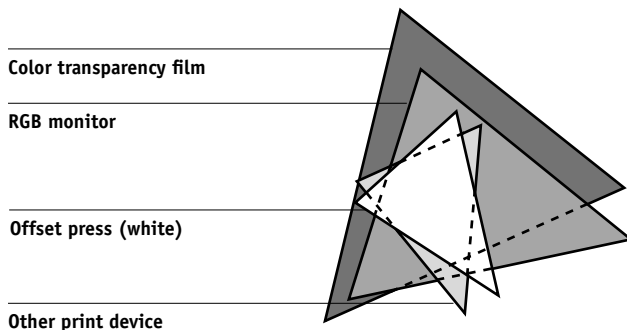

You need to account for the gamut of your print device when designing on a color monitor. When printed, colors that fall outside the print device gamut are “mapped” to printable colors. This process, referred to as **gamut mapping**, takes place when color data is converted or adjusted to meet the gamut requirements of a print device.

The E-810 is specially designed to perform gamut mapping at high speed with high quality results. It provides these color management features automatically, using either built-in default settings or settings you specify for a particular print job. For added flexibility, the E-810 color management system can also be used in combination with color management systems on Windows and Mac OS computers.

Basics of color management


The past several years have seen progress toward standardization in the field of digital color management systems. Both the Windows and Mac OS operating systems now support a standard format developed by the International Color Consortium (ICC). This ICC format is implemented on Windows 98/Me, Windows NT 4.0, and Windows 2000 computers in Image Color Matching (ICM) and on Mac OS computers in ColorSync. More and more software developers are also incorporating color management systems into high-end applications. The E-810 color management system, ColorWise, supports this industry standard profile format.

A color management system, or **CMS**, is a “translator” between the color space of the source image (the monitor, or a scanner, for example) and the color space of the output device. The CMS uses a device-independent color space, such as CIELAB, as its intermediate color space. To perform its translation, the CMS needs information about the color space of the source image and the gamut of the print device. This information is provided in the form of profiles, often created by the makers of the monitor or print device. The end product of a CMS conversion is a printed document or an image file in the gamut of a particular device.

NOTE: If color matching between computer display and printed output is critical, you should calibrate your monitor as well as your printer. For most users, predictability of printed color output is adequate and monitor calibration is not necessary. For information on monitor calibration, see your Photoshop or Illustrator documentation.

Color conversion

Before a color document can be printed, the color data in it must be converted to the gamut of the print device. Whether performed by the E-810 or by a host-based CMS, the process of converting color data for a print device is the same: the CMS interprets RGB image data according to a specified source profile and adjusts both RGB and CMYK data according to a specified output profile, also called a destination profile by some color management systems.

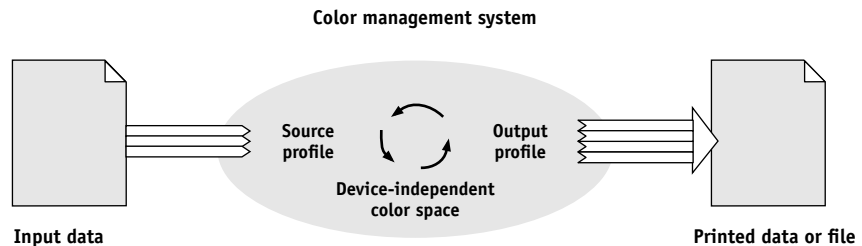

The **source profile** defines the RGB color space of the image's source—characteristics such as the white point, gamma, and type of phosphors used. The output profile defines the gamut of the output device. The E-810 (or the host-based CMS) uses a device-independent color space to translate between the source color space and the color space of the output device.

The E-810 allows you to specify default and override settings for the source color space information and the output profile information (see page 1-1). When you use these settings, you do not need to use the features of other color management systems. Your E-810 software includes ICC profiles for use with other color management systems, if you choose to use them, although conflicts may arise when the E-810 CMS is used in conjunction with a host CMS.

Color management systems can also be used to adjust color data to the gamut of a print device other than the one to which you are printing. This process of simulating another print device is commonly used for proofing jobs that will print on an offset press. The E-810 simulation feature is described on page 1-8.



Appendix C: Importing Densitometer Measurements

This appendix describes Simple ASCII File Format, which can be used to import density measurements from measurement devices. To use your own measurement data from an alternate densitometer, record your individual readings in a text file and structure it as described below.

Simple ASCII Import File Format (SAIFF)

This format describes **Status T** measurement data and is for import into the ColorWise Pro Tools Calibrator. There are three possible file formats:

- 1D Status T density for EFI 34 patch page
- 1D Status T density for EFI 21 patch page
- 1D Status T density for other pages (maximum of 256 patches per ink)

The file format is ASCII and has no tabs. A single space or multiple spaces are used as delimiters. Blank lines are not allowed. Each line in the file represents four patches (C, M, Y, K) of a specific ink value. Comments may be on any line in the file, and these lines start with a pound sign (#) followed by a space. A line with a pound sign followed by any character other than a space has been reserved. Comments must be on an entire line by themselves.

Each line of data contains five values. The first number is the sequential patch number (for EFI 34 and EFI 21 pages) or the ink value percentage (for other pages). The following four values are the density values of C, M, Y, and K of the corresponding patch. Lines are ordered either by increasing sequential patch numbers or by increasing the ink percentage.

For Windows computers, the file extension must be .cm1. For Mac OS computers, the file type must be 'TEXT'.

Measurement data in EFI 34 and EFI 21 are paper-relative. For other pages, if the first line corresponds to zero ink value, the Calibrator assumes that the measurement data is absolute and adjusts it to become paper-relative by subtracting the density values of the first line from the remaining patches.

Example of 1D Status T density for EFI 34 patch page

This file format is used to specify the Status T density measurements of the EFI 34 patch page. The value in the first column is the patch number. The first patch must be 1 and the last must be 34.

```

#!EFI 3
# EFI ColorWise 2.0 Data
type: 1DST34
# Cyan    Magent Yellow Black
1 0.0300 0.0400 0.0200 0.0400
2 0.0600 0.0700 0.0800 0.0700
3 0.1000 0.1000 0.1000 0.1000
(...more data...)
33 1.6700 1.3400 0.8900 1.6700
34 1.7200 1.4300 0.9300 1.7500

```

Example of 1D Status T density for EFI 21 patch page

This file format is used to specify the Status T density measurements of the EFI 21 patch page. The value in the first column is the patch number. The first patch must be 1 and the last must be 21.

```

#!EFI 3
# EFI ColorWise 2.0 Data
type: 1DST21
# Cyan    Magent Yellow Black
1 0.0300 0.0400 0.0200 0.0400
2 0.0600 0.0700 0.0800 0.0700
3 0.1000 0.1000 0.1000 0.1000
(...more data...)
20 1.6700 1.3400 0.8900 1.6700
21 1.7200 1.4300 0.9300 1.7500

```

Example of 1D Status T density for an arbitrary page

This file format is used to specify the Status T density measurements of a user-defined patch page. The value in the first column is the ink/toner percentage of the patch. The first percentage must be 0 and the last percentage must be 100. The percentages must increase in between.

```
#!EFI 3
# EFI ColorWise 2.0 Data
type: 1DST
# percent Cyan Magent Yellow Black
0.0000 0.0300 0.0400 0.0200 0.0400
0.3922 0.0600 0.0700 0.0800 0.0700
1.1765 0.1000 0.1000 0.1000 0.1000
(...more data...)
98.0000 1.6700 1.3400 0.8900 1.6700
100.0000 1.7200 1.4300 0.9300 1.7500
```


Glossary

additive color model

A system in which colors are produced by combining red, green, and blue light (the additive primaries). An RGB video monitor is based on an additive color model.

additive primaries

Red, green, and blue light that is used in additive color systems. When added together in proper amounts, these colors of light produce white.

artifact

A visible defect in an image, usually caused by limitations in the input or output process (hardware or software); a blemish or error.

banding

Visible steps between shades in a color gradient.

bit depth

Amount of information used for each pixel in a raster image. Black and white images require only one bit per pixel. Grayscale images with 256 shades of gray require 8 bits (or 1 byte) per pixel. Photographic quality color images can require 24 bits per pixel (RGB images) or 32 bits per pixel (CMYK images).

bitmap

An image comprised of small squares arranged in a grid. Each square in the grid is a pixel. The number of pixels per inch defines the resolution of a bitmap.

blasting

An undesirable effect that occurs when excess amounts of toner, possibly combined with certain types of paper stock, cause objects in an image to spread beyond its boundaries as defined in the file.

BMP

A graphics file format established by Microsoft and native to the Windows operating system.

calibration

The process of ensuring that a device behaves consistently with respect to a set of specifications.

CMS

See color management system.

CMYK

A subtractive color model that uses cyan, magenta, yellow, and black, or process colors, used in color printing; a color model used in the printing of colors in four-color process printing.

color channel

A single-color image that can be edited separately from the other color channels comprising a color space—for example, the red channel of an RGB image.

color gamut

See gamut.

color management system (CMS)

System used to match color across different input, display, and output devices.

color rendering dictionary

See CRD (color rendering dictionary).

color separation

The process of separating a color image into the color components for printing—cyan, magenta, yellow, and black. Also used to refer to the four sheets of film that result from the process of separating a color image.

color space

A model for representing color in terms of measurable values, such as the amount of red, green, and blue in an image. RGB and CMYK color spaces correspond to color devices—monitors and copiers respectively. Other color spaces, such as CIE Lab, are based on mathematical models and are device-independent. They are not based on the color response of a particular device. *See* gamut.

colorant

An ink, dye, toner, paint, or other pigment that modifies the color of media to which it is applied.

ColorWise color management

E-810 ICC-open color management solution, which is an easy-to-use system that addresses the needs of both casual and experienced color management users.

composite printer

Any output device that can print directly in color without first creating color separations. A composite print can be used as an early proof of an offset print job.

continuous tone (contone)

Describes a photographic image that contains gradient tones from black to white (such as a 35mm transparency or a photograph). Continuous tones cannot be reproduced in that form for printing, but must be screened to translate the image into dots.

continuous tone (contone) image

An image containing fine gradations of tones, such as a photographic image.

CRD (Color Rendering Dictionary)

A feature of color management systems and PostScript Level 2 and PostScript 3 color copiers that maintains the best possible translation of color from one color device to another. A color rendering dictionary (CRD) is used by the color management system or the copier's PostScript interpreter when converting data between color spaces. The E-810 includes several CRDs, each of which provides a different color rendering style.

custom color system

A system of named color swatches that can be matched on press using process or spot colors. PANTONE and TruMatch are examples of custom color systems.

DCS (Desktop Color Separation)

A data file standard defined by Quark, Inc., to assist in making color separations with desktop publishing system; five files are created, four color files (one each for C, M, Y, and K) and a composite color preview file of the color image. It allows an image-editing application to perform color separation and pass it through to final output with its integrity intact.

densitometer

An instrument commonly used in the graphic arts industry to measure density according to a specified standard.

density

A measurement of the light-absorbing quality of a photographic or printed image.

desktop color separation

See DCS.

DIC

A Japanese standard of specifications for separations, proofs, and color printing.

EPS or EPSF (Encapsulated PostScript)

A PostScript file format designed to be embedded in another PostScript stream.

Euroscale

A European standard of specifications for separations, proofs, and color printing.

flexography

A printing technology that uses flexible raised-image plates. Flexography can be used to print on non-flat materials, such as cans.

four-color printer

A printing device that uses cyan, magenta, yellow, and black ink or toner.

gamma

A numeric value representing the relationship (gamma curve) between the input and output values of a color device. If gamma equals 1, input values are mapped exactly to output values.

gamut

A range of colors. A device gamut is the range of colors that a device, such as a copier, can produce. An image gamut is the range of colors in a particular image.

gamut mapping

The conversion of color coordinates from one device's gamut to another—usually accomplished with algorithms or look-up tables.

GDI (Graphics Device Interface)

Graphics and display technology used by computers running Windows. GDI applications rely on GDI (rather than the PostScript language) to send text and pictures to copiers.

GIF (Graphics Interchange Format)

A standard developed by CompuServe for bitmap graphics of up to 256 colors and used for posting photographic images on the Internet or intranet pages; rarely used for professional printing.

gradient

A smooth transition between two different colors or between two shades of a color.

Graphics Device Interface

See GDI.

Graphics Interchange Format

See GIF.

gravure

A printing technology that uses an etched cylinder that has been immersed in ink. The ink that remains in the etched areas is applied to the paper. The non-etched surfaces of the cylinder are non-printing areas.

halftoning

A method for representing an original continuous tone image using a pattern of dots, lines or other patterns.

HSB

A color model where each color is represented by its hue, saturation, and brightness components; supported by most color applications.

ICC profile

An industry standard color profile format developed by the International Color Consortium (ICC) that describes the color capabilities, including the gamut, of a color device based on the differences between an ideal and the current device. The ideal is often provided by the manufacturer as a color reference file. ICC profiles are implemented on Mac OS computers in ColorSync and on Windows 95/98, Windows NT 4.0, and Windows 2000 computers in Image Color Matching (ICM). The E-810 color management system, ColorWise, supports ICC profiles.

imagesetter

Raster-based film output device; a high-resolution laser output device that writes bitmapped data onto photosensitive paper or film.

JPEG

A graphics file format defined by the Joint Photographic Experts Group committee of International Standards Organization (ISO); a standard for digital compression of still image graphic data.

metamerism

Phenomenon in which two colors composed of different combinations of light wavelengths appear identical under a specific light source, but may look different under other light sources. The colors are called “metamers.”

moiré

An undesirable pattern in images made using halftone screens. Moiré can be caused by the improper line frequency of the screens, improper screen angles, improper alignment of halftone screens, or by the combination of a halftone screen with patterns in the image itself.

named color

A color that is defined according to a custom color system. For example, PANTONE 107 C is a named color.

office applications

Software applications commonly used for business purposes, including presentation applications, spreadsheets, and word processing programs.

offset lithography

Printing in which ink is transferred from printing plates to a rubber blanket and then from the blanket to paper.

output profile

The output profile describes the color characteristics of a printing device. It consists of both a profile for your copier and a calibration target that defines the expected density response of the copier.

phosphor

Material used in making computer monitors; phosphors glow and emit red, green, and blue light when struck by an electron beam, thus creating an image.

photographic rendering

A color rendering style that preserves tonal relationships in images.

Unprintable colors are mapped to printable colors in a way that retains differences in lightness, sacrificing color accuracy as necessary.

pixel

The smallest distinct element of a raster image. The term is a combination of the words “picture” and “element.”

PostScript

A device-independent page description language developed by Adobe, which is used to print and display pictures and text. PostScript 3 includes many enhancements to older versions of PostScript, including improved image quality and color with Enhanced Image Technology, faster performance with Advanced Page Processing, and ease of use and setup with NetWorks System.

PPD (PostScript Printer Description file)

A file containing information about a particular PostScript print device's capabilities and restrictions. The information in the PPD is presented via the printer driver.

prepress proof

A print made from a set of film separations or other file to simulate the results of printing. A prepress proof is the last opportunity to catch problems before the print job goes to press.

presentation graphics rendering

A color rendering style that creates saturated colors but does not match printed colors precisely to displayed colors. It is appropriate for bright saturated colors used in illustrations and graphs.

process colors

The four colors used in printing to simulate full-spectrum color images: Cyan, Magenta, Yellow, black (CMYK).

QuickDraw

Graphics and display technology built into Mac OS computers. QuickDraw applications rely on QuickDraw (rather than the PostScript language) to send text and pictures to copiers.

raster image

Electronic representation of a page or image using a grid of points called pixels.

rendering intent

The style of color rendering, or gamut mapping, designed for a particular type of color job. An example of a rendering intent is Photographic rendering—also referred to as Image rendering or Contrast rendering—which is designed for photographic images.

resolution

The number of pixels per inch (ppi) in a bitmap image or the number of dots per inch (dpi) that a device can render.

RGB

An additive color model that makes a range of colors by combining red, green, and blue light, called the additive primaries. Commonly used to refer to the color space, mixing system, or monitor in color computer graphics.

simulation profile

The simulation profile describes the color characteristics of another print device, such as a printing press, that you want the E-810 to simulate.

solid color rendering

A color rendering style intended for use when color accuracy is crucial. Unprintable colors are mapped to the closest printable colors. Solid color rendering does the best job of preserving the saturation of displayed colors.

source color space

The color environment of the originating source of an image, including scanners and color monitors.

source profile

A profile used by the color management system to determine the characteristics of the color values specified in a source digital image.

spectral light

The wavelengths of electromagnetic radiation emitted by a given light source that can be seen by the human eye.

spot color

A color that is printed on its own separation plate when separations are specified. A spot color is printed using a custom ink for that color, in contrast to process colors that are printed using combinations of cyan, magenta, yellow, and black.

Status T

A spectral response for graphic arts reflection densitometers defined by ANSI (the American National Standards Institute).

subtractive color model

A system in which color is produced by combining colorants such as paint, inks, or dyes on media such as paper or transparent film or acetate. All printing devices use the subtractive color model.

subtractive primaries

Cyan, magenta, and yellow colorants used in subtractive color systems for color printing. Combining the subtractive primaries produces darker colors. Black is added to the subtractive primaries to compensate for deficiencies of the toners or inks, and for more efficient black printing.

substrate

In printing, the material upon which the job is printed.

SWOP

The abbreviation for Specifications for Web Offset Publications. A standard of specifications for separations, proofs, and color printing on a web offset press (*not* a sheet fed press).

undercolor removal

In areas where all three process colors (C, M, Y) overprint, the amounts of those colors are reduced and replaced by black. This improves wet ink trapping and reduces ink costs in process color printing.

vector image

Graphic illustration created on computers where picture objects are defined mathematically as lines or curves between points. These mathematical definitions are interpreted by an image language such as PostScript. Vector images include artwork created with illustration applications (such as Illustrator or FreeHand) and page layout applications (such as PageMaker).

white point

The color temperature of any white light source, typically expressed in degrees Kelvin (for example, 6500 K, typical for the white of a monitor).

workflow

The path a print job follows from creation to destination. A workflow may originate with an RGB scan imported to the client workstation and opened on the desktop in an image processing application, such as Photoshop. After adjustments are made to the scanned image, it is evaluated on a color proofing device for eventual color printing on the same device or on press.

Bibliography

Books

Adobe Print Publishing Guide. Adobe Systems Incorporated, 1995. (Comes as part of the documentation for Adobe products such as Adobe Photoshop and Adobe Illustrator, P/N 0397 0719.)

Blatner, David and Fraser, Bruce. *Real World Photoshop 3: Industrial Strength Production Techniques*. Berkeley: Peachpit Press, 1996.

Bruno, Michael H., ed. *Pocket Pal®: A Graphic Arts Production Handbook*. Seventeenth Edition. Memphis: International Paper, 1997.

Hunt, R.W.G. *The Reproduction of Colour*. Fifth Edition. Surrey: Fountain Press, 1996.

Kieran, Michael. *The Color Scanning Success Handbook*. Toronto: DPA Communications Corp., 1997.

Kieran, Michael. *Understanding Desktop Color, Second Edition*. Berkeley: Peachpit Press, 1994.

Margulis, Dan. *Professional Photoshop: Color Correction, Retouching, and Image Manipulation with Adobe Photoshop*. John Wiley & Sons, 1995.

Miller, Marc D. and Zaucha, Randy. *The Color Mac*. Second Edition. Hayden Books, 1995.

X-Rite Color Guide and Glossary: Communication, Measurement, and Control for Digital Imaging and Graphic Arts. X-Rite Incorporated, 1996. (Provided as part of the documentation for X-Rite densitometers, P/N XRC-550.)

World Wide Web sites

International Color Consortium: www.color.org

Graphic Arts Technical Foundation: www.gatf.org

Seybold Seminars Online: www.seyboldseminars.com

Adobe Systems Incorporated: www.adobe.com

Magazines

Adobe Magazine. Seattle: Adobe Systems Incorporated

Publish!. San Francisco: Integrated Media Inc.

Index

Numerics

8-pin DIN plug 3-8, 3-24

A

Absolute Colorimetric 1-5

accent color A-7

additive color model A-3

additive primaries A-3

Adobe Illustrator, *see* Illustrator

Adobe PageMaker, *see* PageMaker

Adobe Photoshop, *see* Photoshop

Adobe PostScript Printer Driver

Mac OS 1-17

Apple Standard setting, RGB Source

option 1-6

AutoCal2 calibration 3-34

B

bit depth, of raster images A-9, A-10

bitmaps A-5

see also raster images

Black Print Enhancement option 1-3

black text

line art 1-10

brightness A-1, A-3

C

CALIB.PS file 4-20

calibration

bypassing 1-3, 1-8

checking status 3-5

COM1 and COM2 port 3-7, 3-24

densitometer 3-5 to 3-9, 3-23 to 3-26

from ColorWise Pro Tools 3-2

from the Control Panel 3-2, 3-15, 3-27,
3-34

importing measurements C-1

measurements 3-1, 3-2, 3-3, 3-32

overview 3-1 to 3-5

scheduling 3-4

targets 3-1, 3-2, 3-3

see also densitometer, ColorWise Pro

Tools

see also spectrophotometer, ColorWise

Pro Tools

calibration patch page 3-3

charts, using color in A-7

CIE

chromaticity diagram A-2, A-3

color model A-2

CIELAB color space B-3

CMY color model 5-3

CMYK Color Reference 5-2, 5-6

CMYK Simulation Method option 1-3, 1-9

CMYK Simulation Profile option 1-3, 1-8

color

accent color A-7

additive model A-3

choosing in applications 5-1

CMY model 5-3

complements A-7

controlling printing results B-1

conversion by color management

systems B-4

custom color systems 5-5

defining in applications 5-1

HSB model 5-5, A-3

HSL model 5-3, 5-5

HSV model 5-3

illustration applications 9-1

physics of A-1

process colors A-6

proofing examples 2-14

properties of A-1

reference pages 5-2

RGB model 5-3, 5-5

- setting default print options 4-21
- split complements A-7
- spot colors 5-5, A-6
- subtractive model A-3, A-4
- subtractive primaries A-4
- swatch color matching 5-6
- text A-8
- theory A-1
- triads A-7
- using effectively A-6 to A-8
- wheel A-7
- working with 5-1
- colorants A-4
- Color Charts 3-4
- Colorimetric ICC rendering style 1-5
- color management
 - basics B-3 to B-4
 - ColorWise 1-1 to 1-12, 2-2
- color management print options for
 - Windows 98/Me 1-14
- color management system (CMS) xiv, B-3
- color matching systems, *see* custom color systems
- color monitors, *see* monitors
- Color Reference pages 3-4
- color rendering styles, *see* rendering styles
- color space 1-1, A-2
- ColorSync B-3
- Color Text/Graphics Enhancement
 - option 1-4
- color theory A-1
- color wheel A-7
- ColorWise B-3
 - key features xiv, 4-21
- ColorWise Pro Tools
 - calibration from 3-2
 - checking calibration status 3-5
 - overview 3-15, 3-27 to 3-33
- Commission Internationale de l'Eclairage, *see* CIE

- Comparison Page 3-32
- complements, color A-7
- compression, JPEG 7-8, 7-11, 7-14, 7-16, 7-17
- computer monitors, *see* monitors
- Configuration page
 - calibration status 3-5
- continuous tone devices A-6
- Contrast ICC rendering style 1-4
- Control Panel
 - calibration from 3-2, 3-15, 3-27
- CorelDRAW 9-9
- CRDs
 - bypassing 6-2, 8-2, 9-2
 - PostScript color matching 1-18
 - rendering intent 5-3
- custom color systems 5-5, A-8
- custom simulations 1-8

D

- default color controls set in Setup 1-2
- densitometer
 - calibrating 3-26
 - DTP32 3-23 to 3-26
 - DTP41 3-1, 3-5 to 3-9, 3-10
- density patches 3-5
- device profiles B-3
- drivers, *see* printer drivers

E

- EFICOLOR
 - profiles 8-8
 - XTension 8-8
- EPS (Encapsulated PostScript)
 - color conversion of RGB EPS
 - images 1-6
 - recommended for imported images 6-1, 7-7, 7-14, 8-2, 9-1, 9-2, 9-5, 9-8, 9-11
 - RGB images saved with Photoshop 7-8, 7-13, 7-14
- Excel, *see* Microsoft Office

F

Fiery Scan 1-8
 file size, of raster images 2-3, A-10
 flexography A-5
 font size, for color text A-8
 FreeHand 5-5, 9-5
 Full simulation 1-8

G

gamma B-4
 Gamma option 1-2
 gamut
 of monitors B-2
 of photographic transparencies B-2
 of print devices B-1
 gamut mapping B-3
 GDI applications, using color in 5-3 to 5-5
 Graphics Device Interface, *see* GDI
 Graphics ICC rendering style 1-4
 graphs, using color in A-7
 gravure A-5

H

halftoning A-4, A-6
 HSB color model 5-5, A-3
 HSL color model 5-3, 5-5
 HSV color model 5-3
 hue, saturation, and brightness A-1, A-3

I

ICC profiles
 assigning to RGB images 9-2
 included with user software B-4
 rendering styles 1-4
 workflow 2-14
 ICC standard for color management systems B-3
 ICM
 profiles, applied to RGB images 9-2
 illustration applications 9-1
 Illustrator 5-5, 9-3

Image Color Matching, *see* ICM
 Image ICC rendering style 1-4
 Image Smoothing option 1-4
 ink B-2
 International Color Consortium, *see* ICC

J

JPEG 7-8, 7-11, 7-14, 7-16, 7-17

L

light A-1 to A-2
 line art, *see* vector images

M

Macintosh interface cable 3-8, 3-24
 Mac OS
 printer driver 1-17
 Macromedia FreeHand, *see* FreeHand
 maintenance of print devices B-2
 Match Copy setting of CMYK Simulation option 1-3, 1-8
 measurements file 3-3, 3-32
 metamerism A-2
 Microsoft Excel, *see* Microsoft Office
 Microsoft Office 6-1 to 6-2
 Microsoft PowerPoint, *see* Microsoft Office
 Microsoft Printer Driver
 Windows 2000 1-16
 Microsoft Word, *see* Microsoft Office
 misregistration of colors A-8
 moiré A-6
 monitors
 calibration B-3
 color model A-3
 gamut of B-2
 phosphors A-3

N

named colors 5-5
 None setting, RGB Source option 1-6

O

office applications 5-1, 5-3 to 5-5, 6-1 to 6-2
 offset lithographic printing A-5
 offset press printing A-5 to A-6
 offset press print jobs, workflow issues 5-2
 Other setting, RGB Source option 1-6
 output profile
 color conversion B-4
 Output Profile option 1-3

P

page layout applications 8-1
 PageMaker 5-5, 8-3
 painting applications A-9
 PANTONE
 color system 5-5
 PANTONE Coated Color Reference 1-12, 5-2
 paper stock B-2
 passwords
 for calibration 3-2, 3-15, 3-27
 Perceptual ICC rendering style 1-4
 phosphors A-3, B-4
 Phosphors option 1-3
 photographic prints A-4
 Photographic rendering style 1-4
 photographic transparencies A-4, B-2
 Photoshop 5-5, 7-1 to 7-17
 physics of color A-1
 pixel-editing applications A-9, A-11
 pixels in raster images A-9
 PostScript and non-PostScript RGB data 7-13
 PostScript applications
 color handling 5-5
 using color in 5-5 to 5-7
 PostScript printer description file, *see* PPD
 PostScript Printer Driver
 Windows 98/Me 1-13
 PostScript printer drivers 6-2
 PowerPoint, *see* Microsoft Office
 PPD 1-12, 1-14, 1-16, 1-17, G-5
 prepress proof A-5, B-1

presentation print jobs
 rendering styles appropriate for 1-4
 using color in A-7
 Presentation rendering style 1-4
 press simulation, *see* CMYK Simulation
 option
 print devices
 consistency B-1
 gamut B-1
 maintenance B-2
 printing test prints B-2
 printer drivers
 Mac OS 1-17
 Windows 1-13 to 1-16
 printing
 raster images A-9
 techniques A-5
 prism A-1
 process colors 5-6, A-4, A-6
 profiles, device B-3
 proofing
 prepress A-5, B-1
 Pure Black Text/Graphics option 1-3, 1-10

Q

QuarkXPress 5-5, 8-6
 QuickDraw applications, using color in 5-3 to 5-5

R

raster images A-9 to A-11
 bit depth A-9, A-10
 file size A-10
 for offset press printing A-11
 printing A-9
 resolution A-10 to A-11
 scaling of A-12
 registration of colors A-8
 Relative Colorimetric 1-5
 Rendering Style option 1-2
 rendering styles 1-4, 5-3
 RGB color model 5-3, 5-5
 RGB Color Reference 5-2, 5-4

RGB images
 EPS, color conversion 1-6
 PostScript and non-PostScript 1-6
 RGB Separation option 1-3, 1-7
 RGB source color space, *see* source color space
 RGB Source option 1-2, 1-5

S

saturation A-1, A-3
 Saturation ICC rendering style 1-4
 scaling of raster images A-12
 scanners A-3
 screens, used in halftoning A-6
 Server Status option 3-5
 Setup, default color controls set in 1-2
 short-run color jobs, workflow issues 5-1
 short-run color printing 2-1
 simulation, *see* CMYK Simulation option
 simulations, custom 1-8
 Source 1–10 option 1-6
 source color space B-4
 source color space profile
 color conversion B-4
 spectral colors A-2
 spectral components of light A-1, A-2
 spectrophotometer
 calibrating 3-10
 split complements A-7
 Spot Color Matching option 1-3, 1-11, 5-7
 spot colors 5-5, A-6
 Status T C-1
 subtractive color model A-3, A-4
 subtractive primaries A-4
 sunlight A-1
 swatch color matching 5-6

T

targets 3-3
 Test Page
 calibration status 3-5
 examining 3-5

test prints B-2
 text
 font size A-8
 using color with A-8
 TIFF images
 assigning ICC profiles to 8-2
 preview 7-8, 7-14
 printing at full resolution 8-5
 recommended for imported images 7-7, 7-14, 8-2
 RGB 9-2
 tint A-3
 toner B-2
 transfer functions 3-3
 transparencies (photographic) A-4, B-2
 triads A-7

V

vector images A-9
 visible spectrum of light A-1

W

white point B-4
 White Point option 1-3
 Windows 2000 printer driver 1-16
 Windows 98/Me
 color management print options 1-14
 Windows 98/Me printer driver 1-13
 Windows Graphics Device Interface, *see* GDI applications
 Word, *see* Microsoft Office
 workflow
 advanced 2-8
 color proofing 2-1
 ICC profiles 2-14
 short-run jobs 2-1
 simple 2-3
 with Illustrator 2-10
 with Photoshop 2-8, 2-16

303 Velocity Way
Foster City, California 94404 USA

www.efi.com

26 Cunningham Street
North Sydney NSW 2060, Australia

Alameda Santos, 234 Suites 603 to 605
01418-000 São Paulo SP, Brasil

Kaiser swerther Straße 115
D-40880 Ratingen, Duesseldorf, Deutschland

Eastern Europe and Central Asia
Luegallee 18, D-40545 Duesseldorf, Deutschland

Parque Empresarial San Fernando, Edificio Francia
28830 Madrid, España

Immeuble Atria—5, Place des Marseillais
94227 Charenton-Le-Pont, Cedex, France

28/F, Soundwill Plaza, 38 Russell Street
Causeway Bay, Hong Kong

Centro Direzionale Milanofiori, Strada 6, Palazzo EI
20090 Assago (Milano), Italia

Shinjuku I-Land Wing 13F, 3-1 Nishi Shinjuku 6-chome,
Shinjuku-ku, Tokyo 160-0023, Japan

Boeing Avenue 201 - 207
1119 PD Schiphol-Rijk, Nederland

60-B Peck Seah Street
Singapore 079323

Frösundavägs Allé 15 4tr
169 70 Solna, Sverige

Stonebridge House, Padbury Oaks, Old Bath Road
Longford, Middlesex UB7 0EW, UK

プリンター機能の操作方法に関するお問い合わせは、
「リコープリンターコールセンター、imagico ダイヤル」にご連絡ください。



コールはイマジコ

0120-056-140

Electronics
FOR **Imaging™**

●受付時間：9～12時、13～17時（土、日、祝祭日、リコーの休業日を除く）

Color Controller E-810

JOB MANAGEMENT GUIDE

For use with the following color copiers:

Ricoh Aficio Color 6513

Gestetner CS213d

RexRotary CS813d

nashuatec CS513d

infotec 7513

Savin SDC413



Copyright © 2001 Electronics For Imaging, Inc. All rights reserved.

This publication is protected by copyright, and all rights are reserved. No part of it may be reproduced or transmitted in any form or by any means for any purpose without express prior written consent from Electronics For Imaging, Inc., except as expressly permitted herein. Information in this document is subject to change without notice and does not represent a commitment on the part of Electronics For Imaging, Inc.

The software described in this publication is furnished under license and may only be used or copied in accordance with the terms of such license.

This product may be covered by one or more of the following U.S. Patents: 4,500,919; 4,837,722; 5,212,546; 5,343,311; 5,424,754; 5,467,446; 5,506,946; 5,517,334; 5,537,516; 5,543,940; 5,553,200; 5,615,314; 5,619,624; 5,625,712; 5,666,436; 5,760,913; 5,818,645; 5,835,788; 5,866,856; 5,867,179; 5,959,867; 5,970,174; 5,982,937; 5,995,724; 6,002,795; 6,025,922; 6,041,200; 6,046,420; 6,065,041; 6,067,080; 6,112,665; 6,116,707; 6,118,205; 6,122,407; 6,134,018; 6,141,120; 6,151,014; 6,166,821; 6,184,873; 6,185,335; 6,201,614; 6,215,562; 6,219,659; 6,222,641; 6,225,974; 6,226,419; 6,238,105; 6,239,895; D406,117; D416,550; D417,864; D419,185; D426,206; D430,206; RE36,947

Trademarks

Fiery, the Fiery logo, Fiery Driven, Freedom of Press, ColorWise, EDOX, EFICOLOR, and RIP-While-Print are registered trademarks of Electronics For Imaging, Inc. in the U.S. Patent and Trademark Office and certain other foreign jurisdictions.

EFI, the Electronics For Imaging logo, eBeam, the Fiery Driven logo, Fiery LX, Fiery Si, Fiery X2, Fiery X2e, Fiery X3e, Fiery X4, Fiery XJ, Fiery XJe, Fiery XJ-W, Fiery Z4, Fiery ZX, Fiery X4, Fiery Z5, Fiery Z18, Fiery Z16, AutoCal, ColorCal, Command WorkStation, Continuous Print, DocBuilder, DocBuilder Pro, EFI Densitometer, Fiery Downloader, Fiery Driver, Fiery Link, Fiery Prints, Fiery Print Calibrator, Fiery Scan, Fiery ScanBuilder, Fiery Spark, Fiery Spooler, FreeForm, Harmony, Memory Multiplier, NetWise, PowerWise, RIPChips, ScanBuilder, Splash, the Splash logo, STARR Compression, Velocity, Velocity Balance, Velocity Build, Velocity Estimate, Velocity Scan, VisualCal, WebTools, WebSpooler, WebInstaller, and WebStatus are trademarks of Electronics For Imaging, Inc.

All other terms and product names may be trademarks or registered trademarks of their respective owners, and are hereby acknowledged.

Legal Notices

APPLE COMPUTER, INC. ("APPLE") MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE APPLE SOFTWARE. APPLE DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE APPLE SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE APPLE SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL APPLE, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE APPLE SOFTWARE EVEN IF APPLE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. Apple's liability to you for actual damages from any cause whatsoever, and regardless of the form of the action (whether in contract, tort [including negligence], product liability or otherwise), will be limited to \$50.

Part Number: 45022702

FCC Information

WARNING: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Class B Declaration of Conformity

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Industry Canada Class B Notice

This Class B digital apparatus complies with Canadian ICES-003.

Avis de Conformation Classe B de l'Industrie Canada

Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

RFI Compliance Notice

This equipment has been tested concerning compliance with the relevant RFI protection requirements both individually and on system level (to simulate normal operation conditions). However, it is possible that these RFI Requirements are not met under certain unfavorable conditions in other installations. It is the user who is responsible for compliance of his particular installation.

Dieses Gerät wurde sowohl einzeln als auch in einer Anlage, die einen normalen Anwendungsfall nachbildet, auf die Einhaltung der Funkentstörbestimmungen geprüft. Es ist jedoch möglich, dass die Funkentstörbestimmungen unter ungünstigen Umständen bei anderen Gerätekombinationen nicht eingehalten werden. Für die Einhaltung der Funkentstörbestimmungen einer gesamten Anlage, in der dieses Gerät betrieben wird, ist der Betreiber verantwortlich.

Compliance with applicable regulations depends on the use of shielded cables. It is the user who is responsible for procuring the appropriate cables.

Die Einhaltung zutreffender Bestimmungen hängt davon ab, dass geschirmte Ausführungen benutzt werden. Für die Beschaffung richtiger Ausführungen ist der Betreiber verantwortlich.

Software License Agreement

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS SOFTWARE. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE. INSTALLING OR USING THE SOFTWARE INDICATES THAT YOU AGREE TO AND ACCEPT THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS AGREEMENT YOU MAY RETURN THE UNUSED SOFTWARE FOR A FULL REFUND TO THE PLACE OF PURCHASE.

License

Electronics For Imaging, Inc. ("EFI") grants you a non-exclusive license to use the software ("Software") and accompanying documentation ("Documentation") included with the Product. The Software is licensed, not sold. You may use the Software solely for your own customary business or personal purposes. You may not rent, lease, sublicense or lend the Software. You may, however, permanently transfer all of your rights under this Agreement to another person or legal entity provided that: (1) you transfer to the person or entity all of the Software and Documentation (including all copies, updates, upgrades, prior versions, component parts, the media and printed materials, and this Agreement); (2) you retain no copies of the Software and Documentation, including copies stored on a computer; and (3) the recipient agrees to the terms and conditions of this Agreement.

You may not make or have made, or permit to be made, any copies of the Software or portions thereof, except as necessary for backup or archive purposes in support of your use of the Software as permitted hereunder. However, under no circumstances may you make or have made, any copies of any Software included on the ROM, the hard disk drive or any other component of the controller board or hardware. You may not copy the Documentation. You may not attempt to alter, disassemble, decompile, decrypt or reverse engineer the Software.

Proprietary Rights

You acknowledge that the Software is proprietary to EFI and its suppliers and that title and other intellectual property rights therein remain with EFI and its suppliers. Except as stated above, this Agreement does not grant you any right to patents, copyrights, trade secrets, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software. You may not adopt or use any trademark or trade name which is likely to be similar to or confusing with that of EFI or any of its suppliers or take any other action which impairs or reduces the trademark rights of EFI or its suppliers.

Confidentiality

You agree to hold the Software in confidence, disclosing the Software only to authorized users having a need to use the Software as permitted by this Agreement and to take all reasonable precautions to prevent disclosure to other parties.

Remedies And Termination

Unauthorized use, copying or disclosure of the Software, or any breach of this Agreement will result in automatic termination of this license and will make available to EFI other legal remedies. In the event of termination, you must destroy all copies of the Software and all of its component parts. All provisions of this Agreement relating to disclaimers of warranties, limitation of liability, remedies, or damages, and EFI's proprietary rights shall survive termination.

Limited Warranty And Disclaimer

EFI warrants to the original purchaser ("Customer") for thirty (30) days from the date of original purchase from EFI or its authorized retailer that the Software will perform in substantial conformance to the Documentation. EFI warrants the media containing the Software against failure during the above warranty period. EFI makes no warranty or representation that the Software will meet your specific requirements, that the operation of the Software will be uninterrupted or error free, or that all defects in the Software will be corrected.

EXCEPT FOR THE ABOVE EXPRESS LIMITED WARRANTY, EFI MAKES AND YOU RECEIVE NO WARRANTIES OR CONDITIONS ON THE SOFTWARE, EXPRESS, IMPLIED, STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND EFI SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Limitation Of Liability

IN NO EVENT WILL EFI OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST PROFITS, COST OF COVER OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING FROM THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE OR FAILURE OF THE SOFTWARE, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF EFI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. YOU ACKNOWLEDGE THAT THE PRICE OF THE PRODUCT REFLECTS THIS ALLOCATION OF RISK. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. EFI DOES NOT EXCLUDE LIABILITY IN RESPECT OF PERSONAL INJURY, DEATH, WILLFUL MISCONDUCT OR GROSS NEGLIGENCE, EXCEPT TO THE MAXIMUM EXTENT THAT IT CAN BE EXCLUDED OR LIMITED BY LAW.

Export Controls

You agree that you will not export or re-export the Software in any form in violation of any applicable laws or regulations of the United States or the country in which you obtained them.

U.S. Government Restricted Rights

Software provided with this Product is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software Restricted Rights at 48 CFR 52.227-19, as applicable.

General

The laws of the State of California govern this Agreement. You agree that this Agreement shall not be subject to the United Nations Convention on Contracts for the International Sale of Goods (1980). This Agreement is the entire agreement held between us and supersedes any other communications or advertising with respect to the Software. If any provision of this Agreement is held invalid, the remainder of this Agreement shall continue in full force and effect.

If you have any questions, please see EFI's web site at www.efi.com.

Contents

Preface

About this manual	xiii
Terminology	xv
About the documentation	xvi
E-810 job environments	xvii
Permissions	xvii
Safety warnings	xviii
Cleaning the E-810	xviii

Chapter 1: Using the Control Panel

Introduction to the E-810 Control Panel	1-1
Activity light	1-2
Buttons	1-2
Display window	1-3
Functions menu	1-5
Control Panel E-810 status messages	1-7
Starting and shutting down the E-810	1-8
Restarting the E-810	1-9
Shutting down the E-810	1-10

Chapter 2: Using FieryBar

Introduction to FieryBar	2-1
Status	2-1
Activity light	2-2
Commands	2-3
Starting and shutting down the E-810	2-5
Restarting the E-810	2-6
Shutting down the E-810	2-7

Chapter 3: Introduction to Command WorkStation

About Command WorkStation	3-1
Starting up and logging in	3-4
Connecting to the server	3-5
Logging in	3-6
Logging out	3-7
Command WorkStation interface	3-8
Window area (Queues, Archive, FreeForm, Job Log)	3-9
Menu bar	3-10
Server selection tabs	3-13
Sliders	3-14
Job ticket information	3-15
Window selection tabs	3-16
Queues window	3-16
Status bars	3-17
Job icons	3-20
Spool area	3-20
RIP area	3-22
Print area	3-23
Job commands	3-24
Archive window	3-27
FreeForm window	3-29
About FreeForm printing	3-29
Using the FreeForm window	3-30
Job commands for FreeForm master jobs	3-32
Filtering jobs in the FreeForm window	3-32
Assigning and monitoring FreeForm Masters	3-33
Job Log window	3-35
Filtering jobs	3-37

Job properties	3-41
Viewing and editing job properties	3-41
Thumbnails and full-screen previews	3-42
Editing and merging files with DocBuilder Pro	3-43
Full-screen previews	3-46

Chapter 4: Managing Print Jobs

Communicating with users	4-1
What the user needs to know	4-1
How users communicate print requirements	4-3
Customizing the Command WorkStation window	4-4
Setting Command WorkStation Preferences	4-5
Printing server information pages	4-6
Workflow scenarios	4-8
Using the copier	4-10
Canceling jobs	4-11
Page-level operations of Command WorkStation	4-12
Previewing print jobs	4-12
Merging PostScript and raster files with DocBuilder Pro	4-15
Viewing and overriding print settings	4-22
Printing variable data documents (FreeForm)	4-24
Downloading files and fonts	4-25
Managing server fonts	4-28
Managing jobs with multiple color servers	4-30
Archiving jobs	4-31
Importing archived jobs from external media	4-34
Using the Job Log	4-35
Align Paper Trays	4-37
Other server management commands	4-39

Chapter 5: Using Imposition

Main window	5-1
Job previews	5-3
Navigating in the main window	5-4
Switching between page view and layout view	5-5
Setting magnification levels	5-6
Viewing the sheets	5-7
Using templates	5-8
Template pop-up menu	5-9
Saving your work	5-10

Chapter 6: Advanced Features of DocBuilder Pro

Imposition settings	6-1
Sheet area	6-2
Layout area	6-4
Scaling area	6-6
Finishing area	6-8
Modifying the layout manually	6-11
Reordering pages in Layout mode	6-11
Rotating pages	6-12
Setting gutter sizes	6-13
Managing templates	6-14
Tips for using the Imposition feature of DocBuilder Pro	6-15
DocBuilder Pro and Acrobat technology	6-15
File management	6-16
Saving imposed jobs	6-17

Chapter 7: Overview of Fiery WebTools

Fiery WebTools	7-1
Access privileges	7-1
Using Fiery WebTools	7-2

Chapter 8: Fiery WebSpooler and Fiery Spooler

Tracking and managing jobs with Fiery WebSpooler	8-1
About the Fiery WebSpooler window	8-3
Manipulating job options and job flow	8-4
Overriding job option settings	8-7
Thumbnails and full-screen previews (DocBuilder)	8-8
Using the Job Log	8-9
Fiery Spooler for Mac OS computers	8-11
Differences between Fiery Spooler for Mac OS and Fiery WebSpooler	8-13

Appendix A: Basics of Imposition

Printing books with the Imposition feature of DocBuilder Pro	A-1
Basics of imposition layout	A-1
Printer's marks	A-4
Additional sheets	A-5
Binding methods	A-6
Gang-up printing	A-8

Appendix B: Templates

1-Up Full Bleed	B-1
2-Up Perfect	B-2
2-Up Saddle	B-4
3-Up Trifold Brochure	B-6
4-Up Gate Fold	B-8
4-Up Head to Head	B-10
4-Up Z-Fold	B-12

Appendix C: Troubleshooting

Error messages	C-1
Maintaining optimal system performance	C-5
Troubleshooting	C-6
Command WorkStation hangs	C-6
Command WorkStation fails to connect to a E-810	C-7
Unexpected printing results	C-8
Clearing the server	C-9
Users are unable to connect to the copier	C-9
Setup error messages	C-10

Index

Preface

This manual is intended for Color Controller E-810[™] operators or administrators, or users with the necessary access privileges, who monitor and manage job flow, perform color calibration, and troubleshoot problems that may arise. It describes the functions and features of Fiery[®] utilities and Fiery WebTools[™] for the purposes of print job management.

NOTE: The term “E-810” is used in this manual to refer to the Color Controller E-810.

The E-810 includes Fiery Command WorkStation[™] software, which enables an operator to manage all jobs sent to the E-810. Although it may not be the case at all sites, the documentation for this product assumes the presence of an operator who controls and manages jobs sent by users from remote workstations.

Client utilities can be installed onto the E-810 from the User Software CD if the Fiery Advanced Controller Interface option is installed. Do not install any other applications onto the E-810. Other applications are not supported and can cause system problems.

About this manual

This manual is organized as follows:

- Chapter 1 describes the E-810 Control Panel. It explains the various messages and icons you might see on the Control Panel and describes how to print system information pages from the Control Panel. It also explains how to start up and shut down the E-810.
- Chapter 2 describes FieryBar[™]. It explains the various messages and icons you might see and explains how to start up and shut down the E-810 if you have the Advanced Controller Interface option installed.

- Chapters 3 and 4 describe the Command WorkStation interface. Command WorkStation software can be installed on networked Windows 9x/Me or Windows NT 4.0/2000 computers and is used to view and manage virtually all aspects of E-810 activity. In addition to providing a graphic display of the job flow, Command WorkStation allows you to reprint or hold jobs, view and override print option settings, download files, manage printer fonts, preview print jobs, merge rasterized jobs, calibrate the E-810, and perform Setup (server configuration). This chapter also provides information on archiving jobs, moving jobs between E-810 color servers, and printing variable data documents.
- Chapter 5 describes how to use the Imposition feature of Fiery DocBuilder Pro to arrange the pages of your print job in special layouts for folding, binding, or cutting after printing. The Imposition feature is only available if you have the DocBuilder Pro option for Command WorkStation installed.
- Chapter 6 provides instructions on using the advanced aspects of the Imposition feature of DocBuilder Pro to create custom layouts and get the most from the Imposition feature.
- Chapter 7 introduces Fiery WebTools, explains how to access them, and directs you to sources of more information (in this manual or in other manuals in the documentation set).
- Chapter 8 describes Fiery WebSpooler and Fiery Spooler™, which can be used to view and manage E-810 job activity. The interface and features of Fiery WebSpooler have identical counterparts in Command WorkStation; therefore, this chapter refers you to Chapters 3 and 4 for details about many Fiery WebSpooler functions.
- Appendix A provides an overview of the terms and concepts of Imposition, including various folding, binding, and cutting methods.
- Appendix B includes descriptions of the built-in templates available from the Imposition feature of DocBuilder Pro.
- Appendix C lists error messages that you might see on the E-810 Control Panel, FieryBar, Command WorkStation, Fiery WebSpooler, Fiery Spooler, or the copier, and contains some troubleshooting information.

NOTE: The Advanced Controller Interface is available as an option. For more information, contact your authorized service/support technician.

Terminology

Specific terms are explained as they are introduced. However, the following general terms are used throughout:

- **PostScript (PS)**—A computer language designed as a page description language. The E-810 uses this language for imaging the page and for communication with applications and with the print engine.

The term “PostScript” can also be used to refer to PDF (Portable Document Format) data jobs. PDF is a structured form of Adobe PostScript that provides the ability to preview, scale, and reorder pages. Where applicable, the term “PDF” is specifically used to refer to PDF data or jobs.

- **Job**—A file consisting of PostScript commands and comments that describe the graphics, sampled images, and text that should appear on each page of a document, and the printer options that should be used in printing, such as media or color rendering style.
- **Spool**—Write to a disk. Usually used in this manual to refer to a PostScript print job being saved to the E-810 hard disk in preparation for processing and printing.
- **RIP**—Acronym for raster image processing, which changes text and graphics commands into descriptions of each mark on a page. In common use as a noun, a RIP (raster image processor) is the computer processor that performs this function.
- **Print**—The process of rendering, or imaging, a page or a job on a printer.

These concepts explain how the E-810 and the copier work together as a powerful printing system. The E-810 RIP changes text and graphics commands in PostScript into color specifications for each dot of toner deposited on a page by the copier.

About the documentation

This manual is part of the set of E-810 documentation, which includes the following manuals for users and system administrators:

- The *Configuration Guide* explains basic configuration and administration of the E-810 for the supported platforms and network environments. It also includes guidelines for setting up UNIX, Windows NT 4.0, and Novell NetWare servers to provide PostScript printing services to clients.
- *Getting Started* describes how to install software to enable users to print to the E-810. Specifically, it describes installation of PostScript printer drivers, printer description files, and other user software provided on the User Software CD. It also explains how to connect each user to the network.
- The *Printing Guide* describes the printing features of the E-810 for users who send jobs via remote workstations on the network.
- The *Color Guide* provides information on managing the color output of your Color Controller E-810. It addresses concepts and issues associated with printing to the E-810 and outlines key workflow scenarios. This manual explains how to calibrate your copier and take advantage of the ColorWise® color management system, as well as features in Fiery ColorWise Pro Tools™. In addition, the *Color Guide* offers information on printing from popular Windows and Mac OS applications.
- The *Job Management Guide* explains the functions of the E-810 client utilities, including Command WorkStation, and how they are used to manage jobs. This manual is intended for an operator or administrator, or a user with the necessary access privileges, who needs to monitor and manage job flow, perform color calibration, and troubleshoot problems that may arise.
- *Release Notes* provide last-minute product information and workarounds for some of the problems you may encounter.

E-810 job environments

The E-810 supports several levels of control of printing, job management, and setup, and offers you the flexibility to choose the configuration that corresponds to the requirements of your site. Your situation may correspond to one of the descriptions outlined below, or you may prefer an intermediate level of control.

At one extreme, an administrator or operator in a high-volume printing environment controls the entire job flow and all printing. Print jobs arriving from remote users are spooled to the server disk and stored until the operator decides it is time to print them. Additional functions (job overrides, prioritizing, font management) are reserved for the administrator or operator.

At the other extreme, anyone on the local network can control all printing and server functions; operator intervention is not necessary. Users can print from their workstations to any of the published print connections. Anyone can use Command WorkStation, Fiery WebSpooler, or Fiery Spooler to control any print job.

The spectrum of control that an administrator can implement is described fully in the *Configuration Guide*.

Permissions

Support for these job environments is achieved by a combination of E-810 Setup options. By default, anyone can access Setup, but the administrator can limit access to Setup by specifying an Administrator password for the E-810 (see the *Configuration Guide*).

Also by default, anyone can log in to Command WorkStation, Fiery WebSpooler, or Fiery Spooler and control job flow, but an administrator can restrict access to these functions by specifying an Operator password.

The three security levels, from greatest to least control, are:

- **Administrator**—confers control of Setup and is the highest level of control. The person who has access to Setup can control the printing and job management environment by choosing which queues are enabled, and by electing to set passwords. The Administrator can also manage the fonts on the server, clear the server disk when necessary, and set a common web link for all users who log in to the E-810 using their web browser.
- **Operator**—includes control of print jobs that arrive at the server and the ability to reboot the server.
- **Guest**—allows users to view the status of active jobs and the list of stored jobs. They cannot make changes to jobs or change their printing instructions. A password is not needed to log in as Guest and view jobs from Command WorkStation, Fiery WebSpooler, or Fiery Spooler windows.

This manual describes the features of the Fiery client utilities, including Command WorkStation, and all operator privileges, whether those privileges are available to everyone or are exclusive to only certain people. It also includes descriptions of administrator functions, sometimes referring you to other manuals for more information.

Safety warnings

The E-810 display window is a liquid crystal display (LCD) that is made of glass and can break. Do not subject it to strong shocks.

If the display window breaks and the liquid crystal material leaks out, do not inhale, ingest, or touch it. If the material gets on your skin or clothing, wash it off with soap and water immediately.

Do not touch or put pressure on the panel. This will change the color of the panel.

Cleaning the E-810


Clean the E-810 with a soft cloth moistened with isopropyl alcohol or ethyl alcohol. *Never* use water or ketone, as these may permanently alter the display.

Chapter 1: Using the Control Panel

You can use the E-810 Control Panel to view status information, print special pages, and set up printing. While most elements in the Control Panel display have counterparts in Command WorkStation, you can view current functions on the Control Panel even when Command WorkStation is not connected to the server or is not running.

Introduction to the E-810 Control Panel

The Control Panel shown below is located on the front of the E-810.

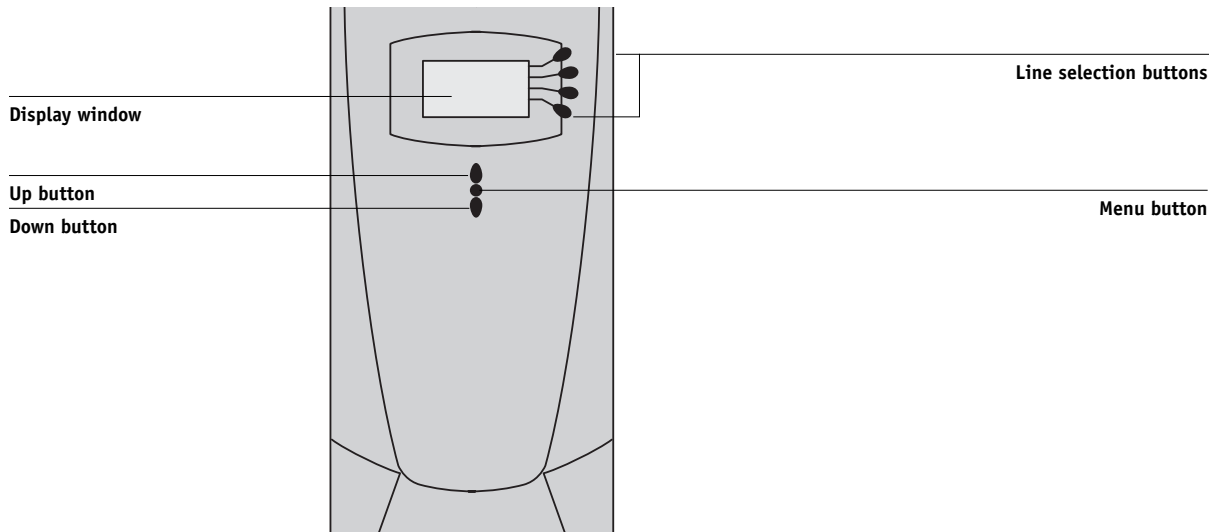

Activity light

The activity light indicates the current E-810 activity. If the light is:

Solid red	An error occurred, causing the E-810 to be disabled.
Flashing red	An error occurred, causing printing to be disabled, but the E-810 is capable of processing.
Solid green	The E-810 is idle.
Flashing green	The E-810 is processing or printing a job, or communicating with a remote computer.
No light	The E-810 is turned off or starting up.

Buttons

Line selection buttons	Use the four line selection buttons on the right side of the Control Panel to select the command displayed on the corresponding line of the display window. When a button is active, a special character (>) appears in the display window next to it.
Up and Down buttons	Use these buttons to scroll to different screens in multi-screen lists, to select Setup options from a list of available options, and to scroll alphanumeric characters.
Menu button	Press this button to view other screens. Under normal operation, the Control Panel displays the Info, RIP, or Print Status screen with information about the status of the E-810. If you press the Menu button, the Functions menu appears, and you can perform additional operations (see page 1-5). If a job is processing or printing, press the Menu button to cycle through the active screens.
Power button	Press this button to turn the E-810 on and off.
Reset button	Use this button to restart the E-810 after you have selected Shut Down System from the Shut Down menu.

Display window

The display window provides information about the status of the E-810, displays menu information, and enables you to view and edit information in the Setup menus.

The status area at the bottom of the display window displays text that tells you what screen you are looking at and highlights one of the icons to indicate what the E-810 is doing. Only the icons for the screens that are currently available appear. The menu button cycles among the active screens.

The screens are:



Alert Status

If there is a problem with processing a job or with printing functions, an error message appears on the Control Panel. For information on error messages, see Appendix C.



Print Status

When the E-810 is printing a job, the Print Status screen appears. This screen displays the following:

Cancel Job—Press the top line selection button to cancel the job currently printing.

User name—The name of the user who sent the job currently processing.

Pages/Total—The number of copies of the current job printed and the total number of copies of the job requested.



RIP Status

When the E-810 is processing a job, the RIP Status screen appears. This screen displays the following:

Cancel Job—Press the top line selection button to cancel the job currently processing. The E-810 cancels the job before printing begins.

Document name—The name of the document currently processing.

User name—The name of the user who sent the job currently processing.

Kilobytes—The size (in kilobytes) of the job processed so far.

NOTE: This number is always displayed in kilobytes; for example, 10MB is displayed as 10000KB.

**Info Status**

When the E-810 is not processing or printing a job, it displays information about the current server and software. It displays the following information:

Server Name—The E-810 name, as it is configured in Setup.

Status—The current status of the E-810. The E-810 status can be: Idle, Initializing, Busy, Processing, or Printing.

Megabytes—The space (in megabytes) available on the E-810 hard disk, for example, 756MB.

Version—The system software version running on the E-810.

**Functions**

You can press the Menu button to display the Functions menu. Use the up and down buttons to scroll through the list. Press the line selection button to the right of a command to select that command. For more information, see page 1-5.

**Network**

The Network icon appears at the lower left of any of the other screens when a job is being sent to the E-810 over the network. The Network icon also appears, together with a flashing green activity light, when a remote utility is running.

Functions menu

The Functions menu provides many of the options available from Command WorkStation. You can choose the following commands from this menu:

Print Pages

Print special pages from the E-810. You can print the following pages from the submenu that appears:

Test Page—A Test Page enables you to confirm that the E-810 is properly connected to the copier, and provides color and grayscale samples to troubleshoot problems with the copier or the E-810. The following settings are among those listed on the Test Page: Server Name, Printer Model, color settings, calibration information, and date and time the Test Page was printed.

Configuration—Prints the Configuration page, which gives the current server and device configuration. This page lists general information about the hardware and software configuration of the E-810, the current options for all Setup settings, information about the current calibration, and the Ethernet and Token Ring addresses of the E-810.

Job Log—Prints a log of the last 55 jobs. For information on the fields in the Job Log and on printing it in other forms, see “Job Log window” on page 3-35.

Control Panel Map—Prints the Control Panel Map, which is an overview of the screens you can access from the Control Panel. For information about using these screens to set up the E-810, see the *Configuration Guide*.

Color Charts—Prints samples of the RGB, CMY, and PANTONE colors available from the E-810.

Font List—Prints a list of all fonts currently on the E-810 hard disk.

Suspend Printing

Suspend communication between the E-810 and the copier. You *must* suspend printing if you want to interrupt the current E-810 job so that you can use the copier to make copies or print another job first. Jobs continue to process on the E-810. The activity light is turned off when this command is executed. After you make the copies, select Resume Printing to continue printing jobs from the E-810.

Resume Printing	Resume communication between the copier and the E-810 after you have finished making copies or printing other jobs.
Shut Down	<p>Shut down all E-810 activity in the correct manner and then restart. Choose this option instead of using the power switch on the back of the E-810. The following options are available from the submenu that appears:</p> <p>Restart Server—Restarts the server without shutting down the E-810 hard disk.</p> <p>Shut Down System—Shuts down the E-810 hard disk.</p> <p>Reboot System—Restarts the system after shutting down the E-810 hard disk.</p>
Clear Server	Clear all jobs in all server queues as well as all jobs archived on the E-810 hard disk, the index of archived jobs (in the Archive window), all FreeForm masters, the index of FreeForm masters (in the FreeForm window), and the Job Log. Check with your administrator or operator before choosing Clear Server. If an Administrator password has been set, you must enter it to access Clear Server.
Run Setup	Enter the Setup menu and change Setup option settings. For more details, see the <i>Configuration Guide</i> .
Run Diagnostics	This function is provided for service representatives only. Contact your authorized service/support technician for information about running diagnostics.
Calibration	Calibrate the E-810 using AutoCal. For more information, see the <i>Color Guide</i> . If an Administrator password has been set, you must enter it to access Calibration.

Control Panel E-810 status messages

When the E-810 has control of the Control Panel, the LCD provides information about the current status of the E-810.

Control Panel E-810 status messages are:


Please Wait	Appears when the copier is initially turned on.
Loading...	Appears when E-810 system software is being loaded.
Info <Server Name>	Appears when the E-810 is idle.
Info Idle	Appears when the E-810 is idle and the Down arrow is pressed once.
Info #MB #v	Appears when the E-810 is idle and the Down arrow is pressed twice. #MB indicates the amount of free space on the E-810 hard disk; #v indicates the version of system software currently running on the E-810.
<Server Name> Processing	Appears when the E-810 is processing a job. The activity light flashes green.
<Job Name> Busy #K	Appears when the E-810 is processing a job. The #K value increases to indicate the amount of the job that has been processed. The activity light flashes green.
Sending <Job Name>	Appears when a special page from the Functions>Print Pages menu is printing. Job Name indicates the type of special page. The activity light flashes green.
<Server Name> Printing	Appears when the E-810 is printing a job. The activity light flashes green.
<User Name> Copies: #C/#T	Appears when the E-810 is printing a job. #C indicates the copy currently printing; #T indicates the total number of copies in the job. The activity light flashes green.
Canceling Print job	Appears when the Cancel button has been pressed and the currently printing or processing job is being canceled.

Starting and shutting down the E-810

Generally, you can leave the E-810 running all the time. This section describes how to shut down and restart the E-810 when necessary.

To START THE E-810

- **Move the power switch on the back of the E-810 to the On position. If the copier is also turned off, turn it on before turning on the E-810.**

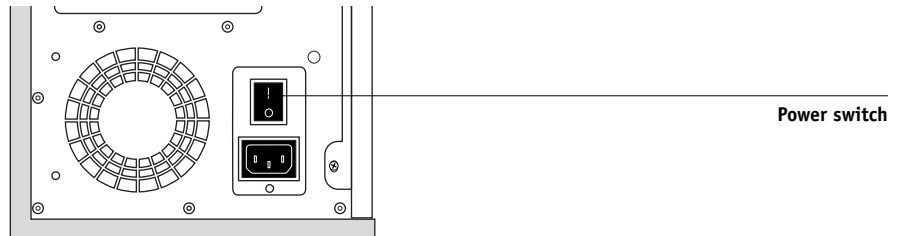

Diagnostic messages appear on the E-810 Control Panel. If any diagnostics fail, more information and instructions appear. Contact your service representative if the E-810 encounters problems while running the diagnostics. The E-810 continues starting up and displays the message Idle when it is ready to receive data.

NOTE: If an Administrator password has been set, you are required to enter it to access Setup.

If you press a button, the following options appear. For information about the Setup menus and options, see the *Configuration Guide*.

Choose	To do this
Exit Setup	Exit the Setup menus; the E-810 reboots.
Server Setup	Enter the Server Setup menus.
Network Setup	Enter the Network Setup menus.
Printer Setup	Enter the Printer Setup menus.
PS Setup	Enter the PostScript Setup menu.
Color Setup	Enter the Color Setup menu.
Job Log Setup	Enter the Job Log Setup menu.
Change Password	Change the Administrator password.

Restarting the E-810

Follow the procedure below to restart the E-810, rather than using the power switch on the back of the E-810.

TO RESTART THE E-810

1. **Make sure the E-810 is not receiving, processing, or printing a job.**

The status message on the Control Panel should read Idle.

NOTE: If a job from the Print queue is processing, it will continue processing and print after the E-810 is restarted; if a job sent to the Direct connection is processing, it will not finish processing or printing.

2. **Press the Menu button to display the Functions menu.**
3. **Use the Down button to scroll to the last screen, and choose Shut Down.**
4. **Use the line selection button to choose Restart Server.**

Shutting down the E-810

You may need to shut down the E-810 for service. When you do so, fonts that have been downloaded to the hard disk drive are not deleted. Print jobs in the Hold and Printed queues and jobs that have been processed but not printed are not deleted and are available for printing when you restart the E-810.

TO SHUT DOWN THE E-810

1. Make sure the E-810 is not receiving, processing, or printing a job.

The status message on the Control Panel should read Idle. If a job has just finished processing or printing, wait at least 5 seconds after the Control Panel status message changes to Idle before proceeding.

NOTE: If a job from the Print queue is processing, it will continue processing and print after the E-810 is restarted; if a job to the Direct connection is processing, it will not finish processing or printing.

2. Press the Menu button to display the Functions menu.

3. Use the Down button to scroll to the last screen, and choose Shut Down.

4. Use the line selection button to choose Shut Down System.

Proceed to the next step when the screen displays the message, "It is now safe to power off the system."

5. Turn off the E-810 by moving the power switch on the back to the Off position.


NOTE: After turning off the E-810, make sure to also turn off the copier. Leaving the copier turned on while the E-810 is turned off can lead to excessive drain on the E-810 motherboard battery.

Chapter 2: Using FieryBar

If you have the Fiery Advanced Controller Interface (option) installed, you can use FieryBar to view E-810 status information, launch software, set up and restart the E-810, delete stored jobs, cancel active jobs, and log off Windows. While most elements in FieryBar have counterparts in Command WorkStation, you can view current functions on FieryBar even when Command WorkStation is not running.

Introduction to FieryBar

FieryBar, located at the top of the monitor screen, comprises the following parts:

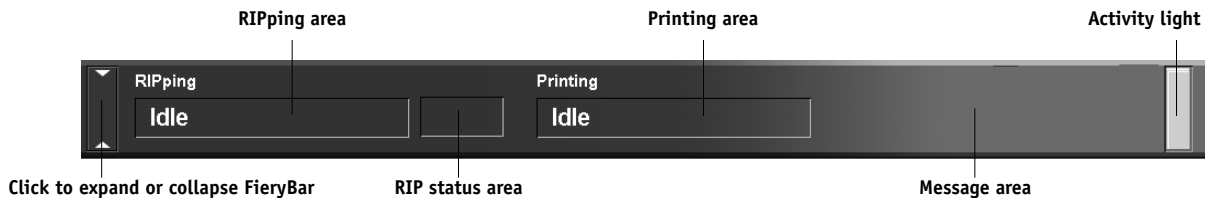

Status

 
FieryBar displays information about the status of the E-810:

RIPping area Displays the name of the job currently processing.


RIP status area Displays the amount of the job that has processed.



Printing area Displays the name of the job currently printing.



 Message area Displays error messages and other E-810 information.



Activity light

The activity light on the rightmost edge of FieryBar indicates current E-810 activity. If the light is:

Solid red	An error occurred, causing the E-810 to be disabled. Check the message area for details of the error.
Flashing red	An error occurred, causing printing to be disabled, but the E-810 is capable of processing. Check the message area for details of the error.
Solid green	The E-810 is idle.
Flashing green	The E-810 is processing or printing a job, or communicating with a remote computer. Check the RIPping area, the RIP status area, and the printing area for details.
No light	The E-810 is starting up.

Commands

Right-clicking FieryBar or the Fiery icon on the right side of the Windows taskbar enables you to access many E-810 features. Choose the following commands from the menu that appears:

Command WorkStation	Launches Command WorkStation. For more information on connecting to and using the features of Command WorkStation, see Chapters 3 and 4.
ColorWise Pro Tools	Launches ColorWise Pro Tools. For more information on connecting to and using the features of ColorWise Pro Tools, see the <i>Color Guide</i> .
Set Up Fiery	Opens the E-810 Setup dialog box. For more information about Setup options, see the <i>Configuration Guide</i> .
Restart Fiery	Shuts down all E-810 activity in the correct manner before restarting. Use this option instead of the power switch on the back of the E-810 (see “Starting and shutting down the E-810” on page 2-5).
Clear Server	Clears all jobs in all server queues, as well as all jobs archived on the E-810 hard disk, the index of archived jobs (in the Archive window), all FreeForm masters, the index of FreeForm masters (in the FreeForm window), and the Job Log. Check with your administrator before choosing Clear Server. After choosing this option from FieryBar, a warning message appears; click OK to clear the server and restart the E-810.
Cancel RIP	Cancels the job currently processing on the E-810.
Cancel Print	Cancels the job currently printing on the E-810.

Suspend Print	Suspends communication between the E-810 and the copier. You <i>must</i> suspend printing to interrupt the current E-810 job so that you can use the copier to make copies, or to print another job first. Jobs continue to process on the E-810. After you make the copies, select Resume Print to continue printing jobs from the E-810.
Resume Print	Resumes communication between the copier and the E-810 after you have finished making copies or printing other jobs.
Log Off Windows	Closes all open programs, enabling you to log on as a different user. After choosing this option from FieryBar, a warning message appears; click OK to log off.
Hide FieryBar	Hides FieryBar. To show FieryBar after hiding it, right-click the Fiery icon on the right side of the Windows taskbar and choose Show FieryBar from the menu that appears.

Starting and shutting down the E-810

Generally, you can leave the E-810 running all the time. This section describes how to shut down and restart the E-810 when necessary.

To start the E-810

- **Move the power switch on the back of the E-810 to the On position (see page 1-8). If the copier is also turned off, turn it on before turning on the E-810.**

When FieryBar displays Idle, enter E-810 Setup by right-clicking FieryBar and choosing Set Up Fiery from the menu that appears.

In the Fiery Setup dialog box, there are three tabs:

Click	To do this
General Setup	Configure the General Setup options.
Network Setup	Configure the Network Setup options.
Printer Setup	Configure the Printer Setup options.

For information about the Setup options, see the *Configuration Guide*.

Restarting the E-810

Follow the procedure below to restart the E-810, rather than using the power switch on the back of the E-810.

TO RESTART THE E-810

1. **Make sure the E-810 is not receiving, processing, or printing a job.**

Make sure the RIPping and Printing areas on FieryBar both read Idle.

NOTE: If a job from the Print queue is processing, it will continue processing and print after the E-810 is restarted; if a job sent to the Direct connection is processing, it will not finish processing or printing.

2. **Right-click FieryBar, and choose Restart Fiery from the menu that appears.**

A Warning dialog box appears.

3. **Click OK to restart the E-810.**

Shutting down the E-810

You may need to shut down the E-810 for service. When you do so, fonts that have been downloaded to the hard disk drive are not deleted. Print jobs in the Hold and Printed queues and jobs that have been processed but not printed are not deleted and are available for printing when you restart the E-810.

TO SHUT DOWN THE E-810

- 1. Make sure the E-810 is not receiving, processing, or printing a job.**

Make sure the RIPping and Printing areas on FieryBar both read Idle. If a job has just finished processing or printing, wait at least 5 seconds after the RIPping and Printing areas switch to Idle before proceeding to step 2.

NOTE: If a job from the Print queue is processing, it will continue processing and print after the E-810 is restarted; if a job to the Direct connection is processing, it will not finish processing or printing.

- 2. Click the Windows Start button, and choose Shut Down.**

- 3. Select “Shut down the computer?” and click Yes.**

A message appears, informing you it is safe to shut down the computer.

- 4. Turn off the system by moving the power switch on the back of the E-810 to the Off position.**

Chapter 3: Introduction to Command WorkStation

This chapter introduces you to the graphical user interface of Command WorkStation. First, you select a user level and log in to the E-810. Once you have logged in, you can tour the Command WorkStation windows. Your exploration will be more complete if you have some jobs in the Spool area (jobs printed to the Hold queue) and have the ability to send more jobs from a nearby computer.

Chapter 4 builds on the information in this chapter and describes job monitoring and control in more depth.

About Command WorkStation

Command WorkStation provides a window on E-810 and copier functions, and an interface from which you can control those functions. The Command WorkStation software can be installed on a Windows 9x/Me or Windows NT 4.0/2000 computer with a TCP/IP network connection to the E-810.

By default, no passwords are set on the E-810—in this default state, anyone can perform Setup and use all Command WorkStation functions. Until an Administrator password is defined in E-810 Setup, you can log in to Command WorkStation as an Administrator without entering a password, and you are given full privileges.

After the Administrator has performed Setup and specified passwords, Command WorkStation user options depend on your login level. See the table below for a list of which privileges are available for each level of access.


Privilege	Guest	Operator	Administrator
A view of current printing jobs and jobs stored on the E-810	X	X	X
Control of printing jobs		X	X

Privilege	Guest	Operator	Administrator
Use of the functions and features of DocBuilder Pro		X	X
Access to Setup, management of resident fonts, performing calibration and clearing of the E-810 disk and the Job Log			X

For information about Setup and specifying passwords, see the *Configuration Guide*.

After you connect to a E-810 and log in, your first view of Command WorkStation is the Queues window (as indicated by the tab at the bottom), which is divided into three regions by Spool, RIP, and Print status bars. The Queues window is surrounded by a frame that includes slider buttons and menus.

Once the E-810 receives print jobs, the Queues window becomes a dynamic display, filled with the names of jobs and their characteristics. Status bars animate in real time as new jobs are processed and printed, and jobs move to different display areas. An operator, who has complete job control, sets the process in motion for each job.

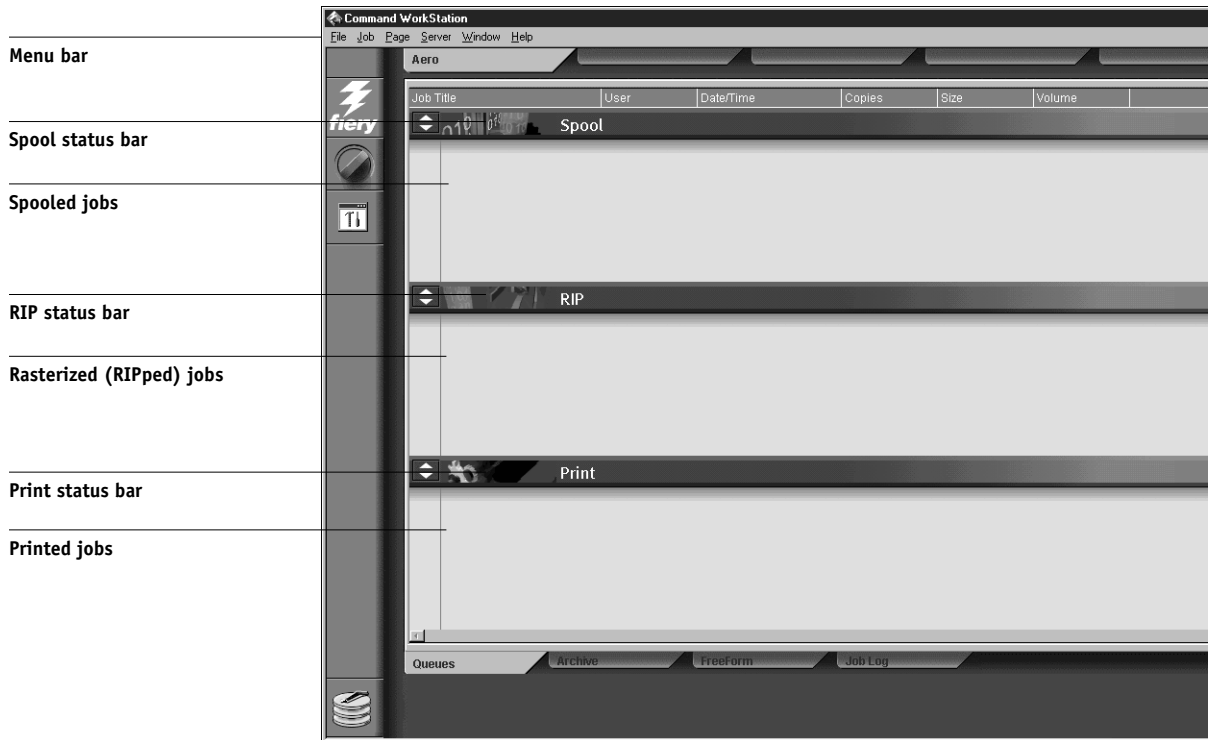

The Spool, RIP, and Print areas of the Queues window represent the stages of printing a job. Jobs come in at the top level (Spool) and drop down to the Print level, unless they are held along the way.

- **Spooled jobs**—Jobs listed below the Spool status bar area are PostScript files stored on the E-810 disk. These jobs were sent to either the Print queue (white printer icons) or Hold queue (yellow icons).

NOTE: The term “PostScript” is used in this manual to refer to both PostScript and PDF data jobs. PDF is a structured form of PostScript that provides the ability to preview, scale, and reorder pages. Where applicable, the term “PDF” is specifically used to refer to PDF data or jobs.

- **RIPped jobs**—Jobs listed below the RIP status bar are ready to print. They have already been rasterized (RIPped, or processed for printing) and are waiting, in order, for access to the printer. Rasterized jobs can also be held; held jobs appear on a yellow background.
- **Printed jobs**—Jobs listed below the Print status bar have already been printed. Printed jobs can be stored on the E-810 disk. The number of jobs that can be stored (from 1 to 99) is defined in Setup.

You can interact with jobs in the window by selecting them and choosing from Job menu commands or right-mouse menu commands, or by double-clicking them. (However, if passwords have been set and you log in as Guest, you can only view jobs; you cannot change or route them.) This chapter and the next explain the Command WorkStation interface in detail.


Starting up and logging in

To start Command WorkStation, click the Windows Start button and choose Command WorkStation from the Programs menu. If you have created a shortcut for the Command WorkStation application, double-click the Command WorkStation icon.

Connecting to the server

If Command WorkStation was previously connected to a server, you are prompted to choose a E-810 from the list of servers.

NOTE: If Command WorkStation has never been connected to a E-810, you are prompted to configure an entry for the server. Click OK. For detailed instructions on configuring a new connection, see *Getting Started*.

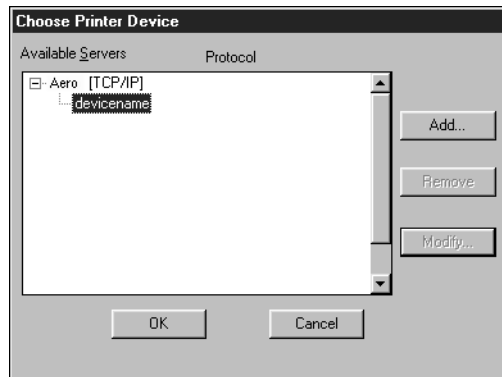

With the E-810 device name (r7) selected, click OK. If the device name is not displayed, click the plus sign (+) to expand the E-810 entry.

Command WorkStation connects to the server and you are prompted to choose a login level and enter a password to log in (see the next section). If you have any difficulties connecting to the server, see Appendix C for error messages and troubleshooting information.

Logging in

When Command WorkStation has connected to a server, the Log in/out slider appears, prompting you to select a login level and enter a password. Before you log in, the Administrator key is in the vertical position, and the Operator and Guest keys are in the flat (horizontal) position. When you click your login level, the corresponding key turns to the vertical position.



For Administrator or Operator access to the E-810, click the corresponding key, enter the password, and click Log in or press Enter. For Guest access only, click the Guest key and then click Log in. No password is required for Guest access.

If you change your mind about logging in, or do not have the password you need, click Cancel.

When you have entered the appropriate password and logged in, the Log in/out slider retracts and the full Command WorkStation display appears. The color of the key in the lock indicates your login level. If the E-810 is handling a large number of jobs, it may take a few moments to display the entire job list.

When you reopen the slider after you have logged in, the Log in button will have changed to the Log out button.

Access levels

The three possible levels of access to Command WorkStation functions are Administrator, Operator, and Guest. To enable maximum password protection, Administrator and Operator passwords must be specified in Setup (see the *Configuration Guide*).

When both Administrator and Operator passwords have been specified, the access levels are as follows:

Access level	Privileges and password requirements
Administrator	Has full access to all Command WorkStation and E-810 Control Panel functions; Administrator password required.
Operator	Has access to all Command WorkStation functions <i>except</i> Setup, calibration, clearing the server disk, clearing the Job Log, and font management; Operator password required.
Guest	Can view job status, but cannot make changes to jobs or Setup, and can view the Queues window only; no password required.

NOTE: Access privileges alone do not confer control of print jobs. If the operator is going to manage all print jobs, the Administrator must route all user jobs to the Hold queue (that is, all jobs are spooled and held on the server). To accomplish this, only the Hold queue, and not the Direct connection or the Print queue, should be enabled in Setup. For more information, see the *Configuration Guide*.

Logging out


Log out from the server in one of the following ways:

- From the Server menu, choose Log out.
- Open the Log in/out slider (click the key icon just below the Fiery logo) and click Log out.



Command WorkStation interface

The illustration below shows the default Command WorkStation display in the middle of job processing. You can access three other windows—Archive, FreeForm, and Job Log—via tabs at the bottom of the display (3). Elements 1 through 4 are common to all Command WorkStation displays; 5 through 7 appear only in the Queues window; and 8 is common to the Queues, Archive, and FreeForm windows.

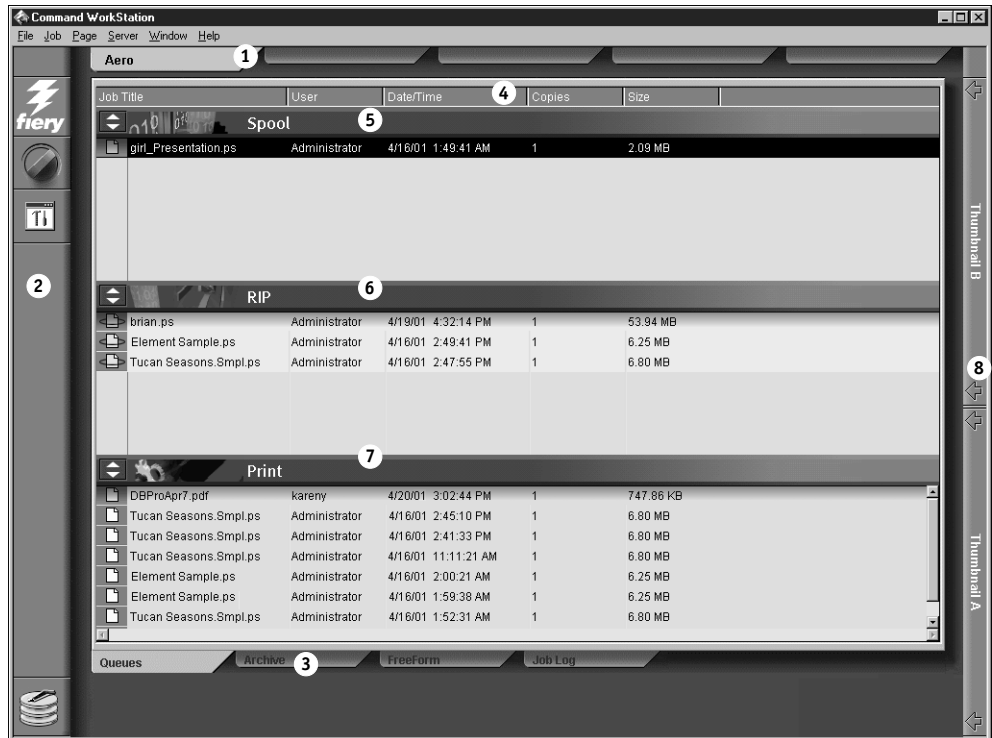

1 Server selection tabs

2 Sliders and system information

3 Window selection tabs

4 Job ticket information

5–7 Queues window display

8 Thumbnail tabs

Command WorkStation provides access to a great deal of information and many features that are accessed in various ways—buttons, menus, double-clicking, and right-mouse commands. It is a powerful interface that allows for a great deal of interaction and flexibility in the production process. Descriptions of each of the elements that compose the Command WorkStation display follow.

Window area (Queues, Archive, FreeForm, Job Log)

This area can display one of four windows: the Queues window (shown below), the Archive window, the FreeForm window, or the Job Log window (only the Queues window is available if you logged in as Guest). The Queues window is the default window; it shows spooled, processing, and printing jobs in a display that changes dynamically.

Job Title	User	Date/Time	Copies	Size	
Spool filename Unknown user Unknown					
real.ps	hal	03/17/01 19:02:56	1	11.05 MB	
ss04066.ps	Cecilia	03/17/01 18:57:30	1	78.47 MB	
testpage.ps	hal	03/17/01 18:57:27	1	589.85 KB	
RIP filename Portfolio.ps user mattbl size 394.88 KB					
Usrguide.pdf	hal	03/17/01 19:44:48	1	29.88 MB	
UNO.ps	hal	03/17/01 19:11:32	1	3.25 MB	
http://www.skyp	hal	03/17/01 15:54:56	1	4.16 MB	
stdin	Cecilia	03/17/01 21:38:35	1	4.10 KB	
Print filename Portfolio.ps user mattbl copies 1/1					
10pages	gideon	03/17/01 20:10:18	1	7.30 KB	
UNO.ps	hal	03/17/01 18:57:21	1	1.51 MB	
Vases.Sample.ps	Paula	03/17/01 18:49:32	1	834.6 KB	
Image Salad.ps	C. Brad	03/17/01 18:46:16	1	4.16 MB	
Katie's Corner Layout.ps	danielle	03/17/01 18:05:06	80	674.66 KB	

Queues

Archive

FreeForm

Job Log

For information on	See
Queues area	“Queues window” on page 3-16
Archive area	“Archive window” on page 3-27
FreeForm area	“FreeForm window” on page 3-29
Job Log area	“Job Log window” on page 3-35

Menu bar

The menu bar has six menus. When an action is not available in the current context, the command appears dimmed.



Menu	Choose this	To do this
File	Preferences	Set Command WorkStation preferences; see page 4-5.
	Print Pages	Print any or all of the following pages to the E-810: Configuration page, PS Test Page, Control Panel Map, PS Font List, Color Charts, Job Log. You can also print the Configuration page to any printer you specify; see page 4-6.
	Exit	Log out from the server, exit Command WorkStation, and return to the Windows desktop.
Job (For more information on these commands, see page 3-24)	Delete	Delete one or more selected jobs.
	Duplicate	Duplicate one or more selected PostScript data jobs in the Spool or Print areas; see page 3-20, page 3-23, and page 3-24.
	Rename	Rename a selected job.
	Hold	Hold the selected job(s); see page 3-19.
	RIP and Hold	RIP and then hold the selected job(s); see page 3-19.
	Print	Print the selected job(s); see page 3-23.


Menu	Choose this	To do this
Job (<i>cont.</i>)	Print and Hold	Print the selected job(s) and then hold it in the RIP area; see page 3-19.
	Process Next	Give top priority to this job (Spool area only).
	Remove Raster	Remove the raster information from the selected job(s); see page 3-25.
	Properties	View and edit print option settings for the selected job(s) and print job(s) with new settings; see page 3-41.
	Thumbnail A	Open a selected <i>held</i> job in the Thumbnail A window where you can view a full-screen preview of the job, edit the job, or merge it with like data from other jobs. In order to merge jobs, they must be of the same data type (that is, PostScript jobs cannot be merged with raster jobs). Held jobs in the Spool area are automatically converted to PDF files, but are not saved as PDF files unless you assign the job a new name or overwrite the existing job; see page 3-42.
	Thumbnail B	Open a selected job in the Thumbnail B window for viewing a full-screen preview of the job, or for copying pages into a job in the Thumbnail A window. In order to merge jobs, they must be of the same data type (that is, PostScript jobs cannot be merged with raster jobs). Held jobs in the Spool area are automatically converted to PDF files, but are not saved as PDF files unless you assign the job a new name or overwrite the existing job; see page 3-43.
	Impose	Open a selected held PostScript job in the Imposition window; for more information, see Chapter 5.
	Download	Download files and fonts to the E-810; see page 4-25. You can also choose this command by right-clicking the Spool status bar.
	Archive	Archive one or more selected jobs; see page 3-27 and page 4-31.
	Import	Retrieve one or more archived jobs from an external device; see page 4-34. You can also choose this command by right-clicking the Spool status bar.
	Send to <Nickname_DeviceName>	Send the selected job(s) to another connected E-810; see page 4-30. (This option is only visible when you are connected to more than one E-810 at once.)

Menu	Choose this	To do this
Page (DocBuilder Pro commands for Thumbnail A)	Delete	Delete the selected page(s).
	Duplicate	Duplicate the selected page(s).
	Preview	View a full-screen preview of the selected page; see page 3-46.
	Undo	Undo previous Page menu commands (multiple undos available).
Server	Cancel RIPping	Stop RIPping the current job. You can also choose this command by right-clicking the RIP status bar.
	Cancel Printing	Stop printing the current job. You can also choose this command by right-clicking the Print status bar.
	Suspend Printing	Temporarily halt printing. You can also choose this command by right-clicking the Print status bar.
	Resume Printing	Restart printing (after a Suspend Printing command). You can also choose this command by right-clicking the Print status bar.
	Manage Fonts	View the fonts currently installed on the E-810 disk, download additional fonts, or delete fonts (requires Administrator privileges); see “Other server management commands” on page 4-39.
	Manage Color	Start ColorWise Pro Tools; see the <i>Color Guide</i> .
	Printing Groups	Define members of printing groups and their passwords (requires Administrator privileges. For details, see the <i>Configuration Guide</i> .
	Align Paper Trays	Adjust the placement of text and images on the page for duplexing; see “Align Paper Trays” on page 4-37.
	Clear Job Log	Clear all jobs from the Job Log (requires Administrator privileges); see “Other server management commands” on page 4-39.
	Reboot	Perform a soft reboot of the E-810 (requires Operator or Administrator privileges); see “Other server management commands” on page 4-39.
	Clear	Clear all jobs in all queues as well as all jobs archived on the E-810 hard disk, the index of archived jobs, all FreeForm masters, the index of FreeForm masters, and the Job Log (requires Administrator privileges); see “Other server management commands” on page 4-39.

Menu	Choose this	To do this
Server (<i>con't</i>)	Setup	Start the Fiery Setup program (requires Administrator privileges); see “Other server management commands” on page 4-39, and the <i>Configuration Guide</i> .
	Log out	Log out of the server.
Window	Filter	Open the Filter dialog box for the active window; see page 3-37.
	Export	Save the information in the active window as a tab-delimited text file; see page 3-29, page 3-31, and page 3-36.
	Print	Print the active window.
	View in Helper App	Open the active window in a particular application you specify; see page 4-5.
	Refresh	Update the Job Log window with the latest information.
	Revert to Default Settings	Restore default settings for the status areas, the column headings, and the column widths.
Help	About	View the Command WorkStation information screen.

Server selection tabs

 Use the Server selection tabs, just below the menu bar at the top of the display, to log in to additional E-810 servers (if your site has more than one), and to switch between E-810 servers currently connected to Command WorkStation.



If you click a blank tab, you are prompted to connect to a server in the list or configure a new server entry (see “Connecting to the server” on page 3-5). A limit of five E-810 servers can be connected to a single Command WorkStation.

You can access the Server selection tabs from all Command WorkStation windows (Queues, Archive, FreeForm, and Job Log).

Sliders

Along the left side of the display are buttons you click to activate function sliders.



To retract any slider, click the icon at the far right of the slider.

Server information slider



The Server information slider displays name and version information about the currently connected server and Command WorkStation. To retract the slider, click the Fiery logo at the far right of the bar.

Log in/out slider




This slider is described in “Logging in” on page 3-6 and “Logging out” on page 3-7. To retract the slider, click the Lock icon at the far right of the bar.

Utilities shortcut slider



This slider can be used to access Fiery Downloader and ColorWise Pro Tools. These utilities can also be accessed from the Job menu and Server menu, respectively. To retract the slider, click the icon at the far right of the bar.

RAM and disk space slider

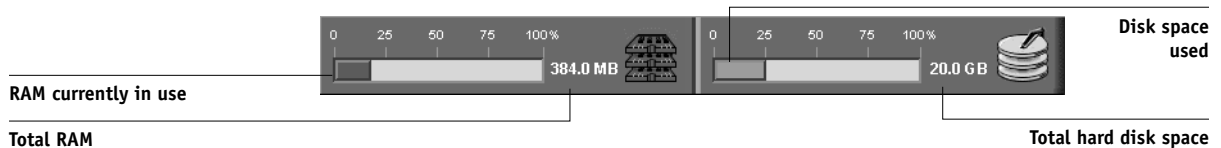

The System information indicators show the current availability of RAM and hard disk space on the currently selected E-810 server. To retract the slider, click the icon at the far right of the bar.

Job ticket information

Job Title	User	Date/Time	Copies	Size	
-----------	------	-----------	--------	------	--

All the jobs listed by name in the Queues, Archive, and FreeForm windows can display the job ticket information specified by the person who originated the print job. Command WorkStation can display this information because it parses the PostScript file before it is RIPped.

You have considerable flexibility in arranging this information in the display. For example, you can add Media Type to the display if you want to see which jobs call for special paper or other media.

Job Title	User	Date/Time	Copies	Size	Media Type
-----------	------	-----------	--------	------	------------

You can choose not to display headers for options that are not used at your site, or you can display all possible options and scroll to see the ones that are less important to you. If you just want to experiment, when you are finished you can choose Revert to Default Settings from the Window menu.

For instructions on customizing the display in the Queues, Archive, and FreeForm windows, see page 4-4.

Window selection tabs



Command WorkStation always starts out by displaying the Queues window, from which you view current job processes and control job flow and file storage. To go to another window, click the corresponding tab at the bottom of the Command WorkStation display.

Queues window

Spooling



RIPping



Printing

The Queues window is a dynamic display of the job staging area: jobs are lined up for processing and printing, some of them are being held waiting for directions, some are moving from one stage or queue to another and are finally dropped from the list, some are held for processing by the operator, and some are held in a different queue in case you need to reprint them.

One approach to understanding the dynamic display is to imagine the three parts of the Queues window corresponding to the three stages of printing, illustrated as a downhill flow.

Spooling—a PostScript file is saved on the server's hard disk. The file can come in packets from the network, or from another place on the server hard disk. Jobs are added to a queue in the order in which they arrive, and they generally move to another queue in the same order unless an operator has intervened to change the order.

Rasterizing (RIPping)—PostScript commands are interpreted in the E-810 to allow the copier to print the file the way its originator intended. The result of this interpretation is a raster file associated with the original PostScript file. In this raster file (raster image), color data is associated with each dot that can be rendered by the print engine. The color data tells the print engine whether or not to apply cyan, magenta, yellow, or black toner to each position on the page.

Printing— the raster image is transferred from the server to the print engine at high speed, freeing up RAM for the next job. While the PostScript file is usually saved to disk, raster images are held in RAM during and after each print job. However, both users and operators can request that the E-810 save the raster image to disk along with the PostScript file.

Saving the raster image to disk offers some advantages—raster files are already processed so they print quickly, and each part of the raster file is still identified with a page in the original document, which means that individual pages of a saved raster file can be accessed.

Status bars

Jobs actively involved in the three processes (spooling, rasterizing, and printing) are listed in the status bars that span the Queues window.

Status bars show the file name and user name for the active process, and an indication of its progress. Each status bar heads the list of jobs that have completed the process. Thus, beneath the Spool status bar, you see a list of spooled files; beneath the RIP status bar, you see a list of rasterized (RIPped) files; beneath the Print status bar, you see a list of jobs that have already been printed.

NOTE: In the Spool status bar, the file name and user information always appear as “Unknown” (as shown below). This information is not available until the job has finished spooling to the E-810 disk.



Spooled jobs on Hold (yellow)
Active spooled jobs (white)



RIPped jobs on Hold (yellow)
Active RIPped jobs (white)



Printed jobs (white); some include
raster data stored in RAM

When a job is being processed, provided animation is enabled (see page 4-5), the corresponding status bar is animated, indicating that the process is active.

If an error occurs, the Print status bar alerts you by displaying a message on a red background, instead of the normal blue background.

Enlarging the status bars Click the small arrows at the left of the status bar to expand the status bar display. Click the arrows again to collapse the status bar to its original size. To expand *all* the status bars at the same time, press Ctrl-E. Click the arrows or press Ctrl-E again to collapse them to their original size.




Changing proportions By default, the status bars divide the window area into three equal parts. You can drag the RIP and Print status bars up or down to change the proportion of the window devoted to each job area. For example, drag the RIP status bar down if you have a long list of spooled jobs that you want to see without scrolling.

Making space If your workflow includes holding many jobs, and you don't want to view the held jobs all the time, consider moving some of them to the Archive window. You can move jobs back and forth between the Queues window and the Archive window with a single right-mouse command (see page 3-26).

Active jobs and held jobs

In the description that follows, assume that the operator has full control of jobs; that is, the administrator has disabled the Direct connection and the Print queue, and all user jobs come to the Hold queue. For more information about print connections, see the *Configuration Guide*.

The operator's job management functions permit *holding* a job at any stage of the process we have described, as illustrated below. In the figure, boxes indicate types of job icons you would see in the Queues window.

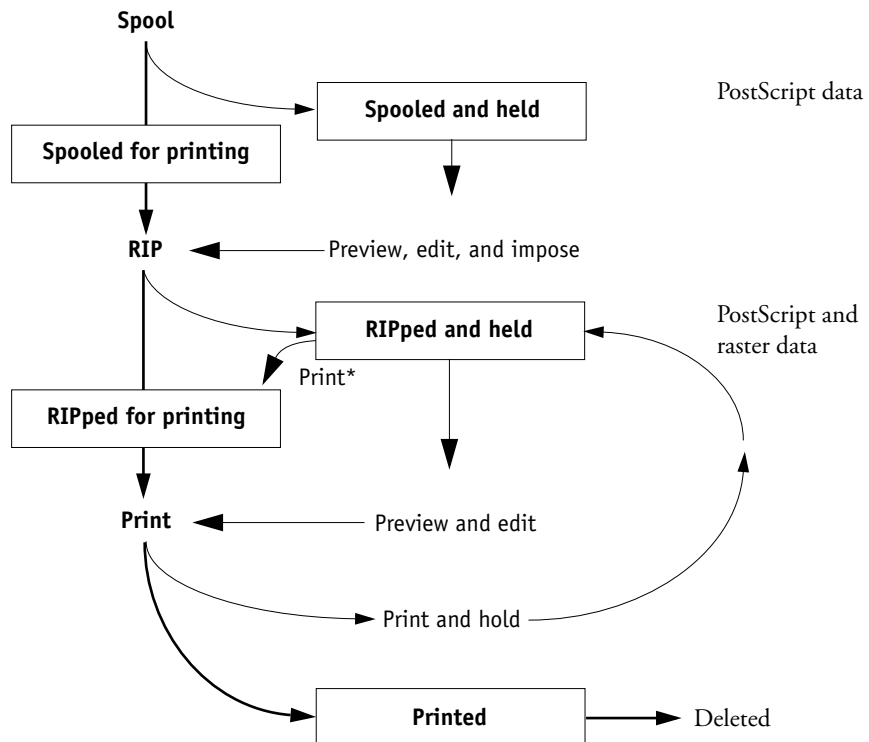




*A copy of the held job is printed; the held job remains in the RIP area.

Jobs that are held are shown with a yellow icon in a yellow row, just beneath the Spool or RIP status bar. Jobs that are held must be activated with a command in order to print.

Active jobs are shown in white with white icons; new jobs are added above older jobs.


Job icons




Three types of icons are used for both active jobs and jobs on hold.

Icon	Active jobs (white icons and rows)	Jobs on Hold (yellow icons and rows)
  Printer icons	PostScript or raster data headed for printing (top) or after printing (bottom)	PostScript data headed for Print and Hold or job on Hold after printing (Hold)
 Raster icon	PostScript and raster data after printing, ready for fast reprint	PostScript data already rasterized and held

Spool area

The job icons in the Spool area are described below.

Spool area icon	What it indicates	How long you see the job
1  Yellow printer icon Yellow job row	PostScript data from a user on the network; no destination is defined	Until a destination is chosen

Spool area icon	What it indicates	How long you see the job
2  White printer icon White job row	PostScript data headed for Print	Until the RIP is free
3  Yellow raster icon White job row	PostScript data headed for RIP and Hold	
4  Yellow printer icon White job row	PostScript data headed for Print and Hold	

The Spool area is both the receiving area for jobs from users on the network (Hold queue) and the waiting area for jobs that will be RIPped.



Hold queue jobs When printing requires an operator (because the Print queue and Direct connection are disabled), the operator must assign a destination to all jobs received from users on the network (icon 1 in the table above). Once assigned, jobs (icons 2, 3, and 4) move down the Spool queue for processing. All jobs printed to the Hold queue require routing by an operator. The Hold queue also enables you to use all workflow features of Command WorkStation with PDF files, including DocBuilder Pro and the Imposition feature.

Print queue jobs When printing does not require an operator, network jobs sent to the Print queue appear in the Spool area, where they are shown with a white printer icon (icon 2). When they reach the head of the queue, they are RIPped and printed without operator intervention.

Direct connection jobs Jobs printed to the Direct connection are not displayed in Command WorkStation job lists. They appear briefly in the status bars (where they cannot be selected) and are included in the Job Log.

RIP area

The job icons in the RIP area are described below.

RIP area icon	What it indicates	How long you see the job
1  Yellow raster icon Yellow job row	Raster data, no destination defined; may have been printed before and held	Until it is deleted, moved to the Archive window, or stripped of its raster data and sent to the Spool area
2  White printer icon White job row	Raster data headed for Print in its turn; no hold defined	Until copier is free to print the job

After a job is rasterized, it goes into the RIP area. The RIP area holds only raster data (that is, jobs that have been rasterized). Jobs in the RIP area are either waiting for the copier to be free (Print queue jobs, icon 2 in the above table), or they are being held. Held jobs in the RIP area have already been rasterized (RIP and Hold) or they have been printed and their raster data has been routed back to the RIP area (Print and Hold), where they are shown in yellow rows (icon 1).



NOTE: Raster jobs in the RIP area that are waiting to print (icon 2 in the table above) cannot be manipulated by job commands.

Jobs held in the RIP area remain there until the operator moves them to the Archive window or deletes them. Printing these jobs does not remove them from the RIP area. Instead, a copy of the job is created and printed.

NOTE: For all rasterized jobs, the print option settings, in addition to the current calibration state of the E-810, remain with the saved raster data each time the job is reprinted. To print the job with new print option settings and with new calibration data, you must remove the raster data and reRIP the job.

Print area

The job icons in the Print area are described below.

Print area icon	What it indicates	How long you see the job
1  White printer icon White job row	PostScript data only—raster data has been deleted	Until the job limit is reached
2  White raster icon White job row	Raster and PostScript data If RAM is needed to RIP an active job, the raster data is deleted and the job gets the PS icon (icon 1, above)	Until the job is reprinted or the job limit is reached

The Print area, also referred to as the Printed queue, contains jobs that have already been printed. These jobs were assigned the Print destination (white printer icon in the Spool or RIP areas) without any Hold instructions; therefore, they all have white icons and rows.

NOTE: A job row that appears in light red indicates that an error occurred while printing the job. To see the error, double-click anywhere in the row.

Newly printed jobs are added to the Printed queue, and are shown at the top of the list. Jobs are saved in the Printed queue until the job limit is reached. When the first job over the limit is printed, the oldest job is deleted from the disk. The default job limit can be changed in Setup by the administrator.

NOTE: If you reprint a job in the Printed queue, the job returns to its original position in the Printed queue after it is printed.

While it is printing, a job consists of PostScript and raster data. The raster data in RAM is not cleared until memory is needed to rasterize the next job. As long as the raster data is intact, the job can be reprinted from the Printed queue. Printed jobs that still have their raster data are represented by a white raster icon in the Printed queue (icon 2 in the previous table); jobs with only PostScript data remaining are represented

by a white PS icon (icon 1). If the job was printed from a held raster job (in the RIP area), the raster data in the RIP area remains and can be used to reprint the job after the raster data has been cleared from the Printed queue.

Job commands

Job commands are used to assign a selected job to a new destination or process. These commands are available from the Job menu (see page 3-10). Many are also available as right-mouse commands (described following the list of commands below). The job commands available at a given time depend on the context; unavailable commands are dimmed. Job commands are available in the Queues, Archive, and FreeForm windows.

The job commands available for selected jobs in the Queues, Archive, and FreeForm windows are listed in the following table. The table also describes the effect of each command on raster data associated with the affected job(s).

Choose this	To do this	Raster data is
Delete	Delete the job(s).	Deleted
Duplicate	Duplicate one or more selected PostScript or PDF data jobs in the Spool or Print areas. You can use the duplicate job(s) for different print options or a different destination. (The Duplicate command actually creates a reference to the original job, with the same name.)	n/a (The Duplicate command is not available for raster jobs.)
Rename	Rename the job (PostScript or PDF file with or without raster).	Unaffected, but associated with the new name
Hold	Hold the job in the current place (except for a job in the Print area, which is moved to the Spool or RIP area, depending on whether it still has raster data associated with it.)	Held in RIP area, if included with job
RIP and Hold	RIP the job and hold it in the RIP area.	Held in RIP area indefinitely
Print	Print the job in its turn (RIP it first if it does not have raster data). After printing, keep the printed job in the Print area until the job limit is reached.	Temporarily held in RAM after printing until memory is needed for another job (If the job was printed from a held job in the RIP area, the raster data in the RIP area is kept indefinitely.)

Choose this	To do this	Raster data is
Print and Hold (Like the user print option Save Fast Reprint)	Print the job in its turn (RIP it first if it does not have raster data). After printing, hold the PostScript data and the raster in the RIP area.	Held in RIP area indefinitely (saved to disk)
Process Next	Give top priority to this job. RIP (and then print) it as soon as the processor is free, before other waiting jobs. Option is dimmed if there are no other waiting jobs.	n/a NOTE: This command is available only for jobs in the Spool area that are not currently held.
Remove Raster	Remove the raster data from a job that has raster data (indicated by a raster icon); leave the PostScript data unaffected.	Deleted NOTE: If you remove raster from a job in the RIP area, the job is sent to the Spool area.
Properties	View, override print option settings, and print a selected job or a group of selected jobs.	Possibly deleted and regenerated, depending on whether you change any settings that require re-RIPping
Thumbnail A	Open a selected <i>held</i> job in the Thumbnail A window, where you can view a full-screen preview of the job, edit the job, or merge it with like data from other jobs. In order to merge jobs, they must be of the same data type (that is, PostScript jobs cannot be merged with raster jobs).	Changed if job is edited, unaffected if job is only viewed
Thumbnail B	Open a selected job in the Thumbnail B window for viewing a full-screen preview of the job, or for copying pages into a job in the Thumbnail A window. In order to merge jobs, they must be of the same data type (that is, PostScript jobs cannot be merged with raster jobs).	Unchanged
Impose	Open a selected held PostScript or PDF job in the Imposition window; for more information, see Chapter 5.	Unchanged
Download	Download files and fonts to the E-810 with Fiery Downloader; see page 4-25.	n/a

Choose this	To do this	Raster data is
Archive	Archive the selected held job(s) to the E-810 hard disk, the E-810 internal ZIP drive, the local Command WorkStation hard disk, or to a device on the network, and move the job icon to the Archive window; see page 3-27.	Archived with the job, if archiving of raster data is specified
Import	Import PostScript or raster data jobs previously archived to external volumes; see page 4-34.	Imported with the job, if it is available
Send to <Nickname_ Devicename>	Transfer the selected job(s) to another currently connected E-810; see page 4-30.	Transferred with the job

Using right-mouse commands

Use the following instructions to activate job commands with a single right-mouse click.

TO ROUTE JOBS WITH RIGHT-MOUSE COMMANDS

- To route a single job in the job list, right-click the job.**
- Select one of the commands or destinations and release the mouse button.**

The command is carried out or the job is routed to the destination you chose. Depending on your choice, the job line may reappear in a different part of the window or a different window, or the job line may be deleted.
- To route multiple jobs at the same time, select the jobs first.**

Click the job line to select the first job. Shift-click to select adjacent jobs. Ctrl-click to select nonadjacent jobs.

NOTE: Select jobs with the same job icon; otherwise, the destination options may not be the same. For example, select multiple jobs in the Spool area, and choose Print.
- With the cursor still in one of the selected job lines, press the right-mouse button.**
- Select one of the commands or destinations and release the mouse button.**

The command is carried out or the jobs are routed to the destination you chose.

Archive window



If you want to store jobs before or after printing them, you can archive them. The E-810 can archive jobs internally (on the E-810 hard disk) and externally, on the Command WorkStation hard drive, the ZIP disk, or on network drives. For instructions on archiving jobs, see page 4-31.

NOTE: The Archive window is not available if you logged in as Guest.

PostScript and raster data jobs can be archived, but jobs must first be *held* in the Spool or RIP areas of the Queues window.




When you archive a job, the job is *moved*, not copied, to the archive destination (the E-810 archive area or the external device). The Archive window shows a cumulative list of *all* archived jobs. You can clear this list (along with all jobs on the server) by choosing Clear Server on the E-810 Control Panel (see page 1-6) or choosing Clear from Command WorkStation (see page 3-12).

The job icons in the Archive window are described below,

Archive icon	What it indicates
 Printer icon	PostScript data only—raster data not present or deleted Job was archived from the Spool area
 Raster icon	Raster and PostScript data Job was archived from the RIP area

The job commands described on page 3-24 can also be used with jobs in the Archive window.

The icons that appear in the Archive window are always white, since they have no destination (as long as they are in the Archive window).

Sort order indicator	Archive Log						
	Job Title	User	Date/Time	Copies	Size	Volume	
	 KingTut.ps	IW	01/12/01 17:01:08	1	1.47 MB		
	 999B&W.pmk	WK	01/12/01 18:38:44	1	1.10 MB		
	 chess.ps	BF	01/12/01 18:59:26	1	3.04 KB	BF VOLUME\Co...	
External volume							

By default, the Archive window displays *all* archived jobs. Until they are deleted, archived jobs remain in the Archive window indefinitely. You can display a subset of archived jobs based on various selection criteria by using the Filter command (see page 3-37).

For jobs archived to external devices (such as the ZIP drive), the Volume column shows the volume and path of the device. For jobs that were archived to the E-810 hard disk, the Volume column is blank.

As with the Queues window, you can select the headings for the display and use Job menu or right-mouse commands; you can also sort jobs.

To	Do this
Sort jobs in a category, such as by Date.	Double-click the Date/Time heading. A small arrow indicates whether jobs are sorted in ascending or descending order. Double-click again to sort in the reverse order.
Route a job to a destination in the Queues window.	Use job commands from the Job menu or the right-mouse menu. For example, to print a job, choose Print or Print and Hold. You can also select and route multiple jobs. For details, see page 3-26. The other options, RIP and Hold or Hold, send a copy of the job to the Queues window (to the RIP and Spool areas, respectively) without printing it. Remove Raster, which applies only to jobs with the raster icon, leaves only the PostScript data for the job in the Archive window.
View only particular jobs.	Choose Filter from the Window menu, and make entries in the Filter dialog box (see page 3-37).
Delete a job.	Select the job(s) and choose Delete from the Job menu or right-mouse menu.

To	Do this
Display or move job ticket information headers in the Archive window	Right-click the appropriate column head; choose Add from the pop-up menu to list the columns you can add to the display. The categories are the same as in the Queues window (see page 3-15), but you can arrange them differently. The column head arrangements you set in the Archive window are independent of those you set in the Queues window.
Adjust the width of a column	Click the column border in the heading and drag left or right.
Export the currently displayed list of archived jobs to a tab-delimited text file	Choose Export from the Window menu. Specify a file name (the default name is archive.log) and location for the file, and click Save. You can then open the exported file with a spreadsheet, database, or word processing application.

FreeForm window

The E-810 FreeForm printing feature provides a flexible and efficient method for printing variable data jobs (such as direct-mail advertising pieces). FreeForm allows users to preRIP and store the master elements of their variable data jobs on the E-810, and then use that master data as needed, for multiple variable data jobs. The preRIPped master-element jobs are stored on the E-810 as FreeForm Masters, and appear in the FreeForm window.

About FreeForm printing

FreeForm printing involves combining a preRIPped FreeForm Master with a variable-elements job to create the final variable data job. This final job can be soft-proofed before printing using the thumbnail windows and the full-screen preview display.



To create a FreeForm Master, the job comprising the master elements must be RIPped with the Create Master print option set to a value from 1 to 100 (that is, a setting other than None). Users can set this option to a value from 1 to 15 when they send a job, but the printer driver interface prevents them from choosing numbers greater than 15. To create a FreeForm Master with a number greater than 15, you must override the Create Master job setting from the Properties dialog box and RIP (or reRIP) the job.

To combine a variable-elements job with a FreeForm Master, the variable-elements job must be RIPped with the Use Master print option set to the number of the corresponding FreeForm Master. As with the Create Master print option setting, users

can set this option to a value from 1 to 15 only. To specify a number greater than 15, you must override the Use Master job setting from the Properties dialog box and RIP (or reRIP) the job.

Using the FreeForm window

The FreeForm window displays up to 100 FreeForm masters that can be used for variable data jobs. However, users on the network can specify Create Master job setting values of 1 through 15 only, due to limitations of the printer driver interface.

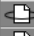FreeForm Masters					
Job Title	User	Date/Time	Copies	Size	
 Microsoft Word - Masterdoc....	kareny	01/12/01 11:20:42 AM		23.98 KB	
 Multi.pdf	kareny	01/12/01 4:52:17 PM		78.46 KB	

The Create Master job setting values can range from 1 to 100, but values from 16 to 100 can be assigned only with job overrides from the Properties dialog box. When assigning new FreeForm Master numbers, it is very important to not choose a number already in use; doing so may result in the original FreeForm Master being overwritten.

Only white raster data icons appear in the FreeForm window, as all FreeForm Masters have already been rasterized. Their raster data is kept indefinitely until the FreeForm Master is deleted.

NOTE: For all rasterized jobs, the print option settings, in addition to the current calibration state of the E-810, remain with the saved raster data each time the job is reprinted. To print the job with new print option settings and with new calibration data, you must remove the raster data and reRIP the job.

By default, the FreeForm window displays *all* FreeForm Masters, which remain in the window until they are deleted. FreeForm Masters (along with all other jobs on the server) and the index of FreeForm Masters are deleted by choosing Clear Server on the E-810 Control Panel (see page 1-6) or choosing Clear from Command WorkStation (see page 3-12).

You can display a subset of FreeForm Masters based on various selection criteria by using the Filter command (see page 3-32).

As with the Queues window, you can select the headings for the display and use the Job menu or right-mouse menu; you can also sort jobs.


To	Do this
Sort jobs in a category, such as by Date.	Double-click the Date/Time heading. A small arrow indicates whether jobs are sorted in ascending or descending order. Double-click again to sort in the reverse order.
View only particular jobs.	Choose Filter from the Window menu, and make entries in the Filter dialog box (see page 3-37).
Delete a job.	Select the job(s) and choose Delete from the Job menu or right-mouse command menu.
Display or move job ticket information headers in the FreeForm window.	Right-click the appropriate column head; choose Add from the pop-up menu to list the columns you can add to the display. The categories are the same as in the Queues window (see page 3-15), but you can arrange them differently. The column head arrangements you set in the FreeForm window are independent of those you set in other windows.
View a thumbnail of a FreeForm Master.	Right-click the job and choose Thumbnail A or Thumbnail B from the menu that appears, or left-click the job and choose Thumbnail A or Thumbnail B from the Job menu.
View the print option settings of a Free Form Master.	Right-click the job and choose Properties from the menu that appears, or left-click the job and choose Properties from the Job menu. NOTE: Print option settings for FreeForm Masters can be viewed only; they cannot be changed.
Display all variable element documents associated with a FreeForm Master.	Right-click the job and choose Associated variables from the menu that appears.
Adjust the width of a column.	Click the column border in the heading and drag left or right.
Export the currently displayed list of FreeForm jobs to a tab-delimited text file.	Choose Export from the Window menu. Specify a file name (the default name is freeform.log) and a location for the file and click Save. You can then open the exported file with a spreadsheet, database, or word processing application.

Job commands for FreeForm master jobs

The following job commands, described on page 3-24, can be used with jobs in the FreeForm window:

- Delete
- Associated variables
- Properties
- Thumbnail A
- Thumbnail B

NOTE: The Associated variables command is available only by right-clicking a FreeForm Master job. Selecting this command displays all jobs that have used that specific FreeForm Master as a master document.

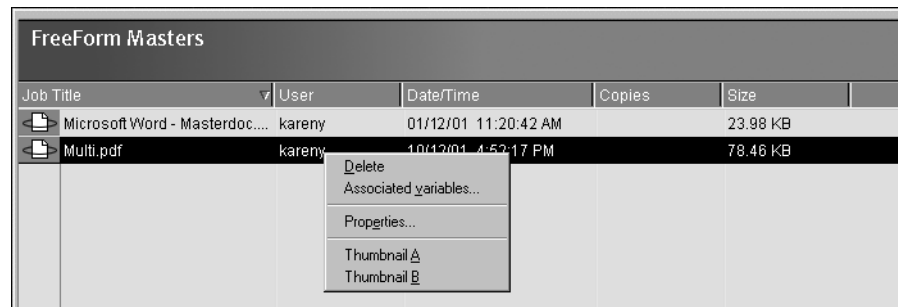

The screenshot shows the 'FreeForm Masters' window. It contains a table with columns: Job Title, User, Date/Time, Copies, and Size. Two rows are visible: 'Microsoft Word - Masterdoc...' and 'Multi.pdf'. A right-click context menu is open over the 'Multi.pdf' row, showing options: Delete, Associated variables..., Properties..., Thumbnail A, and Thumbnail B.

Job Title	User	Date/Time	Copies	Size
Microsoft Word - Masterdoc...	kareny	01/12/01 11:20:42 AM		23.98 KB
Multi.pdf	kareny	10/12/01 4:52:17 PM		78.46 KB

Filtering jobs in the FreeForm window

The FreeForm window displays a cumulative list of *all* FreeForm Masters. If the window contains a large number of FreeForm Masters, you may want to display only a specified subset of these jobs. You can do this by filtering jobs in the FreeForm window.

The Filter command for the FreeForm window works exactly the same way as the Filter command for the Archive window. For instructions on using this feature, see the description given in “Filtering jobs” on page 3-37.

Assigning and monitoring FreeForm Masters

Users can assign FreeForm Master numbers from 1 to 15 using the Create Master print option when they send a job. These numbers can be changed to a number from 1 to 100 with job overrides from the Properties dialog box.

NOTE: As with all job overrides that have a reRIP icon, in order for any new settings to take effect (including Create Master and Use Master), the job must be reRIPped. For information on using the Properties dialog box to change job settings, see “Viewing and overriding print settings” on page 4-22.

When the first 15 FreeForm Master numbers have been used, users may inadvertently overwrite existing FreeForm Masters by assigning what they think are new, unused FreeForm Master numbers. When users choose a master number from the Create Master print option, an existing job using that master number will be overwritten (the user will receive a message warning them that they are about to replace an existing job). For this reason, the operator may bear the responsibility of deleting existing master jobs or reassigning master numbers 1 through 15 in order to avoid any overwriting problems. Since the operator is the only person who can assign numbers from 16 to 100, he or she can maintain a high level of control over the FreeForm Master numbers in use.

Tips for using FreeForm

At sites where a small number of users print FreeForm jobs, the operator may want to assign specific FreeForm Master numbers to specific users. In this way, users bear the responsibility of monitoring their own master numbers. Users can then use the Create Master print option to assign new masters or to overwrite existing masters. Users can also instruct the operator to reassign master numbers (to a number greater than 15) for FreeForm Masters they want to keep available on the E-810.

At sites where a large number of users print FreeForm jobs, the operator may want to instruct users not to use the Create Master print option at all, but rather to RIP and Hold all their jobs. In this way, the operator can decide which FreeForm Master numbers to assign before printing.

For all jobs sent to the E-810, it is a good practice for users to specify information to the operator with the Notes and Instructions fields in the Printer Job Notes dialog box. It is then very important for the operator to check the Notes and Instructions columns for such information.

For example, the user could send a variable-elements job named “Variable1.ps” to the E-810 with the instruction “Use Master5.ps as master.” The operator then:

- Locates “Master5.ps” in the FreeForm window.
- Notes the number in the Create Master column.
- Double-clicks “Variable1.ps” to view the Properties dialog box.
- Chooses the matching FreeForm Master number with the Use Master print option.

The job “Variable1.ps” then prints with the master data (“Master5.ps”), as specified by the user.

FreeForm restrictions

When printing FreeForm jobs, the following print option settings must match for *both* the FreeForm Master and the variable-elements job:

- Color Mode
- Combine Separations
- Page Order
- Page Size
- Duplex

The following settings for the variable-elements job override the corresponding settings in the FreeForm Master job:

- Media Type
- Paper Source
- Save Fast Reprint
- Sorter Mode
- Collation
- Slip Sheet
- Stapler Mode

For more information on using FreeForm features, see the *Printing Guide* or “Printing variable data documents (FreeForm)” on page 4-24.

Job Log window

The Job Log is a list of processed and printed jobs, the date and time they were processed or printed, and the characteristics of the job. It includes downloaded files and fonts and RIP and Hold jobs.

NOTE: The Job Log window is not available if you logged in as Guest.

At any given time, the Job Log includes only those jobs processed or printed since the Job Log was last cleared. You can clear the Job Log manually by choosing “Clear Job Log” from the Server menu or automatically if the administrator has enabled autoclearing of the Job Log in Setup. The Job Log is also cleared by choosing Clear Server on the E-810 Control Panel (see page 1-6) or by choosing Clear from Command WorkStation (see page 3-12).

To adjust the column widths in the Job Log display, click the column border in the heading, and drag left or right. For more information, see Chapter 4.

Job Log								
Status	Document	User	Date	End Time	Start Time	Process Time	Size	Device
OK	Startup	Operator	07/27/00	11:51:14	11:46:17	00:00:03	281.39 KB	<Devicename>
OK	Startup	Operator	07/27/00	11:55:46	11:55:23	00:00:03	281.39 KB	<Devicename>
OK	Startup	Operator	07/27/00	12:03:08	12:02:43	00:00:03	281.39 KB	<Devicename>
OK	Startup	Operator	07/27/00	12:09:48	12:09:25	00:00:03	281.39 KB	<Devicename>
OK	Unknown	Unknown	07/27/00	12:11:35	12:11:15	00:00:01	16.51 KB	<Devicename>
OK	Unknown	Unknown	07/27/00	12:14:00	12:13:40	00:00:01	16.51 KB	<Devicename>
OK	parallel.ps	DAVIDSA	07/27/00	12:14:33	12:14:33	00:00:00	401.12 KB	<Devicename>
OK	Startup	Operator	07/27/00	12:17:20	12:16:54	00:00:03	281.39 KB	<Devicename>
OK	Unknown	Unknown	07/27/00	12:17:40	12:17:17	00:00:01	16.51 KB	<Devicename>
OK	Color Wheel	Unknown	07/27/00	12:18:07	12:17:48	00:00:01	401.12 KB	<Devicename>

When you open the Job Log, you can choose to display all jobs in the current Job Log or only the jobs in a specified date range. By default, all jobs are displayed. To specify a date range, choose Filter from the Window menu, click Range, and enter dates in the From and To fields; or click the calendar icons next to the From and To fields and click dates in the calendar to select them. Use the arrows in the upper-right and upper-left corners of the calendar to display different months.

NOTE: In the Job Log, “Start Time” reflects the time that the job began RIPping, “End Time” reflects the time that the job printed, and “Process Time” reflects the total RIP time for the job. These times do not correspond to the Date/Time values displayed in the Queues window.

Updating the Job Log display To update the Job Log window display after specifying a date range (or at any other time), choose Refresh from the Window menu.

Exporting the Job Log From the Job Log window, you can export the Job Log to a tab-delimited text file (the default name is job.log) by choosing Export from the Window menu. The exported file can be opened with a spreadsheet, database, or word processing application. The exported Job Log contains the jobs for the date range you specified.

Clearing the Job Log The Job Log is stored on the server disk. When logged in as Administrator, you can clear the Job Log by choosing Clear Job Log from the Server menu. The Job Log is cleared whenever an Administrator clears the server or installs new software. In addition, the Job Log can be cleared automatically after every 55 jobs.


Printing the Job Log To print the Job Log, choose Print Pages from the File menu, select Job Log, click Print, and click OK. The Job Log is sent to the Print queue and then prints to the E-810. You can use Job menu commands to manipulate the Job Log print job as you would any other job. The printed Job Log contains the jobs for the date range you specified. See “Using the Job Log” on page 4-35 for more information.

Printing and clearing the Job Log automatically You can decide how you want to handle the Job Log. If you have Administrator privileges, you can choose Setup from the Server menu and enter your preferences in the Job Log Setup. You can choose to print the Job Log automatically every 55 jobs, or both print and clear the Job Log automatically every 55 jobs. You can also choose the Job Log page size.

Filtering jobs

The Queues, Archive, FreeForm, and Job Log windows display a cumulative list of *all* jobs. If a large number of jobs are listed, it may be difficult to locate a particular job or a particular group of jobs. You can display a specified subset of jobs by filtering jobs in the Queues, Archive, FreeForm, and Job Log windows.

To open the Filter dialog box, choose Filter from the Window menu.

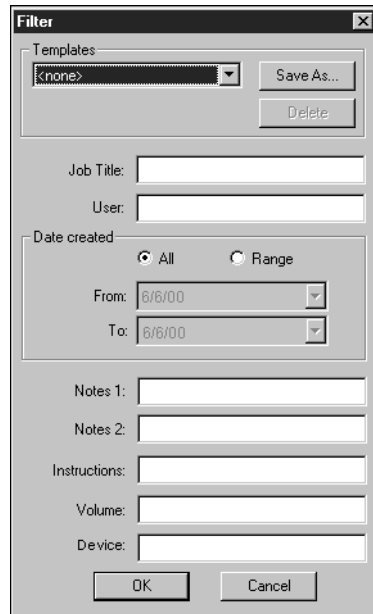The image shows a 'Filter' dialog box with a title bar containing a close button. The dialog is organized into several sections. At the top, there is a 'Templates' section with a dropdown menu currently showing '<none>' and two buttons, 'Save As...' and 'Delete'. Below this are two text input fields labeled 'Job Title:' and 'User:'. The 'Date created' section follows, featuring two radio buttons: 'All' (which is selected) and 'Range'. Under the 'Range' option, there are two date pickers labeled 'From:' and 'To:', both showing '6/6/00'. Below the date section are four more text input fields labeled 'Notes 1:', 'Notes 2:', 'Instructions:', and 'Volume:'. At the bottom, there is a 'Device:' text input field and two buttons, 'OK' and 'Cancel'.

In the Queues window you can filter jobs according to any or all of the following criteria:

- Job title
- User name
- Date created (or a date range)
- Notes 1 or Notes 2
- Instructions
- Device

In the Archive and FreeForm windows you can filter jobs according to any or all of the following criteria:

- Job title
- User name
- Date created (or a date range)
- Notes 1 or Notes 2
- Instructions
- Volume
- Device

In the Job Log window, you can filter jobs by date only.

The Filter command lets you perform a search based on any and all values you specify in the Filter dialog box. Enter values in all fields relevant to your filtering criteria. If you enter values in more than one field, only jobs that meet *all* the criteria are displayed. For example, if you enter 10 in the Job Title field and <UserName> in the User field, only those jobs whose titles somewhere contain “10” *and* whose User name somewhere contains “<UserName>” will be displayed.


To filter by date, select Range in the Date created area and enter dates in the From and To fields; or click the arrows next to the From and To fields and click dates to select them in the calendar. Click the arrows at the upper-right and upper-left corners of the calendar to display different months. The range of dates available for filtering is 01/01/1980 to 12/31/2099.

Creating Filter templates

If you often filter jobs according to specific criteria, you can create a filter template. In this way, you can filter jobs easily in one step and avoid the need to enter specific information each time you want to filter jobs.

TO CREATE A FILTER TEMPLATE

1. **Open the Filter dialog box by choosing Filter from the Window menu.**
2. **Enter specific job filter criteria in the appropriate fields.**
3. **Click Save As.**
4. **Enter a name for the new template and click OK.**

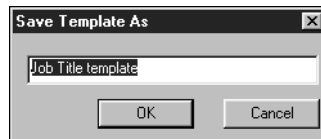

The new template is saved in the Templates pop-up menu in the Filter dialog box.

To view jobs in the Queues, Archive, FreeForm, and Job Log windows according to a filter template, open the Filter dialog box, choose the template by name from the Templates pop-up menu, and click OK.

To delete an existing template, open the Filter dialog box, choose the template by name from the Templates pop-up menu, and click Delete. Click OK to confirm that you want to delete the template.

Job properties

When logged in as Operator or Administrator at Command WorkStation, you can use the Properties command to check and override the print option settings (properties) of all jobs.

You can use this command to do any of the following:


- Check a user's job settings, including notes and instructions.
- Override a setting based on printed output or other print device conditions.
- Change settings for a duplicate of the original job.
- Print a single copy of a job before printing the number of copies requested by the user.

Viewing and editing job properties

The Properties command lets you view, edit the print option settings of, and print multiple jobs simultaneously.

You can use this feature to compare the properties of several jobs and thereby group together jobs with similar settings, if it is beneficial for throughput or efficiency.

To view the properties of one or more jobs, select the job(s) and choose Properties from the Job menu or the right-mouse menu.

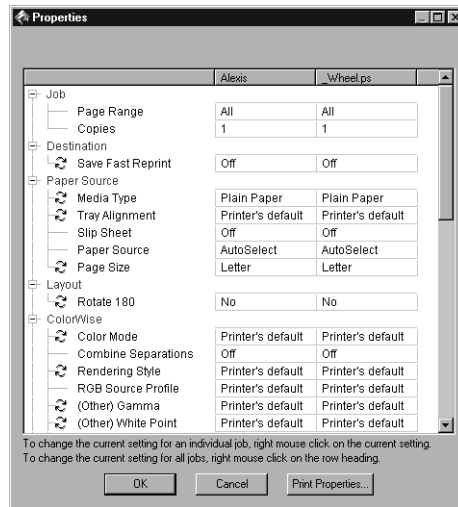

For information on using the Properties dialog box to change job settings, see “Viewing and overriding print settings” on page 4-22.

NOTE: Some print options that are available in the printer driver are not displayed in the Properties dialog box. For information on specific print options and settings, and where you set them, see Appendix A of the *Printing Guide*.

Thumbnails and full-screen previews

Command WorkStation includes a powerful DocBuilder Pro tool that allows you to preview and edit PostScript and raster data. (For information on how to identify a raster data job, see page 3-20.) DocBuilder consists of two thumbnail windows and several page-manipulation commands (listed in the Page menu).

NOTE: DocBuilder Pro is an option that must be purchased separately.

You can use the DocBuilder Pro tool in the following ways:

- In the Thumbnail A window, you can see thumbnails of the currently RIPping job, as it is processed, or of any PostScript or raster data job (see “Previewing print jobs” on page 4-12).
- From the Thumbnail A and Thumbnail B windows you can open a full-screen preview of a PostScript or raster file (see “Full-screen previews” on page 3-46).
- Using the Thumbnail A and Thumbnail B windows together, you can merge PostScript or raster data from more than one file, even if the files were printed from different applications on different computer platforms (see the next section and “Merging PostScript and raster files with DocBuilder Pro” on page 4-15).

DocBuilder Pro’s merge features eliminate the limitations of particular software applications. You can merge PostScript or raster pages of documents of different types, even different computer operating systems. You can merge color pages from graphics programs with text pages from a word processor. An outline of DocBuilder Pro’s features follows; for more information and applications, see page 4-15.

Editing and merging files with DocBuilder Pro

When you select a PostScript or raster data job and choose Thumbnail A or Thumbnail B from the Job menu or the right-mouse menu, the corresponding thumbnail slider opens automatically, displaying thumbnails of the file. To close the thumbnail slider, click anywhere in the tab along the right edge of the thumbnail window. When the thumbnail window is open, the arrows in the tab point to the right, indicating that clicking the tab retracts the slider.


NOTE: The thumbnail windows will open automatically for jobs held in the RIP area. In order to open the thumbnail windows for jobs in the Spool area, the jobs must first be converted to PDF files. In addition, the Adobe Acrobat application and a dongle (included with the DocBuilder Pro option for Command WorkStation) are required to view the job. If the dongle is not attached, you will see an error message. When you select a job in the Spool area and choose Thumbnail A or Thumbnail B, the Acrobat Distiller application launches and the conversion process occurs automatically; wait a few moments as Command WorkStation prepares and then opens the job for viewing.

Using the Thumbnail A window, you can see thumbnail views of any PostScript, PDF, or raster data job—that is, any file that is currently RIPping, or any file that has been RIPped and held to disk. You can also use the Thumbnail A window to edit a PostScript, PDF, or raster file—you can change the sequence of pages, delete pages, duplicate pages, insert blank pages, and copy pages from other PostScript, PDF, or raster files into the Thumbnail A window. You can save the edited PostScript or raster file as a new printable document.

The Thumbnail B window can also display thumbnails of a PostScript, PDF, or raster job, and the document displayed in Thumbnail B can be used as a source for editing the document shown in Thumbnail A.

In order to copy or merge jobs using the Thumbnail A and B windows, they must be jobs of the same data type. In other words, *both* jobs must be PostScript, PDF, or raster jobs—you cannot merge a PostScript job from Thumbnail B with a raster job in Thumbnail A.

NOTE: Be careful not to delete all pages of a job in Thumbnail A without first saving a copy of the job.

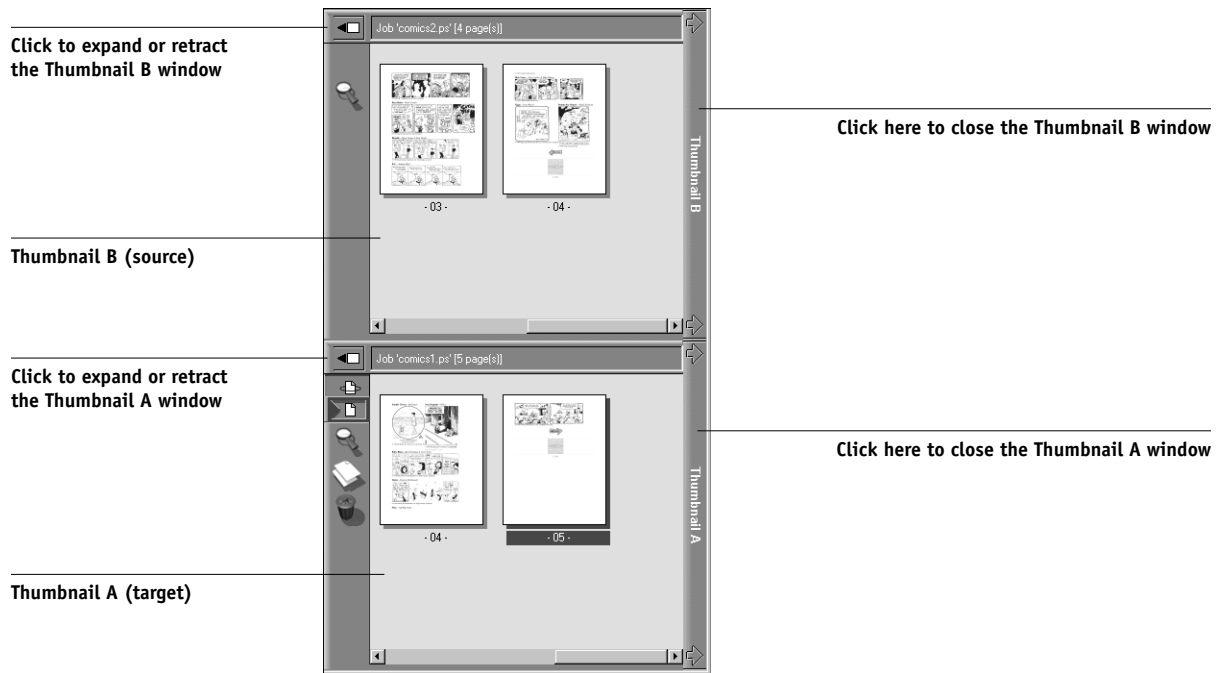

You can merge documents by dragging (copying) one or more entire pages from Thumbnail B to Thumbnail A. This creates a new document in the Thumbnail A window. If you select one or more pages in the Thumbnail A window, the commands in the Page menu give you additional editing possibilities. (Most of the Page menu commands are also made available by right-clicking pages in Thumbnail A.) Multiple undos of Page menu commands are possible.

You can merge pages from multiple documents into the Thumbnail A document by opening documents one after another in the Thumbnail B window. Documents in the Thumbnail B window are view-only, and while you can copy pages from Thumbnail B to Thumbnail A, you cannot edit the Thumbnail B document. A merged document that you create in Thumbnail A can be saved (with a different name) as a new PostScript, PDF, or raster data file.

For more information, see page 4-15.


Full-screen previews

Double-clicking any page in the Thumbnail A or Thumbnail B window opens a full-screen preview of the page. The full-screen preview is a view-only display, and it takes time to retrieve the data.

NOTE: If you have edited a PostScript, PDF, or raster job with DocBuilder Pro, you must save the edited file before you can view full-screen previews of all its pages.

Depending on which area the job comes from (Spool or RIP), you can use the icons in the full-screen preview to display adjacent pages, rotate the page, pan around the page, zoom, or close the preview. The first illustration below shows a job from the Spool area; the second illustration shows a job from the RIP area.

Job from the Spool area

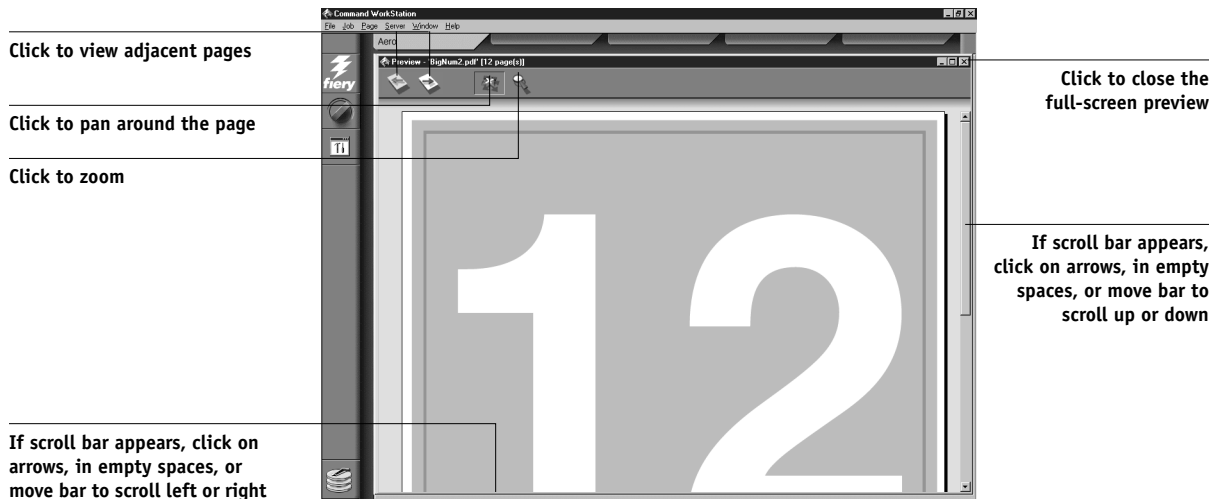


Job from the RIP area

Click to view adjacent pages

Click to rotate 90, 180,
or 270 degrees

If scroll bar appears, click on
arrows, in empty spaces, or
move bar to scroll left or right

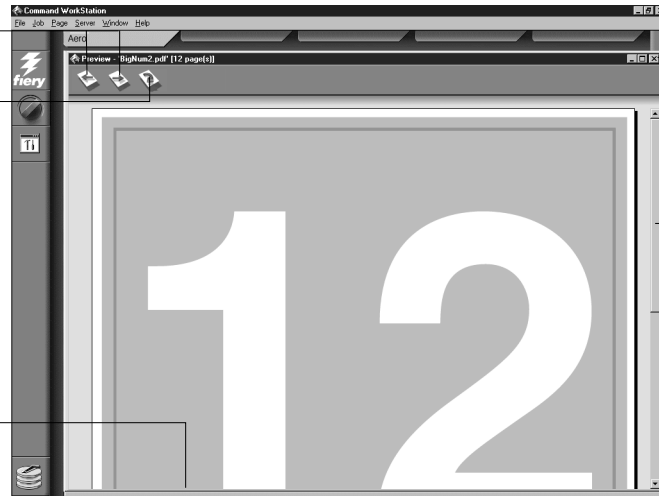

Click to close the
full-screen preview

If scroll bar appears,
click on arrows, in empty
spaces, or move bar to
scroll up or down

Chapter 4: Managing Print Jobs

This chapter provides some general information about managing printing with the E-810 and the copier, and gives you some hints on using the Command WorkStation windows to monitor and manage print jobs. It suggests ways to guide users so that their jobs are more likely to print correctly the first time. The chapter also follows the course of a print job and shows possible ways to expedite jobs and take advantage of the special capabilities provided by Command WorkStation.

Communicating with users

The Command WorkStation interface facilitates communication between users and operators. All the same, users who originate print jobs may need to become better informed about the E-810 and the copier so they can choose the appropriate options for their jobs.

What the user needs to know

You or the network administrator should consider supplying some of the following information to your users:

- The name of the copier on the network and the names of servers sharing the copier
- User's access status

If jobs do not require operator intervention because they go to the Hold queue, which connections are published—Direct connection and/or Print queue?

- How long you will hold jobs on the server before you delete them
- List of default printer settings and other settings (from the Configuration page)
- List of installed fonts

If users' applications do not download fonts automatically, can users download fonts to the E-810? Should they embed them in documents or should they supply them to you so you can download them?

- Requirements for Notes fields (information which appears in the Job Log)

For example, department name, account code, phone number or extension. Is some information mandatory at your site?

- Resident calibration target and date of current measurements
- Custom simulations

Are custom simulations available, what type of targets do they represent?

Although users see these print options (CMYK Simulation), they should not select them if there are no custom targets on the server.

- IP address or DNS name of server so users can access Fiery WebTools, at least to see if their jobs have printed
- Installed options
- Available media, alternative choices, standard tray/media configurations
- Suggestions for the Instructions field
- Information users might find in the WebLink web site
- Instructions for setting up the printer on client computers
- Sources of PostScript printer drivers, PPDs, color reference files, and additional information
- Recommended PPD settings
- FreeForm information regarding usage of master and variable data
- Conflicting settings and common PostScript errors

How users communicate print requirements

Explain to remote users the information *you* check and what you need to know in order to print the jobs they send. The Instructions field is suited for communicating job requirements.

Users can provide you information with the print job, for example:

- Information entered in the Instructions field or the Notes fields—special requirements at your site (see below)
- Job ticket information provided by PPD option settings (job properties)

Instructions and Notes fields

- User name and phone number
- Priority, due date, request for notification
- Number of copies needed
- Request that operator do color check
- Request that job be held job for future printing or future reprinting
- Instructions for merging job with another job
- Quantity of paper required
- FreeForm information regarding use of master and variable data
- Imposition instructions

For more information, see Chapter 5.

- Future requirements for the job

Customizing the Command WorkStation window

You can customize the display of job ticket information in the Queues window by rearranging the column headings. You can tighten the columns, add new column headings, move columns, and delete column headings.

NOTE: The Job Title and User columns are always at the left and cannot be moved or deleted. You can only add column headings to the right of the User column.

TO CUSTOMIZE THE QUEUES WINDOW DISPLAY

1. **Right-click the column heading.**

A menu appears. The Add submenu lists the headings that are not already displayed.

2. **Choose the options you want to display, and the sequence in which you prefer to view them.**

Add, delete, or move a column by holding down the right mouse button on the name of the appropriate column heading; release the button after choosing one of the menu options:

Add one of the listed columns to the display at your mouse position.

Move Left, Move Right—move the selected column left or right.

Delete the selected column.

The Job Title and User columns are required—all others are optional.

3. **Adjust the column widths.**

Adjust the width of a column by clicking the column border in the heading and dragging to the left or right. You can change the column widths at any time.


If you display the Instructions column, which shows information typed into the Instructions field by the user, you can reduce the width of the column so you can just see whether or not there are instructions in it.

4. **With a narrow Instructions column, if you want to read detailed instructions, double-click the job and choose Notes from the Job Properties dialog box.**

This also allows you to read the notes. You can edit or annotate the information in the Instructions field if you wish. It remains with the job as long as the job is on the server. The operator cannot edit the Notes fields.

Setting Command WorkStation Preferences

Choose Preferences from the File menu to access the Preferences dialog box.

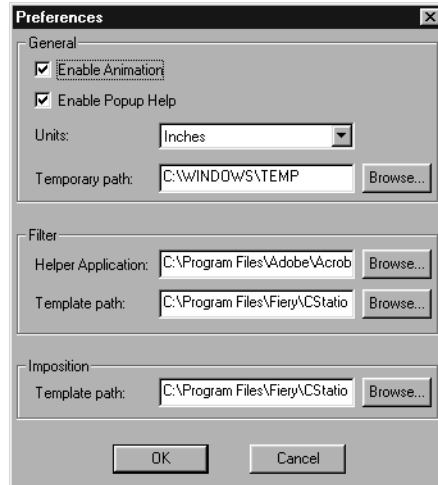

Menu	Choose this	To do this
Preferences\ General	Enable Animation	Turn on or turn off animation of the status bars.
	Enable Popup Help	Turn on or turn off short captions that appear when you pause the mouse over window elements; the captions identify the main parts of the Command WorkStation window.
	Units	Specify the type of unit (Points, Inches, or Millimeters) to use in the display for custom page sizes and Imposition settings.
	Temporary path	Specify a location for temporary files created by the Command WorkStation software.

Menu	Choose this	To do this
Preferences\ Filter	Helper Application	Specify the path to a helper application from which to view data in the active window; this application opens automatically when you choose “View in Helper App” from the Window menu.
	Template path	Specify the path to the location where Filter template files are saved; for more information on Filter templates, see page 3-40.
Preferences\ Imposition	Template path	Specify the path to the location where Imposition template files are saved.

Printing server information pages

Using the Print Pages command, you can print various special pages of information stored on the E-810.

TO PRINT SERVER INFORMATION PAGES

1. **Choose Print Pages from the File menu.**
2. **In the Select Printer area, specify where you want to print the pages.**

Server—The pages you specify are printed to the E-810.

Local Printer—Enables you to print the Configuration page, Archive Log, and Queues to any printer installed on your Windows computer.

3. In the Select Pages area, specify the pages you want to print:

Configuration—Prints the Configuration page, which gives the current server and device configuration. This page lists general information about the hardware and software configuration of the E-810, the current settings for all Setup options, information about the current calibration, and the Ethernet and Token Ring addresses of the E-810.

Test Page—A Test Page enables you to confirm that the E-810 is properly connected to the copier, and provides color and grayscale samples to troubleshoot problems with the copier or the E-810. The following settings are among those listed on the Test Page: Server Name, Printer Model, color settings, calibration information, and date and time the Test Page was printed.

Control Panel Map—Prints the Control Panel Map, which is an overview of the screens you can access from the Control Panel. For information about using these screens to set up the E-810, see the *Configuration Guide*.

Font List—Prints a list of all fonts currently resident on the E-810 hard disk.

Color Charts—Prints samples of the RGB, CMY, and PANTONE colors available from the E-810.

Job Log—Prints a log of the last 55 jobs processed or printed. For information on the fields in the Job Log and on printing it in other forms, see “Using the Job Log” on page 4-35.

4. Click Print.

5. If you selected Server in step 2, specify the number of copies to print and click OK.

The page(s) are printed to the E-810.

If you selected Local Printer in step 2, choose the desired printer in the Print dialog box, specify the number of copies to print, and click OK.

The Configuration page is printed to the printer you specified.

Server information pages printed with the Print Pages command appear in the E-810 Job Log with a User Name of “Operator” even if you logged in as Administrator.

Workflow scenarios

The workflow at your site will depend on the number and complexity of jobs and the amount of responsibility given to the operator. This section suggests some ways you might interact with a job.

Scenario 1 At this site, the Print queue is enabled, and anyone at Command WorkStation can view the progress of jobs. A small job is sent to a server and copier that are not busy. You watch the job progress from the top to the bottom of the Queues window.

The green light on the E-810 flashes, the network icon blinks; on Command WorkStation the Spool status bar is animated and the job title appears. As soon as spooling has finished, the Spool status bar is cleared and the RIP status bar animates. Almost immediately thereafter, the RIP status bar is cleared and the Print status bar animates. The printed job is listed below the Print status bar and the job pages emerge from the copier.

Scenario 2 At this site, all jobs come to the Hold queue and therefore require operator intervention to proceed.

Again, the green light on the E-810 flashes, the network icon blinks, the Spool status bar is animated, and now in the Spool area (below the status bar) the job title comes into view. In a few moments the job is on the list, and you have time to scan the headings for the job ticket information—media type, special instructions, copies, and pages.

Are you ready for this job to print? Do other jobs have priority? What is the job for—is it final output or a test print? The first choice is whether to put the job in the print queue or hold it before processing it further. If you do nothing, the job remains in the Spool area, and the file remains on the server disk.

Perhaps this is a routine job and does not call for special handling. You right-click the job and choose Print. You notice the RIP status bar animate, and almost immediately, the Print status bar animates. The printed job is listed below the Print status bar and the job pages emerge from the copier.

The next job is a large job that you have not seen before. The Instructions field indicates the originator of the job wants to check one printout of the job before you print another 50 copies. You make sure the Copies field is set to 1, right-click the job, and choose Print and Hold.

The RIP status bar animates and displays the job title, the Print status bar animates, and Copy 1 of the job emerges from the copier. You call the sender of the job for approval. When the job is approved, you set the number of copies to 50, right-click the job now being held in the RIP area, and choose Print.

Scenario 3 Everyone has discovered the copier on the network and jobs are coming in rapidly. You right-click several routine jobs in the Spool area and choose Print to let the server print them one after the other. You choose Print and Hold if you know you will be reprinting the job soon. You remove printed jobs from the output trays and replenish media.

While some jobs are flowing through the queues and printing, you are preparing for jobs that require more attention, such as obtaining special paper, using DocBuilder Pro to merge two documents, or notifying the originator of a job that a PostScript error occurred.

Before you load special paper, you make sure all pending jobs are in holding areas. When an especially important job is spooled for RIPping, you right-click Process Next.

NOTE: If a job that contains different page sizes is printed, be sure to restart the E-810 using the Reboot command from the Control Panel.

Using the copier

If you have a copier job that has priority over the spooled incoming print jobs you can temporarily close the E-810 connection to the copier and then reopen it when you have finished copying.

When there are no active printing jobs competing for the copier engine (no white job lines in the Spool or RIP area), you do not need to suspend printing to make copies.

TO ASSIGN THE COPIER TOP PRIORITY AND LATER RESTORE E-810 PRIORITY

1. **From the Server menu, choose Suspend Printing, press the F5 key, or right-click the Print status bar and choose Suspend Printing.**

This suspends printing temporarily. Jobs continue to spool and RIP on the server as long as disk space and RAM are available.

2. **When you have finished with the copier job, choose Resume Printing from the Server menu, press the F6 key, or right-click the Print status bar and choose Resume Printing.**

The printing connection between the E-810 and the copier is reopened and printing resumes.

Canceling jobs

You may need to cancel a job after it has been routed for processing or printing. You can cancel a job only while it is being RIPped or while it is being printed. You cannot cancel a waiting job (white job row) that is routed for RIPping or printing.

- Canceling jobs during processing—While a job is being RIPped, and its name appears in the RIP status bar, choose the Cancel RIPping command from the Server menu, press the F7 key, or right-click on the RIP status bar and choose Cancel RIPping.

When the RIP job is canceled, the Canceling message appears on the E-810 Control Panel. The name of the canceled job appears in the Job Log.

- Canceling jobs during printing—While a job is printing, and its name appears in the Print status bar, choose the Cancel Printing command from the Server menu, press the F8 key, or right-click on the Print status bar and choose Cancel Printing.

When the print job is canceled, Canceling appears on the E-810 Control Panel. The name of the canceled job appears in the Job Log.

NOTE: Canceled jobs may be partially printed, and may include pages with one or more missing color planes, or pages that are completely blank.

- Canceling at the Control Panel—If you are at the E-810, the most direct way to cancel a job is to press the top button on the server Control Panel while you can read the name of the job that is processing or printing. For more information on the Control Panel, see Chapter 1.

Page-level operations of Command WorkStation

Page-level operations include generating thumbnail images, adding pages, deleting pages, duplicating pages, reordering pages, and adding blank pages.

Previewing print jobs

You can use the Thumbnail A window to preview pages of the currently RIPping job. You can also use Thumbnail A, as well as Thumbnail B, to preview any held PostScript or PDF job in the Spool area; or any held PostScript or raster data job in the RIP area.

The thumbnail windows also allow you to open an thumbnail view of a held PostScript or PDF job in the Spool area, or any held PostScript or raster data job in the RIP area and perform electronic collation or document merging. This feature, called DocBuilder Pro, is described on page 4-15.

NOTE: In order to open the thumbnail windows for jobs in the Spool area, the jobs must first be converted to PDF files. In addition, the Adobe Acrobat application (included with DocBuilder Pro) is required to view the job. When you select a job in the Spool area and choose Thumbnail A or Thumbnail B, the Adobe Acrobat Distiller application starts, and the conversion process occurs automatically; wait a few moments as Command WorkStation prepares and then opens the job for viewing.

Thumbnail generation

If your held PDF job in the Spool area already holds thumbnail data, you can open it in the Thumbnail A or B windows without modifying the temporary file; otherwise, DocBuilder Pro generates thumbnail images and adds them to the temporary file. Because the generation of thumbnails may take a few moments, DocBuilder Pro prompts you to permit or deny this action.

When you close the window, you are prompted to save or discard thumbnail data. To avoid modifying your original PostScript or PDF data, you can discard newly generated thumbnail data. However, in most cases, thumbnail data is worth keeping as it takes up very little space and saves you the time required to generate it again.

Another way to maintain an unmodified copy of the original spool file is to save the job under a new name immediately upon opening it in Command WorkStation; this action discards any newly generated thumbnail data.


Previewing the currently rasterizing job

To see the progress of jobs as they are RIPped, you can leave the Thumbnail A window open in RIP Preview mode.

TO VIEW THUMBNAILS OF THE CURRENTLY RIPING FILE

1. Click the Thumbnail A tab at the right of the Queues window to open the slider.
2. Click the RIP preview icon at the left side of the window.

In this mode, Thumbnail A displays each page of the currently processing job after it has been RIPped.

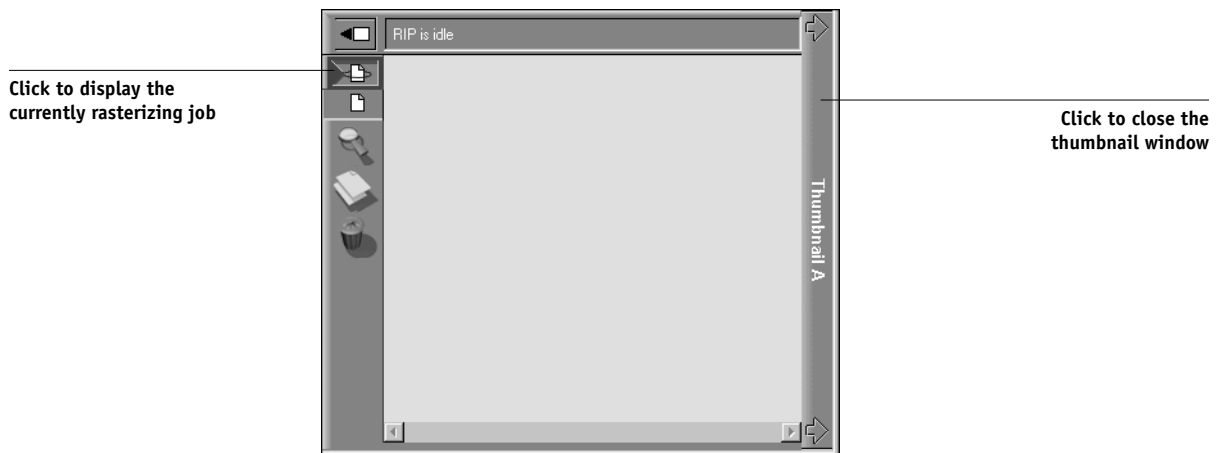

3. Choose a PostScript file in the Spool or Print area and select **RIP and Hold**, **Print**, or **Print and Hold**.

As pages are RIPped, they are displayed in the Thumbnail A window.

4. When you have finished viewing, click the Thumbnail A tab to close the thumbnail window.


TO VIEW THUMBNAILS OF ANY POSTSCRIPT, PDF, OR RASTER DATA FILE

1. Select any PostScript or PDF job in the Spool area, or select any PostScript, PDF, or raster data job in the RIP area.
2. Choose Thumbnail A or Thumbnail B from the Job menu.

If you choose Thumbnail A, make sure the raster data preview icon (at the left side of the window) is selected.

If you choose a job in the Spool area, Adobe Acrobat automatically starts in the background, enabling you to view the job.

NOTE: Wait until all pages have been displayed before opening another PostScript, PDF, or raster file with Thumbnail A. If the job contains many pages, it may take some time for the entire job to be displayed.

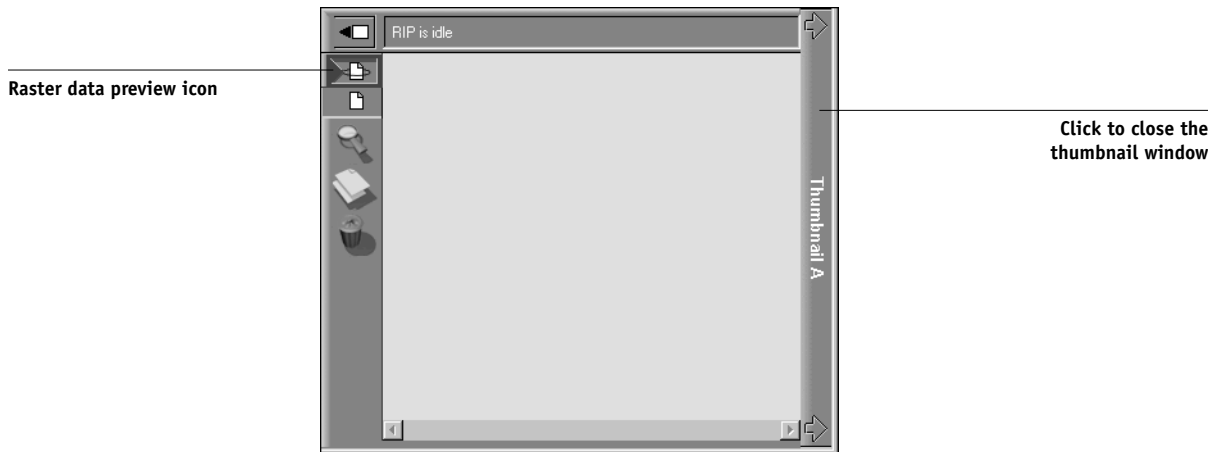

3. When you have finished viewing, click the Thumbnail A or Thumbnail B tab to close the thumbnail window.

Merging PostScript and raster files with DocBuilder Pro

The ability to work with PostScript and raster files gives you new opportunities to combine documents from different sources into a single file. For example, you can combine full color covers and chapter head pages created in a page layout application with two-color text pages created in a document processing application. You can also customize a slide presentation by inserting slides from a different presentation.

You can display two PostScript or raster files at once: a source file and a target file. The target file is displayed in the Thumbnail A window, the source in Thumbnail B. Both files must be of the same data type, that is, held PostScript or raster data jobs, and both must be located in the same area (Spool or RIP). You cannot merge a PostScript job from Thumbnail B with a raster job in Thumbnail A.

NOTE: You cannot create a new PostScript file in this process; you must print the merged file, which has references to the original PostScript files. Before editing or merging raster files with DocBuilder Pro, make sure the source files were RIPped using the print option settings and the resident calibration you want for the final output. Raster files edited with DocBuilder Pro cannot be reRIPped, and only the number of copies may be changed.

Page manipulations

Page-level manipulations in the Thumbnail A window (adding pages, deleting pages, reordering pages, or inserting blank pages) modify the temporary PDF file. If you do not want to modify the original PDF spool file, you must save the job under a different name or discard the changes. The Thumbnail B window is read-only—you cannot make content changes to it.

TO VIEW AND EDIT POSTSCRIPT, PDF, OR RASTER DATA JOBS

1. **Select a PostScript, PDF, or raster data job and choose Thumbnail A from the Job menu.**


The file must be a held PostScript or PDF job in the Spool area, or a held PostScript, PDF, or raster data job in the RIP area.

2. **In the Thumbnail A window, right-click a thumbnail image to see the commands available for pages in Thumbnail A.**

These commands can also be accessed from the Page menu (see page 3-12), as well as from buttons along the left side of the Thumbnail A window (see illustrations below).

To scroll through the pages in Thumbnail A, drag the slider bar at the bottom of the screen, click the empty area to the left or right of the slider bar, or click the arrows.

The illustration below shows a job from the Spool area.

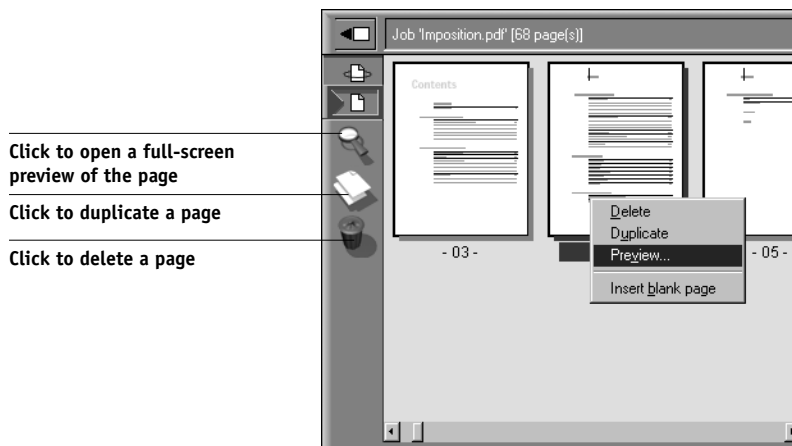


Preview—Opens a full-screen preview of the currently selected page (see “Full-screen previews” on page 3-46).

Duplicate—Duplicates the currently selected page(s).

Delete—Deletes the currently selected page(s).

Insert blank page—Inserts a blank page after the currently selected page(s).

The illustration below shows a job from the RIP area.

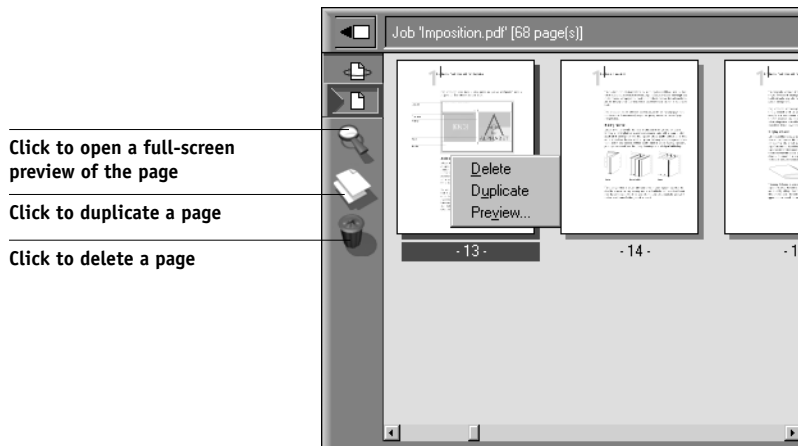

Delete—Deletes the currently selected page(s).

Duplicate—Duplicates the currently selected page(s).

Preview—Opens a full-screen preview of the currently selected page (see “Full-screen previews” on page 3-46).

3. **To move pages within Thumbnail A, left-click to select the page(s) and hold down the mouse button as you drag the selected page(s) to the new location.**

Shift-click to select multiple, sequential pages; Ctrl-click to select multiple, non-sequential pages.

If you move the page(s) on top of existing page(s), the page(s) will be overwritten.

If the icon does not have an arrow, the page(s) will be replaced; if the icon has an arrow, the page(s) will be inserted.



Replace single page



Replace multiple pages



Move single page
between two pages



Move multiple pages
between two pages



Move single page
before first page



Move multiple pages
before first page



Move single page
after last page



Move multiple pages
after last page

4. When you are finished editing, click the Thumbnail A tab.

If you have edited the job, you are prompted to save the job. Click Yes and enter a new name.

5. Enter a new name and click OK.

Depending on the location of the original files, the new file is now located in the Spool or the RIP area, ready to print. If you saved the edited file with a new name, the original source file remains held in the Spool or the RIP area.

TO MERGE TWO POSTSCRIPT, PDF, OR RASTER DATA JOBS

1. **In the Thumbnail A window, display the document you want to edit.**

The file must be a held PostScript or PDF job in the Spool area, or a held PostScript, PDF, or raster data job in the RIP area.

2. **Right-click another like-data source document file *from the same area* (a held job with a raster icon) and select Thumbnail B.**

The Thumbnail B tab opens a second thumbnail view which cannot be edited but can be a source for pages added to the document in Thumbnail A.

NOTE: To merge documents, *the page sizes of the source document and the target document must be the same*, the jobs must both be located in the same area (Spool or RIP), and the jobs must be of like data type (that is, both are PostScript, or both are raster jobs).

3. **In the Thumbnail B window, left-click to select the page(s) and hold down the mouse button as you drag the selected page(s) to the new location in Thumbnail A.**

Shift-click to select multiple, sequential pages; Ctrl-click to select multiple, non-sequential pages.

To scroll through the pages in Thumbnail A and Thumbnail B, you can drag the slider bar at the bottom of the screen, click in the empty area to the left or right of the slider bar, or click on the arrows.

To replace page(s), drag Thumbnail B page(s) on top of page(s) in Thumbnail A; to add page(s), drag the page(s) to a new position between pages, before the first page, or after the last page in Thumbnail A.



Replace single page



Replace multiple pages



Move single page
between two pages



Move multiple pages
between two pages



Move single page
before first page



Move multiple pages
before first page




Move single page
after last page



Move multiple pages
after last page

NOTE: To insert a Thumbnail B page directly after the last Thumbnail A page, drag the Thumbnail B page so that it is just to the right of the last Thumbnail A page and shows an arrow pointing to the right. If the Thumbnail B page is placed too far to the right of the last Thumbnail A page, the Thumbnail B page will replace the last Thumbnail A page.

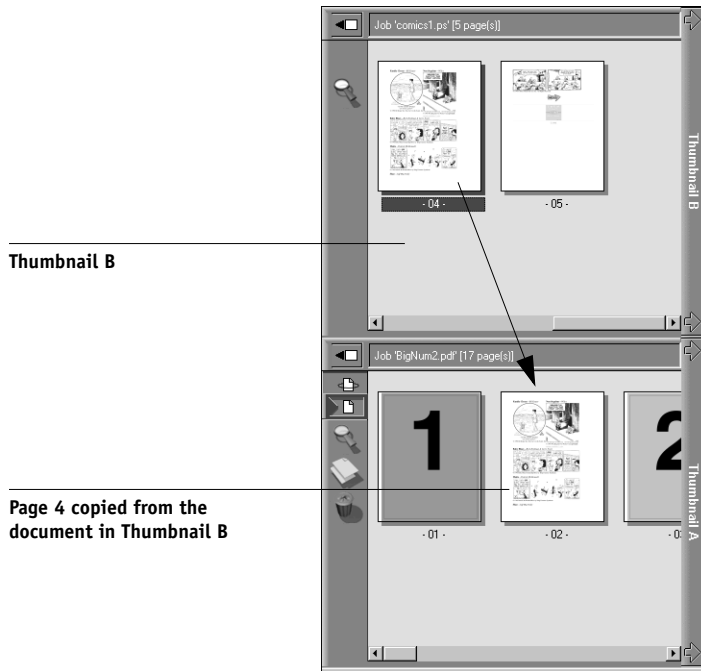

Multiple undos are available; use Ctrl-Z or the Undo command to undo all the way back to your first edit. There is no Redo function.

NOTE: Make sure to save the merged job before deleting any of the jobs you used to create the merged job.

Thumbnail B pages moved into Thumbnail A adopt some specific attributes of the Thumbnail A job, such as the document and user name. However, many color-related print options that are set in the Thumbnail B page, such as CMYK Simulation and Rendering Style, remain with the specific page. This could result in a merged job being made up of pages with different attributes.

Generally, the print option settings specified for the Thumbnail A job that are adopted by the pages copied from Thumbnail B *do not* require reRIPping to take effect. The one exception is the setting specified for the Save Fast Reprint option, which requires reRIPping if you want to change it.

The print option settings that remain with the pages copied from Thumbnail B into Thumbnail A are generally those that *do* require reRIPping to take effect.

Attributes that do not require reRIPping can be changed for the newly merged job without having to reRIP any original PostScript files. Attributes that require reRIPping result in reRIPping of the original PostScript file(s) associated with Thumbnail A.

4. **To close the Thumbnail view, click once on the same tab you used to open it (Thumbnail A or Thumbnail B tab).**
5. **If you have edited Thumbnail A, you are prompted to save the job (click Yes) and enter a new name. Enter a new name and click OK.**

Depending on the location of the original files, the new PostScript or raster file is now in the Spool or the RIP area, ready to print, together with the original source and target files.

Since you cannot create a new PostScript file by merging two jobs, you must print the merged file, which has references to the original PostScript files. If a merged job is reRIPped and printed, then only the pages of the original PostScript job in Thumbnail A will be processed and printed.

NOTE: In cases where multiple users are connected to the E-810 via Command WorkStation, Fiery WebSpooler, or Fiery Spooler, and one user makes changes to a Thumbnail A job, not all users may see the results of those changes. If you are unable to view changes in a job, or if selecting a Thumbnail window results in a message indicating zero pages, then close and relaunch Command WorkStation, Fiery WebSpooler, or Fiery Spooler.

Viewing and overriding print settings

When logged in as Operator or Administrator at Command WorkStation, you can view, override user job settings of, and print any job in the Queues window and view job settings for jobs in the Archive and FreeForm windows. Using the Properties dialog box, you can view and override job settings for a single job or for multiple jobs at once. When viewing multiple jobs, you can override settings for each job independently or override a setting for all the jobs at once.

- To view the properties for a single job, double-click the job line or select the job and choose Properties from the Job menu or right-mouse menu.
- To view the properties for multiple jobs at once, Shift-click to select contiguous jobs, or Ctrl-click to select non-contiguous jobs, and choose Properties from the Job menu or right mouse menu.


NOTE: To retain a copy of the job with its original settings, duplicate the job and rename the duplicate before you change any settings (see “Job commands” on page 3-24).

To override a setting for a single job, right-click the current setting and choose the override setting from the pop-up list.

NOTE: For some options, changing the setting requires that the job be reRIPped; these options show an icon to the left of the option name.

To override settings for all jobs listed in the Properties dialog box, right-click the name of the print option (the row header) at the left of the dialog box and choose the override setting from the pop-up menu.

Re-RIP icon

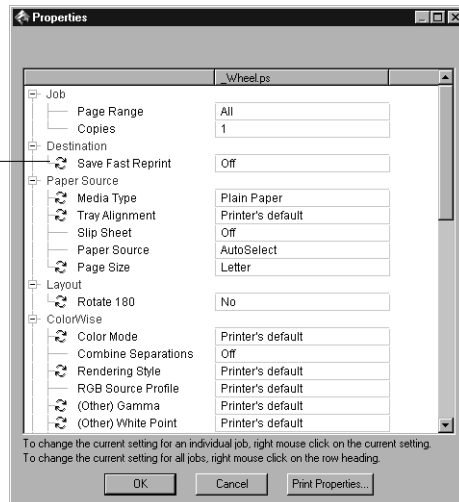

The Properties dialog box displays all the job settings encoded by the PostScript printer driver that can be decoded by the E-810. If you (as operator) have not changed anything, these are the settings a user entered before sending the job. There is one exception to this: Page Range.

For jobs from the Spool area that have been viewed and edited in the Thumbnail windows or PDF files printed using Fiery Downloader, you cannot override the following print options:

- Remove White PPT Background
- Spot Color Matching

NOTE: Some print options that are available in the printer driver are not displayed in the Properties dialog box. For information on specific print options and settings, and where they can be set, see Appendix A of the *Printing Guide*.

When the Properties dialog box opens, the page range is always shown as All pages and the scale is always shown as 100%. All pages denotes all the pages specified by the user in printing the job; it may not include all the pages in the original document on the user's disk. Similarly, 100% scale indicates 100% of the magnification specified by the user.

The Properties dialog box does display all the remaining user settings, including user Instructions and Notes fields.

- Instructions fields are intended to be viewed and annotated by the operator, but their contents are associated with the job and are deleted when the job is deleted after printing.
- Notes fields can be viewed but cannot be changed by the operator; their contents are transcribed to the Job Log just as the user sent them.

Printing variable data documents (FreeForm)

The ability to override job settings is especially important for variable data printing with FreeForm. As described on page 3-33, the E-810 can store up to 100 FreeForm Masters; however, users are limited to a range of 1 to 15 as values they can specify for the Create Master and Use Master print options. In order to make use of all 100 available FreeForm Masters, the operator must override the Create Master and Use Master job settings from the Properties dialog box on Command WorkStation.

TO PRINT A VARIABLE DATA DOCUMENT

1. **Right-click to select the job comprising the variable elements of the document and choose Properties.**
See page 4-22 for details.
2. **Scroll to find the FreeForm section in the Properties dialog box and right-click the Use Master print option.**
3. **Choose the number of the FreeForm master job that you want to use as the master document.**
See page 3-33 for information on FreeForm masters.
4. **Click OK.**
5. **Assign the job a destination of RIP and Hold, Print, or Print and Hold.**
Particularly with a variable data job, you may want to RIP and Hold the job so that you can preview it before printing.

For more information on using FreeForm features, see the *Printing Guide*.

Downloading files and fonts

From Command WorkStation, you can download a variety of file types, as well as fonts, to the E-810. These files and fonts can be located anywhere on the network or on an external device connected to the Command WorkStation computer. You browse to locate the files and fonts, select them, and add them to a list of items to be downloaded. You can specify a limited number of print option settings for files that you download (see page 4-27).

To download fonts, you must use the Direct connection. If the Direct connection is not currently published in Setup, see the *Configuration Guide* for instructions on how to publish it.

NOTE: You cannot download TrueType fonts. If you use TrueType fonts in Windows, you can print them by converting them to Adobe Type 1 fonts. To do this with the PostScript printer driver on Windows 98/Me, click the Fonts tab in the Properties dialog box and set up the Font Substitution Table, as necessary. For Windows NT 4.0, click the PostScript tab of the E-810 Properties dialog box and


select TrueType fonts>TrueType fonts setting>Download Softfont. For Windows 2000, click the Advanced tab of the E-810 Printing Preferences dialog box and select Graphic>TrueType Font>Download as Softfont.

Manage Fonts in the Server menu provides another way to download fonts to the E-810 (see page 4-28).

TO DOWNLOAD FILES OR FONTS

1. **Choose Download from the Job menu, or right-click on the Spool status bar and select Download.**

The main Fiery Downloader window appears.

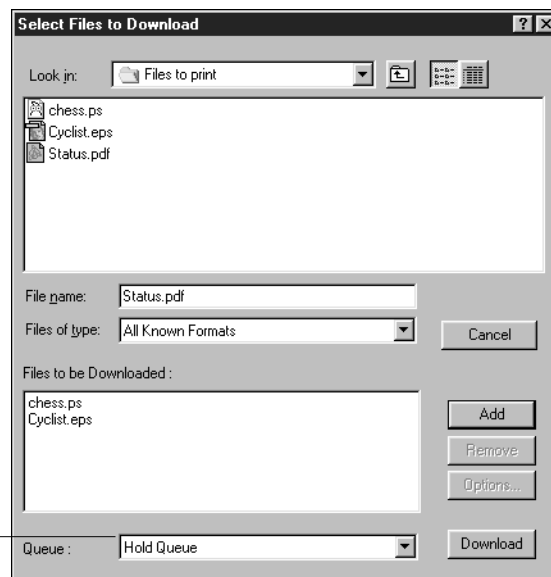

For fonts, choose
Direct connection

2. **In the Files of type pop-up menu, choose the file types to display.**

You can leave this at the default All Known Formats or choose All Files.

All Known Formats lists all files in supported formats; All Files lists all files.

3. In the Queue pop-up menu, choose the queue to which you will download the files.

The options available in this menu depend on the print connections currently enabled in Setup. The potential choices are Direct Connection, Hold Queue, or Print Queue. If your administrator has not enabled one or more of these connections, you cannot choose it.

To download fonts, you must choose Direct Connection.

PDF files are always spooled to the E-810 hard disk before being printed. PDF files must be sent to the Print queue (or to the Hold queue if the Print queue is not enabled). Do not choose Direct Connection to download PDF files.

4. In the Look in pop-up menu, browse to the file(s) you want to download.

5. Select the filename and click Add.

The Filename field displays the name of the selected file before you click Add.


You can navigate to different drives and folders to select files and fonts to download.

To select multiple sequential files, select the first file and then Shift-click the last file. Ctrl-click to select multiple non-sequential files.


If you change your mind about a file, select the filename in the Files to be downloaded list and click Remove.

6. To change the attributes of a file, select it from the “Files to be Downloaded” list and click Options.

The Options dialog box for PostScript and EPS files is different from that for PDF files, as explained below.

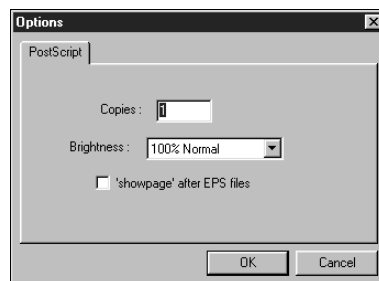

PostScript options

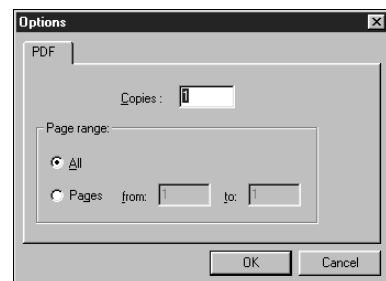

PDF options

7. Specify the following information in the dialog box and click OK.

The options you set apply only to the selected file. You can set different options, or leave the default settings, for each file.

Copies—Specify the number of copies.

Brightness (PostScript and EPS files only)—Change the Brightness setting if a file appears to be too dark or too light. Choose 85% for a substantially lighter image, 115% for a substantially darker image, or one of the options in between.

NOTE: Some applications, including Adobe Photoshop, provide transfer functions that let you specify density settings for an image. If the file you are printing includes transfer functions, the Brightness option has no effect. For more information on using transfer functions, see the documentation for your application.

‘showpage’ (after EPS files)—In most cases, you do not need to use this option. Select the ‘showpage’ (after EPS files) option only if an EPS file fails to print without it. This option adds a ‘showpage’ PostScript language command at the end of the print job. Some applications omit this necessary PostScript language command when they generate EPS files. Select this option when printing EPS files generated by these applications. If you select this option unnecessarily, extra blank pages may print.

If you experience problems downloading EPS files, you can print the file directly from the application in which you created it.

Page Range (PDF files only)—Specify the page range you want to print.

8. Click Download.

To cancel downloading, click Cancel or press the <Esc> key.

Managing server fonts

The E-810 includes a number of built-in printer fonts. You can download additional fonts to the E-810 by choosing Manage Fonts in the Server menu (see below), or the Download command (see page 4-25). Users on the network can also download fonts to the server using Fiery Downloader (see the *Printing Guide*). Downloading fonts, from either Command WorkStation or Fiery Downloader requires that you publish the Direct connection in Setup (see the *Configuration Guide*).

NOTE: Manage Fonts is available only if you logged in as Administrator.


Although no special privileges are necessary to download fonts, Administrator privileges are required to remove fonts from the server. The built-in printer fonts are locked and cannot be removed by anyone.

To print a list of fonts currently resident on the E-810, use the Print Pages command (see page 4-6).

TO MANAGE FONTS

1. Choose Manage Fonts from the Server menu.

The Server Fonts window displays Add, Delete, Update, and Print buttons.

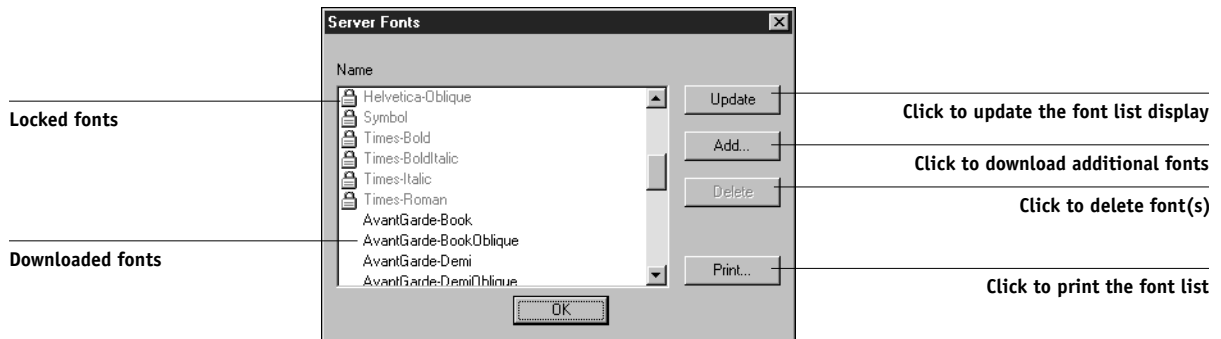

2. To download additional fonts to the E-810, click Add and follow the instructions on page 4-25.

3. To delete a font, select it in the font list and click Delete. Shift-click or Ctrl-click to select multiple fonts.

NOTE: The printer fonts included with the E-810 (built-in fonts) are locked. These fonts appear with a lock icon next to the name and cannot be deleted.

4. To refresh the font list display, click Update.

5. To print the font list, click Print.

Managing jobs with multiple color servers

You can connect to up to five E-810 color servers simultaneously from Command WorkStation. This allows you to view and manage jobs being processed by multiple servers from a single location, and also to balance the job load between servers of similar capabilities.

- If you connect to multiple servers from Command WorkStation, you can easily switch between them by clicking the server selection tabs (see page 3-13).
- With E-810 color servers that support the feature, you can use the Send to <Nickname_Devicename> command to transfer jobs between color servers (see page 3-26).

TO VIEW AND MANAGE JOBS ON MORE THAN ONE COLOR SERVER

- 1. Configure the connection to the first server and log in.**

For information on configuring the connection to the server, see *Getting Started*.

- 2. Click a blank server selection tab.**

- 3. Configure the connection to the next server and log in.**

The Command WorkStation windows show the job lists for the additional server. You can route and manage the jobs processed by this server as long as you are logged in.

- 4. To switch servers, simply click the other server selection tab.**

Once you have logged in, you do not need to log in again unless you have logged out.

If the servers are extremely busy with continuous jobs, you may see some delay in updating the Command WorkStation window when you switch between servers. Job lists may be blank for some seconds until updating is complete.

TO TRANSFER JOBS BETWEEN COLOR SERVERS

1. **Log in to more than one color server, as described above.**

To transfer jobs between color servers, both color servers must support the Send to <Nickname_DeviceName> command.

2. **In the Queues window of the source color server, select the job(s) you want to transfer.**

You can select any *held* jobs in the Spool or RIP areas.

3. **Choose the Send to <Nickname_DeviceName> command from the Job menu.**

The actual command contains the name of the other color server currently connected to Command WorkStation; for example, Send to Aero_r7. If two or more additional color servers (in addition to the originating server) are connected to Command WorkStation, multiple Send to <Nickname_DeviceName> commands appear in the Job menu.

Jobs are transferred from the source server to the same area on the target server (from Spool to Spool, from RIP to RIP).

NOTE: You cannot perform any other Command WorkStation functions while files are being transferred between servers.

4. **After verifying that the jobs were successfully transferred, you can delete them from the originating server, if you wish.**

Archiving jobs

PostScript and raster data jobs can be archived internally to the E-810 hard disk or the ZIP drive, or externally to the Command WorkStation hard disk or network drives.


TO ARCHIVE A POSTSCRIPT OR RASTER JOB

1. **In the Queues window, select any held job in the Spool or RIP areas.**
2. **Choose Archive from the Job menu.**


3. To archive the job(s) internally to the E-810 hard disk or to the ZIP drive, click OK.

The job(s) are archived internally.

4. To archive the job(s) externally to the Command WorkStation hard disk or to a device on the network, click Add.

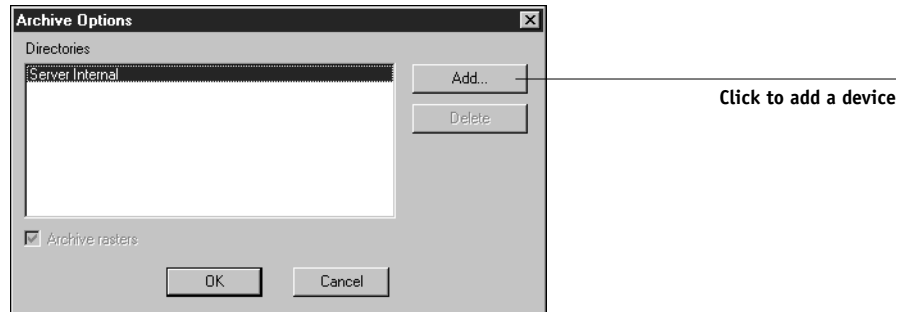


5. Browse to the device and folder to which you want to archive the job(s) and click OK.

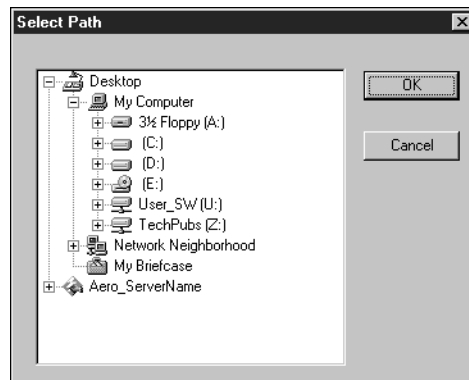

The Archive Options dialog box shows external devices as available archive volumes.

6. If applicable, select Archive rasters.

The Archive rasters option is dimmed for PostScript data jobs and for jobs being archived to Server Internal.

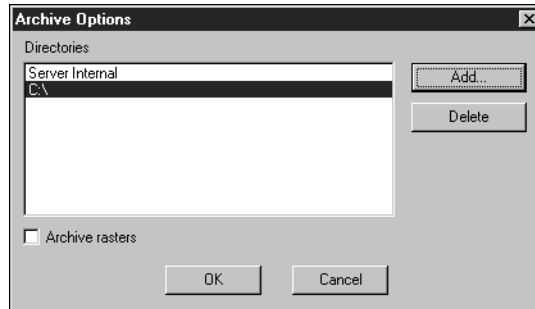

NOTE: Raster data files may be large and therefore may take considerable time to archive.

7. Select an archive volume and click OK.

To retrieve jobs archived to external devices, use the Import command.

You can copy or move the archived job to your choice of destinations by right-clicking the selected job in the Archive window and selecting Move To or Copy To.

NOTE: You cannot select the E-810 as the archive destination. Additionally, if you archived the job by selecting Server Internal, you cannot copy or move the archived job.


Importing archived jobs from external media

You can use Import to find and retrieve jobs previously archived to external devices. This command can be used to retrieve files archived from the current E-810 or from another E-810 that supports external archiving.

TO IMPORT AN ARCHIVED JOB FROM AN EXTERNAL DEVICE

1. Choose Import from the Job menu in the Queues window, or right-click the Spool status bar and choose Import.
2. Select the device containing the job(s) you want to import.

Click Add to import files from other archived volumes.

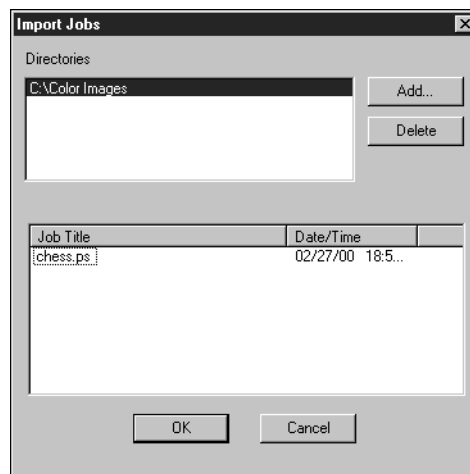

3. Click OK.

The job is imported to the same area in the Queues window (Spool or RIP) from which it was archived.

Using the Job Log

Chapter 3 introduced the Job Log, which is the list of all processed and printed jobs, including the date and time they were printed, and all the characteristics of the job. It explained that the Administrator can set Job Log preferences for clearing and printing the Job Log automatically, and for Job Log page size (page 3-35).

If you want to view the Job Log in a specific application, you can specify one in the Preferences dialog box (see page 4-5); then select View in Helper App from the Window menu.

After displaying the Job Log you can print it (use the Print Pages dialog box or choose Print from the Window menu), or export it to a tab-delimited text file (choose Export from the Window menu). The exported Job Log file can be imported into a spreadsheet, database, or word processing application for job management purposes. If you used the Filter command to display only a portion of the Job Log (such as jobs for the current day), only that portion of the Job Log is printed or exported.

To update the Job Log, choose Refresh from the Window menu.

After printing or exporting the entire Job Log, you may want to clear it; choose Clear Job Log from the Server menu.

The Job Log window displays a list of all the jobs and the following information about them: status, document name, user, date, start time, end time, process time, page description language, size, device, page size, media, number of originals, number of color pages, number of black-and-white pages, and total number of pages. Information in the Notes 1 and Notes 2 fields is displayed if users entered this information when they printed.

NOTE: The Notes fields are supported only for jobs printed with the Adobe PostScript printer drivers provided on the User Software CD. They are not supported for jobs printed from Windows 2000.

Job Log								
Status	Document	User	Date	End Time	Start Time	Process Time	Size	Device
OK	Startup	Operator	07/27/00	11:51:14	11:46:17	00:00:03	281.39 KB	X40
OK	Startup	Operator	07/27/00	11:55:46	11:55:23	00:00:03	281.39 KB	X40
OK	Startup	Operator	07/27/00	12:03:08	12:02:43	00:00:03	281.39 KB	X40
OK	Startup	Operator	07/27/00	12:09:48	12:09:25	00:00:03	281.39 KB	X40
OK	Unknown	Unknown	07/27/00	12:11:35	12:11:15	00:00:01	16.51 KB	X40
OK	Unknown	Unknown	07/27/00	12:14:00	12:13:40	00:00:01	16.51 KB	X40

NOTE: If a PostScript or raster job was saved in DocBuilder Pro with a new name and then printed, it appears in the Job Log with the name of the original job, *not* the new name you specified for the edited job.

The text in the Status column provides information about the job:

OK The job printed normally.

Cancel The job was canceled before printing was completed.

Error An error occurred during processing or printing.

Use the scroll bar at the bottom of the window to view all the fields in the Job Log window.


Align Paper Trays

The Align Paper Trays command allows you to adjust the placement of text and images on the page so that they are correctly aligned on the sheet of paper or so that both sides of a duplex sheet have the exact same alignment.

NOTE: You can also perform tray alignment from the Functions menu on the E-810 Control Panel.

TO ALIGN TEXT AND IMAGES FOR PRINTING:

1. Select a job in the Command WorkStation window.
2. Right-click the job and select Properties from the right-mouse menu.
3. Set the Tray Alignment option to Enable.
4. Choose Align Paper Trays from the Server menu.

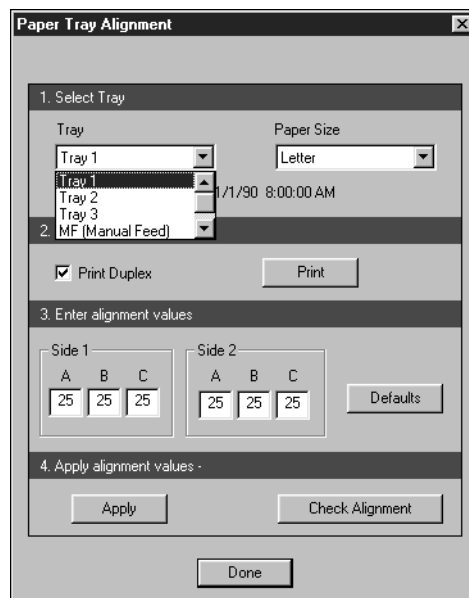

5. Select the tray you want to align from the Tray pull-down menu.

6. **Select the paper size that is loaded in the selected tray from the Paper Size pop-up menu.**

NOTE: The Align Paper Trays option is specific to the combination of tray and paper size selected. If you align Tray 1 with Letter paper, then load Legal paper in Tray 1, the alignment will be invalid. You must perform tray alignment for each combination of tray and paper size.

7. **In the Print alignment page section, select the Print Duplex option to print a duplex page or clear the option to print a simplex page.**
8. **Click the Print button to print the alignment page.**
9. **Once the page has printed, follow the instructions on the alignment page.**
10. **Fold the page in half horizontally, unfold it, and fold it in half vertically. When you unfold the sheet again, you will see that the fold lines cross three scales on three sides of the page. Determine the number where the fold line crosses each scale.**
11. **In the Enter alignment values fields, type in the value where the fold crosses each of the three scales, marked A, B, and C, for Side 1. If you choose to align for duplex printing, enter the values for the three scales on Side 2 of the page, as well.**

NOTE: If you enter different values in A and C, the image will rotate, leading to obvious, jagged (rough, uneven edges) areas on printed output. If this occurs, enter the same value in A and C.

Other server management commands

These additional Server menu commands are used to manage server performance, configuration, and status. Some of these commands are available only when logged in as Administrator:

- **Manage Fonts**—Allows you to delete fonts from, as well as add fonts to, the E-810 (see page 4-28).
- **Manage Color**—Starts ColorWise Pro Tools (see the *Color Guide*).
- **Clear Job Log**—Clears the Job Log only.
- **Reboot**—Restarts the E-810, just as if you had selected Restart Server from the Shut Down menu on the Control Panel (see page 1-6).
- **Clear**—Clears all jobs in all server queues as well as all jobs archived on the E-810 hard disk, the index of archived jobs (in the Archive window), all FreeForm masters, the index of FreeForm masters (in the FreeForm windows), and the Job Log
- **Setup**—Invokes Fiery Setup (see the *Configuration Guide*).
- **Log out**—Closes the connection to the E-810.

Chapter 5: Using Imposition

Imposition is a special feature of DocBuilder Pro. This chapter describes the graphical user interface for imposition functions. For background information on imposition and its uses, see Appendix A.

Main window

From the Imposition main window, you can impose the pages of a document in an order and positioning suitable for printing and binding. If you are connected to more than one E-810 at once, you can access the Imposition feature from one E-810 only.

NOTE: The Imposition main window is referred to as the “main window” from now on.

TO OPEN A JOB IN THE MAIN WINDOW

- **Send the job you want impose to the Hold queue or move it to the Spool area using Command WorkStation.**

For more information on sending jobs to the E-810, see the *Printing Guide*.
For information on using the Command WorkStation, see Chapter 3.

- **Before imposing a job, make sure to have the Adobe Type Manager installed on your computer.**


After installation, copy the Type_1 folder and the TrueType folder from the Adobe Type Manager CD to the Psfonts folder installed on your Windows computer, and then specify the PSfonts folder in the Font Locations window of Adobe Acrobat Distiller. Choose Font Locations from the Settings Menu and select the folder.

- **We recommend you set the following print options to the settings below before you impose any job:**

- Page Order set to Reverse
- Rotate 180 set to No

- **Select any held job in the Spool area and choose Impose from the Job menu. Or you can right-click the job and choose Impose from the right-mouse menu.**


You can open a PostScript or PDF file, but it must be held in the Spool area.

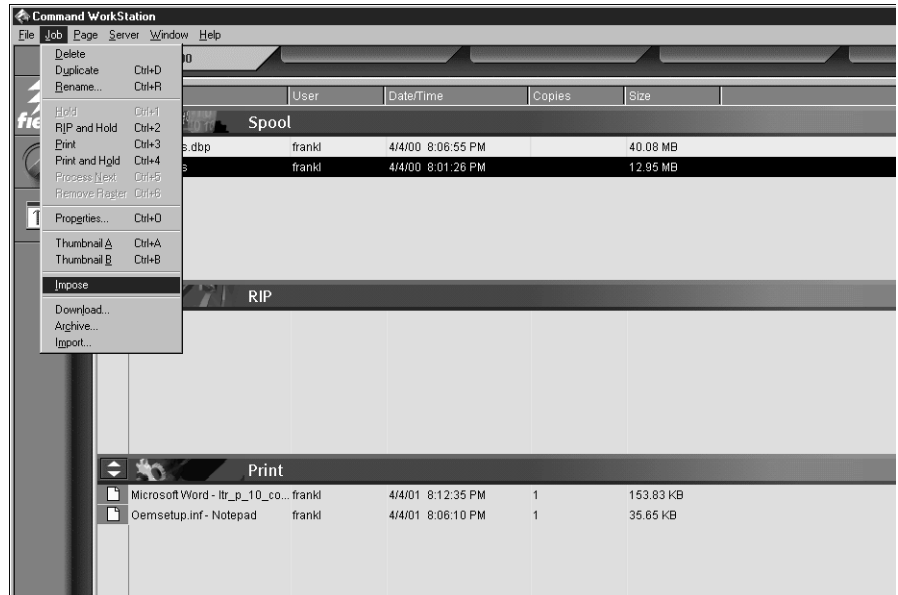

NOTE: If you have installed DocBuilder Pro as an optional kit, you will also need to install a dongle on your workstation. If the dongle is not attached, you will see an error message. For more information, contact your authorized service/support technician.

When you choose the Impose command, a page-imaging process is invoked that generates a PDF version of the job on which DocBuilder Pro will perform imposition.

A status window is displayed while the job is imaged for the main window.

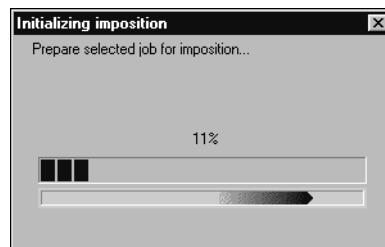


When it opens, the main window displays the job imposed using a default layout, or the layout that was last associated with the job (if the job has been previously imposed). Templates for common layouts are provided and can be invoked from the main window, as described in “Using templates” on page 5-8.

Job previews

The main window provides a preview of a job’s pages before the job is RIPped, allowing you to manipulate the source PDF before rasterizing the job.

Pages appear as a printer’s spread; that is, they appear in the order in which they are printed as an imposed job. In contrast, a reader’s spread shows pages in the order they are intended to be read. You are already familiar with such a view—the Thumbnail A and Thumbnail B windows image jobs as reader’s spreads.

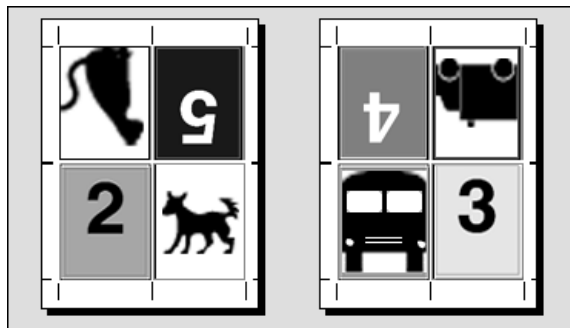

Printer's spread




Reader's spread

Navigating in the main window

You can use the icons and menus at the top and bottom of the main window to:

- Switch from Preview mode (thumbnails of actual content) to Layout mode (page numbers only).
- Zoom in and out.
- Drag the job preview around to make a particular page or sheet visible.
- Go directly to a particular page or sheet.

The Zoom tool, Pan tool, Preview mode and Layout mode buttons are located in the upper-right corner of the window.

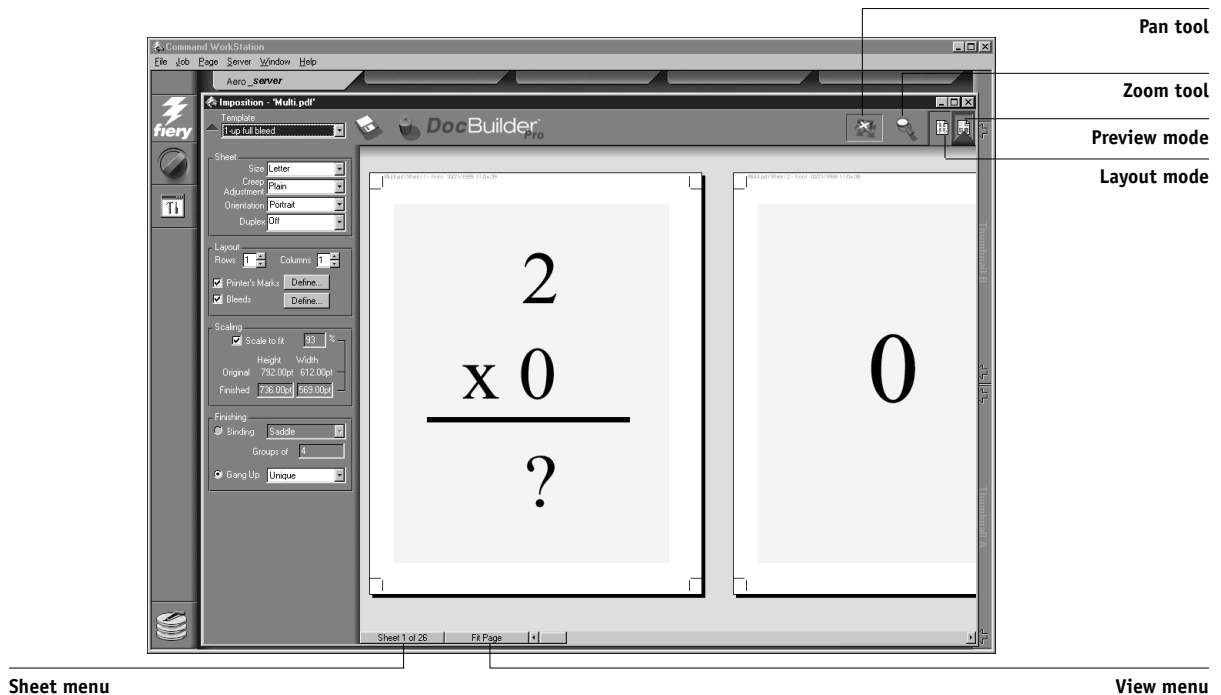

When you position the cursor over the Pan or Zoom tool, a 3-D border surrounds it to provide the appearance of a raised button. Click once to select the tool. The 3D border inverts, as if the button has been pressed, indicating that the tool is selected.

When you select the Pan tool or Zoom tool, the appearance of the cursor changes to indicate that you can now use that tool to manipulate the preview. When you choose the preview or the Layout mode, a blue border appears around the selected view and the appearance of the job in the main window changes immediately.

The sheet menu, magnification menu, and scroll bar (shown above) appear at the bottom of the window. These menus and controls affect the display in the main window immediately.

Switching between page view and layout view

Use the View mode buttons to switch between a page view and a layout view of the job.

- **Preview mode** approximates the appearance of the final printed output very closely; for this reason, it is sometimes called a WYSIWYG (“what you see is what you get”) preview.
- **Layout mode** displays numbered, generic pages that allow you to determine the location of source document pages in the imposed job; and you can rotate individual pages or signatures in a layout view.

Different viewing modes may display different sets of printers marks; for more information, see the table below.

NOTE: The graphically-rich Preview mode puts more stress on your system’s processor than the relatively lightweight Layout mode. You can improve performance on slower systems by doing most of your work in Layout mode, switching to Preview mode only when you actually need to see content.

In Layout mode, you can rotate individual pages on the sheet; for more information, see “Rotating pages” on page 6-12.

The following table summarizes the characteristics of the layout and Preview modes:

Feature	Layout mode	Preview mode
Shows page content	No	WYSIWYG content view
Quick redraw on slower computers	Yes	No
Shows printer's marks	Yes	Yes
Reorder pages	Yes	No
Rotate pages	Yes	No
Define gutter	Yes	No

Setting magnification levels

You can use the Zoom tool to increase or decrease the level of magnification in the main window from 12% to 800%.

TO ZOOM IN AND OUT

1. Click the Zoom tool to select it.

The cursor changes to a magnifying glass when in the preview area of the main window.

2. Position the magnifying glass cursor over a page and click to zoom in.

The magnifying glass cursor displays a plus sign (+) to indicate that it increases the magnification of page views. Each time you click, the current magnification doubles, up to a maximum of 800%.

3. Hold the Ctrl key and click with the left-mouse button to zoom out.

Each time you click, the current magnification halves, down to a minimum of 12%.

4. Click the right-mouse button with either the Zoom tool or the Pan tool to see the Zoom pop-up menu.

Select Zoom In or Zoom Out from the pop-up menu. Zoom In doubles the current magnification; Zoom Out halves the current magnification.

The View menu at the bottom of the window provides several ways to set the level of magnification at which DocBuilder Pro displays the contents of the window. The View menu allows you to choose preset zoom values ranging from 50% to 800%. You can also choose to make the current preview fit in the window.

- To choose a zoom value, click the View menu and choose a zoom percent.
- To preview the entire sheet, click the View menu and choose Fit Page.

NOTE: The View menu changes only the appearance of pages, not their actual content. To change the scaling of pages in finished output, change Scaling area settings, as described on page 6-6.

In addition to preset zoom percents, you can specify a custom zoom value.

TO SPECIFY A CUSTOM ZOOM VALUE

1. Click the View menu at the bottom of the main window.

The current zoom value is displayed in the box.

2. Specify a new zoom value.

You can type a new zoom value in the box or you can select a value from the pop-up menu.

3. Click OK or press Enter to confirm the new value.

The window reflects the change immediately.

Viewing the sheets

Use the Pan tool to drag the entire preview around in the window. For example, if you are working with many pages on a large sheet, you can use this tool to drag a particular portion of the sheet into view.

TO MOVE THE PREVIEW AROUND

1. **Click the Pan tool to select it.**

The cursor changes to a hand when in the preview area of the window.

2. **With the Pan tool cursor positioned over a sheet, press and hold the left-mouse button while moving the mouse.**


The page preview moves in the same direction as the cursor. You can repeat this step as necessary to make a particular portion of the preview visible.

At the bottom of the window, you can manipulate the content view using a standard scroll bar or the sheet menu. The sheet menu provides the Go To Sheet dialog box, which allows you to specify numerically the sheet to display in the preview area.

TO GO DIRECTLY TO A SHEET BY NUMBER

1. **Click the Sheet menu at the bottom of the window.**

When the Go To Sheet dialog box appears, the entry box displays the number of the sheet currently displayed.

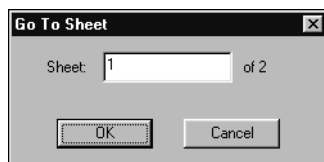

2. **Enter the number of the sheet to display.**
3. **Click OK or press Enter to go to the specified sheet.**

Using templates

A saved group of imposition settings is known as a template. A template saves all current imposition settings except custom rotations of individual pages on a finished sheet. You can apply any template to any job, making it easy to apply imposition settings quickly and efficiently.

DocBuilder Pro supplies built-in templates that define settings for commonly-used layouts, such as 2-up saddle, 3-up trifold brochure, 4-up gatefold, and so on. You can also create your own templates. For a complete listing of built-in templates, see Appendix B. For information on creating your own templates, see “Imposition settings” on page 6-1.

Both built-in templates and your own templates appear in the Template pop-up menu, which always contains at least one item, the Default Settings template. DocBuilder Pro applies this template when no other template is saved with a job; for example, the default template is always applied the first time a job is opened in the main window.

Template pop-up menu

You can apply a template by choosing its name from the Template pop-up menu, in the top-left corner of the main window. The new settings take effect immediately.



TO SAVE THE CURRENT SETTINGS AS A TEMPLATE

You can save the current combination of Sheet, Layout, Scaling, and Finishing settings as a template.

NOTE: The Size setting of the Sheet menu cannot be saved.

1. Click the save template icon to the right of the Template pop-up menu.
2. In the dialog box that appears, type a name for the template and click OK or press Enter.

For more information on creating templates, see “Managing templates” on page 6-14.

Saving your work

To close the Imposition window, click the close box in the upper-right corner.

TO SAVE THE IMPOSED JOB


1. Click the Close box in the upper-right corner of the main window.



Close box

If the job has changed since it was opened in the main window, you are prompted to save it.

2. In the Save As dialog box, type a name for the job and its settings.

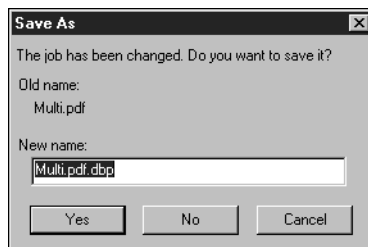

3. Click Yes.

NOTE: In the Save As dialog box, the name of the original spooled source file appears with a new extension (.dbp) as the suggested name. If you mistakenly close the main window when you intend to keep working, click Cancel in the Save As dialog box. The original PostScript or PDF remains intact even after the converted file has been edited and saved in the Imposition window.

For more information on how files are saved to the E-810, see “File management” on page 6-16.

Chapter 6: Advanced Features of DocBuilder Pro


This chapter provides information about the advanced features of DocBuilder Pro. You can use Imposition settings to alter various aspects of a job and to create custom templates.

Imposition settings

Imposition settings apply only to the job currently displayed in the main window. Because these settings usually affect the job's printed layout, they are saved with the job and used whenever the job is opened. For example, as you open jobs that were saved with different layouts, you see the display change accordingly. Changes to imposition settings are applied to the current job immediately, but are not saved permanently until you save the job itself.

You can specify imposition settings using controls in the settings panel on the left side of the main window. The settings panel appears the first time you open the main window, but can also be hidden to make additional space for viewing an imposed job. To display or hide the settings panel, click the triangle next to the Template pop-up menu in the upper-left corner of the window.

Click to view or hide
the settings panel

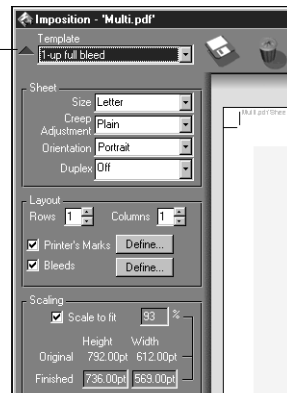

The icons to the right of the Template pop-up menu are also related to imposition settings; however these icons are always visible in the main window, even if you hide the settings panel. For information on these icons, see “Managing templates” on page 6-14.

NOTE: You can change the default unit of measure for all input fields in the Preferences dialog box of Command WorkStation. You can also specify any unit of measure in any field that accepts input by suffixing one of the following abbreviations to the new value:


“i”, “in,” or the inch symbol (") specifies inches, for example: 8.5 i, 8.5 in, 8.5"

“mm” specifies millimeters, for example: 8.5 mm

“pt” or “pts” specifies points, for example: 8.5 pts

Sheet area

Sheet settings allow you to specify characteristics of the paper on which the job is to be printed, such as its dimensions, thickness, orientation, and whether it will be printed on one or both sides.

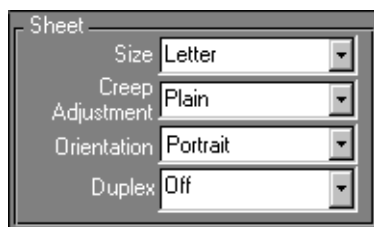

Because these settings affect virtually every other aspect of the imposition process, you should specify sheet settings immediately after opening a job in the main window. If necessary, you can change the settings later; the job is revised accordingly.

In general, experimentation with job settings does not cause permanent changes (or, potentially, loss of original job data) until the job is RIPped or saved with the new settings.

Size

You can select an item in the Size menu to specify the dimensions of the sheet and see the change reflected in the main window preview immediately. The Size popup menu includes items representing all page sizes defined by the currently selected print engine's PostScript printer description (PPD) file. To choose a custom size, enter the width and height of the custom page.

The sheet size setting also defines a sheet orientation; for example, a paper size of 8" x 10" indicates a portrait sheet orientation, while a paper size of 10" x 8" indicates a landscape sheet orientation. It is not necessary, however, to choose a sheet size based on the sheet orientation it determines. You can rotate the sheet display in the main window with the Orientation setting (described below).

NOTE: Sizes with an SEF prefix (for “short edge feed”) also specify a landscape orientation for the sheet.

Creep Adjustment

You can choose either Plain or Thick from the Creep Adjustment menu to specify the thickness of the sheet. When saddle stitch binding is specified, DocBuilder Pro uses this value to compensate automatically for binder’s creep (see “Shingling and creep” on page A-7).

NOTE: Even if you select Thick from the Creep Adjustment menu, your job will still print on Plain paper unless you have specified Thick paper in the job properties. For more information on changing the job properties from Command WorkStation, see Chapter 3.

Orientation

Choose an item from this menu to specify the orientation of the sheet displayed in the main window. This setting does *not* affect the orientation of pages on the sheet (which is determined by the layout you specify) or the way in which sheets are fed through the copier. It affects only the angle at which you view sheets in the main window, allowing for optimal viewing regardless of the sheet size you specify. You can also perform custom rotations on any page in the main window. For more information, see “Rotating pages” on page 6-12.


Duplex

You can use the Duplex menu to specify the relationship of content areas on opposing sides of a sheet. Specify On for duplex (two-sided) printing, Off for simplex (one-sided) printing, or Manual for duplex printing using the Manual Feed tray (Bypass tray). When you choose On, the job is printed as duplex using a Top-Top setting, meaning that the tops of pages on opposing sides of a sheet are located on the same edge (usually the preferred choice for imposed book layouts).

NOTE: Specifying Manual will automatically switch the Paper Source print option to Bypass if Bypass size Set at Copier was selected for the original pre-imposed file.

Layout area

A layout is a plan that specifies the number, ordering, and rotation of page images on the sheet. DocBuilder Pro supports layouts of up to 25 pages per sheet, in a matrix of up to 5 rows by 5 columns (50 pages duplex). All combinations of rows and columns allow gang printing; however, only certain layouts in the 5 x 5 matrix support imposition.

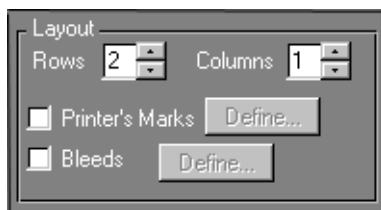

NOTE: If the number of pages in your job does not divide evenly into the number of rows and columns in the layout you select, you may see some sheets with blank spaces. The layout you select should correspond to the number of pages in your job.

Rows

Use the Up and Down arrow buttons to the right of the Rows field to specify the number of rows in a layout. You can also specify the number of rows by typing a value in the Rows field. Changes to the Rows value are reflected immediately in the main window, whether you are in Layout or Preview mode.

The Rows value interacts with the Columns and Scaling values. When you choose a value that causes content to extend beyond the edge of the sheet, DocBuilder Pro provides a visual warning. For more information, see “Clipping indicators” on page 6-7.


Columns

Use the Up and Down Columns arrow buttons to specify the number of columns in a layout. You can also specify the number of columns in the layout by typing a value in the Columns field. Changes to the Columns value are reflected immediately in the main window, whether you are in Layout or Preview mode.

The Columns value interacts with the Rows and Scaling values. When you choose a value that causes content to extend beyond the edge of the sheet, DocBuilder Pro provides a visual warning. For more information, see “Clipping indicators” on page 6-7.

Printer's marks

Select Printer's Marks to add trim, fold, and job information to all sheets in a job. Because the set of marks required varies according to the job, DocBuilder Pro allows you to define the set of printer's marks displayed. For example, ganged up business cards do not require fold marks, while a 4 x 4 book layout requires them. To specify which marks are shown, choose options in the dialog box that the Define button displays.

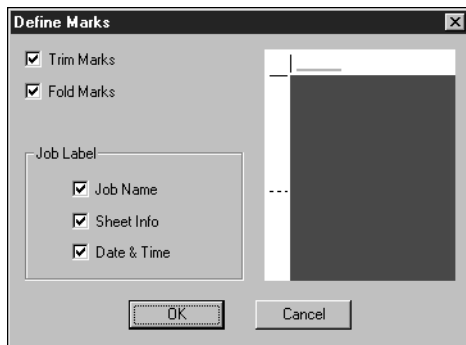


You can enable or disable trim marks, fold marks, and the individual elements of the job label. The job label stores descriptive text used for the job name, sheet information, and date and time.



NOTE: Not all layouts will display all of the Printer's Marks. For example, if the layout you select does not require that the sheet be folded, fold marks will not be displayed even if you selected them in the Define Marks dialog box.

Bleeds

Select Bleeds in the Layout area. When bleeds are enabled, marks are repositioned by the specified bleed amount. Because the bleed amounts required for each job vary, DocBuilder Pro allows you to specify both the horizontal and vertical bleeds in the Define Bleeds dialog box.

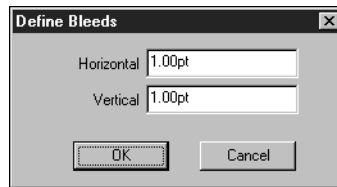


NOTE: The value entered for bleeds should be greater than 0.02 pt.

Scaling area


You can use the controls in the Scaling area to enlarge or shrink the page by a specified amount. The values in this area interact with each other based on the specified layout and page size. When you specify one or more values in the Scaling area, DocBuilder Pro calculates the others for you.

For example, when you specify a scaling percentage, DocBuilder Pro calculates the resulting finished page size and supplies appropriate height and width values in the Finished area. Conversely, if you specify the height and width of the finished page, DocBuilder Pro supplies the percentage by which the original page must be scaled to achieve that result.

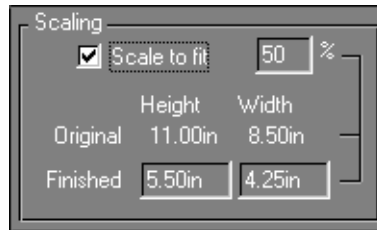

Clipping indicators

If you supply scaling values that would cause the page to print past the edge of the sheet, DocBuilder Pro provides a visual warning. When the window is in Layout mode, any clipped page edge is highlighted in yellow. When the window is in Preview mode, the clipping icon appears in the upper-left corner of the Scaling area. In addition, the appearance of the page preview itself makes scaling problems obvious—content truncates at the edge of the preview sheet, just as it would on a printed sheet.

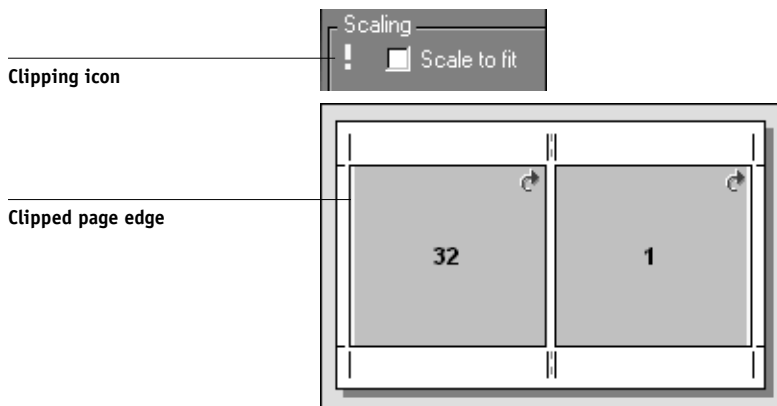

Finished height and width


The Finished Height and Width fields display current values for the height and width of a scaled page. When you enter values for the height or width of the scaled page, DocBuilder Pro supplies calculated values for scaling, finished height, and finished width.

Scale to fit

When you select Scale to fit, DocBuilder Pro calculates the page size that fills the sheet without printing past its edge. DocBuilder Pro fills in the values for scaling, finished height, and finished width.

Finishing area

In the Finishing area, you can specify the binding method and compensate automatically for creep according to the grouping of signatures in the job and the way in which the job is to be bound.

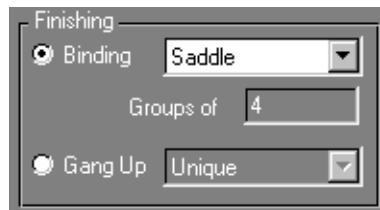

Binding

To enable binding settings and disable gang printing, select Binding. When binding settings are enabled, you can click the Binding menu to specify Saddle, Perfect, or Nested Saddle as the binding method. DocBuilder Pro compensates automatically for binder's creep according to the specified binding method, the number of sheets in a group, the layout in use, and the size of the job.

Saddle—a group of folded sheets stitched or stapled on a common, centered fold line. Saddle-stitched binding is the most common type of binding, and is usually used for booklets.

Perfect—signatures folded and stacked for binding. The spine edges are trimmed and glued together.

Nested Saddle—combination of saddle and perfect binding methods. As with saddle stitch, pages are grouped together and stapled or stitched across a common center fold. The saddle groups are then stacked one on top of another and glued as with perfect binding. When imposing a book for nested saddle binding, you specify the number of sheets in each saddle; this number is called a group.

NOTE: If you have selected a layout with more than two columns or rows, the Binding selection will be unavailable. A layout with three or more columns or rows cannot be bound as a book or booklet because the pages must be cut from the sheet, not simply folded over.

Groups

You can type a whole number into the “Groups of” box to specify the number of signatures gathered together in each saddle when the book is bound. As the number of signatures in a saddle increases, the effect known as binder’s creep becomes more prevalent. DocBuilder Pro shifts images on the page to compensate for creep automatically according to the value in the groups field, the value in the paper thickness field, the specified binding type and the ordering and orientation of pages specified by the current layout.


Gang Up

To enable gang printing and disable binding settings, select Gang Up. In gang printing mode, you place pages on the sheet in an arbitrary order for “collate and cut” finishing, rather than having DocBuilder Pro impose them in the order required by a particular binding method.

A collate and cut layout reorders pages in a manner that causes them to fall into easily-collated stacks when the sheets in the job are cut into individual pages. The use of such a layout may allow multiple small jobs to be printed on a single sheet; thus, gang printing is commonly used as a means of saving paper when printing small jobs on imaging devices that use large sheets.


When gang printing is enabled, choose Repeat from the Gang Up menu to repeat the image of a page until the sheet is filled; for example, when printing both sides of a sheet, the front side of the first sheet is filled with images of page one, and the back side

is filled with images of page two; the front side of the second sheet is filled with images of page three, and the back side is filled with images of page four; and so on, until all pages in the job are imaged.

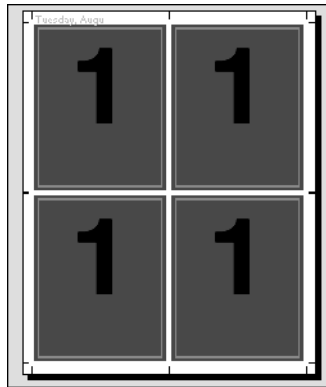

Documents laid out this way may tend to be collated more easily than when printed in another order. The Repeat option in this menu enables what is commonly known as “step-and-repeat” printing. Step-and-repeat is most often useful when printing multiple copies of a single document; for example, when printing business cards, you would print multiple copies of the same image to fill a larger sheet.

Conversely, Gang Up Unique is often more appropriate for printing single copies of a document. This option does not fully collate itself (collate and cut is necessary), but it optimizes the sheet size while limiting the run to a single copy.

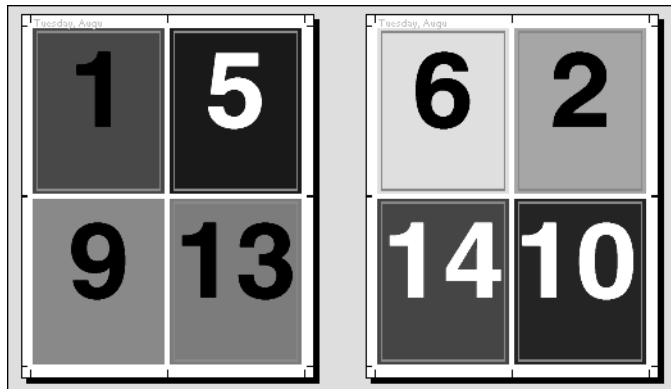

To disable gang printing and enable binding settings, select the Binding setting. When gang printing is disabled, DocBuilder Pro imposes pages in the order defined by the current layout.

Modifying the layout manually

Whether you apply a predefined layout or specify custom settings, you can manually modify the job's layout by:

- Reordering pages
- Rotating pages
- Setting gutter sizes

To make any of these modifications, you must first select Layout mode (see page 5-5).

NOTE: Specify the Duplex setting before reordering or rotating pages.

Reordering pages in Layout mode

When you impose a job, its pages are automatically arranged in a particular order according to the specified layout. Each page number in layout view represents the page from the source document that DocBuilder Pro images in a designated position on the finished sheet. However, if you want to reorder individual pages manually, you can do so in the main window. Use the following procedure to assign a different page to a particular location in the layout.

TO REORDER PAGES


1. **Verify that Layout mode is currently selected.**
2. **Select the location's current page number, type the new value, and press Enter, or press Tab to move to the next page in the layout.**

You can add a blank cover page by typing 0 (zero) for any page number. Page 0 will be printed as a blank page if Duplex is set to On. If Duplex is set to Off or Manual, Page 0 will not be printed.

NOTE: When you use the procedure above to reorder pages, the page number which you type overwrites the original. For example, if you typed Page 3 in place of Page 5, you will now have two of Page 3 and none of Page 5. Also, you cannot type in a page number that does not already exist in your job. For example, if your job has 10 pages, you cannot type in 12.

Rotating pages

You can manually rotate individual pages or sets of pages in the job. To do this, the job must be displayed in Layout mode. Rotation is performed in 90° clockwise increments when you click the rotate icon in the upper-right corner of a page.

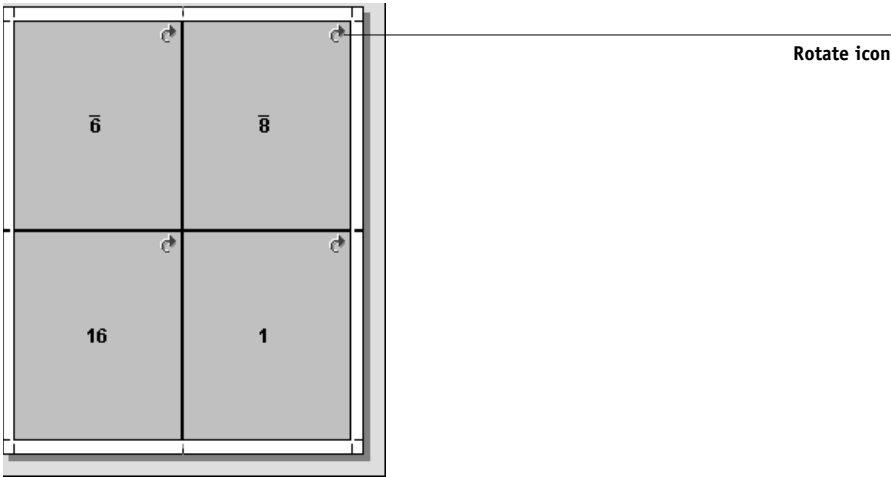


- To rotate a single page, click the rotate icon on that page.
- To rotate all pages in the job, press the Shift and Ctrl keys and click the rotate icon on any page.

6	8	∟	01	11	9	5	21
16	1	2	15	14	3	4	13
Sheet 1, front side	Sheet 1, back side	Sheet 2, front side	Sheet 2, back side				

- To rotate all pages in a certain location on the front side of each duplex sheet, press the Shift key and click the Rotate icon on any page in that location on any sheet. For example, in the graphic above, if you press the Shift key and click the Rotate icon on Page 8, Page 6 rotates, as well, because they are both in the same location on the front side on the sheet.
- To rotate all pages in a certain location on the front and back sides of each duplex sheet, press the Ctrl key and click the Rotate icon on any page in that location on any sheet. For example, in the graphic above, if you press the Ctrl key and click the Rotate icon on Page 1, Pages 2, 3, and 4 also rotate, because they are in the same location on the front and back sides of the sheet.

Setting gutter sizes

DocBuilder Pro defines the locations of gutters for you according to the layout and sheet size governing the imposition of the job. In layout view, you can specify the size of a gutter by entering a value in its gutter size field and pressing Enter. For example, perfect-bound jobs typically require larger gutters than saddle stitch ones, in order to provide room for grinding off the spines and gluing signatures together when the book is bound.

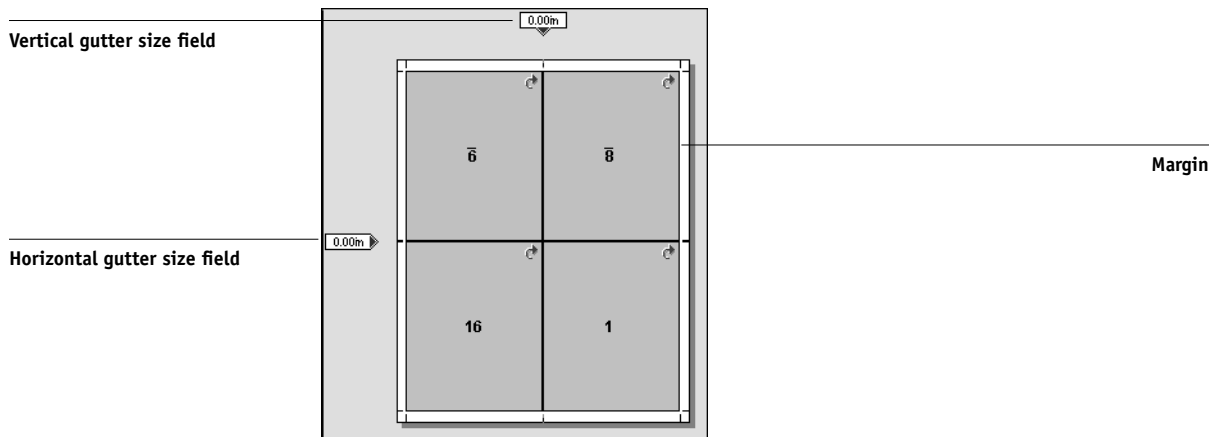


NOTE: The size and location of the margin (the area between the outside edge of a group of imposed pages and the edge of the sheet) is a function of layout and sheet settings. You cannot define custom margins.

Managing templates

You can name and save the current combination of Sheet, Layout, Scaling, and Finishing settings as a template.


NOTE: The Size setting of the Sheet menu cannot be saved. You can use the Preferences item in the File menu to set the folder or directory in which Command WorkStation saves templates. For more information, see Chapter 4.

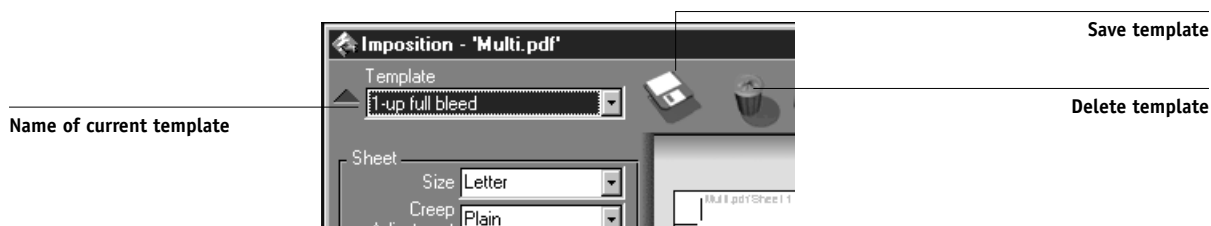

TO SAVE IMPOSITION SETTINGS AS A TEMPLATE

1. Click the Save template icon—the disk icon on the right side of the Template pop-up menu.
2. In the Save Template As dialog box, type a name for the settings file.

When saving a template, choose a descriptive name, such as “4-Up Nested Saddle” rather than something that will not provide as much information, like “My Settings.” If you plan to use the same template for a particular document, name the template after the document type, for example, “Status Report.”

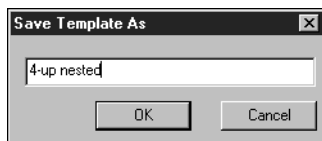

3. Click OK or press Enter.

TO DELETE A SAVED TEMPLATE

1. Click the Delete template icon—the trash can icon on the right side of the Template pop-up menu.
2. In the dialog box that appears, select the template to delete.
3. Click OK or press Enter to delete the specified template.

Tips for using the Imposition feature of DocBuilder Pro

This section provides information that will help you get the most out of the Imposition feature of DocBuilder Pro.

DocBuilder Pro and Acrobat technology

DocBuilder Pro makes use of Adobe Acrobat technology to perform certain page-level operations. Keep the following tips in mind to ensure success:

- **Avoid the Touch-Up tool in Acrobat**

If you need to use this tool on a source document, do so before opening the document in DocBuilder Pro. Do not use this tool on PDF files created by DocBuilder Pro, such as saved impositions, RIPPed and held jobs, or printed jobs, because the changes will not be saved to the server or reflected in the printed output.

- **Adding a binding offset**

You can set gutters on each page independently to allow extra room for binding. For more information, see “Setting gutter sizes” on page 6-13.

File management

An awareness of how DocBuilder Pro structures data can help you maintain the integrity of source documents and create interim copies of work in progress. This section describes the temporary files that DocBuilder Pro creates at various stages in the process of imposing a document, and suggests file-management techniques you can use to preserve your work.

When a workstation on the network prints a source document to the E-810, the server creates a spool file containing the same kind of data (PostScript or PDF) that the workstation sent. The spool file simply records (for subsequent “playback” to a print engine) the image of every page in the print job, in the order the pages are to be printed. Unlike the source document, a spool file is quite literal in its record of the print job—if there are duplicate pages in the print job, the associated data is duplicated in the spool file, as well. Thus, spool files tend to be significantly larger than the source documents they represent.

To maximize efficient use of server disk space, it is strongly recommended that spool files not be kept on the E-810 any longer than necessary. The Command WorkStation operator must delete spool files explicitly.

When you open a spool file in DocBuilder Pro, a temporary file in PDF format is created on the Command WorkStation hard disk. A PDF spool file is simply copied to the temporary file; however, when you open a PostScript spool file, DocBuilder Pro writes a PDF version of the PostScript data to the temporary file. The temporary PDF file resides on the Command WorkStation hard disk until you close or save the job.

When you close the job, the name of the original spooled source file appears with a new extension (.dbp) as the suggested name in the Save As dialog box. The original PostScript or PDF remains intact even after the converted file has been edited and saved in the Imposition window.

All operations that modify a job’s data are performed on its temporary file or on associated imposition data. Page-level operations modify the temporary PDF file. DocBuilder Pro functions modify the imposition data associated with the temporary PDF file.

Saving imposed jobs

When you save an imposed job, DocBuilder Pro does two things:

- **If new data has been added to the temporary PDF file, it is written back to the E-810 under the name you specify in the Save As dialog box.**

The default name that appears in the Save As dialog box is that of the original spool file with a new extension (.dbp). The original PostScript or PDF remains intact even after the converted file has been edited and saved in the Imposition window.

- **If imposition data has changed, the data is written back to the E-810 and associated with the new PDF.**

Maintaining associated imposition data separately from the job's PDF data allows DocBuilder Pro to impose in-RIP without modifying the PDF data, and allows you to reuse PDF data that has been modified in the imposition process.

Chapter 7: Overview of Fiery WebTools

This chapter introduces Fiery WebTools and provides instructions on their use. For more information on specific Fiery WebTools you are referred to other chapters in this book and to other manuals in the documentation set.

Fiery WebTools

Fiery WebTools reside on the E-810 but can be accessed over the network from a variety of platforms. The E-810 home page lets remote users view server functions and manipulate jobs.

NOTE: If the connection to the E-810 is not established, you cannot access Fiery WebTools.

You can use Fiery WebTools on Windows 9x/Me or Windows NT 4.0/2000 client computers with certain Internet browsers that support the Java language. For specific information on the browsers supported with Fiery WebTools, see *Getting Started*.

NOTE: Fiery WebTools are not supported on Mac OS computers.

Access privileges

The E-810 system allows the site administrator to choose and implement a level of access and control appropriate for your particular site. A wide spectrum of control can be implemented; the levels of access allowed to remote users depend on whether the administrator has enabled use of Fiery WebTools, and whether or not a password is required to use the job management features of Fiery WebTools.

If you have been given the Operator password, you can manage job flow and override print settings of your jobs with Fiery WebSpooler. If not, you can still track the status of your jobs with the Status tool, and with Fiery WebSpooler as a Guest. Check with your site administrator for information on your Fiery WebTools access privileges.

Using Fiery WebTools

Access Fiery WebTools from the E-810 home page.

WebTool	Summary	For more information
Status	Shows you the jobs currently processing and printing.	See the <i>Printing Guide</i> .
WebSpooler	Allows you to view, manipulate, reorder, reprint, and delete jobs currently spooling, processing, or printing on the E-810. It also allows you to view, print, and delete the Job Log.	See “Tracking and managing jobs with Fiery WebSpooler” on page 8-1.
WebLink	Provides a link to another web page, provided you have a valid Internet connection. The WebLink destination can be changed; this function requires the Administrator password, if one has been set.	See the <i>Printing Guide</i> and the <i>Configuration Guide</i> .
Installer	Allows you to download the Fiery Link installer and E-810 printer file installers directly from the server.	See <i>Getting Started</i> .
WebDownloader	Allows you to download PostScript, EPS, and PDF files to the E-810.	See the <i>Printing Guide</i> .
WebSetup	Allows you to modify the E-810 configuration (Setup) remotely. This function requires the Administrator password, if one has been set.	See the <i>Configuration Guide</i> .
WebScan	Allows you to download TIFF, JPEG, and PDF files to the E-810.	See the <i>Printing Guide</i> and the <i>Configuration Guide</i> .

TO ACCESS FIERY WEBTOOLS

1. **Start your Internet browser.**
2. **Enter the IP address or the DNS name of the E-810.**

Check with the operator or administrator for this information.

The E-810 home page appears.



3. **Click one of the buttons at the left to select one of the Fiery WebTools.**
- Move the cursor over the buttons to display information about the selections.

Chapter 8: Fiery WebSpooler and Fiery Spooler

Fiery WebSpooler and Fiery Spooler duplicate many of the functions and features of Command WorkStation. Each provides additional flexibility by allowing job tracking and management from multiple platforms over the Internet or an intranet.

NOTE: Fiery Spooler is available for Mac OS computers only.

- Fiery WebSpooler, one of the Fiery WebTools, is accessed with an Internet browser and the E-810 home page (see Chapter 7).
- Fiery Spooler is installed from the User Software CD. To use Fiery Spooler, users need only a network connection to the E-810.

The Fiery Spooler interface for Mac OS computers is virtually identical to that of Fiery WebSpooler. Moreover, the interfaces of these tools are so similar to that of the Command WorkStation that this chapter often refers you to Chapters 3 and 4 (on Command WorkStation) for information about icons and commands that are common to all three tools.

Tracking and managing jobs with Fiery WebSpooler

You can use Fiery WebSpooler (and Fiery Spooler for Mac OS) to perform the following functions from your workstation:

- Override current job option settings.
- Delete jobs and cancel processing.
- Duplicate or rename jobs.
- RIP a job and hold the raster data.
- Hold jobs in the spooled area or the RIPped area.
- Remove raster data from RIPped files.
- Change the priority of jobs.
- Edit and merge raster data jobs (DocBuilder).
- Display, print, or delete the Job Log.

Most of these functions require the Administrator or Operator password. However, even without a password, you can log in to Fiery WebSpooler as Guest with view-only privileges.

NOTE: Most Fiery WebSpooler commands function identically to those of Command WorkStation. For more information on specific commands, see Chapters 3 and 4.


TO ACCESS THE FIERY WEBSPoolER WINDOW

1. From the E-810 home page window, click **WebSpooler**.

For instructions on how to access the E-810 home page window, see page 7-3.

2. To log in as Administrator, enter the Administrator password and click **OK**.
To log in as Operator, enter the Operator password and click **OK**.
To log in as Guest, click **OK**, without entering any password.

The Fiery WebSpooler window appears in a new browser window.

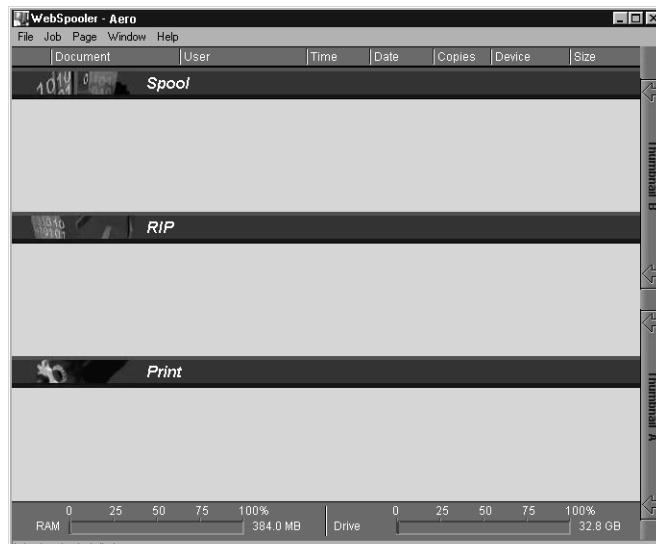

About the Fiery WebSpooler window

Like Command WorkStation, Fiery WebSpooler is a window from which you can view E-810 and copier functions, and an interface from which you can control those functions.

The Fiery WebSpooler window is divided into three areas by Spool, RIP, and Print status bars. When the E-810 receives print jobs, the Fiery WebSpooler window becomes a dynamic display, filled with the names of jobs and their characteristics.

The Spool, RIP, and Print areas of the Fiery WebSpooler window represent the stages of printing a job. Jobs come in at the top level (Spool) and drop down to the Print level, unless they are held along the way.

The job icons displayed in the Fiery WebSpooler window are explained in “Job icons” on page 3-20.

NOTE: In the Fiery WebSpooler window, the background color for the yellow and white printer icons is the same.

Spooled jobs—Jobs listed in the area below the Spool status bar are PostScript files stored on the E-810 disk. These jobs were sent to either the Print queue (white icons) or the Hold queue (yellow icons).

RIPped jobs—Jobs listed in the area below the RIP status bar are ready to print. They have already been rasterized (RIPped, or processed for printing) and are waiting, in order, for access to the printer. Rasterized jobs can also be held; held jobs are shown with a yellow icon.

Printed jobs—Jobs listed in the area below the Print status bar have already been printed. Printed jobs can be stored on the E-810 disk. The number of jobs that can be stored (from 1 to 99) is defined in Setup.

If you are logged in as Administrator or Operator, you can interact with a job wherever it appears in the window by selecting it and choosing a command from the Job menu, or by double-clicking the job and setting override options. For more information, see “Manipulating job options and job flow” on page 8-4.


Errors—Jobs with an error are shown in red. To display the error, double-click the job line. Note that you cannot check the job properties or hold a job with an error.

NOTE: If your job does not appear anywhere in the Fiery WebSpooler window, it may have already been printed; if so, it will appear in the Job Log. To view the Job Log, choose Show Job Log from the Window menu. For more information on the Job Log, see page 8-9.

If the job does not appear in the Job Log, it may have been moved to the Archive window by the operator. The Archive window cannot be viewed with Fiery WebSpooler; you must contact the operator or to the Command WorkStation display to check this.

Manipulating job options and job flow

Using the commands in the Job menu, you can alter the destinations, priorities and other characteristics of jobs that appear in the Fiery WebSpooler window.

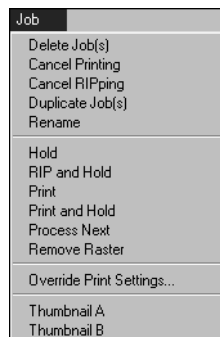

To understand the effect each of these commands has on a job, you need to understand the way the E-810 handles PostScript and raster data, and how jobs are activated or held in the various stages of processing. See Chapter 3 for this background information

before manipulating jobs with Fiery WebSpooler. Also, the commands in the Fiery WebSpooler Job menu have identical counterparts on Command WorkStation. For background and information about these commands, see Chapters 3 and 4.

Choose this command from the Job menu	To do this	Raster data is
Delete Job(s)	Delete the job(s) from the list.	Deleted
Cancel Printing	Cancel the currently printing job.	Deleted
Cancel RIPping	Cancel the currently processing job.	Deleted
Duplicate Job(s)	Duplicate one or more selected PostScript data jobs in the Spool or Print areas (creates a reference to the original job, with the same name).	n/a (The Duplicate command is not available for raster jobs)
Rename	Rename the job (PostScript file with or without raster).	Unaffected, but associated with the new name NOTE: If the renamed job is printed, the Job Log reflects the job's original name.
Hold	Hold the job in the current place (except for a printed job, which is moved to the Spool or RIP area).	Held in RIP area indefinitely, if included with job
RIP and Hold	RIP the job and hold it in the RIP area.	Held in RIP area indefinitely
Print	Print the job in its turn (RIP it first if it does not have raster data). Keep the printed job in the Print area until the job limit is reached.	Temporarily held in RAM until memory is needed for another job
Print and Hold (like the PPD option Save Fast Reprint)	Print the job in its turn (RIP it first if it does not have raster data). After printing, hold the PostScript data and the raster in the RIP area.	Held in the RIP area indefinitely (saved to disk)
Process Next	Give top priority to this job. Print the job (or RIP and print) as soon as the processor and copier are free, before other waiting jobs.	Held in RAM after printing (can be selected in the Print area while it remains there), or Held in RIP area (saved to disk) if destination was RIP and Hold
Remove Raster	Remove the raster from a job that has raster data; leave the PostScript job in place.	Deleted

Choose this command from the Job menu	To do this	Raster data is
Override Print Settings	Change the print options for the job (see page 8-7).	Deleted and regenerated, if the newly selected options require reRIPping, or reprinted with the new settings, if none require reRIPping
Thumbnail A	Open the selected <i>held</i> raster data job in the Thumbnail A window where you can view a full-screen preview of the job, edit the job, or merge it with raster data from other jobs.	Changed if job is edited, unaffected if job is only viewed
Thumbnail B	Open the selected raster data job (not necessarily a held job) in the Thumbnail B window for viewing or for merging into a job in the Thumbnail A window.	Unchanged


Overriding job option settings

To change the job options of a job, double-click the job line or select the job and choose Override Print Settings from the Job menu. If necessary, scroll down to see all the various job options.

For PostScript files, you cannot override the Orientation option.

For PDF files printed using Fiery Downloader, you cannot override these options:

- Orientation
- Remove White PPT Background
- Spot Color Matching

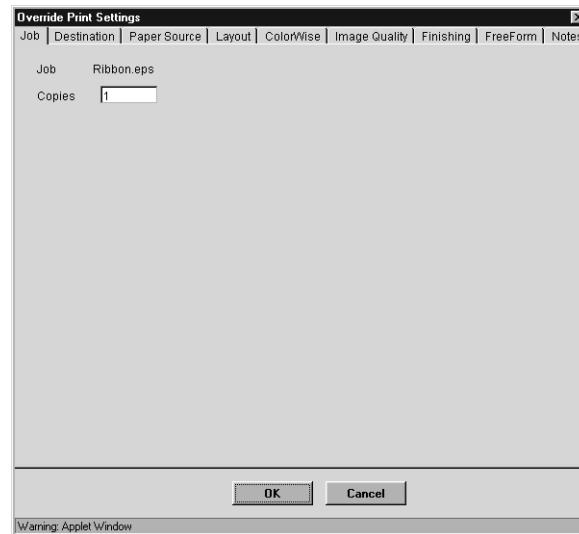

NOTE: For some options, changing the setting requires that the job be reRIPped; these options show an icon to the left of the option name.

The options you set here are the same ones you set from the Print dialog box when you print from an application. For information about setting and overriding these print options, see the *Printing Guide*.

Thumbnails and full-screen previews (DocBuilder)

Like the Command WorkStation, Fiery WebSpooler includes a powerful DocBuilder tool that allows you to preview and edit raster data. DocBuilder consists of two thumbnail windows and several page-manipulation commands (see the Page menu). You can use the DocBuilder tool in the following ways:

- In the Thumbnail A window, you can see thumbnails of the currently printing job, as it is processed, or of any raster data job.
- From the Thumbnail A window you can open a full-screen preview of a raster file.
- Using the Thumbnail A and Thumbnail B windows together, you can merge raster data from more than one file, even if the files were printed from different applications on different computer platforms.

DocBuilder's merge features eliminate the limitations of particular software applications. You can merge raster pages of documents of different types, and even different computer operating systems. You can merge color pages from graphics programs with text pages from a word processor.

NOTE: In cases where multiple users are connected to the E-810 via Fiery WebSpooler and/or the Command WorkStation, and one user makes changes to a Thumbnail A job, not all users may see the results of those changes. If you are unable to view changes in a job, or if selecting a thumbnail window results in a message indicating zero pages, close and restart Fiery WebSpooler or Command WorkStation.

DocBuilder differences in Fiery WebSpooler

The DocBuilder tool in Fiery WebSpooler functions almost identically to that in Command WorkStation. For detailed information on using DocBuilder, see Chapters 3 and 4 (for instructions on editing and merging raster files, see “Merging PostScript and raster files with DocBuilder Pro” on page 4-15). Though the interfaces are almost identical, there are some feature differences:

- You cannot scroll through the pages in Thumbnail A or Thumbnail B by dragging the slider bar at the bottom of the screen.
- Thumbnail A right-click commands are not available; instead click on a page to select it, and either click the appropriate button in the Thumbnail A window or choose the appropriate command from the Page menu.

- Page icons and arrows do not appear when moving page(s) from Thumbnail B to Thumbnail A. Instead, a blue outline appears around a Thumbnail A page that is to be replaced; and a blue bar appears adjacent to or between Thumbnail A page(s) to indicate where the Thumbnail B page(s) are to be inserted.
- The full-screen preview window has a status bar (Command WorkStation does not), the “X” button used to close the full-screen preview is in a different location, there are no page advance arrows, and there is no rotate button.
- The Ctrl-Z keyboard shortcut for the Undo command is not available. To undo one or more DocBuilder commands, choose Undo from the Page menu.


Using the Job Log

From Fiery WebSpooler, you can view and print a log of all jobs printed by the E-810, including jobs downloaded with Fiery Downloader.

NOTE: If you logged in as Administrator, you can delete the Job Log from Fiery WebSpooler (see page 8-11). The Job Log is not available if you logged in as Guest.

TO DISPLAY, UPDATE, PRINT, DELETE, AND SAVE THE JOB LOG


1. Choose Show Job Log from the Fiery WebSpooler Window menu.
2. Click All or specify a date range.

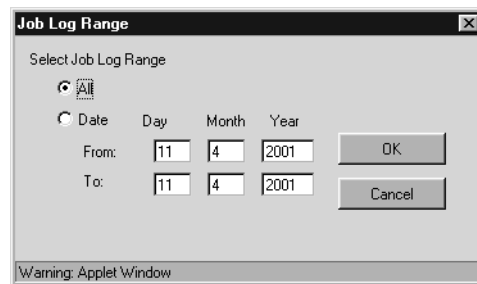

3. Click OK.

The Job Log appears in a new browser window.

NOTE: The Delete button appears only if you logged in as Administrator.

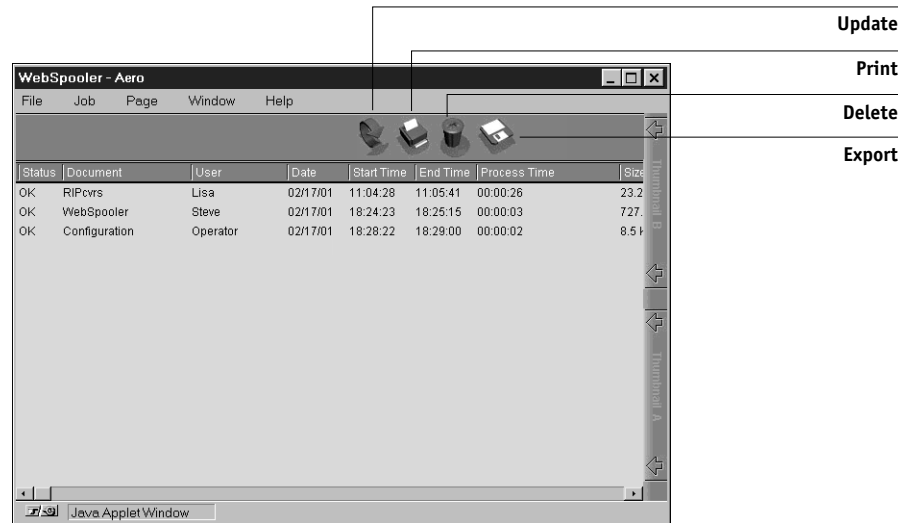

The Job Log displays each job and the following information: status, document name, user name, date, start time, end time, process time, page description language, file size, device, paper size, media, number of originals, number of color pages, number of black-and-white pages, total number of pages, and Notes.

The Status column provides the following information about jobs:

- OK The job printed normally.
- ERROR An error occurred during processing or printing.
- CANCEL The job was canceled before printing was completed.

4. To update the Job Log, click **Update**.
5. To print the Job Log, choose **Print Job Log** from the **File** menu or click **Print**.

The information displayed in the Job Log window prints to the current E-810. When you print the Job Log, totals are printed for all appropriate columns.

6. **If you logged in as Administrator, you can choose Delete Job Log from the File menu or click Delete to clear the Job Log.**

The system administrator can also print and clear the Job Log from the Control Panel.

7. **To save the Job Log, choose Export Job Log from the File menu or click Export.**
8. **In the File name area, enter a name for the Job Log file (the default name is Fiery Job Log.txt).**
9. **Browse to the location where you want to save the file, and click Save.**

The Job Log is saved as a text file, and the Job Log window reappears.

You can view the information in any application that can read a text file. Items are separated by tabs.

To return to the job list, choose Show Job List from the Window menu.

Fiery Spooler for Mac OS computers

For Mac OS, the Fiery Spooler interface is almost identical to that of Fiery WebSpooler (see “Differences between Fiery Spooler for Mac OS and Fiery WebSpooler” on page 8-13), and both interfaces are very similar to the job management interface of Command WorkStation. For details on the icons and commands in Fiery Spooler and Fiery WebSpooler, see Chapters 3 and 4.

TO LAUNCH FIERY SPOOLER ON A MAC OS COMPUTER

1. **Double-click the Fiery Spooler icon.**

The Chooser dialog box appears.

2. **Select the E-810.**

For information on setting up the connection to the server, see *Getting Started*.

3. Click OK.

The Fiery Spooler main window appears.



For information on using Fiery Spooler for Mac OS computers, see Chapters 3 and 4, and "Tracking and managing jobs with Fiery WebSpooler" on page 8-1.

Differences between Fiery Spooler for Mac OS and Fiery WebSpooler

Though the interfaces for both Fiery Spooler for Mac OS and Fiery WebSpooler are almost identical, there are some feature differences.

Connecting to a different E-810

With Fiery Spooler, you can connect to a different E-810 from within the application using the following procedure.

TO CONNECT TO A DIFFERENT E-810

1. **Choose Open Fiery from the File menu.**
2. **Select the E-810 in the Chooser window that appears.**
3. **Click OK.**

The Fiery Spooler main window appears.

Appendix A: Basics of Imposition

This chapter introduces the basic concepts of imposition and can be used as an introductory tutorial for imposing a document that will be printed as a book or booklet. For more detailed information on the Imposition main window and its components, see Chapter 5, “Using Imposition.”

Printing books with the Imposition feature of DocBuilder Pro

This section describes the process of transforming an application-specific file into a bound book; along the way, concepts and terminology are introduced to help you take advantage of all the features of DocBuilder Pro.

Print engines that image documents on standard letter- or legal-sized paper at high speeds are common in office environments. Although the image quality and output efficiency of such devices is adequate for correspondence and office memos, they cannot image jobs with complex document layouts, or those that require higher resolution or a large number of copies.

Until recently, the only way around these limitations was to use traditional printing systems to impose your document—that is, to arrange its pages in the correct order and orientation for printing and a variety of binding styles. You might have used a service bureau to access high-volume, high-resolution color printers. Today Fiery technology teamed up with digital color print engines makes it cost-effective to produce short-run, fully-imposed (also called “ganged-up”) documents.

Basics of imposition layout

Commercial offset printers and web presses use wide rolls of paper and large printing plates capable of imaging numerous pages on a single sheet. For example, it is common for such printers to image up to 32 full-size pages on a single press sheet, a process inherently faster than printing a single page at a time. DocBuilder Pro lets you image multiple pages on a single sheet, but the output devices it supports are digital color print engines, rather than traditional printing presses; in this manual the paper on which a job is imaged is referred to as the sheet.


The printed sheet is subsequently folded into something resembling a booklet having connected pages. The folded sheet is called a signature, which is then trimmed to the finished size.

For pages to appear in normal reading order and position in the final booklet, their ordering and positioning on the sheet must differ from the normal book-reading order. You can demonstrate this for yourself using an ordinary sheet of paper.

MODELING AN EIGHT-PAGE BOOKLET


1. Fold the paper in half horizontally.

Fold the top edge of the sheet down to meet the bottom edge.

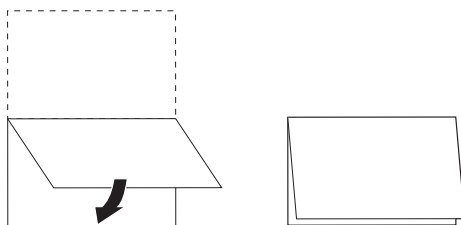


2. Fold the paper again vertically.

Fold the left edge of the sheet over to the right edge. Now you have a miniature version of a signature.

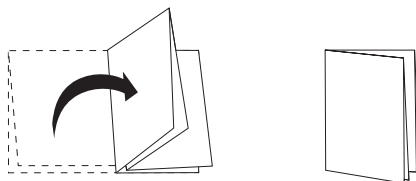

3. **Position the signature with the vertically folded edge to the left and the horizontally folded edges across the top.**

 The paper should now resemble a small eight-page booklet (with the tops of pages joined at the fold).




4. **Page through the booklet as if you were reading it, and number each page sequentially.**

Don't forget to number the front and back of each page—in general books have content on both sides of each page. The front cover of the booklet should be page 1 and the back cover of the booklet should be page 8. You can also underline each number to highlight the page orientation.

NOTE: Printing on both sides of the sheet is called duplex printing; printing on only one side of the sheet is called simplex printing. Not all print engines support duplex printing; and of those that do, variations in implementation exist. DocBuilder Pro supports duplex printing that corresponds to the print options of the output device.

When you unfold the signature, the page numbering should look something like the following illustration.

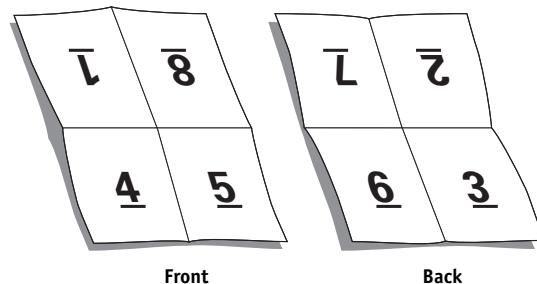

Notice that:

- The folds subdivide the sheet into areas representing pages in the final booklet.
- Page numbers do not appear in book-reading order.
- Some page numbers are upside down.

Some pages must be printed upside down on the sheet in order for them to appear right-side up in the final booklet, and pages must also be printed out of numerical sequence on the sheet in order for them to appear in numerical sequence in the final booklet.

This process of folding paper and numbering pages to approximate the finished piece is called making a folding model, and it's a common first step in planning a print job. The folding model provides valuable information about page placement, which you can use to create a plan, or sketch, of how pages are placed on the sheet. This plan is called a layout.

DocBuilder Pro frees you from the tedious and error-prone process of creating accurate physical models of the imposed book in order to lay out pages. With DocBuilder Pro, you simply open the source file to be imposed and specify how many rows and columns of pages to image on a sheet. DocBuilder Pro simplifies this process even further by providing predefined layouts for common impositions such as booklets and brochures. You can also save your own custom layouts for easy reuse.

Printer's marks


In addition to specifying the placement of pages on a sheet, the layout also specifies how the finished sheet will be cut and folded. For example, the layout specifies whether the large finished sheet is folded and cut to create a booklet, or simply folded (and not cut) like a map.

A DocBuilder Pro layout designates the location of folds, cuts, and other special elements by means of special markings called printer's marks, which appear on the printed sheet outside the main content area of the job.

- The job label comprises descriptive text such as the name of the job, a sheet identifier, and the date and time the sheet was printed.

- The location of a fold is defined by a dotted line called a fold mark; similarly, the location of a cut is defined by a solid line called a trim mark.
- Specialized marks also define the size and locations of margins (space surrounding the page's content area), gutters (space between pages), and bleeds (extensions of content beyond a trim mark; used to ensure that printed area extends to the very edge of a trimmed page).

DocBuilder Pro makes it easy to set up gutters and specify a set of printer's marks to image on the finished sheet as illustrated below.

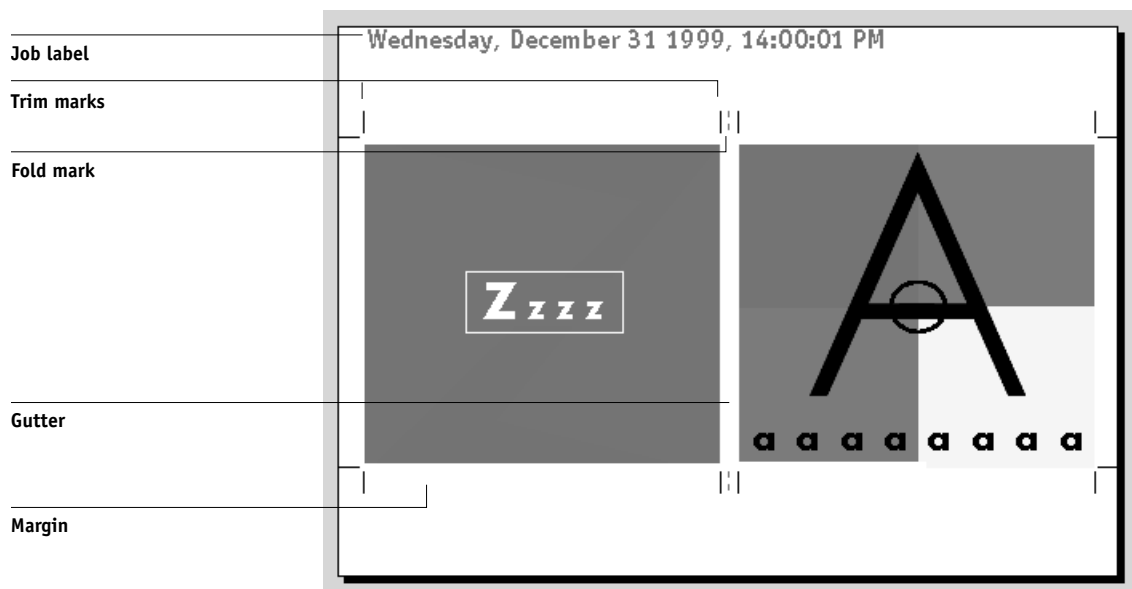

Additional sheets


A book layout must also adjust the placement of pages according to the total number of pages in the job. For example, a book is often composed of more pages than can be printed on a single sheet. When the number of pages in the book is a multiple of the number of pages on a sheet, the same layout plan is used to place pages on additional sheets until all of the pages in the book are printed. However, if the total page count is not an even multiple of the number of pages in the layout, one signature may be laid out to accommodate the discrepancy.

For example, if your layout places 8 pages on a sheet and the total page count in the book is 12, one of its signatures holds only 4 content pages, with the rest of the space on the sheet blank. If you do not want blank pages in the middle of the finished book, insert blank pages intentionally, for example after cover page, after table of contents, or between chapters. To insert blank pages, open the job in the Thumbnail A window, right click the page you want to add blank to (or pull down on Page menu) and select insert blank page.

DocBuilder Pro lets you add blank pages or add, delete, and rearrange pages from multiple source documents easily, so you can quickly preview the results of page manipulations.

Binding methods

A book layout also specifies the means by which sheets are gathered and bound. Stitching or stapling finished pages across a common center fold, or spine, is called saddle stitch binding and the stitched pages are called a saddle. Multiple folded sheets can be stitched into the same saddle as a group. Stacking signatures, grinding the spines off, and then gluing them together is called perfect binding. You can combine saddle stitch and perfect binding methods by stacking two or more groups one on top of another on a common fold line and gluing them together; this is called a nested saddle.

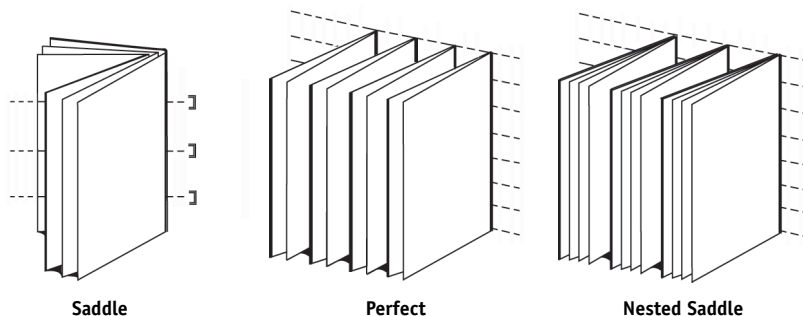


The binding method to be used affects the order in which pages are placed on the sheet; for example, the page ordering used to perfect bind a book must be different from that used to saddle stitch the same job. Thus, the layout must also specify the method by which the finished job will be bound.

The choice of a binding method is determined by the job's size, complexity, and budget. Saddle stitch binding is very cost-efficient, but is more suitable for small booklets than for large jobs. (A rule of thumb says that saddle stitch binding works best for booklets or brochures with a maximum of 88 pages.) Conversely, perfect binding is more expensive but more suitable for larger jobs.

DocBuilder Pro reorders imposed pages automatically according to your choice of binding method, which can save a significant amount of time and effort. Consider, for example, what must be done when a book that was to be saddle stitched exceeds the bindery's maximum page count and must be reimposed as a perfect-bound book. To redo the imposition by traditional means would be labor-intensive; with DocBuilder Pro, it takes only moments.

Shingling and creep

All books and brochures use a sheet that is folded to create separate page areas. Because the sheet itself has some thickness, each fold causes a very small incremental shift in the location of the edge of each page relative to the others. The result is that the edges of pages furthest from the saddle's innermost fold seem to move away from the edges of pages closest to the innermost fold. As the number of pages in the saddle increases, so does the amount of this shift, which is known as shingling. To counteract the effects of shingling (illustrated in an exaggerated manner below), the bindery trims the edges of the finished book to a common edge.

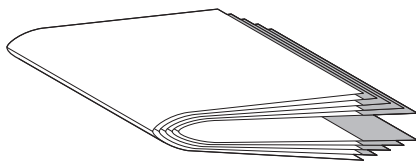


Shingling

Trimming the bound pages resolves only half of the problem, however—as the edges of pages move, so do the content areas imaged on them. The apparent shift of content area caused by folding a sheet multiple times is known as creep or binder's creep. The effect of creep is that the content area of pages closer to the innermost fold in a saddle appear to move towards the outer margins of the page.

Creep becomes more noticeable as the number of groups in a saddle increases, and its effect is most noticeable on pages farthest from the center fold of the saddle.

Consequently, a book layout must also specify the number of groups in each saddle because the number of groups in each saddle affects the amount of creep needs to be accounted for.

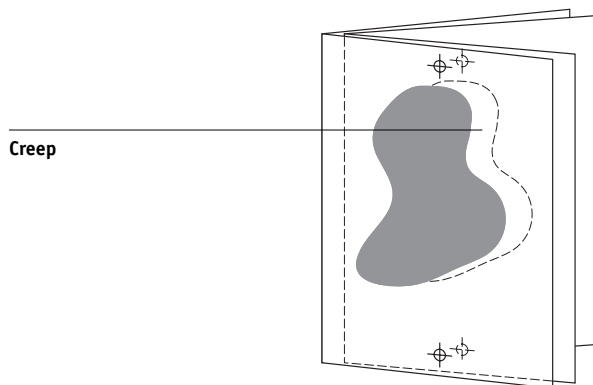

Compensating for creep is tedious, exacting work which DocBuilder Pro does for you automatically when you change any aspect of the imposed job that is affected by creep.

Gang-up printing

It is clear that a layout is essential to define the elements of complex print jobs such as booklets and books, but it can also be useful for smaller jobs. Consider, for example, how you might approach the task of printing business cards. It is slow, wasteful, and expensive to print a single business card per sheet, when you can repeat the image of the business card until the entire sheet is filled. This printing technique is known as Gang Up Repeat because the image is repeated in each page area, or step, on the sheet. After printing, the sheet is cut apart to produce individual cards.



Gang Up Repeat layout

This job can be made even more efficient by eliminating the gutters between cards, allowing you to reduce significantly the number of cuts required to separate each card from its neighbor. Defining zero-width gutters on a shared cut line in this manner is called using a common blade for those cuts.

If you need to print business cards for several different clients, you could perform a Gang Up Repeat printing job for each, but you might still wind up wasting paper and time if the jobs don't fit easily into a simple multiple of sheets. A more efficient approach is to print several jobs on a single sheet, and then print that sheet as many times as required. The technique of printing multiple jobs on the same sheet is known as Gang Up Unique. DocBuilder Pro provides both Gang Up Repeat and Gang Up Unique.



Gang Up Unique layout

Appendix B: Templates


This appendix gives descriptions of the built-in templates DocBuilder Pro provides.

1-Up Full Bleed

The 1-Up Full Bleed layout is used to print one page per sheet. The printer's marks show where to cut the paper so that the color content extends to the edge of the paper.

The following settings are applied for this layout:

- Bleeds
- Printer's Marks (trim marks and job label only)
- Scale to Fit
- Gang Up Unique

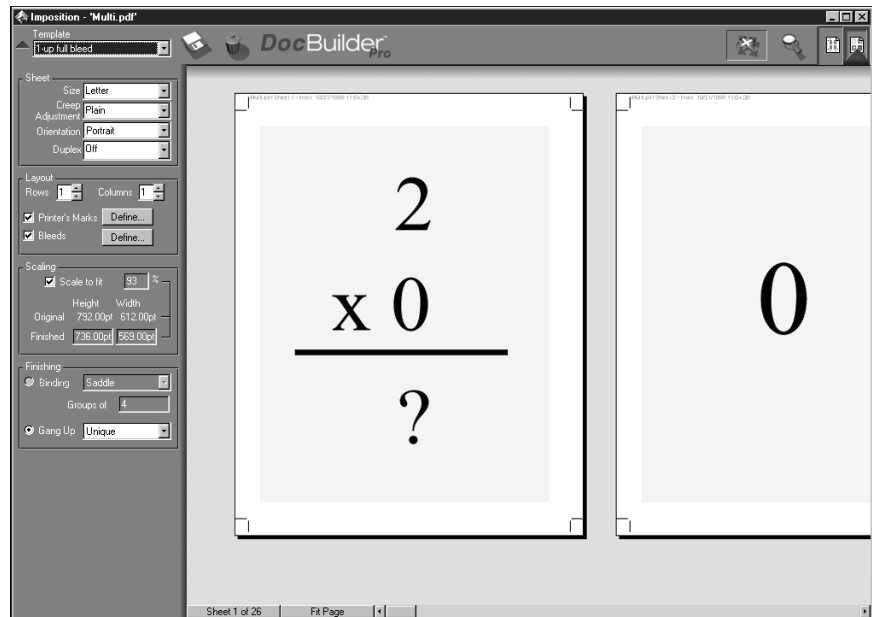


There are no page number restrictions for the 1-Up Full Bleed layout.

2-Up Perfect

The 2-Up Perfect layout is used to create signatures for a perfect bound book. Each sheet is folded once and stacked on top of one another. For more information on binding methods, see page A-6.

The following settings are applied for this layout:

- Duplex
- Bleeds
- Printer's Marks (fold marks, trim marks, and job label)
- Scale to Fit
- Binding Perfect

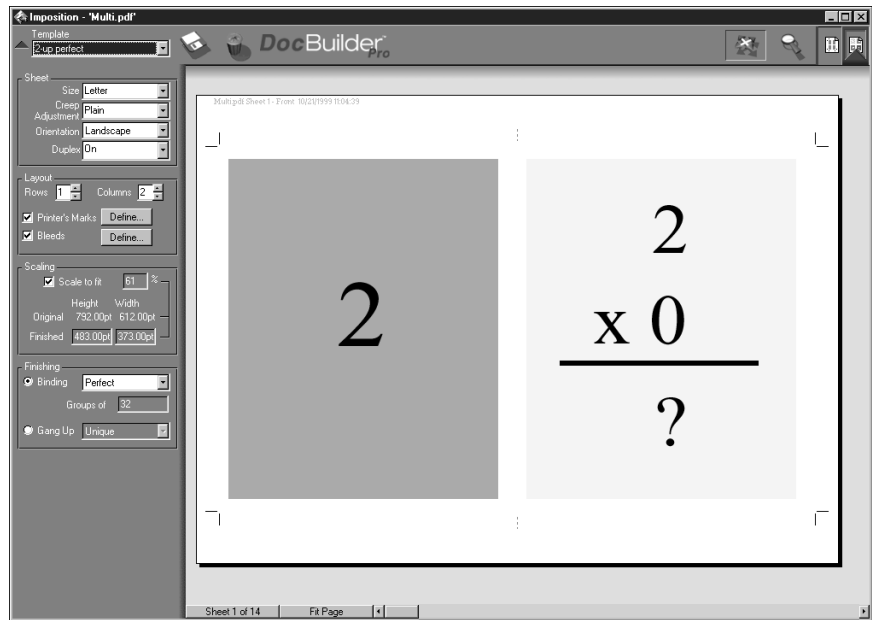

The 2-Up Perfect layout should be used with jobs that have multiples of four pages, but it can be used with jobs that have any number of pages. Additional blank pages will be added if necessary. Pages will be ordered in groups of four so that when folded each sheet will have four sequential pages. For example:

- 4 pages

4	1
---	---

**Sheet 1,
front side**

2	3
---	---

**Sheet 1,
back side**

- 8 pages

4	1
---	---

**Sheet 1,
front side**

2	3
---	---

**Sheet 1,
back side**

8	5
---	---

**Sheet 2,
front side**

6	7
---	---

**Sheet 2,
back side**


NOTE: The Creep Adjustment option has no effect on this template.

2-Up Saddle

The 2-Up Saddle layout is used to create signatures for a saddle bound book. All of the sheets are folded together, one inside the other. For more information on binding methods, see page A-6.

The following settings are applied for this layout:

- Duplex
- Bleeds
- Printer's Marks (fold marks, trim marks, and job label)
- Scale to Fit
- Binding Saddle

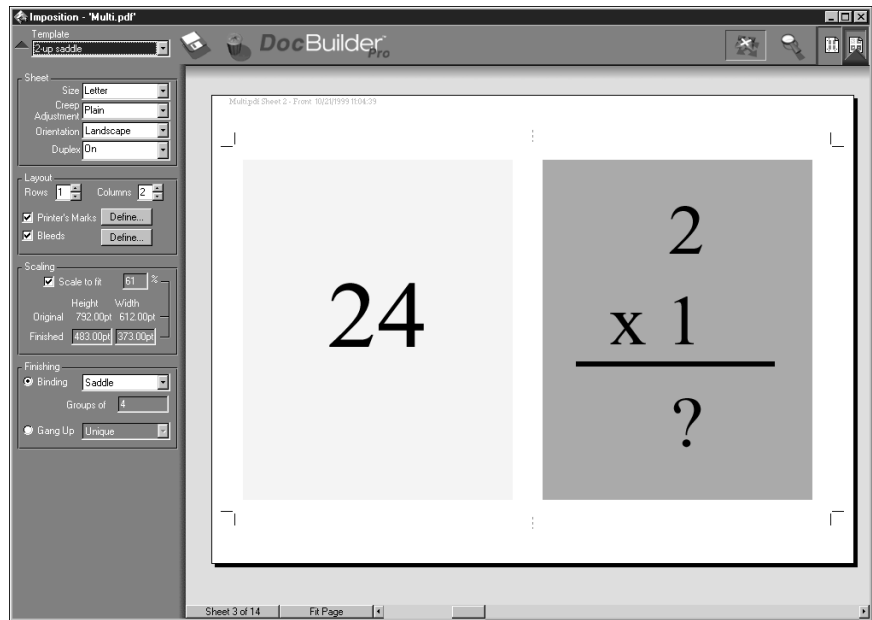

The 2-Up Saddle layout should be used with jobs that have multiples of four pages, but it can be used with jobs that have any number of pages. Additional blank pages will be added if necessary. Pages will be ordered so that when sheets are folded and stitched together into signatures, the pages will be sequential. For example:

- 4 pages

4	1
---	---

**Sheet 1,
front side**

2	3
---	---

**Sheet 1,
back side**

- 8 pages

8	1
---	---

**Sheet 1,
front side**

2	7
---	---

**Sheet 1,
back side**

6	3
---	---

**Sheet 2,
front side**

4	5
---	---


**Sheet 2,
back side**

3-Up Trifold Brochure

The 3-Up Trifold Brochure layout consists of a single sheet folded into three sections. Although the three sections are the same width, the space between each section varies so that the leftmost panel can be folded over the other two panels.

The following settings are applied for this layout:

- Duplex
- Printer's Marks (trim marks and job label only)
- Scale to Fit
- Gang Up Unique

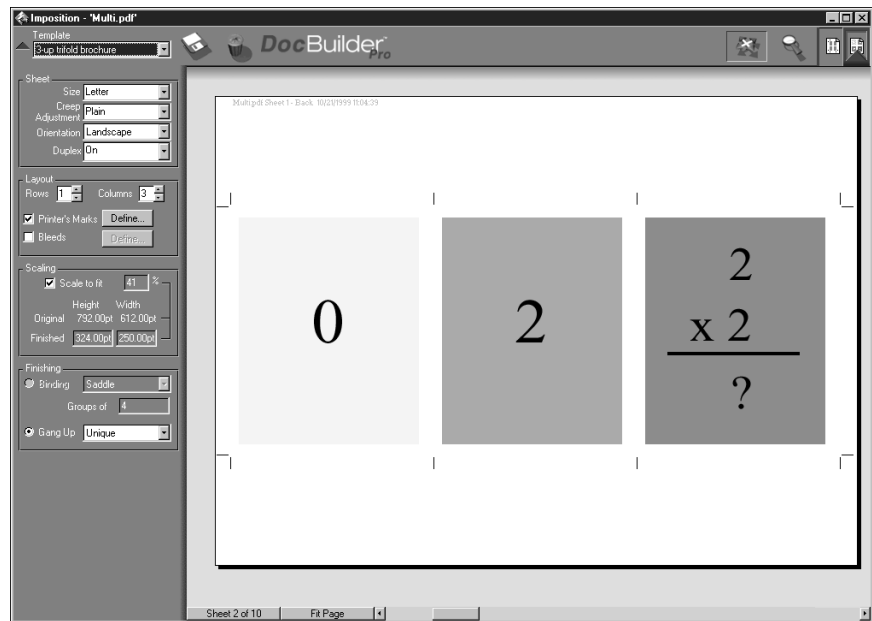

The 3-Up Trifold Brochure layout can be used only with jobs that have six pages. If the job contains more or less than six pages, an error message will appear. The pages will be ordered as follows:

3	6	1
---	---	---

**Sheet 1,
front side**

2	4	5
---	---	---

**Sheet 1,
back side**

The 3 Up Trifold Brochure is usually folded as illustrated below.




4-Up Gate Fold

The 4-Up Gate Fold layout is used most often in the case of a four panel brochure. The finished brochure unfolds to double and then four times the original size.

The following settings are applied for this layout:

- Duplex
- Printer's Marks (trim marks and job label only)
- Scale to Fit
- Gang Up Unique

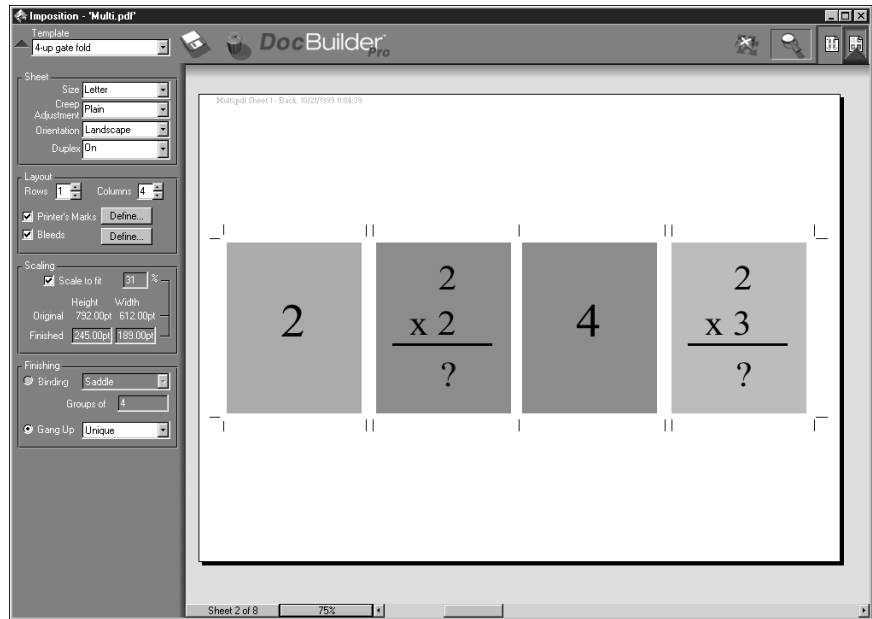

The 4-Up Gate Fold layout can be used only with jobs that have eight pages. If the job contains more or less than eight pages, an error message will appear. The pages will be ordered as follows:


3	8	1	2
---	---	---	---

Sheet 1,
front side

4	5	6	7
---	---	---	---

Sheet 1,
back side

The 4-Up Gate Fold is usually folded as illustrated below.

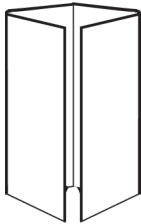


4-Up Head to Head

The 4-Up Head to Head layout is used to create booklets from a layout of four pages on each side of the printed sheet. By rotating the two topmost pages, the signature can be folded both horizontally and vertically, and trimmed. The finished booklet will have all pages in the correct order and rotation.

The following settings are applied for this layout:

- Duplex
- Bleeds
- Printer's Marks (fold marks, trim marks, and job label)
- Scale to Fit
- Binding Saddle

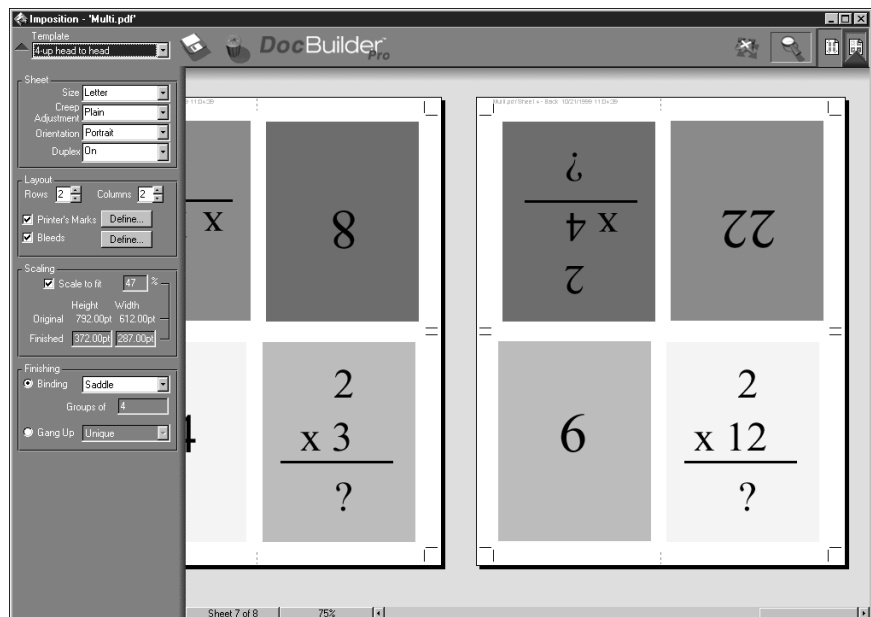

The 4-Up Head to Head layout should be used with jobs that have multiples of eight pages, but it can be used with jobs that have any number of pages. Additional blank pages will be added if necessary. Pages will be ordered so that when sheets are folded with two folds at ninety degrees, trimmed, and stitched together into signatures, the pages will be sequential. Note that although this layout requires two folds, the template applies a fold mark on the spine fold only. For example:

- 8 pages

5	7
8	1

**Sheet 1,
front side**

6	9
2	7

**Sheet 1,
back side**

- 16 pages

6	8
16	1

**Sheet 1,
front side**

4	01
2	15

**Sheet 1,
back side**


11	9
14	3

**Sheet 2,
front side**

5	12
4	13

**Sheet 2,
back side**

The 4-Up Head to Head is usually folded as illustrated below.

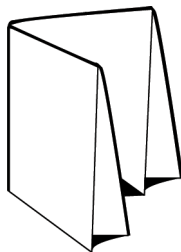


4-Up Z-Fold

The 4-Up Z-Fold layout allows many panels to be folded on top of one another without stressing the folded spine. The most common example is a road map.

The following settings are applied for this layout:

- Duplex
- Printer's Marks (trim marks and job label only)
- Scale to Fit
- Gang Up Unique

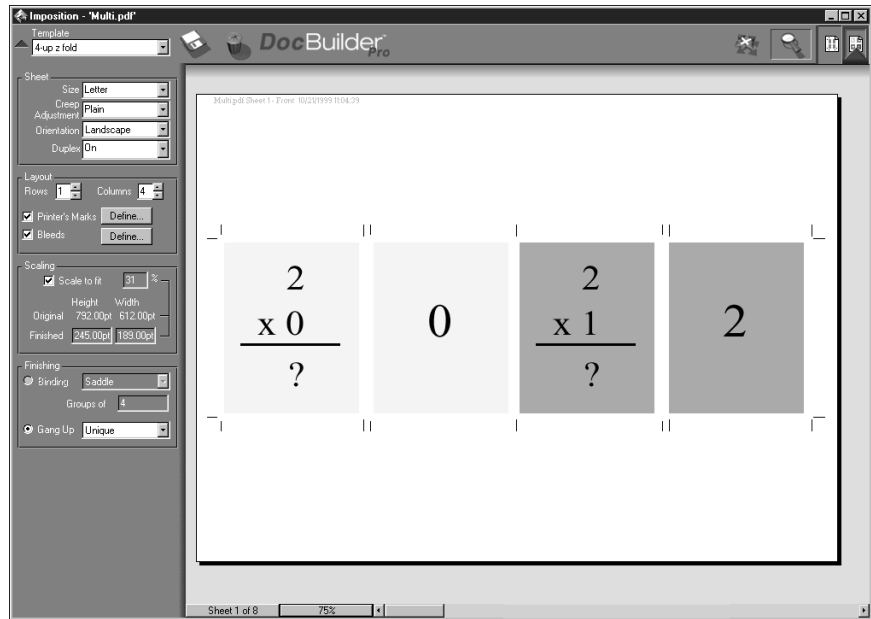

The 4-Up Z-Fold layout can be used only with jobs that have eight pages. If the job contains more or less than eight pages, an error message will appear. The pages will be ordered as follows:

2	3	4	5
---	---	---	---

**Sheet 1,
front side**

6	7	8	1
---	---	---	---

**Sheet 1,
back side**

The 4-Up Z-Fold is usually folded as illustrated below.





Appendix C: Troubleshooting

This section lists error messages you might see, and provides some troubleshooting guidelines should a problem arise with the E-810 or Command WorkStation. If you are unable to resolve a problem after referring to this chapter, contact your authorized service/support center.

Error messages

Error messages can result from problems with the print job, the E-810, the Command WorkStation, or the copier. Some of the most common error conditions are listed here.

A copier error message sometimes remains displayed on Command WorkStation even after you have resolved the error. A time lag in communicating the resolution of the error to the Command WorkStation may lead you to believe the error has not been resolved. However, printing will resume and the Command WorkStation display will be updated after a short delay.

When an error interferes with printing, you will see a message on Command WorkStation. The status bar that displays the message indicates the process where the error occurred. Following are the messages (listed in alphabetical order), with the appropriate corrective action for each one. You can cancel the pending print job while you attend to the error condition. A few normal status messages are included in this list in case they cause concern.

E-810 message	Corrective action/additional information
Black toner low	Add Black toner.
Busy	The E-810 has received a print job, but the copier is busy. The job will print when the copier resumes printing.
Check duplex tray	The copier's duplex tray is not in place. The E-810 will print when the duplex tray is in place.



E-810 message	Corrective action/additional information
Check power & cable	There is a problem with the print engine power or cable connection. First check to make sure the print engine is turned on. There may also be a problem with the cable connection between the E-810 and the print engine. Make sure the cable has not come loose. The E-810 will resume printing when the cable is securely connected to both the E-810 and the print engine.
Close back door	The back door on the copier is open. Close the door to resume printing.
Close DF cover	The DF cover on the copier is open. Close the cover to resume printing.
Close front door	The front door on the copier is open. Close the door to resume printing.
Close LCT cover	The LCT cover on the copier is open. Close the cover to resume printing.
Close left door	The left door on the copier is open. Close the door to resume printing.
Close manual feed	The manual feed tray on the copier is open. Close the tray to resume printing.
Close right door	The right door on the copier is open. Close the door to resume printing.
Close sorter cover	The sorter cover on the copier is open. Close the cover to resume printing.
Communication error	An error occurred with the copier. See the copier message panel for information.
Copier error	An error occurred with the print engine.
Copier is offline	The Suspend Printing option has been selected from the Functions menu. Press Resume Printing in the Functions menu to reconnect the E-810 to the copier.
Cyan toner low	Add Cyan toner.
Door open	One of the doors on the copier is open. Close the door to resume printing.



E-810 message	Corrective action/additional information
Error: check panel	An error occurred with the copier. See the copier message panel for information.
Ld ____ in LCT	The copier's LCT is not loaded with the paper size or type specified. The E-810 will print when the LCT is loaded with the required media.
Ld ____ in manual feed	The copier's manual feed tray is not loaded with the paper size or type specified. The E-810 will print when the manual feed tray is loaded with the required media.
Ld ____ trans in manual feed	The copier's manual feed tray is not loaded with the transparency size or type specified. The E-810 will print when the manual feed tray is loaded with the required media.
Load ____ in any tray	The copier is not loaded with the paper size specified. The E-810 will print when the required paper is loaded into any tray.
Load ____ in tray ____	The copier's specified tray (1 through 4) is not loaded with the paper size specified. The E-810 will print when the named tray is loaded with the required paper. You may also select Cancel if the required paper is unavailable.
Load ____ thick2 in manual feed	The copier's manual feed tray is not loaded with the thick paper size specified. The E-810 will print when the manual feed tray is loaded with the required thick paper.
Load ____ thick in manual feed	The copier's manual feed tray is not loaded with the thick paper size specified. The E-810 will print when the manual feed tray is loaded with the required thick paper.
Magenta toner low	Add Magenta toner.
No black toner	The black toner has run out. Add more toner to resume printing.
No cyan toner	The cyan toner has run out. Add more toner to resume printing.
No fuser oil	The fuser oil bottle in the fixing assembly is empty. To replace the fuser oil, call your service representative. The E-710 will resume printing when the oil has been replaced.
No LCT	The copier's LCT is unavailable. The E-810 will print when the LCT is in place.



E-810 message	Corrective action/additional information
No magenta toner	The magenta toner has run out. Add more toner to resume printing.
No sorter	The copier's sorter is unavailable. See the copier console for instructions.
No staples	The copier is out of staples. The E-810 will resume printing when staples have been added.
No yellow toner	The yellow toner has run out. Add more toner to resume printing.
Paper jam	There is a paper jam in the copier. Open the copier doors and check the locations indicated on the copier display. The E-810 will resume printing when you have cleared the paper jam and closed the copier doors.
Energy Save Mode	The copier is in Energy Save Mode. You must wait for the copier to warm up before you can print.
Remove copies from duplex tray	The duplex tray is full. You must remove the paper in the duplex tray before continuing the job.
Remove copies from sorter	The sorter is full. You must remove the paper in the sorter before continuing the job.
Service code error	The system has detected an error that requires a service call. Before calling for service, power cycle the copier and the E-810. If that does not resolve the error, call your authorized service representative and provide them with the error number that is displayed. Only the service representative can clear this type of error.
Sorter Limit: ____	The sorter holds the specified number of copies. Once the limit is reached, you must remove the paper in the sorter before continuing the job.
Toner low	The toner for one of the colors is low. Add toner soon for best print quality.
Unknown error	An error occurred with the print engine.

E-810 message	Corrective action/additional information
Warming Up . . .	This is a normal status message. The copier is powering up. It will be ready for printing in a few minutes.
Waste toner full	The copier's used toner tank is full. Call your service representative. Printing will resume after the copier returns to ready status.
Yellow toner low	Add Yellow toner.

Maintaining optimal system performance

The E-810 does not require maintenance. Beyond the routine requirements of servicing and maintaining the print engine and replenishing consumables there are a few things you can do to improve the overall performance of your system:

- Reduce unnecessary connections to the E-810.
If users notice that the server is frequently too busy to receive jobs, it may be because several users are running utilities that are updated often. Large numbers of remote users running Fiery Downloader or Fiery WebTools may have a significant effect on E-810 performance.
- Schedule the printing workload by checking job ticket information before printing. Print jobs with the same output and paper specifications together to minimize paper changes. Also, print routine jobs while you prepare to print jobs with special instructions or special media.
- Reduce unnecessary server connections at Command WorkStation. If you use a second or third E-810 server on an occasional basis, performance will be improved if you log off when you are not using it.
- Avoid printing with the server Disk full warning.

If you see this warning, delete jobs from the Queues or Archive windows that have been held for a long time and are not likely to be needed. Avoid this condition by deleting old jobs on a regular basis. The date associated with a job is the original date it was sent. As a last resort, you can choose either Clear Server or Clear.

Troubleshooting

In case of problems, and before you call for service, check the guidelines in this section. If you are unable to resolve the problem, make a note of the error condition and contact your authorized service/support center.

Command WorkStation hangs

If the Command WorkStation windows do not update, click the Log in/out slider and log out, then exit Command WorkStation. Restart Command WorkStation or restart the computer.

If the Command WorkStation windows do not update, or no jobs are displayed, and the mouse has no effect (you cannot select a job or a window, use a right-mouse command, or select a menu item) the E-810 is down or communication over the network has failed.

To force an exit from Command WorkStation, press Ctrl-Alt-Delete, and with Command WorkStation selected, click End Task. At the E-810, disconnect and reconnect the network cable, and try printing a Test Page or Configuration page. If that fails, restart the server.

If the E-810 Control Panel does not respond to the Menu button, press Reset, turn off the server, and turn it on again. When it reaches Idle, restart Command WorkStation.

Command WorkStation fails to connect to a E-810

If a remote Command WorkStation cannot connect to a server that was connected previously, you may need to reconfigure the connection.

1. **If you can, choose Exit from the Command WorkStation File menu.**
2. **In the C:\Windows folder, find the Efinl.ini file and move it out of the C:\Windows folder to another folder.**

If the Efinl.ini file contains a limited amount of configuration information that is easily recreated (i.e., information for only one or two servers), you can delete the file altogether. A new Efinl.ini file will be created in the C:\Windows folder when you reconfigure the connection.

If the Efinl.ini file contains configuration information for several servers, or information that is not readily recreated, keep the Efinl.ini file as a backup.

3. **Print a Configuration page.**

You will use the information on this page to configure the connection to the server.

4. **Start Command WorkStation.**
5. **When you are prompted to configure a server connection, click OK.**

Follow the instructions in *Getting Started* to configure the connection.

6. **If you still cannot connect to the E-810, the administrator should reinstall the Command WorkStation software.**

For details, see *Getting Started*.



Unexpected printing results

If this happens	This is the problem
A cover page is not printed when you reprint a saved raster job.	The cover page identifies the originator of the job and the time the job was sent. Time stamp and user information on the cover page of a reprinted job are not meaningful.
The job settings are not carried out as you expected.	If the user printed from Mac OS, there may be two conflicting print settings. To check the job properties, double-click the job. For a table of job properties and conflicting properties, see the <i>Printing Guide</i> . Notify users of these conflicts so they can avoid them in the future. If you expected the settings you see in the Properties dialog box, be aware that the Copies field does not currently reflect user settings, and that Page Range and Scale percent are All and 100%, respectively, unless they were changed after being sent for printing.
The job doesn't print.	Some printing errors may be displayed in the Print status bar. When the job is in the Printed queue, jobs that had a PostScript error are displayed in a light red job row. Double-click anywhere in the row to see the error message.
There are font errors.	If user-specified fonts that are not resident on the E-810 are not printing correctly in PostScript files that are downloaded by users, request that the user embed the fonts in the PostScript file or print directly from their application. When users print from their applications, if special fonts are not downloaded automatically, they should download directly to the E-810 with Fiery Downloader. This can be done by the user or by the operator, provided the Direct connection is enabled. For information about Fiery Downloader, see the <i>Printing Guide</i> .

Clearing the server

Clearing the server is an Administrator option that can be used as a last resort if a job persists in the system and prevents printing despite attempts to cancel or delete it. Clearing the server deletes all jobs currently saved on the server in any queue, all locally archived jobs, and all FreeForm master jobs. It also clears the Job Log, the index of archived jobs, and the index of FreeForm masters.

Before clearing the server, export the Job Log if you haven't recorded the information in it. If you can, notify users that you will clear their jobs from the server so they can back them up and resend them when the server is back in operation.

You can clear the server from the Control Panel (see page 1-6) or by choosing Clear from Command WorkStation (see page 3-12).

Users are unable to connect to the copier

If users are unable to connect to the copier, or are unable to find the copier from their workstations, the network administrator may need to troubleshoot their network connections, and check settings on the servers they use for printing. If settings have changed, it may be necessary to reconfigure the E-810.

For example, if print servers or print queues on a Novell server are renamed or deleted, or if accounts or permissions are changed, the E-810 administrator may have to edit settings or enter new settings in IPX (Novell) Setup to reflect the new configuration.

If users cannot connect to the copier with Fiery Downloader from Windows 95/98/Me or Windows NT 4.0/2000, you may need to reconfigure the utility's connection to the server. For details, see *Getting Started*.

Mac OS users may fail to see the copier if a network administrator has assigned it to a different zone, or has added zones where previously there were none.

If you have configured the E-810 and set up client computers and network servers according to guidelines in the *Configuration Guide* and *Getting Started*, try printing a Test Page (at Command WorkStation, choose Print Pages from the File menu).

If you are able to print the test page but still cannot print a file from a remote computer, contact the system administrator to troubleshoot the network connection.

If you are unable to connect, and you *cannot* print the Test Page, check the copier's touch panel display.

If this happens	Try this
It displays a diagnostic or error message.	Take the appropriate corrective action, as described in the copier manual or in "Error messages" on page C-1.
The display is completely blank.	If the copier is in Energy Saver mode, press the Energy Saver mode key to see any messages on the display.
The copier is not in Energy Saver mode.	The copier's Automatic Power-Off function may have shut down the copier. Turn the copier on, and then try printing a Test Page again when the copier has warmed up.
You still cannot print a Test Page.	Make a copy. If you can make a copy, restart the E-810, and when you see Idle on the status line of the E-810 display, try printing a Test Page again. If the Test Page still fails to print, contact your authorized service/support center.

Setup error messages

For information on Setup error messages, see the *Configuration Guide*.

Index

A

- About command 3-13
- access
 - levels xviii, 3-7
 - restricting xvii
- Acrobat, touch-up tool problems 6-15
- active jobs 3-20
- activity light
 - Control Panel 1-2
 - FieryBar 2-2
- adjusting columns (Queues window) 3-16
- Administrator password xviii, 1-8, 3-1, 3-7
- Adobe Photoshop, *see* Photoshop
- Alert Status screen 1-3
- Align Paper Trays 3-12
- animation, *see* status bars
- applying templates 5-9
- Archive command 3-11, 3-26, 4-31
- archived jobs, filtering 3-28
- Archive window
 - adjusting column width 3-29, 3-31
 - changing displayed headers 3-28
 - deleting held jobs C-5
 - exporting job list 3-29
 - features 3-28, 3-29
 - Filter 3-37
 - job icons 3-27
 - routing jobs 3-28
 - sorting jobs 3-28
- archiving a job 3-19, 3-26

B

- binder's creep
 - compensating for automatically 6-8
 - effects A-7
 - groups 6-9
 - sheet thickness 6-3
- binding offset 6-15

- binding options 6-8
- binding styles
 - nested saddle 6-9, A-6
 - perfect 6-8, A-6
 - saddle stitch 6-8, A-6
- bleeds 6-6, A-5
- broken LCD xviii
- buttons, Control Panel 1-2

C

- calibration from the
 - Control Panel 1-6
- Cancel Job
 - from the Control Panel during printing 1-3
 - from the Control Panel during RIPping 1-3
- Cancel Print command,
 - on FieryBar 2-3
- Cancel Printing command
 - from Command WorkStation 3-12, 4-11
 - from Fiery WebSpooler 8-5
- Cancel RIP command,
 - on FieryBar 2-3
- Cancel RIPping command
 - from Command WorkStation 3-12, 4-11
 - from Fiery WebSpooler 8-5
- Change (Administrator) Password option 1-9
- Clear command
 - archived jobs 3-27, C-9
 - FreeForm master jobs 3-30
 - from Command WorkStation 3-12, 4-39
 - Job Log 3-35
- Clear Job Log command 3-12

- Clear Server command
 - archived jobs 3-27
 - FreeForm master jobs 3-30
 - from Control Panel 1-6
 - Job Log 3-35
 - on FieryBar 2-3
 - clipping icon 6-4, 6-7
 - clipping indicators
 - layout mode 6-7
 - preview mode 6-7
 - clipping views 6-7
 - collate and cut finishing 6-9
 - Color Charts 1-5, 4-7
 - Color Setup option 1-9
 - ColorWise Pro Tools command,
 - on FieryBar 2-3
 - column width, adjusting 3-15
 - Command WorkStation
 - Archive window 3-27
 - command on FieryBar 2-3
 - display, described 3-8
 - FreeForm window 3-29
 - introduction to 3-1
 - Job Log window 3-35
 - logging in to server 3-6
 - main window, parts of 3-8
 - menus 3-10
 - starting 3-4
 - troubleshooting C-7
 - Configuration page
 - printing from the Command WorkStation 4-7
 - printing from the Control Panel 1-5
 - connection to server,
 - configuring 3-5
 - Control Panel
 - activity light 1-2, 1-4
 - buttons 1-2
 - down button 1-2
 - Functions menu 1-5
 - line selection buttons 1-2
 - Menu button 1-2
 - status screens 1-3
 - up button 1-2
 - Control Panel map
 - printing from the Command WorkStation 4-7
 - printing from the Control Panel 1-5
 - Create Master option 4-24
 - creep
 - compensating for automatically 6-8
 - effects A-7
 - groups 6-9
 - sheet thickness 6-3
 - customizing printer settings 3-10
 - custom templates 6-14
- D**
- date 6-5
 - Default Settings template 5-9
 - Define Marks dialog box 6-5
 - Delete (job) command 3-10
 - Delete (page) command 3-12
 - Delete command 3-24, 4-17
 - Delete Job command (Fiery WebSpooler) 8-5
 - Delete Template icon 6-15
 - deleting print jobs 3-10
 - differences
 - between DocBuilder for Fiery WebSpooler and for the CommandWorkStation 8-8
 - between Fiery Spooler for Mac OS and Fiery WebSpooler 8-13
 - Direct connection 3-21, 4-28, C-8
 - disk space used 3-15
 - display window 1-3

DocBuilder

- Delete command 4-17
- Duplicate command 4-16, 4-17
- editing options 4-17
- Imposition feature 5-1
- Insert blank page command 4-17
- merging two files 4-19
- Open Preview command 4-17
- page manipulations 4-15
- Preview command 4-16
- DocBuilder differences 8-8
- down button 1-2
- Download command 3-11, 3-25, 4-28
- downloading files and fonts 4-25
- duplexing 6-3
- Duplex menu 6-3
- duplex printing
 - defined A-3
 - enabling 6-3
 - print engines A-3
 - print options A-3
- Duplicate (job) command 3-10
- Duplicate (page) command 3-12, 4-16, 4-17
- Duplicate Job command (Fiery WebSpooler) 8-5

E

- Efinl.ini file C-7
- Enable Animation 4-5
- Enable Popup Help 4-5
- error display 3-18
- error messages
 - during Setup C-10
 - general C-1 to C-5
- Exit command 3-10
- Exit Setup option 1-9
- Export command 3-13
- exporting archived job list 3-29
- exporting FreeForm job list 3-31

F

- F7 key 4-11
- F8 key 4-11
- FieryBar
 - activity light 2-2
 - commands 2-3
 - status 2-1
- Fiery Spooler for Mac OS
 - differences from Fiery WebSpooler 8-13
 - interface 8-1
- Fiery WebSpooler
 - accessing 8-2
 - Cancel Printing command 8-5
 - Cancel RIPPING command 8-5
 - Delete Job(s) command 8-5
 - functions available with 8-2
 - Guest (view-only) privileges 8-2
 - Hold command 8-5
 - Job menu 8-4, 8-5
 - Operator password 8-2
 - overview 7-2
 - Print and Hold command 8-5
 - Print command 8-5
 - Process Next command 8-5
 - raster data 8-5
 - Remove Raster command 8-5
 - Rename command 8-5
 - RIP and Hold command 8-5
 - RIPped jobs 8-3
 - status bars 8-3
 - window 8-3
- Fiery WebTools
 - accessing home page 7-3
 - Installer 7-2
 - overview 7-1
 - passwords 7-1
 - Status 7-2
 - WebDownloader 7-2
 - WebLink 7-2
 - WebSetup 7-2
 - WebSpooler 7-2

- File management tips 6-16
- File menu commands 3-10
- files, temporary 6-16, 6-17
- Filter 3-37
- Filter command
 - Archive window 3-28
 - FreeForm window 3-31
 - from Command WorkStation 3-13
- Finished Height field 6-8
- finished page size 6-7
- Finished Width field 6-8
- Finishing area 6-8
- Fit Page command 5-7
- folding model
 - creating A-2
 - defined A-4
- Fold Marks 6-5, A-5
- fonts
 - Adobe Type 1 4-25
 - deleting 4-29
 - displaying font list 4-29
 - downloading 4-25, 4-29, C-8
 - managing 4-28 to 4-29
 - printer fonts on server 1-5, 4-29
 - printing font list 1-5, 4-7, 4-29
 - TrueType 4-25
- Font Substitution Table 4-25
- FreeForm
 - master jobs, filtering 3-31
 - master jobs, job commands for 3-32
 - overview 3-29
 - printing variable data documents 4-24
- FreeForm window
 - changing displayed headers 3-31
 - exporting job list 3-31
 - features 3-31
 - Filter 3-31, 3-37
 - sorting jobs 3-31
- Functions menu, Control Panel 1-4, 1-5

G

- gang printing
 - enabling 6-9
 - Repeat option 6-9
 - suggested uses 6-9
 - Unique option 6-10
- Gang Up 6-9
- Gang Up Repeat 6-9, A-8
- Gang Up Unique 6-10, A-9
- General Setup option 2-5
- Go To Sheet dialog box 5-8
- group
 - binder's creep 6-9
 - defined 6-9, A-6
- Groups field 6-9
- Guest access xviii, 3-7
- gutters
 - defined A-5
 - defining size 6-13
 - location of 6-13
 - perfect binding 6-13
 - saddle-stitched binding 6-13

H

- headers
 - Job Log window 3-36
 - Queues window 3-15, 4-4
- held jobs 3-20, 3-22
- Help
 - Command WorkStation
 - information 3-13
 - Command WorkStation
 - preferences 4-5
 - menu commands 3-13
- Hide FieryBar command,
 - on FieryBar 2-4
- Hold command
 - 3-10, 3-24, 8-5

I

icons

- Archive window 3-27
- clipping 6-4, 6-7
- Delete Template 6-15
- FreeForm window 3-30
- Job Log window 3-36
- Print area 3-23
- RIP area 3-22
- Save Template 6-14
- Spool area 3-20
- Import command 3-11, 3-26, 4-34
- Impose command 3-11, 3-25
- imposing jobs 5-1
- imposition
 - page reordering 6-11
 - saving settings as template 6-14
- imposition data and temporary files 6-17
- imposition settings 6-14
- imposition window
 - Binding 6-8
 - clipping indicator 6-7
 - Columns menu 6-5
 - controls 6-1
 - Creep Adjustment menu 6-3
 - Finishing area 6-8
 - layout mode 5-5
 - navigating 5-4
 - opening 5-1
 - Orientation menu 6-3
 - preview mode 5-5
 - Printer's Marks 6-5
 - printer's spread 5-3
 - reader's spread 5-3
 - reordering pages 6-11
 - rows menu 6-4
 - Scaling area 6-6
 - settings panel, displaying 6-1
 - size menu 6-2
 - template menu 5-9
 - view modes 5-5, 5-6

inches, abbreviation and keyboard
shortcut 6-2

Info Status screen 1-4

Insert blank page command 4-17

Installer WebTool, *see* Fiery WebTools

Instructions field 4-3, 4-4, 4-24

J

job

- active 3-20
- areas 3-3
- canceling 4-11
- defined xv
- deleting 3-24
- environment xvii
- flow 3-16
- flow diagram 3-20
- flow scenarios 4-8
- held 3-20
- imposing 5-1
- imposition data 6-17
- limit 3-23
- order of display 3-20
- overrides 4-23, 8-7
- previewing 4-16, 4-17
- remove raster and reRIP 3-22, 3-30
- saving imposed 5-10
- temporary files 6-17
- job icons
 - Archive window 3-27
 - Fiery WebSpooler 8-3
 - FreeForm window 3-30
 - Print area 3-23
 - RIP area 3-22
 - Spool area 3-20
- Job Label
 - date 6-5
 - defined 6-5, A-4
 - job name 6-5
 - sheet information 6-5
 - time 6-5

Job Log
 clearing 3-37, 4-35
 deleting 3-37, 4-35
 described 3-35
 displaying 4-35, 8-9
 exporting to a file 3-36, 4-35
 Filter 3-37
 printing automatically 3-37
 printing from the Command WorkStation 4-7, 4-35
 printing from the Control Panel 1-5, 4-7
 specifying a date range 3-36
 updating the display 3-36, 4-35
 using (from Fiery WebSpooler) 8-9
 viewing printed jobs 8-4

Job Log Setup option 1-9

Job menu commands 3-10, 8-4

job name 6-5

Jobs Saved in Printed Queue 3-23

job ticket information 3-15, 4-4, C-5

L

landscape sheet orientation 6-3

layout
 bleeds 6-6
 defined 6-4, A-4
 maximum number of pages 6-4
 rows in 6-4, 6-5

layout mode
 characteristics 5-6
 clipping indicators 6-7
 defined 5-5
 reordering pages 6-11
 Zoom tool disabled 5-6

layout view 6-11

LCD xviii

line selection buttons 1-2

load balancing between servers 4-30

logging in to a server 3-6

Log in/out slider 3-6, 3-15, C-6

Log Off Windows command,
 on FieryBar 2-4

Log out command 3-13, 4-39

M

Magnification menu 5-5

Manage Color option 3-12

Manage Fonts command 3-12, 4-28, 4-39

margins 6-13, A-5

masters for variable data jobs 3-29

memory
 in use 3-15
 total 3-15

Menu button 1-2

menus
 Columns 6-5
 Command WorkStation 3-10
 Creep Adjustment 6-3
 Duplex 6-3
 File 3-10
 Help 3-13
 Job 3-10, 5-1
 Magnification 5-5
 Orientation 6-3
 Rows 6-4, 6-5
 Server 3-12
 Sheet 5-5
 Size 6-2
 Template 5-9
 View 5-7
 Window 3-13

millimeters 6-2

multiple servers, balancing load
 between 4-30

N

nested saddle 6-9, A-6

Network Setup
 option 1-9, 2-5

Notes fields 4-2, 4-4, 4-24

O

Operator password xviii, 3-7, 7-1, 8-2
 Orientation menu 6-3
 original page size 6-7
 Override Print Settings command 8-6

P

page
 finished size 6-7
 interaction of scaling values 6-8
 maximum number in layout 6-4
 numbers in layout view 6-11
 original size 6-7
 reordering automatically A-7
 reordering on sheet 6-11
 rotating 6-12
 viewing individual 5-6
 page numbers 6-11
 PANTONE 1-5, 4-7
 Paper Trays, align 3-12
 passwords
 Administrator xviii, 3-7
 Change (Administrator)
 Password option 1-9
 for Command WorkStation
 access 3-1
 Operator xviii, 3-7, 7-1, 8-2
 PDF data xv, 3-3
 PDF files, downloading 4-27
 perfect binding
 defined 6-8, A-6
 groups in 6-9
 gutters 6-13
 performance, optimizing C-5
 permissions xvii, 3-1
 Photoshop, transfer functions 4-28
 points 6-2
 PostScript
 defined xv
 icon 3-20
 RIP xv, 3-17

PostScript data xv, 3-3
 PostScript Setup option, *see* PS Setup option
 Preferences dialog box, commands 3-10, 4-5
 Preview command 3-12, 4-16, 4-17
 previewing print jobs 4-14
 preview mode
 characteristics 5-6
 clipping icon 6-7
 defined 5-5
 Print and Hold command 3-11, 3-25, 8-5
 Print area 3-3, 3-23
 Print command 3-10, 3-13, 3-24, 8-5
 Printed queue 3-4, 3-23, 8-3
 print engines and duplex printing A-3
 printer (job) icon 3-20
 printer fonts, *see* fonts
 printer settings, overriding 3-10
 Printer Setup option 1-9, 2-5
 printer's marks
 bleeds A-5
 date 6-5
 defining 6-5
 disabling 6-5
 enabling 6-5
 Fold Marks 6-5, A-5
 gutters A-5
 Job Label 6-5
 job label A-4
 job name 6-5
 margins A-5
 overview A-4
 sheet information 6-5
 time 6-5
 Trim Marks 6-5, A-5
 printer's spread 5-3
 printing
 Configuration page 1-5, 4-7
 defined xv, 3-17
 error 3-23
 font list 1-5, 4-7
 server information pages 1-5, 4-6

- printing duplex 6-3, A-3
- print jobs
 - deleting from queue 3-10
 - previewing 4-13, 4-14
 - routing 3-24 to 3-26
- Print Pages command
 - Command WorkStation 3-10, 4-6
 - Control Panel 1-5
- Print status bar 3-18
- Print Status screen 1-3
- problems, *see* troubleshooting
- Process Next command 3-11, 3-25, 8-5
- Properties command 3-11, 3-25, 4-23
- Properties dialog box 4-22
- PS Setup option 1-9

Q

- queues 3-17
- Queues window
 - changing the proportions 3-18
 - deleting held jobs C-5
 - described 3-16
 - elements 3-8
 - spooled jobs 3-17
 - update 4-30

R

- raster
 - data 3-22, 3-24, 8-5
 - icon 3-20
 - image 3-17
- raster files
 - editing 4-15
 - previewing 4-13
 - saving 3-17
 - saving an edited document 4-18, 4-22
- rasterizing, *see* RIPping
- reader's spread 5-3
- Reboot (server) command 3-12, 4-39
- Refresh command 3-13
- Remove Raster command 3-11, 3-25, 8-5

- Rename command 3-10, 3-24, 8-5
- reordering pages
 - automatically A-7
 - layout mode 6-11
- Repeat option 6-9
- Restart Fiery command, on FieryBar 2-3
- restricting access to server xvii
- Resume Print command, on FieryBar 2-4
- Resume Printing command
 - Command WorkStation 3-12
 - Control Panel 1-6
- Revert to Default Settings command 3-13
- right mouse button commands 3-24 to 3-26
- RIP, defined xv
- RIP and Hold command 3-10, 3-24, 8-5
- RIP area 3-3, 3-22
- RIPped jobs 3-4, 8-3
- RIPping 3-17
- RIP Status screen 1-3
- rotating pages 6-12
- rows
 - clipping of content area 6-4
 - selecting number in layout 6-4, 6-5
- Rows menu 6-4, 6-5
- Run Diagnostics command
 - from Control Panel 1-6
- Run Setup command 1-6

S

- saddle
 - defined 6-8, A-6
 - groups in 6-9
- saddle stitch binding
 - characteristics of 6-8
 - creep 6-3
 - defined A-6
 - groups A-6
 - gutters 6-13
- safety xviii
- Save As dialog box 5-10
- Save Template icon 6-14

- saving imposition settings 5-9
- Scale To Fit 6-8
- Scaling area
 - Finished Height field 6-8
 - Finished Width field 6-8
 - interaction of controls 6-6
 - percentage 6-7
- SEF prefix 6-3
- Send to Server command 3-11, 3-26, 4-30
- server
 - cleaning xviii
 - clearing C-9
 - configuring 3-5
 - connecting from Command WorkStation 3-5, 3-13, 4-30
 - display window xviii
 - managing multiple color servers 4-30
 - restarting 1-9, 2-6
 - selecting another 3-13, 4-30
 - shutting down 1-10, 2-7
 - working with more than one 4-30
- server fonts, *see* fonts
- Server Information slider 3-14
- Server menu commands 3-12
- Server Selection tabs 3-13
- Server Setup option 1-9
- Setup command 3-13, 4-39
- Set Up Fiery command, on FieryBar 2-3
- sheet
 - defined A-1
 - magnifying 5-5
 - navigating to selected 5-5
 - number of columns 6-5
 - number of rows 6-4
 - orientation 6-3
 - reordering pages 6-11
 - short-edge feed (SEF) 6-3
 - size 6-2
 - thickness 6-3
 - viewing by number 5-8
 - viewing entire 5-7
- Sheet area 6-2
- sheet information 6-5
- Sheet menu 5-5
- shingling A-7
- short-edge feed sheet size 6-3
- 'showpage' after EPS files option 4-28
- Shut Down command 1-6
- signature A-2
- simplex printing A-3
- Size menu 6-2
- sliders 3-14
- sorting jobs 3-28, 3-31
- source file 4-15
- spine A-6
- spool, defined xv
- Spool area 3-3, 3-20
- spooled jobs
 - displayed in Fiery WebSpooler 8-4
 - icons 3-20
 - in Queues window 3-3
- spool file
 - managing 6-16
 - PDF, PostScript formats 6-16
- starting the server 2-5
- status, FieryBar 2-1
- status bars
 - animation 3-18
 - in Queues window 3-2, 3-17
 - Print, RIP, Spool 8-3
- status messages, Touch Panel Display 1-7
- status screens, Control Panel 1-3
- Status WebTool, *see* Fiery WebTools
- step-and-repeat printing 6-9
- Suspend Print command, on FieryBar 2-4
- Suspend Printing command
 - from Command WorkStation 3-12
 - from Control Panel 1-5
- switching servers 3-13, 4-30
- system information 3-14
- system performance C-5

T

- target file 4-15
- template
 - applying 5-9
 - creating 5-9
 - Default Settings 5-9
 - defined 5-8
 - deleting 6-15
 - saving 6-14
 - saving imposition settings 6-14
 - selecting 5-9
- Template menu 5-9
- temporary files 6-16, 6-17
- Test Page
 - printing C-10
 - printing from
 - Command WorkStation 4-7
 - printing from Control Panel 1-5
 - problem printing C-10
- Thumbnail A
 - editing options 4-17
 - page commands 4-15, 4-16
 - page display 4-13
 - window 4-15
- Thumbnail A command 3-11, 3-25, 8-6
- Thumbnail B 4-15
- Thumbnail B command 3-11, 3-25, 8-6
- time 6-5
- Touch Panel Display
 - status messages 1-7
- Trim Marks 6-5, A-5
- troubleshooting
 - Command WorkStation cannot
 - connect to server C-7
 - Command WorkStation hangs C-6
 - file management tips 6-16
 - general guidelines C-6
 - slow redraw 5-5

- touch-up tool problems 6-15
- unexpected printing results C-8
- users are unable to connect to
 - the printer C-9

U

- undo, in editing thumbnail views 3-45, 4-21
- Undo command 3-12
- Unique option 6-10
- up button 1-2
- Use Master option 4-24

V

- variable data printing 3-29, 4-24
- View in Helper App command 3-13
- View menu 5-7
- view modes
 - compared 5-6
 - layout 5-5
 - preview 5-5
- Volume column, in Archive window 3-28

W

- warning
 - "Disk full" C-5
 - display window breakage xviii
- WebDownloader WebTool, *see* Fiery WebTools
- WebLink WebTool, *see* Fiery WebTools
- WebSetup WebTool, *see* Fiery WebTools
- WebSpooler, *see* Fiery WebSpooler
- WebTools, *see* Fiery WebTools
- Window menu commands 3-13
- window selection tabs 3-8, 3-16
- workflow scenarios 4-8
- working with more than one server 4-30

Z

- Zoom tool 5-6

303 Velocity Way
Foster City, California 94404 USA

www.efi.com

26 Cunningham Street
North Sydney NSW 2060, Australia

Alameda Santos, 234 Suites 603 to 605
01418-000 São Paulo SP, Brasil

Kaiser swerther Straße 115
D-40880 Ratingen, Duesseldorf, Deutschland

Eastern Europe and Central Asia
Luegallee 18, D-40545 Duesseldorf, Deutschland

Parque Empresarial San Fernando, Edificio Francia
28830 Madrid, España

Immeuble Atria—5, Place des Marseillais
94227 Charenton-Le-Pont, Cedex, France

28/F, Soundwill Plaza, 38 Russell Street
Causeway Bay, Hong Kong

Centro Direzionale Milanofiori, Strada 6, Palazzo EI
20090 Assago (Milano), Italia

Shinjuku I-Land Wing 13F, 3-1 Nishi Shinjuku 6-chome,
Shinjuku-ku, Tokyo 160-0023, Japan

Boeing Avenue 201 - 207
1119 PD Schiphol-Rijk, Nederland

60-B Peck Seah Street
Singapore 079323

Frösundavägs Allé 15 4tr
169 70 Solna, Sverige

Stonebridge House, Padbury Oaks, Old Bath Road
Longford, Middlesex UB7 0EW, UK

プリンター機能の操作方法に関するお問い合わせは、
「リコープリンターコールセンター、imagico ダイヤル」にご連絡ください。



コールはイマジコ

0120-056-140

Electronics
FOR **Imaging™**

●受付時間：9～12時、13～17時（土、日、祝祭日、リコーの休業日を除く）

USING THE DOCBUILDER PRO KIT

Copyright © 2001 Electronics For Imaging. All rights reserved.

This publication is protected by copyright, and all rights are reserved. No part of it may be reproduced or transmitted in any form or by any means for any purpose without express prior written consent from Electronics For Imaging except as expressly permitted herein. Information in this document is subject to change without notice and does not represent a commitment on the part of Electronics For Imaging.

The software described in this publication is furnished under license and may only be used or copied in accordance with the terms of such license.

Patents: 5,867,179; 5,835,788; 5,666,436; 5,553,200; 5,543,940; 5,537,516; 5,517,334; 5,506,946; 5,424,754; 5,343,311; 5,212,546; 4,941,038; 4,837,722; 4,500,919, D406,117

Printed in the United States of America on recycled paper.

Restricted Rights Legends

For defense agencies: Restricted Rights Legend. Use, reproduction, or disclosure is subject to restrictions set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at 252.227-7013.

For civilian agencies: Restricted Rights Legend. Use, reproduction, or disclosure is subject to restrictions set forth in subparagraph (a) through (d) of the commercial Computer Software Restricted Rights clause at 52.227-19 and the limitations set forth in Electronics For Imaging standard commercial agreement for this software. Unpublished rights reserved under the copyright laws of the United States.

Proprietary Rights

You acknowledge that the Software, Coded Font Programs, Typefaces, Trademarks and accompanying documentation are proprietary to Electronics For Imaging and its suppliers and that title and other intellectual property rights therein remain with Electronics For Imaging and its suppliers. Except as stated above, this Agreement does not grant you any right to patents, copyrights, trade secrets, trademarks (whether registered or unregistered), or any other rights, franchises or licenses in respect of the Software, Coded Font Programs, Typefaces, Trademarks or accompanying documentation. You may not adapt or use any trademark or trade name which is likely to be similar to or confusing with that of Electronics For Imaging or any of its suppliers or take any other action which impairs or reduces the trademark rights of Electronics For Imaging or its suppliers. The trademarks may only be used to identify printed output produced by the Coded Font Programs. At the reasonable request of Electronics For Imaging, you must supply samples of any Typeface identified with a trademark.

Confidentiality

You agree to hold the Software and Coded Font Programs in confidence, disclosing the Software and Coded Font Programs only to authorized users having a need to use the Software and Coded Font Programs as permitted by this Agreement and to take all reasonable precautions to prevent disclosure to other parties.

Remedies

Unauthorized use, copying or disclosure of the Software, Coded Font Programs, Typefaces, Trademarks or accompanying documentation will result in automatic termination of this license and will make available to Electronics For Imaging other legal remedies.

Limited Warranty And Disclaimer

Electronics For Imaging warrants that, for a period of ninety (90) days from the date of delivery to you, the Software under normal use will perform without significant errors that make it unusable. Electronics For Imaging's entire liability and your exclusive remedy under this warranty (which is subject to you returning the print server to Electronics For Imaging or an authorized dealer) will be, at Electronics For Imaging's option, to use reasonable commercial efforts to attempt to correct or work around errors, to replace the Software with functionally equivalent software, or to refund the purchase price and terminate this Agreement. Some states do not allow limitations on duration of implied warranty, so the above limitation may not apply to you.

Except for the above express limited warranty, Electronics For Imaging makes and you receive no warranties or conditions on the Products, express, implied, or statutory, and Electronics For Imaging specifically disclaims any implied warranty or condition of merchantability or fitness for a particular purpose.

For warranty service, please contact your authorized service/support center.

EXCEPT FOR THE ABOVE EXPRESS LIMITED WARRANTY, ELECTRONICS FOR IMAGING MAKES AND YOU RECEIVE NO WARRANTIES OR CONDITIONS ON THE SOFTWARE OR CODED FONT PROGRAMS, EXPRESS, IMPLIED, STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND ELECTRONICS FOR IMAGING SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Electronics For Imaging does not warrant that the operation of the software will be uninterrupted or error free or that the Software will meet your specific requirements.

Limits Of Liability

IN NO EVENT WILL ELECTRONICS FOR IMAGING OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOST PROFITS, COST OF COVER OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING FROM THE USE OF THE SOFTWARE, CODED FONT PROGRAMS OR ACCOMPANYING DOCUMENTATION, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF ELECTRONICS FOR IMAGING OR ANY AUTHORIZED DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. YOU ACKNOWLEDGE THAT THE PRICE OF THE UNIT REFLECTS THIS ALLOCATION OF RISK. BECAUSE SOME STATES/ JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Export Controls

You agree that you will not export or re-export the Software or Coded Font Programs in any form without the appropriate United States and foreign government licenses. Your failure to comply with this provision is a material breach of this Agreement.

Government Use

Use, duplication or disclosure of the Software by the United States Government is subject to restrictions as set forth in subdivision (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or in subparagraphs (c) (1) and (2) of the Commercial Computer Software—Restricted Right Clause at 48 CFR 52.227-19, as applicable.

Third Party Beneficiary

You are hereby notified that Adobe Systems Incorporated, a California corporation located at 345 Park Avenue, San Jose, CA 95110-2704 ("Adobe") is a third-party beneficiary to this Agreement to the extent that this Agreement contains provisions which relate to your use of the Fonts, the Coded Font Programs, the Typefaces and the Trademarks licensed hereby. Such provisions are made expressly for the benefit of Adobe and are enforceable by Adobe in addition to Electronics For Imaging.

General

This Agreement will be governed by the laws of the State of California.

This Agreement is the entire agreement held between us and supersedes any other communications or advertising with respect to the Software, Coded Font Programs and accompanying documentation.

If any provision of this Agreement is held invalid, the remainder of this Agreement shall continue in full force and effect.

If you have any questions concerning this Agreement, please write to Electronics For Imaging, Attn: Licensing Dept. or see Electronics For Imaging's web site at www.efi.com.

Electronics For Imaging
303 Velocity Way
Foster City, CA 94404

Introduction

This document explains how to enable DocBuilder Pro, a dongle-protected feature of Command WorkStation that works in conjunction with Adobe Acrobat. In addition to this document, this kit includes:

- Adobe Acrobat Installers for DocBuilder Pro CD
- Dongle (included in this kit or as a separate item in a box of Accessories)

Each workstation that will be running DocBuilder Pro requires a dongle.

Command WorkStation software (not included in this kit) is located on the User Software CD for the print server.

Requirements for a DocBuilder Pro workstation

- Pentium-based PC (333MHz recommended)
- Win 95/98/2000/Me or Win NT 4.0 with Service Pack 5 or 6a
- 32MB RAM (64MB recommended)
- 850MB hard disk drive with 90MB free space
- CD-ROM drive (2x)
- Video adapter card with 2MB of video memory
- 17" monitor: 16-bit color; 1024x768 resolution
- 10BaseT, 100BaseTX, or Token Ring network connection using TCP/IP

The print server can be used as the workstation if it is equipped with a monitor, keyboard, and mouse.

For more information on system requirements for the workstation, see the user documentation provided with the print server.

Enabling DocBuilder Pro

To enable DocBuilder Pro on a client workstation (or the print server if it is equipped with a monitor, keyboard, and mouse):

- Install Adobe Acrobat 4.05 from the Adobe Acrobat Installers for DocBuilder Pro CD
- Install Command WorkStation if it is not already installed.
- Install a DocBuilder Pro dongle directly on the parallel port. One dongle is required per client.

Using the DocBuilder Pro Kit

TO ENABLE DOCBUILDER PRO

1. Uninstall all versions of Adobe Acrobat that may be installed on the workstation.

NOTE: If Acrobat version 5.0 is already installed on the workstation, 4.05 will be installed in a separate folder. Therefore you do not need to uninstall version 5.0.

Close all open applications then use the Windows Control Panel for removing programs: Start menu>Settings>Control Panel>Add/Remove Programs

Then, restart the computer: Start menu>Shutdown>Restart computer

If a message appears similar to “Unable to locate log file c:\program”, your uninstaller program no longer works due to a missing or corrupted file. In this case, you must manually remove each application’s files. To remove Adobe Acrobat, delete the Acrobat directory (default location: c:\Program Files\Adobe).

2. Insert the Adobe Acrobat Installers for DocBuilder Pro CD in the CD-ROM drive.

NOTE: If Adobe Acrobat is not installed properly an error will be displayed: The selected function requires Adobe Acrobat 4.0.

3. Follow the instructions in the Setup dialog boxes to complete installation of Acrobat.

Use the table below as a guide. For specific instructions, read the information in each dialog box.

NOTE: If you have the printer driver already installed on your computer, a prompt may be displayed asking you whether to overwrite some files. Choose Yes when the message appears and proceed with the installation.

Name of dialog box:	Action:	When finished:
Welcome	Read the Setup program introduction.	Click Next.
Select Country	Choose the country in which you purchased the software.	Click Next.
Software License Agreement	Read the license agreement.	Click Accept.
Type of Setup (This screen appears only if you install Adobe Acrobat 4.05 from a source other than the CD provided in this kit.)	Choose Custom and select the following components: Acrobat Program Files; Acrobat Distiller Files; Acrobat PDFWriter Files; Acrobat Catalog Files; Accessories	Click Next.
Choose Destination Location	Specify a hard disk location for the installed Adobe Acrobat 4.05 for DocBuilder Pro software.	Click Next.
Adobe Acrobat 4.05 Setup	Go back if desired	Click Next.
Setup Complete	Remove the CD from the drive then click Finish to restart the computer.	Click Finish.

4. If Command WorkStation is already installed, skip to step 7; otherwise, insert the User Software CD (not provided in this kit) into the workstation.


Enabling DocBuilder Pro

5. If auto-install is not a feature of your version of Command WorkStation, navigate to the CStation directory of the CD-ROM and double-click Setup.exe.
6. Follow the instructions in the Setup dialog boxes to complete installation of the Command WorkStation software.

Use the following table as a guide when installing the Command WorkStation software. For specific instructions, read the information in each dialog box.

Name of dialog box:	Action:	When finished:
Welcome	Read the Setup program introduction.	Click Next.
Software License Agreement	Read the license agreement.	Click Yes.
Choose Destination Location	Specify a hard disk location for the installed Command WorkStation software.	Click Next.
Select Program Folder	Specify a folder name for the Command WorkStation software located in the Programs menu.	Click Next.
Question	Indicate if you want to place a shortcut to the Command WorkStation application in your StartUp folder.	Click Yes or No.
Setup Complete	<p>If the latest Java files are not on your computer, click Finish to install them. After they are installed, restart the computer.</p> <p>If the latest Java files are already installed, click Finish to complete Setup and restart the computer. Select Yes if prompted to restart the computer now; if not prompted, restart the computer using Start menu > Shutdown > Restart Windows.</p>	Click Finish and restart the computer.

 7. Configure the connection to the print server if no print server user software has ever been installed, configured, and used on this workstation (see page 4).



8. Unpack the dongle and install it directly on the workstation's parallel port (LPT1).

Tighten the two screws on the dongle to secure it. If the workstation's parallel port must accommodate dongles for other dongle-protected applications, make sure that the DocBuilder Pro dongle is first in the chain.

NOTE: The dongle is required in order to use all the features of DocBuilder Pro. If the dongle is not installed or if it is removed while using DocBuilder Pro, an error message will be displayed: Cannot proceed because DocBuilder Pro dongle was not found. All unsaved work may be lost. Work already saved can be printed but not changed.


Configuring the Command WorkStation connection

After installing the Command WorkStation software, you must properly configure the Chooser list in order to connect to the print server.


TO CONFIGURE THE CONNECTION FOR THE COMMAND WORKSTATION

1. Launch the Command WorkStation by double-clicking its icon or by choosing it from the Start > Programs > Command WorkStation menu.

2. Click OK.

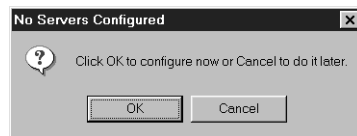

3. Enter the appropriate information for the print server.

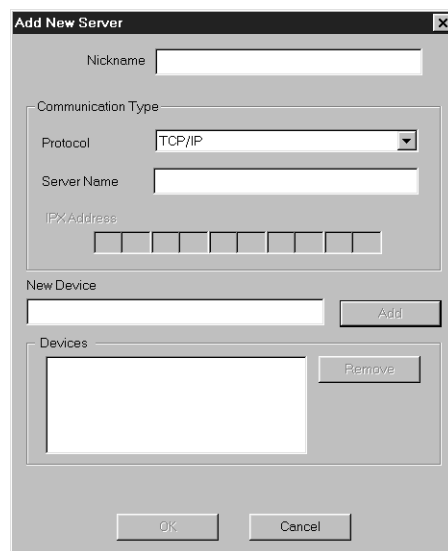

Nickname—Enter a name for the print server. This name can be any name you wish; it does not have to match the actual Server Name of the print server.

NOTE: The nickname cannot contain any of these seven characters: [] _ " ' <space> <tab>

Protocol—Choose the TCP/IP network protocol from the pop-up menu.

NOTE: Setup for the print server from the Command WorkStation is supported over TCP/IP only.

Server Name—Enter the IP address (or DNS name) of the print server. The DNS name is case-sensitive. Ask the network administrator for this information.

New Device—Enter the unique device name exactly. For this information, print the current Configuration page and use the first term listed under the “Printer Setup” line. You can also find it in the user documentation provided with the print server.


Configuring the Command WorkStation connection

4. When you have entered all the information, click Add.

The device name now appears in the Devices list.

5. In the Add New Server window click OK.

The print server appears in the Choose Printer Device list of available servers as shown below.

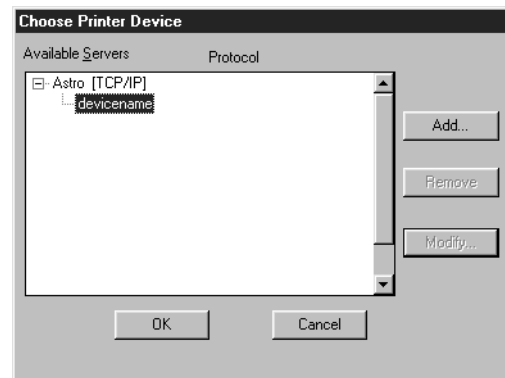

6. With the device name selected in the Choose Printer Device list, click OK to connect to the print server and begin using the Command WorkStation.

Release Notes

Color Controller E-810, version 1.0

This document contains information about Color Controller E-810™ version 1.0. Before using the Color Controller E-810, make a copy of these *Release Notes* and distribute them to all users.

NOTE: This document uses the term “E-810” to refer to the Color Controller E-810.

Before printing to the E-810:

- Make sure system software version 1.0 is installed on the E-810.
- Install user software version 1.0 onto client computers. For instructions, see *Getting Started*.

Windows OS version support

The E-810 supports Windows 95/98SE/Me and Windows NT/2000.

Although the E-810 supports Windows 95, descriptions of Windows 95 and illustrations of Windows 95 dialog boxes are not provided in the documentation. Consider all Windows 9x/Me descriptions in the User manuals as Windows 95/98/Me.

NOTE: The E-810 supports Windows 95 (OSR2 or later).

Available disk space

The available disk space is displayed on the E-810 LCD.

Printer driver installation

AdobePS Readme file

After installing the AdobePS driver, read the README.doc file located on the User Software CD, in the same directory as the other printer files. This file contains information about potential conflicts between the Adobe driver and other software applications.

Configuring installable options on Windows NT 4.0/2000

Use the Device Settings tab to add and remove Installable Options. For detailed information see *Getting Started*.

Setup

Fiery Setup

To run Fiery Setup from the Control Panel, you must log in with Administrator privileges.

Wait until printing is completed before entering Setup. Entering Setup during printing may result in missing colors in the final print.

Fiery Server Setup

If a connection to the E-810 fails after you change settings in the General or Printer Setup tab in Fiery Server Setup, the Workgroup name and the Domain name may be the same. To resolve this problem, use different names.

Remote Setup for Bindery and NDS

When configuring Bindery or NDS in Network Setup using WebSetup or the Command WorkStation from a client computer, enter a password in order to make changes. For Bindery Setup, log in as Administrator, Supervisor, or Guest with the appropriate password. For NDS, select the appropriate login and password.

IPX Auto Frame Type

If you select Yes to enable IPX Auto Frame Type in Setup, the E-810 will bind only to the first frame type it finds, which is typically 802.2. To ensure that all available frame types are bound, select each one individually. After the Fiery reboots upon exiting Setup, print the Configuration page to verify that all selected frame types were successfully bound.

TCP/IP and DHCP servers

In some cases, Mac OS computers may crash when attempting to obtain an IP address from a DHCP server while loading the TCP/IP driver. Verify the TCP/IP Control Panel has a valid IP address, and the router and DNS server addresses are valid before running applications such as ColorWise Pro Tools.

Windows Setup (WINS Printing) from the E-810 Control Panel

Depending on your selections for setting a domain for WINS printing, the E-810 prompts you that it will reboot. Choose OK when prompted. This allows the E-810 to retrieve a current list of domains. Allow the E-810 to reboot and return to Setup to finish making the settings.

E-810 passwords

The E-810 password used to access Setup, as well as the password required to log in to the E-810, are case-sensitive and must be entered exactly.

Maximum number of users for SMB

Windows NT 4.0 supports a total of 10 simultaneous SMB connections, including the Direct, Print, and Hold queues.

UNIX printing

There may be incompatibility problems with some UNIX environments.

System

Reboot System

If you reboot the system while the E-810 is printing, you may experience unexpected results. Wait until the display reads Idle before rebooting the system.

Setting Print Options

Booklet option

If the Booklet option available in the Adobe 8.6 Printer driver for Mac OS is used, unexpected results may occur.

Custom paper size

When you set custom paper sizes (Custom page 1 through Custom page 3) in the Windows 95/98/Me printer driver, the maximum value is 13.00" (330.2mm) for Width and 19.00" (482.6mm) for Length, regardless of the default maximum values indicated in the input box.

Printing custom paper sizes on the Mac OS requires that you enter Width and Height values in the printer driver. Refer to the following definitions when specifying these values:

Width is defined as the length between the left edge and right edge of the paper.

Height is defined as the length between the top edge and bottom edge of the paper.

Sorter and Duplex options are not supported for custom paper sizes. Although you can select these options in the PageMaker 6.5 PPD for a custom paper size job, the job is automatically canceled.

When you specify a custom paper size in the printer driver for Windows 95/98/Me, check the page size specified in your application, so that both page sizes match. If the page sizes do not match, you may get unexpected printing results, and the custom paper size may not print correctly. The E-810 does not support mixed paper size jobs that contain a custom paper size.

Default settings

After you install the printer driver, the default page size is Letter or A4. When you select Default Settings from the Saved Settings menu, the default page size may change.

Editing device settings

To change printer defaults in a driver that was downloaded from the E-810 using Point and Print, the permissions for the Print queue on the E-810 server must be set to Full Control for the user "Everyone." Once you are logged in with Administrator privileges, you can allow a user or all users to change print defaults in the driver by enabling Full Control in the Properties\Security\Permission tab.

New driver install

Installing the Windows 2000 printer driver with Point and Print is not supported. See *Getting Started* for installation instructions for the Windows 2000 printer driver.

Scale option

On Windows 2000, settings for the Scale option range from 1% to 1000%; however, the E-810 supports only settings that range from 25% to 1000%. On Windows 95/98/Me, settings for the Scale option range from 25% to 322% for A3 and 11x17 paper.

Setting paper sizes in applications

When sending a job from an application (such as Microsoft Word) that allows you to specify paper size in the Print dialog box, select the same paper size in both the application's Page Setup dialog box and the printer's Properties dialog box.

Tabloid and Statement paper sizes

On Windows NT and Windows 2000, the Tabloid and Statement paper sizes in the printer driver appear twice with different names. To print these sizes correctly, choose 11x17 for Tabloid and 5.5x8.5 for Statement.

Transparencies

On Mac OS, you can select the Slip sheet option without selecting Transparency in the PPD. The print job will then print as Plain paper from Tray 2 or Tray 3 with Slip sheet from Manual Feed. For the correct use of Slip sheets, set Manual Feed for transparency with slip sheet mode.

Unprintable Area

The Unprintable Area option is not supported for Windows NT/2000.

With some software application such as Photoshop and Illustrator, the Unprintable Area option may not function correctly.

With Microsoft Word, if any of the margin settings on the Page Setting tab is larger than the number specified for the Unprintable Area specified in the printer driver, then the Unprintable Area setting will be ignored.

Printing

Alert messages

If error messages occur during a print job on Windows 95/98/Me and cause you to power off the copier, a duplicate print job may begin printing when the copier is powered on again.

Binding

Certain application/operating system combinations cause the E-810 to misinterpret binding instructions, delivering top-bound instead of side-bound output. Known instances include PageMaker 6.5 on any OS, and Acrobat on Windows 2000.

Combine Separations

Combine Separations will only function with properly separated QuarkXpress, Pagemaker, and Illustrator files.

Control Panel Settings

From the copier's operation panel, set "control panel OFF timer" for a longer period of time than the "system reset timer." Without these settings, you may get an incorrect print result or experience a paper jam. These settings are located in System Setting from the User Tools key. See the copier's guide for more information.

Default paper size for LCT (Large Capacity Tray) on Windows NT 4.0

If LCT is set to On in the Device Settings of the Windows NT 4.0 Print Properties, make sure the default paper size appears as Tabloid (11x17) on Form to Tray Assignment. If you change the paper size and re-open the Form to Tray Assignment, the change will have no effect on printing. Supported Letter and A4 sizes printed from the LCT print normally.

Disk full error message

When the hard disk drive on the E-810 is full, any print job sent to the E-810 will not print until the current job is finished. You can remove completed jobs from the printed queue to free up more disk space.

Duplex

The Adobe printer drivers provided on the User Software CD do not properly support 2-up and 6-up printing.

You may experience incorrect stapling results when you attempt to print a duplex job with Staple Mode set to Two Centers, depending on the side/top binding and Portrait/Landscape setting combinations.

Duplex printing is not supported with thick media.

The copier does not support printing with Thick Paper from the Duplex Tray. If you want to print duplex jobs on thick paper, choose Manual Duplex.

Duplexing and paper jams

If you experience a paper jam when you send a print job in the middle of a larger duplex job, remove the paper from the duplex tray so that the printer can restart.

Duplex for Landscape documents

When you print landscape jobs with the Duplex option selected, the final output may be inverted. When you select Top Binding, the result may be Side Binding, and vice versa. To get the correct duplex result, select the opposite setting.

Font substitution

When you substitute Times New Roman for Arial in the Font Substitution Table, the substitution will not occur.

Hagaki or Double Postcard

When you print multiple pages on Hagaki or Double Postcard sizes, you may not be alerted to remove copies from the sorter.

Job Notes

Save Settings may not save job notes information on the Mac OS. To avoid this problem, set job notes for every print job.

Paper jams at the Automatic Document Feeder (ADF) during printing

Paper jams at the ADF may stop printing until the paper jam is removed. Once the jam is removed, printing will resume; however, the printed output may not print correctly. To prevent this from happening, avoid using the ADF when printing to the E-810.

Paper size and paper jams

Paper jams may occur without warning when paper size settings do not match the actual size of paper in the paper tray. This problem occurs with manual feed and manual duplex trays. Be sure to adjust paper size selection to match physical paper size before printing.

Paper Source

When printing with the media type Transparency, Thick paper, or Extra Thick paper, do not use Auto Select unless a tray has been configured for these media types. See the *Printing Guide* for more information.

Printing from UNIX workstations

Only PostScript files can be printed from Unix workstations. Only one file can be printed at a time.

Pure Black Text

On the Mac OS, the Pure Black Text option works for RGB Graphics/Text objects. In the Mac printer driver, select Color Matching, then select PostScript Color Matching for Print Color and Printer's Default for Printer's Profile.

Scaling

When you use the Scaling option, the image may not center correctly. Documents that have been scaled may result in cropped print jobs.

Solaris 8 print failure

Command WorkStation and controller stall after printing three of four jobs sent together to the E-810. To recover, reboot the server and cancel the job, then clear and reboot the server again. To avoid this problem, always send one print job with one print command.

Thick media or OHP from Manual Feed

When the sorter option is installed on the copier, printing from the manual feed tray may take extra time when Thick, Extra Thick or OHP is selected on the copier operation panel.

Clearing the paper type settings for the manual feed tray on the copier operation panel may reduce this waiting time.

Sorter Mode

On Windows 2000, you may experience unexpected printing results if you print multiple copies with Sorter Mode. To avoid this problem, in Printing Preferences, set the Copy count for 2, clear the check in the Collated check-box, and then re-enter 1 for the Copy count for each print.

When printing from an application, you need to set the number of copies for printing and clear the check in the Collate check-box of application.

See the *Printing Guide* for information on accessing Printing Preferences from the Windows 2000 printer driver.

The maximum number of copies that can be produced using Stack depends on the paper size and paper type you use. Refer to your copier manual for detailed specifications on the maximum number of copies in Sorter Mode and Stack Mode.

Stapling

Check the staple supply before sending a Print with Staple job. An alert message may not appear indicating that the copier is low on staples for Fiery Downloader, Command WorkStation, Fiery WebTools, Fiery Link, or Smart Net Monitor.

Watermarks

Certain marks, such as commas, may not appear in printed custom watermarks.

Windows icon

A Windows icon may appear in the window, if printer properties is opened from an application.

ColorWise Pro Tools

Defining profiles

The “Appear in Driver as” profile option for editing preset profiles or defining new profiles is not supported in the printer driver.

Color Sync Profiles

To use Color Sync Profiles, copy the Color Sync Profile files to your computer. The Color Sync Profiles are in the “Color Sync” (for Mac) or “ICM” (for Windows) folder on the User Software CD.

Fiery Downloader

TCP/IP protocols

Fiery Downloader is supported over TCP/IP only. IPX is not supported.

Arrange Icon

The Arrange Icon feature is not functional.

Downloading PDF files

Downloading PDF files to the Direct connection is not supported. Instead, use either the Print queue or the Hold queue.

When you download a large PDF file, the job may not appear in the Job Log. If the job does appear, the Job Log may display 0 for the number of pages printed and no information for paper size and media type. However, the file RIPs and prints correctly.

Fiery Spooler

Connecting to the E-810

You can connect to only one E-810 at a time.

Command WorkStation

TCP/IP protocols

Command WorkStation is supported over TCP/IP only. IPX is not supported.

Copier Configuration

Default configuration settings displayed in Command WorkStation may not correctly reflect the copier’s actual configuration settings. These settings do not effect print quality.

Job ticket information

In Command WorkStation, a job’s page size may not display correctly in the job ticket information bar. To view the correct page size for the job, view the job’s information in the Job Log, or double-click the job to display its Properties dialog box. The correct page size for the job is listed in the Page Size field.

In Command WorkStation and Fiery Spooler, Paper Size and Media Type values appear as Unknown when a previously printed job is RIPped and held for further printing.

Jobs printed from the RIP area in Command WorkStation, WebSpooler and Fiery Spooler appear with incorrect sizing information in the Job Log.

In some Command WorkStation windows, User ID field title appears as Note 2.

Override settings

Selecting Command WorkStation override settings may cause a print job to process incorrectly. If you override a specific setting for an option from the Command WorkStation and then open the job settings again to replace that setting with Printer's Default, you may get unexpected printing results. To avoid this, do not choose Printer's Default when you override print settings from the Command WorkStation, or remove the original raster file before you override the print settings again.

Notes and User ID

The Notes and User ID print options appear as override settings in Command WorkStation however, you cannot override these settings. The Notes and User ID print options also appear in the Job Log window.

Cancel Printing

If you choose Cancel Printing from the Server menu and restart the E-810 before the cancel function has been completed, you will lose the connection to the E-810 and errors may be displayed.

When jobs are cancelled during the RIP or print process, no message appears in the RIP or print bar to indicate that the job is being cancelled.

If you select cancel RIPPING during the RIPPING process, the job goes directly to the Print queue; however, information about the job may not appear in the Job Log.

Restart

If you select Restart from the Server menu, there may be a delay in shutting down and restarting the Command WorkStation. Command WorkStation may appear to be connected when in fact it is shutting down.

DocBuilder Pro (option)

DocBuilder Pro (option) may not function correctly with Acrobat 5.x.

Make sure to install the Acrobat 4.05 which is included in the CD for the Doc Builder Pro.

If Acrobat 5.x is already installed in the PC, then install the Acrobat 4.05 to another directory.

Connection lost

If the message "Connection to the E-810 lost" is displayed in the Command WorkStation window, click OK for this alert message and reboot the E-810, using Reboot System from the Functions menu on the Control Panel. You can then launch the Command WorkStation to re-establish the connection.

Similarly, if a print job is sent to the E-810 when the hard disk is full, an alert message displays on your computer and the Command WorkStation freezes. Reboot the E-810 to re-establish connection between Command WorkStation and the E-810.

RAM reading

The Command WorkStation RAM availability slider shows the utilizable value, not the installed RAM size. Check Fiery Link to see the total size of the installed RAM.

Fiery Link

Status

Status information displayed in Fiery Link may require additional time to update. For this reason, the status displayed in Fiery Link may not match the status displayed in the Command WorkStation.

Fiery Link may not correctly display information about Thick paper used in the Input tray.

Status message

Fiery Link updates the status message of printed documents after clicking inside the main Fiery Link window.

Edit My Fiery List

When the Edit My Fiery List window is open, and you click the Advanced or Refresh button, the Edit My Fiery List window may obscure new dialog boxes. To prevent this, move the Edit My Fiery List window off to one side before you click either the Advanced button or the Refresh button.

The Refresh command may not properly display connected servers.

Fiery Scan

Scanning while a print job is processing

Using the copier to scan while a job is printing is not recommended.

If scanning is attempted during a print job, Fiery Scan displays incorrect feedback information. Although prescan status progresses to 100% and concludes with a timeout error, no scanning actually takes place while the engine is printing or scanning.

Scanning while a print job is processing may result in a copier timeout, an incorrect color change in the printed page, or unexpected errors. If you experience incorrect scans, restart Fiery Scan and rescan the image.

Scanning in Energy saver mode (including Power off mode)

Scanning sometimes fails when the copier begins in Energy saver mode. Reset the Energy saver mode then warm up the copier completely prior to re-scanning if this problem occurs.

Prescanning while toner cartridge is empty

The E-810 and copier will not prescan while the black toner cartridge is empty. Install a new black toner cartridge before you scan.

TCP/IP protocols

Fiery Scan is supported over TCP/IP protocols.

Adobe Photoshop 4.x/5.x/6.x

Fiery Scan supports only Adobe Photoshop 4.x, 5.x and 6.x.

TextBridge Pro 9.0/Pagis 3.0

Fiery Scan does not support TextBridge Pro 9.0 or Pagis 3.0.

Timeout error message

When a timeout error occurs during prescan, you must close and then re-open the Fiery Scan interface in order to continue scanning properly.

Fiery Scan color conversion

Fiery Scan color is improved with the automatic conversion of the copier RGB to EFIRGB.

White border

After you scan an image using TWAIN scan, a white border appears at the top of the page. Depending on the page size you scan, a white border may also appear at the right-hand side of the page when scanning from the LCD.

Color adjustment

In some TWAIN scans, the white area of the original may appear pink, which may be printed as gray. To print the image without gray in the white area, adjust the color in Adobe Photoshop. For more information, see the Help menu in Adobe Photoshop.

Scan to HDD

Scan to HDD supports PhotoShop 5.5 or later with a minimum 256MB of RAM.

Scanning in Energy Save Mode (including Power off mode)—Scanning sometimes fails when the copier begins in Energy Save Mode. Reset the Energy Save Mode then warm up the copier completely prior to scanning.

ADF Jam—When an ADF jam happens while you attempt to scan an image, the copier may freeze and not recover even after you have removed the misfed original.

In such case, turn the main switch of the copier Off and On after you have removed the misfed original from the ADF, and then scan the image again.

WebSetup**Network Setup**

The ability to specify multiple IPX frame types in the Protocol2 tab of Network Setup does not function correctly. As a workaround, specify IPX/SPX Setup options in Network Setup from the copier Control Panel.

Rebooting the server

On Windows 2000, after rebooting the server from WebSetup, the message “IDLE” appears in the copier LCD, however the message “Waiting for server” appears in the WebSetup screen. This message is incorrect; it should appear as “IDLE”. To resolve this problem, close your browser and relaunch WebTools.

WebScan

TIFF files

When saving a scanned image on Fiery WebScan, the file compression method for TIFF format differs as follows:

- When the image was scanned in Grayscale mode: TIFF (Packbits)
- When the image was scanned in CMYK mode: TIFF (JPEG compressed)

Therefore, scanning in Grayscale mode may create a larger TIFF file than one that was scanned in CMYK mode.

To open a JPEG compressed TIFF file, you may need an application such as PhotoShop 5.5 or later. However, PhotoShop is only able to display the first page.

To open a multi-page JPEG compressed TIFF file, you may need an application such as PhotoShop 5.5 or later. However, PhotoShop is only able to display the first page.

WebSpooler

Override Print Settings dialog box

In the Override Print Settings dialog box, the text in the Image Quality tab may not be fully displayed.

The Notes tab in the Override Print Settings dialog box may not display User ID information.

Job processing time

The job processing time displayed from WebSpooler is different from the actual time to process the job.

Overriding print settings

If you use Override Print Settings to change a standard, non-custom page size to a custom page size, no change will occur. The job prints as the standard page size.

Copier Scanning

Energy Save Mode

Set the AOF to over five minutes when the copier is in Energy Save Mode.

Do not use the scanner when the copier is in Energy Save Mode.

Applications

All

When you print a black-and-white duplex job, set the Color Mode to Grayscale in the E-810 print options. This gives proper reporting of the number of black-and-white pages in the Job Log.

In some applications, "Autoselect" may appear twice in the paper size menu. If this occurs, select the second "Autoselect" setting in the list.

Fiery WebTools

Background graphics—Background graphics in Fiery WebTools may appear distorted on the monitor if the incorrect display driver is installed through Display Properties on Windows 95/98/Me and Windows NT 4.0/2000.

Start page—You can specify Print Start Page using WebSetup; however, after you have set this option to Yes, it cannot be changed. To work around this problem, reset the option using Server Setup>Print Start Page from the Control Panel.

Adobe Applications

Some layout settings such as 6x6 pages per sheet and 2x2 pages per sheet may not work with some Adobe Applications. These layout options work properly in Microsoft Office applications, QuarkXPress 4.1, and Adobe PhotoDeluxe 2.0.

Adobe Photoshop—Unprintable Area settings specified in the printer driver are not supported in Adobe Photoshop print jobs.

Microsoft Office

Microsoft Word—Unprintable Area settings specified in the printer driver are not supported in Microsoft Word print jobs.

Microsoft PowerPoint—In Microsoft PowerPoint, you are required to set the copy count within the PowerPoint printer setup window. The Windows 95/98/Me and Windows NT driver copy count settings will be overwritten.

Microsoft Excel

Printing Workbooks—If you choose Entire Workbook in the Print dialog box from Microsoft Excel for Windows, the job may print as separate jobs. This is because Excel sends each worksheet to the copier as a separate job. Print settings such as Duplex and Sorter Mode will be applied to the first worksheet and ignored for the rest. To apply print settings, you need to select each sheet, go to Page Setup\Options, and select the print option settings for your job. To print the Entire Workbook, select all sheets in the workbook. Click the first worksheet tab at the bottom of the Excel page, hold down the Shift key, and click the last worksheet tab. Select Print from the File menu. In the Print area of the Print dialog box, select Active Sheets, and the job will print correctly.

Watermarks—You may experience unexpected results if you print a multiple-page Excel file with Watermarks.

QuarkXPress

Watermarks may not print on the first page when the PageSetup is All/Watermark and Foreground/Off. Watermarks do print on the remaining pages. To print Watermarks on the first page, make sure Foreground is set to On in Page Setup.

The Slip sheet option may not function correctly when printing from QuarkXPress (Mac). In such case, open the Print menu, and select the Setup tab, and change the Printer Description to Generic Color.

Windows version—The N-Up, Watermark, Mirror Image, and Negative Image options do not function with QuarkXPress for Windows.

Auto Dither—When setting dither to Auto for a text file, you may notice that the print job prints with partially Photo dither and partially Text dither.

Align Paper Trays—The Align Paper Trays setting may have no effect when printing from QuarkXPress.

Adobe Acrobat 4.0

Mirror Option—The mirror option may not work correctly in Adobe Acrobat. Use another application for printing with the mirror option.

Duplex Settings—On Win 9.x, when printing a Landscape data of Acrobat 4.05 with Duplex mode, the binding side result will be different from the setting. If you set the print job to Side Binding, the outcome will be Top Binding, if you set the print job to Top Binding, the result will be Side binding.

PageMaker

Printer's Default—Do not choose Printer's Default when printing from PageMaker. PageMaker does not recognize the Printer's Default information in the E-810 PPD. Selecting Printer's Default in PageMaker may cause unexpected printing results.

When the Sorter option is Off in PageMaker 6.5, the Staple Mode option is still accessible. However, Staple Mode settings are not supported when the Sorter option is Off.

The Paper Source for PageMaker 6.5 jobs displays as "Input Slot" in the Paper Source field of the job's Properties dialog box. To resolve this problem, click on the "Input Slot" text in the Paper Source field. The correct paper source for the job will then be displayed.

The margins and imageable area of 12x18 PageMaker 6.5 jobs do not print correctly.

CorelDraw

On Windows NT 4.0, the PPD feature for the number of copies may display corrupt characters.

On Windows 98 and NT 4.0, some documents created in CorelDraw 9 do not print correctly when using the E-810 printer driver and PPD.

Illustrator 9

Watermarks—Watermarks can only be printed with the background option set. Printing foreground watermarks is not supported.

Unprintable Area—Unprintable Area settings specified in the printer driver are not supported in Adobe Illustrator print jobs.

Netscape Communicator

On Windows NT 4.0, some images from Netscape Communicator may not print correctly.

Internet Explorer

In version 5.x on Mac OS, the right scroll bar may freeze when you choose Print > Printer Specific Options within the browser.

Smart Net Monitor

The Smart Net Monitor may display incorrect status messages with regard to the sorter. When the sorted output is left in the sorter bin, the E-810 alerts you to remove the previously printed output before sorting a new job. The Smart Net Monitor displays the status as offline in this situation, and does not relate the correct alert to remove copies from the sorter.

The memory value in the Smart Net Monitor reflects the total frame buffer memory, which is the same value shown in Command WorkStation.

Windows 2000

Print to file

The Print to file option automatically saves files in Drive\Documents and Settings\Username\My Documents.

SMB Printing

When trying to establish a connection after enabling Windows printing, you may experience errors when trying to open driver properties. The test page may incorrectly indicate that the Adobe 5 driver is installed.

Owner information

When you print, there is no Owner Information window.

Windows 2000 and LPR availability

When you perform a fresh install of Windows 2000 on a client computer, by default, no LPR services are available. Your only options are to print through a standard TCP/IP port or to use SMB printing.

Pages per minute

The speed is 51 ppm (pages per minute) for black-and-white jobs. If you specify a setting for Duplex, Staple, or CMYK Color Mode, the driver properties will display 51 ppm, but the actual speed will be slower.

Default paper size

When LCT device setting is activated in the printer driver, default paper size is set incorrectly. Check default and reset paper size if necessary.

New driver install

Installing the Windows 2000 printer driver with Point and Print is not supported. See *Getting Started* for installation instructions for the Windows 2000 printer driver.